

Earth Observation
Mission CFI Software
EO_ORBIT
SOFTWARE USER MANUAL

Code: EO-MA-DMS-GS-0004
Issue: 4.19
Date: 29/05/2020

	Name	Function	Signature
Prepared by:	Mariano Sánchez-Nogales	Project Engineer	
	Sara Cuenda Cuenda	Project Engineer	
	José Antonio González Abeytua	Project Manager	
	Juan Jose Borrego Bote	Project Engineer	
Checked by:	José Antonio González Abeytua	Project Manager	
Approved by:	José Antonio González Abeytua	Project Manager	

DEIMOS Space S.L.U.
Ronda de Poniente, 19
Edificio Fiteni VI, Portal 2, 2ª Planta
28760 Tres Cantos (Madrid), SPAIN
Tel.: +34 91 806 34 50
Fax: +34 91 806 34 51
E-mail: deimos@deimos-space.com

© DEIMOS Space S.L.U

All Rights Reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of DEIMOS Space S.L. or ESA.

DOCUMENT INFORMATION

Contract Data		Classification	
Contract Number:	4000102614/10/NL/FF/ef	Internal	
		Public	
Contract Issuer:	ESA / ESTEC	Industry	X
		Confidential	

External Distribution		
Name	Organisation	Copies

Electronic handling	
Word Processor:	LibreOffice 5.2.3.3
Archive Code:	P/SUM/DMS/01/026-011
Electronic file name:	eo-ma-dms-gs-004-21

DOCUMENT STATUS LOG

Issue	Change Description	Date	Approval
1.0	New document	08/11/01	
1.1	<ul style="list-style-type: none"> • New xo_orbit_to_time, xo_time_to_orbit and xo_free_osf_records functions. • xo_cart_extra removal 	23/05/02	
1.2 Draft	<ul style="list-style-type: none"> • Cosmetic changes • Updated error handling 	19/07/02	
2.0	Maintenance release.	29/11/02	
2.1	Maintenance release.	13/05/03	
2.2	<ul style="list-style-type: none"> • New options for xo_propag_init_file and xo_interpol_init_file functions. • Maintenance release. 	30/09/03	
2.2.2	<ul style="list-style-type: none"> • Option to use a simplified algorithm to initialise using xo_propag_init_def • Absolute orbit and time since ANX calculated within xo_propag_extra and xo_interpol_extra functions. • Nodal period calculated by xo_orbit_info_from_<source> functions • Use of enumerations to size extra results arrays 	26/04/04	
3.0	<ul style="list-style-type: none"> • New initialisation strategy for orbit calculations, propagation and interpolation. • New interfaces 	21/07/04	
3.1	Maintenance release	13/10/04	
3.2	Maintenance release	15/11/04	
3.3	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Changes for dealing with the new library explorer_data_handling – Identifier accessors. – Support for ENVISAT ASCII files removed 	11/07/05	

3.4	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Orbit file generation functions moved to this library 	18/11/05	
3.5	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – time-orbit conversion executable – Support for SWARM and EARTHCARE 	26/05/06	
3.6	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – xo_gen_oef – xo_check_osf and xo_check_oef 	24/11/06	
3.7	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Function expcfi_check_libs – Library version for MAC OS X on Intel (32 and 64-bits) 	13/07/06	
3.7.2	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – TLE data for orbit operations and propagation – New executable: gen_oef 	31/07/08	
4.0	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Numerical propagator – New interfaces for propagation/interpolation 	19/01/09	
4.1	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Time correlation compatibility check between time_id and orbit file data 	07/05/10	
4.2	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – Support for curved MLST in Orbit Scenario files 	31/01/2011	
4.3	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> – New initialization function for the OrbitID: xo_orbit_id_init 	06/02/12	

4.4	<p>Maintenance release</p> <ul style="list-style-type: none"> New features: <ul style="list-style-type: none"> - Support for GEO orbits (including new functions <code>xo_orbit_init_geo</code>, <code>xo_orbit_(get/set)_geo_orbit_info</code>). - <code>xo_position_on_orbit_to_time</code> 		
4.5	<p>Maintenance release</p> <ul style="list-style-type: none"> New features: <ul style="list-style-type: none"> - New function <code>xo_orbit_data_filter</code> - Acceleration vector is computed for TLE and numeric propagators 		
4.6	<p>Maintenance release</p> <ul style="list-style-type: none"> New features: <ul style="list-style-type: none"> - SDP4 TLE propagator - Executable to generate TLE files - Fitting method to compute TLE in <code>xo_osv_to_tle</code> function. 		
4.7	<ul style="list-style-type: none"> Maintenance release. New features: <ul style="list-style-type: none"> ◦ Spacecraft Midnight computed by <code>xo_orbit_info</code>. ◦ New function <code>xo_orbit_id_change</code>, <code>xo_orbit_info_configure</code> ◦ Support for SENTINEL-5P, Metop-SG, and Jason-CS satellites. 	28/03/14	
4.8	<ul style="list-style-type: none"> Maintenance release. 	29/10/2014	
4.9	<ul style="list-style-type: none"> Maintenance release. New features: <ul style="list-style-type: none"> ◦ Support for Orbit Ephemeris Message files 	23/04/2015	
4.10	<ul style="list-style-type: none"> Maintenance release 	29/10/2015	

4.11	<ul style="list-style-type: none"> • Maintenance release 	15/04/2016	
4.12	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> ◦ Function xo_osv_check 	03/11/2016	
4.13	<ul style="list-style-type: none"> • Maintenance release 	05/04/2017	
4.14	<ul style="list-style-type: none"> • Maintenance release 	16/11/2017	
4.15	<ul style="list-style-type: none"> • Maintenance release 	20/04/2018	
4.16	<ul style="list-style-type: none"> • Maintenance release • New features: <ul style="list-style-type: none"> • TLE support for Sentinel-5P, Sentinel-3B, Aeolus 	09/11/2018	
4.17	<ul style="list-style-type: none"> • Maintenance release 	10/05/2019	
4.18	<ul style="list-style-type: none"> • Maintenance release 	08/11/2019	
4.19	<ul style="list-style-type: none"> • Maintenance release 	29/05/2020	

TABLE OF CONTENTS

DOCUMENT INFORMATION.....	2
DOCUMENT STATUS LOG.....	3
TABLE OF CONTENTS.....	7
LIST OF TABLES.....	21
LIST OF FIGURES.....	24
1 SCOPE.....	25
2 ACRONYMS, NOMENCLATURE AND TERMINOLOGY.....	26
2.1 Acronyms.....	26
2.2 Nomenclature.....	26
2.3 Note on Terminology.....	27
3 APPLICABLE AND REFERENCE DOCUMENTS.....	28
3.1 Applicable Documents.....	28
3.2 Reference Documents.....	28
4 INTRODUCTION.....	29
4.1 Functions Overview.....	29
4.1.1 Orbit Initialisation.....	29
4.1.2 State Vector Computation (Propagation/Interpolation).....	31
4.1.3 Ancillary Results Computation.....	32
4.1.4 Time/Orbit Transformation.....	32
4.1.5 Orbit Information Parameters.....	32
4.1.6 File Generation.....	32
4.1.7 Clean-up Memory.....	32
4.1.8 Check Orbit files.....	33
4.2 State Vector Computation Calling Sequence (Propagation/ Interpolation).....	34

4.3 Time/Orbit Transformation and Orbit Information Parameters Calling Sequence.....	34
4.4 File Generation Calling Sequence.....	35
5 LIBRARY INSTALLATION.....	37
6 LIBRARY USAGE.....	38
6.1 Usage hints.....	40
6.2 General enumerations.....	41
6.3 Data Structures.....	45
7 CFI FUNCTIONS DESCRIPTION.....	51
7.1 xo_orbit_init_def.....	52
7.1.1 Overview.....	52
7.1.2 Calling interface.....	53
7.1.3 Input parameters.....	54
7.1.4 Output parameters.....	55
7.1.5 Warnings and errors.....	56
7.2 xo_orbit_init_def_2.....	57
7.2.1 Overview.....	57
7.2.2 Calling interface.....	58
7.2.3 Input parameters.....	59
7.2.4 Output parameters.....	59
7.2.5 Warnings and errors.....	60
7.3 xo_orbit_cart_init.....	61
7.3.1 Overview.....	61
7.3.2 Calling interface.....	61
7.3.3 Input parameters.....	62
7.3.4 Output parameters.....	62
7.3.5 Warnings and errors.....	63
7.4 xo_orbit_cart_init_precise.....	64
7.4.1 Overview.....	64
7.4.2 Calling interface.....	64

7.4.3	Input parameters.....	65
7.4.4	Output parameters.....	66
7.4.5	Warnings and errors.....	66
7.5	xo_orbit_init_file.....	68
7.5.1	Overview.....	68
7.5.1.1	Recommendations on Orbit Files Usage.....	69
7.5.2	Calling interface.....	71
7.5.3	Input parameters.....	72
7.5.4	Output parameters.....	74
7.5.5	Warnings and errors.....	75
7.6	xo_orbit_init_file_precise.....	77
7.6.1	Overview.....	77
7.6.2	Calling interface.....	79
7.6.3	Input parameters.....	80
7.6.4	Output parameters.....	81
7.6.5	Warnings and errors.....	82
7.7	xo_orbit_id_init.....	83
7.7.1	Overview.....	83
7.7.2	Calling interface.....	84
7.7.3	Input parameters.....	85
7.7.4	Output parameters.....	86
7.7.5	Warnings and errors.....	88
7.8	xo_orbit_init_geo.....	91
7.8.1	Overview.....	91
7.8.2	Calling interface.....	91
7.8.3	Input parameters.....	92
7.8.4	Output parameters.....	92
7.8.5	Warnings and errors.....	93
7.9	xo_orbit_close.....	94
7.9.1	Overview.....	94
7.9.2	Calling interface.....	94
7.9.3	Input parameters.....	94

7.9.4	Output parameters.....	94
7.9.5	Warnings and errors.....	95
7.10	xo_orbit_get_osv.....	96
7.10.1	Overview.....	96
7.10.2	Calling interface.....	96
7.10.3	Input parameters.....	96
7.10.4	Output parameters.....	96
7.10.5	Warnings and errors.....	97
7.11	xo_orbit_set_osv.....	98
7.11.1	Overview.....	98
7.11.2	Calling interface.....	98
7.11.3	Input parameters.....	98
7.11.4	Output parameters.....	98
7.11.5	Warnings and errors.....	99
7.12	xo_orbit_get_anx.....	100
7.12.1	Overview.....	100
7.12.2	Calling interface.....	100
7.12.3	Input parameters.....	100
7.12.4	Output parameters.....	100
7.12.5	Warnings and errors.....	101
7.13	xo_orbit_set_anx.....	102
7.13.1	Overview.....	102
7.13.2	Calling interface.....	102
7.13.3	Input parameters.....	102
7.13.4	Output parameters.....	102
7.13.5	Warnings and errors.....	103
7.14	xo_orbit_get_osf_rec.....	104
7.14.1	Overview.....	104
7.14.2	Calling interface.....	104
7.14.3	Input parameters.....	104
7.14.4	Output parameters.....	104
7.14.5	Warnings and errors.....	105

7.15	xo_orbit_set_osf_rec	106
7.15.1	Overview	106
7.15.2	Calling interface	106
7.15.3	Input parameters	106
7.15.4	Output parameters	106
7.15.5	Warnings and errors	107
7.16	xo_orbit_get_val_time	108
7.16.1	Overview	108
7.16.2	Calling interface	108
7.16.3	Input parameters	108
7.16.4	Output parameters	108
7.16.5	Warnings and errors	109
7.17	xo_orbit_set_val_time	110
7.17.1	Overview	110
7.17.2	Calling interface	110
7.17.3	Input parameters	110
7.17.4	Output parameters	110
7.17.5	Warnings and errors	111
7.18	xo_orbit_get_precise_propag_config	112
7.18.1	Overview	112
7.18.2	Calling interface	112
7.18.3	Input parameters	112
7.18.4	Output parameters	112
7.18.5	Warnings and errors	113
7.19	xo_orbit_set_precise_propag_config	114
7.19.1	Overview	114
7.19.2	Calling interface	114
7.19.3	Input parameters	114
7.19.4	Output parameters	114
7.19.5	Warnings and errors	115
7.20	xo_orbit_get_time_id	116
7.20.1	Overview	116

7.20.2	Calling interface.....	116
7.20.3	Input parameters.....	116
7.20.4	Output parameters.....	116
7.20.5	Warnings and errors.....	116
7.21	xo_orbit_get_model_id.....	117
7.21.1	Overview.....	117
7.21.2	Calling interface.....	117
7.21.3	Input parameters.....	117
7.21.4	Output parameters.....	117
7.21.5	Warnings and errors.....	117
7.22	xo_orbit_get_osv_compute_validity.....	119
7.22.1	Overview.....	119
7.22.2	Calling interface.....	119
7.22.3	Input parameters.....	119
7.22.4	Output parameters.....	119
7.22.5	Warnings and errors.....	120
7.23	xo_orbit_get_propag_mode.....	121
7.23.1	Overview.....	121
7.23.2	Calling interface.....	121
7.23.3	Input parameters.....	121
7.23.4	Output parameters.....	121
7.23.5	Warnings and errors.....	121
7.24	xo_orbit_get_interpol_mode.....	122
7.24.1	Overview.....	122
7.24.2	Calling interface.....	122
7.24.3	Input parameters.....	122
7.24.4	Output parameters.....	122
7.24.5	Warnings and errors.....	122
7.25	xo_orbit_get_propag_config.....	124
7.25.1	Overview.....	124
7.25.2	Calling interface.....	124
7.25.3	Input parameters.....	124

7.25.4	Output parameters.....	124
7.25.5	Warnings and errors.....	125
7.26	xo_orbit_get_interpol_config.....	126
7.26.1	Overview.....	126
7.26.2	Calling interface.....	126
7.26.3	Input parameters.....	126
7.26.4	Output parameters.....	126
7.26.5	Warnings and errors.....	127
7.27	xo_orbit_get_geo_orbit_info.....	128
7.27.1	Overview.....	128
7.27.2	Calling interface.....	128
7.27.3	Input parameters.....	128
7.27.4	Output parameters.....	128
7.27.5	Warnings and errors.....	129
7.28	xo_orbit_set_geo_orbit_info.....	130
7.28.1	Overview.....	130
7.28.2	Calling interface.....	130
7.28.3	Input parameters.....	130
7.28.4	Output parameters.....	130
7.28.5	Warnings and errors.....	131
7.29	xo_orbit_id_clone.....	132
7.29.1	Overview.....	132
7.29.2	Calling interface.....	132
7.29.3	Input parameters.....	132
7.29.4	Output parameters.....	132
7.29.5	Warnings and errors.....	132
7.30	xo_run_init.....	134
7.30.1	Overview.....	134
7.30.2	Calling interface.....	134
7.30.3	Input parameters.....	134
7.30.4	Output parameters.....	134
7.30.5	Warnings and errors.....	135

7.31	xo_run_get_ids.....	136
7.31.1	Overview.....	136
7.31.2	Calling interface.....	136
7.31.3	Input parameters.....	136
7.31.4	Output parameters.....	136
7.31.5	Warnings and errors.....	136
7.32	xo_run_close.....	137
7.32.1	Overview.....	137
7.32.2	Calling interface.....	137
7.32.3	Input parameters.....	137
7.32.4	Output parameters.....	137
7.32.5	Warnings and errors.....	137
7.33	xo_osv_compute.....	138
7.33.1	Overview.....	138
7.33.2	Computation methods (Propagation/interpolation).....	138
7.33.2.1	Propagation methods.....	139
7.33.2.2	Interpolation methods.....	142
7.33.3	Calling interface.....	144
7.33.4	Input parameters.....	144
7.33.5	Output parameters.....	145
7.33.6	Warnings and errors.....	146
7.34	xo_osv_compute_extra.....	147
7.34.1	Overview.....	147
7.34.2	Calling interface.....	147
7.34.3	Input parameters.....	148
7.34.4	Output parameters.....	149
7.34.5	Results vectors.....	150
7.34.6	Warnings and errors.....	155
7.35	xo_orbit_to_time.....	156
7.35.1	Overview.....	156
7.35.2	Calling sequence of xo_orbit_to_time:.....	156
7.35.3	Input parameters.....	157

7.35.4	Output parameters.....	157
7.35.5	Warnings and errors.....	157
7.35.6	Executable Program.....	158
7.36	xo_time_to_orbit.....	159
7.36.1	Overview.....	159
7.36.2	Calling sequence.....	159
7.36.3	Input parameters.....	161
7.36.4	Output parameters.....	161
7.36.5	Warnings and errors.....	161
7.36.6	Executable Program.....	162
7.37	xo_orbit_info.....	164
7.37.1	Overview.....	164
7.37.2	Calling sequence.....	164
7.37.3	Input parameters.....	165
7.37.4	Output parameters.....	165
7.37.5	Warnings and errors.....	167
7.38	xo_orbit_info_configure.....	168
7.38.1	Overview.....	168
7.38.2	Calling sequence.....	168
7.38.3	Input parameters.....	169
7.38.4	Output parameters.....	169
7.38.5	Warnings and errors.....	170
7.39	xo_orbit_rel_from_abs.....	171
7.39.1	Overview.....	171
7.39.2	Calling sequence.....	171
7.39.3	Input parameters.....	172
7.39.4	Output parameters.....	172
7.39.5	Warnings and errors.....	173
7.40	xo_orbit_abs_from_rel.....	174
7.40.1	Overview.....	174
7.40.2	Calling sequence.....	174
7.40.3	Input parameters.....	175

7.40.4	Output parameters.....	175
7.40.5	Warnings and errors.....	176
7.41	xo_orbit_abs_from_phase.....	177
7.41.1	Overview.....	177
7.41.2	Calling sequence.....	177
7.41.3	Input parameters.....	178
7.41.4	Output parameters.....	178
7.41.5	Warnings and errors.....	179
7.42	xo_osv_to_tle.....	180
7.42.1	Overview.....	180
7.42.2	Calling sequence.....	180
7.42.3	Input parameters.....	181
7.42.4	Output parameters.....	181
7.42.5	Warnings and errors.....	182
7.43	xo_gen_osf_create.....	183
7.43.1	Overview.....	183
7.43.2	Calling interface.....	183
7.43.3	Input parameters.....	185
7.43.4	Output parameters.....	186
7.43.5	Warnings and errors.....	187
7.43.6	Executable Program.....	189
7.44	xo_gen_osf_create_2.....	191
7.44.1	Overview.....	191
7.44.2	Calling interface.....	191
7.44.3	Input parameters.....	192
7.44.4	Output parameters.....	193
7.44.5	Warnings and errors.....	193
7.45	xo_gen_osf_append_orbit_change.....	194
7.45.1	Overview.....	194
7.45.2	Calling interface.....	194
7.45.3	Input parameters.....	196
7.45.4	Output parameters.....	197

7.45.5	Warnings and errors.....	198
7.45.6	Executable Program.....	200
7.46	xo_gen_osf_append_orbit_change_2.....	202
7.46.1	Overview.....	202
7.46.2	Calling interface.....	202
7.46.3	Input parameters.....	204
7.46.4	Output parameters.....	205
7.46.5	Warnings and errors.....	206
7.47	xo_gen_osf_change_repeat_cycle.....	207
7.47.1	Overview.....	207
7.47.2	Calling interface.....	207
7.47.3	Input parameters.....	209
7.47.4	Output parameters.....	210
7.47.5	Warnings and errors.....	211
7.47.6	Executable Program.....	213
7.48	xo_gen_osf_change_repeat_cycle_2.....	215
7.48.1	Overview.....	215
7.48.2	Calling interface.....	215
7.48.3	Input parameters.....	217
7.48.4	Output parameters.....	218
7.48.5	Warnings and errors.....	219
7.49	xo_gen_osf_add_drift_cycle.....	220
7.49.1	Overview.....	220
7.49.2	Calling interface.....	220
7.49.3	Input parameters.....	222
7.49.4	Output parameters.....	223
7.49.5	Warnings and errors.....	223
7.49.6	Executable Program.....	225
7.50	xo_gen_rof.....	227
7.50.1	Overview.....	227
7.50.2	Calling interface.....	227
7.50.3	Input parameters.....	229

7.50.4	Output parameters.....	232
7.50.5	Warnings and errors.....	232
7.50.6	Executable Program.....	234
7.51	xo_gen_rof_prototype.....	236
7.51.1	Overview.....	236
7.51.2	Calling interface.....	236
7.51.3	Input parameters.....	238
7.51.4	Output parameters.....	240
7.51.5	Warnings and errors.....	240
7.52	xo_gen_pof.....	242
7.52.1	Overview.....	242
7.52.2	Calling interface.....	242
7.52.3	Input parameters.....	244
7.52.4	Output parameters.....	245
7.52.5	Warnings and errors.....	246
7.52.6	Executable Program.....	248
7.53	xo_gen_oef.....	250
7.53.1	Overview.....	250
7.53.2	Calling interface.....	250
7.53.3	Input parameters.....	250
7.53.4	Output parameters.....	251
7.53.5	Warnings and errors.....	251
7.53.6	Executable Program.....	253
7.54	xo_gen_dnf.....	254
7.54.1	Overview.....	254
7.54.2	Calling interface.....	254
7.54.3	Input parameters.....	256
7.54.4	Output parameters.....	258
7.54.5	Warnings and errors.....	259
7.54.6	Executable Program.....	261
7.55	xo_gen_tle.....	263
7.55.1	Overview.....	263

7.55.2	Calling interface.....	263
7.55.3	Input parameters.....	264
7.55.4	Output parameters.....	266
7.55.5	Warnings and errors.....	266
7.55.6	Executable Program.....	268
7.56	xo_check_osf.....	270
7.56.1	Overview.....	270
7.56.2	Calling interface.....	270
7.56.3	Input parameters.....	271
7.56.4	Output parameters.....	271
7.56.5	Warnings and errors.....	272
7.57	xo_check_oef.....	274
7.57.1	Overview.....	274
7.57.2	Calling interface.....	274
7.57.3	Input parameters.....	275
7.57.4	Output parameters.....	276
7.57.5	Warnings and errors.....	276
7.58	xo_position_on_orbit_to_time.....	278
7.58.1	Overview.....	278
7.58.2	Calling Interface.....	278
7.58.3	Input Parameters.....	279
7.58.4	Output Parameters.....	279
7.58.5	Warnings and errors.....	280
7.59	xo_orbit_data_filter.....	281
7.59.1	Overview.....	281
7.59.1.1	Outliers filter.....	281
7.59.2	Calling Interface.....	281
7.59.3	Input Parameters.....	281
7.59.4	Output Parameters.....	282
7.59.5	Warnings and errors.....	282
7.60	xo_orbit_id_change.....	283
7.60.1	Overview.....	283

7.60.2	Calling Interface.....	283
7.60.3	Input Parameters.....	283
7.60.4	Output Parameters.....	284
7.60.5	Warnings and errors.....	284
7.61	xo_osv_check.....	286
7.61.1	Overview.....	286
7.61.2	Calling Interface.....	286
7.61.3	Input Parameters.....	286
7.61.4	Output Parameters.....	287
7.61.5	Warnings and errors.....	287
7.62	xo_orbit_id_check.....	288
7.62.1	Overview.....	288
7.62.2	Calling Interface.....	289
7.62.3	Input Parameters.....	289
7.62.4	Output Parameters.....	289
7.62.5	Warnings and errors.....	289
8	RUNTIME PERFORMANCES.....	291
9	LIBRARY PRECAUTIONS.....	294
10	NOTES:.....	295

LIST OF TABLES

Table 1: CFI functions included within EO_ORBIT library.....	39
Table 2: Some enumerations within EO_ORBIT library.....	41
Table 3: <i>EO_ORBIT</i> structures.....	45
Table 4: <i>Input parameters of xo_orbit_init_def</i> function.....	54
Table 5: <i>Output parameters of xo_orbit_init_def</i> function.....	55
Table 6: <i>Error messages of xo_orbit_init_def</i> function.....	56
Table 7: <i>Input parameters of xo_orbit_init_def_2</i> function.....	59
Table 8: <i>Output parameters of xo_orbit_init_def_2</i> function.....	59
Table 9: <i>Input parameters of xo_orbit_cart_init</i> function.....	62
Table 10: <i>Output parameters of xo_orbit_cart_init</i> function.....	62
Table 11: <i>Error messages of xo_orbit_cart_init</i> function.....	63
Table 12: <i>Input parameters of xo_orbit_cart_init_precise</i> function.....	65
Table 13: <i>Output parameters of xo_orbit_cart_init_precise</i> function.....	66
Table 14: <i>Error messages of xo_orbit_cart_init_precise</i> function.....	67
Table 15: <i>User requested time range in xo_orbit_init_file</i>	69
Table 16: <i>Validity periods for xo_orbit_init_file</i>	69
Table 17: OSV diagnostics behavior at orbit initialization.....	71
Table 18: <i>Input parameters of xo_orbit_init_file</i> function.....	72
Table 19: <i>Output parameters of xo_orbit_init_file</i> function.....	74
Table 20: <i>Error messages of xo_orbit_init_file</i> function.....	75
Table 21: <i>User requested time range in xo_orbit_init_file_precise</i>	77
Table 22: <i>Validity periods for xo_orbit_init_file_precise</i>	78
Table 23: <i>Input parameters of xo_orbit_init_file_precise</i> function.....	80
Table 24: <i>Output parameters of xo_orbit_init_file_precise</i> function.....	81
Table 25: <i>Error messages of xo_orbit_init_file_precise</i> function.....	82
Table 26: <i>User requested time range in xo_orbit_id_init</i>	83
Table 27: <i>Validity periods for xo_orbit_id_init</i>	84
Table 28: <i>Input parameters of xo_orbit_id_init</i> function.....	85
Table 29: <i>Output parameters of xo_orbit_id_init</i> function.....	87
Table 30: <i>Error messages of xo_orbit_id_init</i> function.....	88
Table 31: <i>Input parameters of xo_orbit_init_geo</i> function.....	92
Table 32: <i>Output parameters of xo_orbit_init_geo</i> function.....	92
Table 33: <i>Error messages of xo_orbit_init_geo</i> function.....	93
Table 34: <i>Input parameters of xo_orbit_close</i> function.....	94
Table 35: <i>Output parameters of xo_orbit_close</i> function.....	94
Table 36: <i>Error messages of xo_orbit_close</i> function.....	95
Table 37: <i>Input parameters of xo_orbit_get_osv</i> function.....	96
Table 38: <i>Output parameters of xo_orbit_get_osv</i> function.....	96
Table 39: <i>Input parameters of xo_orbit_set_osv</i> function.....	98
Table 40: <i>Output parameters of xo_orbit_set_osv</i> function.....	99
Table 41: <i>Input parameters of xo_orbit_get_anx</i> function.....	100
Table 42: <i>Output parameters of xo_orbit_get_anx</i> function.....	101
Table 43: <i>Input parameters of xo_orbit_set_anx</i> function.....	102
Table 44: <i>Output parameters of xo_orbit_set_anx</i> function.....	103
Table 45: <i>Input parameters of xo_orbit_get_osf_rec</i> function.....	104
Table 46: <i>Output parameters of xo_orbit_get_osf_rec</i> function.....	104

Table 47: <i>Input parameters of xo_orbit_set_osf_rec function</i>	106
Table 48: <i>Output parameters of xo_orbit_set_osf_rec function</i>	106
Table 49: <i>Input parameters of xo_orbit_get_val_time function</i>	108
Table 50: <i>Output parameters of xo_orbit_get_val_time function</i>	108
Table 51: <i>Input parameters of xo_orbit_set_val_time function</i>	110
Table 52: <i>Output parameters of xo_orbit_set_val_time function</i>	110
Table 53: <i>Input parameters of xo_orbit_get_precise_propag_config function</i>	112
Table 54: <i>Output parameters of xo_orbit_get_precise_propag_config function</i>	112
Table 55: <i>Input parameters of xo_orbit_set_precse_propag_config function</i>	114
Table 56: <i>Output parameters of xo_orbit_set_precse_propag_config function</i>	114
Table 57: <i>Input parameters of xo_orbit_get_time_id function</i>	116
Table 58: <i>Output parameters of xo_orbit_get_time_id function</i>	116
Table 59: <i>Input parameters of xo_orbit_get_model_id function</i>	117
Table 60: <i>Output parameters of xo_orbit_get_model_id function</i>	117
Table 61: <i>Input parameters of xo_orbit_get_osv_compute_validity function</i>	119
Table 62: <i>Output parameters of xo_orbit_get_osv_compute_validity function</i>	119
Table 63: <i>Input parameters of xo_orbit_get_propag_mode function</i>	121
Table 64: <i>Output parameters of xo_orbit_get_propag_mode function</i>	121
Table 65: <i>Input parameters of xo_orbit_get_interpol_mode function</i>	122
Table 66: <i>Output parameters of xo_orbit_get_interpol_mode function</i>	122
Table 67: <i>Input parameters of xo_orbit_get_propag_config function</i>	124
Table 68: <i>Output parameters of xo_orbit_get_propag_config function</i>	124
Table 69: <i>Input parameters of xo_orbit_get_interpol_config function</i>	126
Table 70: <i>Output parameters of xo_orbit_get_interpol_config function</i>	126
Table 71: <i>Input parameters of xo_orbit_get_geo_orbit_info function</i>	128
Table 72: <i>Output parameters of xo_orbit_get_geo_orbit_info function</i>	128
Table 73: <i>Input parameters of xo_orbit_set_geo_orbit_info function</i>	130
Table 74: <i>Output parameters of xo_orbit_set_geo_orbit_info function</i>	130
Table 75: <i>Input parameters of xo_orbit_id_clone function</i>	132
Table 76: <i>Output parameters of xo_orbit_id_clone function</i>	132
Table 77: <i>Input parameters of xo_run_init function</i>	134
Table 78: <i>Output parameters of xo_run_init function</i>	134
Table 79: <i>Error messages of xo_run_init function</i>	135
Table 80: <i>Input parameters of xo_run_get_ids function</i>	136
Table 81: <i>Output parameters of xo_run_get_ids function</i>	136
Table 82: <i>Input parameters of xo_run_close function</i>	137
Table 83: <i>Output parameters of xo_run_close function</i>	137
Table 84: <i>OSV computation methods</i>	138
Table 85: <i>Validity Time Intervals for Propagation</i>	141
Table 86: <i>Input parameters of xo_osv_compute function</i>	144
Table 87: <i>Output parameters of xo_osv_compute function</i>	145
Table 88: <i>Error messages of xo_osv_compute function</i>	146
Table 89: <i>Input parameters of xo_osv_compute_extra</i>	148
Table 90: <i>Enumeration values of extra_choice input flag</i>	148
Table 91: <i>Output parameters of xo_osv_compute_extra</i>	149
Table 92: <i>Ancillary results vector. Model-dependent parameters</i>	150
Table 93: <i>Ancillary results vector. Model-independent parameters</i>	151
Table 94: <i>Error messages of xo_osv_compute_extra function</i>	155
Table 95: <i>Input parameters for xo_orbit_to_time</i>	157

Table 96: <i>Output parameters for xo_orbit_to_time</i>	157
Table 97: <i>Error messages of xo_orbit_to_time function</i>	157
Table 98: <i>Input parameters for xo_time_to_orbit function</i>	161
Table 99: <i>Output parameters for xo_time_to_orbit</i>	161
Table 100: <i>Error messages of xo_time_to_orbit function</i>	162
Table 101: <i>Input parameters for xo_orbit_info</i>	165
Table 102: <i>Output parameters for xo_orbit_info</i>	165
Table 103: <i>Error messages of xo_orbit_info function</i>	167
Table 104: <i>Input parameters for xo_orbit_info_configure</i>	169
Table 105: <i>Output parameters for xo_orbit_info_configure</i>	169
Table 106: <i>Error messages of xo_orbit_info_configure function</i>	170
Table 107: <i>Input parameters for xo_orbit_rel_from_abs</i>	172
Table 108: <i>Output parameters for xo_orbit_rel_from_abs</i>	172
Table 109: <i>Error messages of xo_orbit_rel_from_abs function</i>	173
Table 110: <i>Input parameters for xo_orbit_abs_from_rel</i>	175
Table 111: <i>Output parameters for xo_orbit_abs_from_rel</i>	175
Table 112: <i>Error messages of xo_orbit_abs_from_rel function</i>	176
Table 113: <i>Input parameters for xo_orbit_abs_from_phase</i>	178
Table 114: <i>Output parameters for xo_orbit_abs_from_phase</i>	178
Table 115: <i>Error messages of xo_orbit_abs_from_phase function</i>	179
Table 116: <i>Input parameters for xo_osv_to_tle</i>	181
Table 117: <i>Output parameters for xo_osv_to_tle</i>	181
Table 118: <i>Error messages of xo_osv_to_tle function</i>	182
Table 119: <i>Input parameters of xo_gen_osf_create function</i>	185
Table 120: <i>Output parameters of xo_gen_osf_create function</i>	186
Table 121: <i>Error messages of xo_gen_osf_create function</i>	187
Table 122: <i>Input parameters of xo_gen_osf_create_2 function</i>	192
Table 123: <i>Output parameters of xo_gen_osf_create_2 function</i>	193
Table 124: <i>Input parameters of xo_gen_osf_append_orbit_change function</i>	196
Table 125: <i>Output parameters of xo_gen_osf_append_orbit_change function</i>	197
Table 126: <i>Error messages of xo_gen_osf_append_orbit_change function</i>	198
Table 127: <i>Input parameters of xo_gen_osf_append_orbit_change_2 function</i>	204
Table 128: <i>Output parameters of xo_gen_osf_append_orbit_change_2 function</i>	205
Table 129: <i>Input parameters of xo_gen_osf_change_repeat_cycle function</i>	209
Table 130: <i>Output parameters of xo_gen_osf_change_repeat_cycle function</i>	210
Table 131: <i>Error messages of xo_gen_osf_change_repeat_cycle function</i>	211
Table 132: <i>Input parameters of xo_gen_osf_change_repeat_cycle_2 function</i>	217
Table 133: <i>Output parameters of xo_gen_osf_change_repeat_cycle_2 function</i>	218
Table 134: <i>Input parameters of xo_gen_osf_add_drift_cycle function</i>	222
Table 135: <i>Output parameters of xo_gen_osf_add_drift_cycle function</i>	223
Table 136: <i>Error messages of xo_gen_osf_add_drift_cycle function</i>	223
Table 137: <i>Input parameters of xo_gen_rof function</i>	229
Table 138: <i>Output parameters of xo_gen_rof function</i>	232
Table 139: <i>Error messages of xo_gen_rof function</i>	232
Table 140: <i>Input parameters of xo_gen_rof_prototype function</i>	238
Table 141: <i>Output parameters of xo_gen_rof_prototype function</i>	240
Table 142: <i>Error messages of xo_gen_rof_prototype function</i>	240
Table 143: <i>Input parameters of xo_gen_pof function</i>	244
Table 144: <i>Output parameters of xo_gen_pof function</i>	245

Table 145: <i>Error messages of xo_gen_pof function</i>	246
Table 146: <i>Input parameters of xo_gen_oef function</i>	250
Table 147: <i>Output parameters of xo_gen_oef function</i>	251
Table 148: <i>Error messages of xo_gen_oef function</i>	251
Table 149: <i>Input parameters of xo_gen_dnf function</i>	256
Table 150: <i>Output parameters of xo_gen_dnf function</i>	258
Table 151: <i>Error messages of xo_gen_dnf function</i>	259
Table 152: <i>Input parameters of xo_gen_tle function</i>	264
Table 153: <i>Output parameters of xo_gen_tle function</i>	266
Table 154: <i>Error messages of xo_gen_tle function</i>	266
Table 155: <i>Input parameters of xo_check_osf function</i>	271
Table 156: <i>Output parameters of xo_check_osf function</i>	271
Table 157: <i>Error messages of xo_ckeck_osf function</i>	272
Table 158: <i>Input parameters of xo_check_oef function</i>	275
Table 159: <i>Output parameters of xo_check_oef function</i>	276
Table 160: <i>Error messages of xo_ckeck_oef function</i>	277
Table 161: <i>Input parameters of xo_position_on_orbit_to_time function</i>	279
Table 162: <i>Output parameters of xo_position_on_orbit_to_time function</i>	279
Table 163: <i>Error messages of xo_position_on_orbit_to_time function</i>	280
Table 164: <i>Input parameters of xo_orbit_data_filter function</i>	281
Table 165: <i>Output parameters of xo_orbit_data_filter function</i>	282
Table 166: <i>Error messages of xo_orbit_data_filter function</i>	282
Table 167: <i>Input parameters of xo_orbit_id_change function</i>	283
Table 168: <i>Output parameters of xo_orbit_id_change function</i>	284
Table 169: <i>Error messages of xo_orbit_id_change function</i>	284
Table 170: <i>Input parameters of xo_osv_check function</i>	286
Table 171: <i>Output parameters of xo_osv_check function</i>	287
Table 172: <i>Error messages of xo_osv_check function</i>	287
Table 173: <i>Input parameters of xo_orbit_id_check function</i>	289
Table 174: <i>Output parameters of xo_orbit_id_check function</i>	289
Table 175: <i>Error messages of xo_orbit_id_check function</i>	290

LIST OF FIGURES

Figure 1: Orbit Calling Sequence.....	35
Figure 2: File Generation Calling Sequence.....	36
Figure 3: Weight Function for Double Propagation Model.....	141
Figure 4: <i>Performances of the interpolation algorithm</i>	143

1 SCOPE

The EO_ORBIT Software User Manual provides a detailed description of usage of the CFI functions included within the EO_ORBIT CFI software library.

2 ACRONYMS, NOMENCLATURE AND TERMINOLOGY

2.1 Acronyms

ANX	Ascending Node Crossing
AOCS	Attitude and Orbit Control Subsystem
CFI	Customer Furnished Item
EF	Earth Fixed reference frame
EOCFI	Earth Observation CFI
ESA	European Space Agency
ESTEC	European Space Technology and Research Centre
FOS	Flight Operations Segment
GS	Ground Station
OBT	On-board Binary Time
OEF	Orbit Event File
OSF	Orbit Scenario File
OSV	Orbit State Vector
POF	Predicted Orbit File
ROF	Restituted Orbit File
SSP	Sub-Satellite Point
SRAR	Satellite Relative Actual Reference
SUM	Software User Manual
TLE	Two Line Elements
TOD	True of Date reference frame
UTC	Universal Time Coordinated
UT1	Universal Time UT1
WGS[84]	World Geodetic System 1984

2.2 Nomenclature

<i>CFI</i>	A group of CFI functions, and related software and documentation that will be distributed by ESA to the users as an independent unit
<i>CFI function</i>	A single function within a CFI that can be called by the user
<i>Library</i>	A software library containing all the CFI functions included within a CFI plus the supporting functions used by those CFI functions (transparently to the user)

2.3 Note on Terminology

In order to keep compatibility with legacy CFI libraries, the Earth Observation Mission CFI Software makes use of terms that are linked with missions already or soon in the operational phase like the Earth Explorers.

This may be reflected in the rest of the document when examples of Mission CFI Software usage are proposed or description of Mission Files is given.

3 APPLICABLE AND REFERENCE DOCUMENTS

3.1 Applicable Documents

No applicable documents.

3.2 Reference Documents

[MCD]	Earth Observation Mission CFI Software. Conventions Document. EO-MA-DMS-GS-0001.
[MSC]	Earth Observation Mission CFI Software. Mission Specific Customizations Document. EO-MA- DMS-GS-0018.
[GEN_SUM]	Earth Observation Mission CFI Software. General Software User Manual. EO-MA- DMS-GS-0002.
[F_H_SUM]	Earth Observation Mission CFI Software. EO_FILE_HANDLING Software User Manual. EO-MA-DMS-GS-0008.
[D_H_SUM]	Earth Observation Mission CFI Software. EO_DATA_HANDLING Software User Manual. EO-MA-DMS-GS-007.
[LIB_SUM]	Earth Observation Mission CFI Software. EO_LIB Software User Manual. EO-MA-DMS-GS-003.
[FORMATS]	Earth Explorer File Format Guidelines. CS-TN-ESA-GS-0148.
[EO_OPS]	Earth Observation OPS Commanding. Link to Technical note

The latest applicable version of [MCD], [MSC], [GEN_SUM], [F_H_SUM], [D_H_SUM], [LIB_SUM] is v4.19 and can be found at:
http://eop-cfi.esa.int/REPO/PUBLIC/DOCUMENTATION/CFI/EOCFI/BRANCH_4X/

4 INTRODUCTION

4.1 Functions Overview

This software library contains:

- CFI functions allowing accurate computation of orbit state vectors, either at ascending node or (by propagation) at any point in the orbit of any Earth Observation satellite.
- The orbit propagation may be performed based on different propagation models. The initial set of models supported are:
 - Mean Keplerian model
 - TLE model
 - Numerical model
- It includes an interpolator and orbit propagators.
- CFI functions required to compute the orbit scenario file, used for Earth Observation mission planning purposes, and several orbit files useful for testing purposes (Predicted Orbit File, Restituted Orbit File, DORIS Navigator Files).
- It contains:
 - a library of functions which can be called from a main executable program
 - a set of executable programs (1 for each function) with the exact same functionality as the functions

The following sections summarize the set of functions in this library:

4.1.1 Orbit Initialisation

Before doing any orbit calculation, the orbit should be initialized using one of the following functions:

- ***xo_orbit_init_def***: this software generates a cartesian state vector around the true ascending node crossings as a function of the date (processing time), the longitude of the ascending node, the satellite Repeat Cycle Length, the mean local solar time and either the drift in mean local solar time or the inclination.
- ***xo_orbit_cart_init*, *xo_orbit_cart_init_precise***: This software initializes the orbit using as input a cartesian orbit state vector. The “precise” function allows the introduction of data to propagate a state vector with a numeric propagator (see 4.1.2). Numerical propagator uses external files for the configuration of gravity model and F10.7 coefficient and Geomagnetic Activity index values. You can find some files that can be used in *files/models* directory of the Earth Observation CFI package, and following you can find some references for them:
 - Gravity model egm96:
 - <http://cddisa.gsfc.nasa.gov/926/egm96/egm96.html>
 - F10.7 coefficient and Geomagnetic Activity index: ECSS-E-10-04A Space Environment
 - (<http://www.spacelab.dti.supsi.ch/Tecnica/ECSS-E-10-04ASpaceEnvironment1.pdf>).
- ***xo_orbit_init_file*, *xo_orbit_init_file_precise***: This software initializes the orbit using a set of files containing the orbital information (state vectors, orbital geometry or TLE data). The “precise”

function allows the introduction of data to propagate an state vector with a numeric propagator (see 4.1.2). The following input file types are accepted:

- Flight Dynamics predicted ascending node state vectors.
- DORIS Navigator Data
- FOS Restituted Orbit Files
- DORIS Preliminary Orbit
- DORIS Precise Orbit
- Ascending node state vectors from the Orbit Scenario File
- TLE files (not for precise propagator)
- SP3 files (not for precise propagator)
- **xo_orbit_id_init**: This software initializes the orbit using a data structure that contain a set of data read from files containing the orbital information (from Orbit files, DORIS navigator, Orbit Scenario files or SP3 files).
- **xo_orbit_init_geo**: This software initializes the orbit for a geostationary orbit using as input fixed longitude coordinates of the satellite.

In all cases a variable of the type `xo_orbit_id` (*Orbit ID*.) is returned. This variable is a CFI Identifier of the type described in [GEN_SUM]. This variable keeps internally the orbit information that will be used for further calculations. That orbit information can be retrieved by calling the following CFI functions:

CFI Function ¹	Orbit ID data	Condition to get the data
<code>xo_orbit_init_status</code>	Orbit ID initialisation status	Always
<code>xo_orbit_get_sat_id</code>	Satellite ID	The Orbit ID is initialised.
<code>xo_orbit_get_mode</code>	Mode used for the Orbit ID initialisation	The Orbit ID is initialised.
<code>xo_orbit_get_osv</code>	OSV stored in the Orbit ID	The Orbit ID has been initialised with state vectors.
<code>xo_orbit_get_anx</code>	ANX data stored in the Orbit ID	The Orbit ID has been initialised with state vectors that are not located at the ANX (Restituted orbit files, DORIS Navigator files...)
<code>xo_orbit_get_osf_rec</code>	Orbital Geometry data stored in the Orbit ID	The Orbit ID has been initialised with orbit geometry data.
<code>xo_orbit_get_val_time</code>	Validity time interval where the Orbit ID can be used except for xo_osv_compute and xo_osv_compute_extra	The Orbit ID is initialised.
<code>xo_orbit_get_precise_propag_config</code>	Configuration for the precise propagator	The Orbit ID has been initialised with xo_orbit_init_file_precise or xo_orbit_cart_init_precise

¹ These functions are defined in the current SUM (section 7) or in [GEN_SUM].

xo_orbit_get_time_id	Time ID used for the Orbit ID initialisation	The Orbit ID is initialised.
xo_orbit_get_model_id	Model ID used for the Orbit ID initialisation	The Orbit ID is initialised.
xo_orbit_get_osv_compute_validity	Validity time interval where the Orbit ID can be used to call xo_osv_compute and xo_osv_compute_extra	The Orbit ID is initialised.
xo_orbit_get_propag_mode	Propagation model used when calling xo_osv_compute	Orbit Id is configured for propagation (see section 4.1.2)
xo_orbit_get_interpol_mode	Interpolation model used when calling xo_osv_compute	Orbit Id is configured for interpolation (see section 4.1.2)
xo_orbit_get_propag_config	Configuration data for the propagator	Orbit Id is configured for propagation (see section 4.1.2)
xo_orbit_get_interpol_config	Configuration data for the interpolator	Orbit Id is configured for interpolation (see section 4.1.2)

Finally, note that it is possible to create a copy of *Orbit ID* with **xo_orbit_id_clone** .

4.1.2 State Vector Computation (Propagation/Interpolation)

The software provides a set of functions to compute orbit state vectors at a given time:

- **xo_osv_compute:** This software computes the state vector at the requested time. The method used to compute that vector is transparent for the user and depends on the data type used for the orbit initialisation. Propagation is performed when the orbit_id is initialised with:
 - One Orbit State Vector (xo_orbit_cart_init)
 - Orbit Geometry (xo_orbit_init_def)
 - Orbit Scenario File
 - Predicted orbit file (plus an optional DORIS Navigator file)
 - Orbit Event Files (**Note: Orbit Event File is deprecated, only supported for CRYOSAT mission**).
 - TLE files

Interpolation is used in these other cases:

- DORIS Navigator Data
- FOS Restituted Orbit Files
- DORIS Preliminary Orbit
- DORIS Precise Orbit

- SP3 files

4.1.3 Ancillary Results Computation

- *xo_osv_compute_extra*: This software returns ancillary results, i.e. mean and osculating Keplerian orbit state vectors, satellite osculating true latitude, latitude rate and latitude rate-rate, Sun zenith angle and many more.

4.1.4 Time/Orbit Transformation

- *xo_time_to_orbit*: This software calculates the absolute orbit, number of seconds and number of microseconds since ascending node that corresponds to a given time in processing format.
- *xo_orbit_to_time*: This software calculates the time, in processing format, that corresponds to a given absolute orbit, number of seconds and number of microseconds since ascending node.

4.1.5 Orbit Information Parameters

- *xo_orbit_rel_from_abs*: This software calculates the relative orbit, the phase number giving as input an absolute orbit number.
- *xo_orbit_abs_from_rel*: This software calculates the absolute orbit number giving as input a relative orbit number and its cycle number.
- *xo_orbit_abs_from_phase*: This software calculates the absolute orbit number, the relative orbit, the phase number giving as input a phase number.
- *xo_orbit_info*: This software calculates orbit related parameters providing as input the absolute orbit number.

4.1.6 File Generation

- *xo_gen_osf_create/xo_gen_osf_create_2*: generates the orbit scenario file with user provided inputs
- *xo_gen_osf_append_orbit_change/xo_gen_osf_append_orbit_change_2*: adds an orbit change to a previously generated OSF
- *xo_gen_osf_change_repeat_cycle/xo_gen_osf_change_repeat_cycle_2*: adds an orbit change for a given target orbit to an existing OSF.
- *xo_gen_osf_add_drift_cycle*: adds an orbit change for a requested orbit with a particular ascending node longitude and an orbit for the manoeuvre.
- *xo_gen_pof*: generates a Predicted Orbit File from several different reference input files.
- *xo_gen_rof* and *xo_gen_rof_prototype*: generates a Restituted Orbit File from several different reference input files.
- *xo_gen_oef* generates an orbit event file from an orbit scenario file and a predicted orbit file. **Note: Orbit Event File is deprecated, only supported for CRYOSAT mission**
- *xo_gen_dnf*: generates a DORIS Navigator File from several different reference input files.
- *xo_gen_tle*: generates a TLE file from a Predicted or Restituted Orbit file.

4.1.7 Clean-up Memory

- *xo_orbit_close*: This software frees the memory allocated by the orbit initialization routines. It closes the *xo_orbit_id*, so that it cannot be used for further computations.

4.1.8 Check Orbit files

- *xo_check_osf*: checks the continuity between the last orbit of an orbital change and the next orbit in an orbit scenario file.
- *xo_check_oef*: checks the consistency between the list of the orbital changes and the list of orbit state vectors in an orbit event file. **Note: Orbit Event File is deprecated, only supported for CRYOSAT mission**

4.2 State Vector Computation Calling Sequence (Propagation/ Interpolation)

A complete propagation sequence consists of:

- A call to any of the initialization routines for orbit, *xo_orbit_init_def*, *xo_orbit_init_def_2*, *xo_orbit_init_file[_precise]* or *xo_orbit_cart_init[_precise]*, *xo_orbit_id_init*, *xo_orbit_init_geo* to generate the internal data necessary for whatever calculation involving orbits.
- An optional call to *xo_osv_compute_extra* to calculate any desired ancillary result related to the initializing state vector.
- A call to the *xo_osv_compute* function to compute the orbit state vector at a requested time (Optionally, the user can check if the requested time is within the validity interval by calling the function *xo_orbit_get_osv_compute_validity*).
- To obtain some ancillary results associated to the computed OSV, the user might call the *xo_osv_compute_extra* function.
- At the end of a sequence is mandatory to call *xo_orbit_close* to free the memory allocated.

The possible propagation sequences of calls allowing to produce an orbit state vector are shown in Figure 1.

4.3 Time/Orbit Transformation and Orbit Information Parameters Calling Sequence

A complete time/orbit transformation and orbit information parameters sequence consists of:

- A call to any of the initialization routines for orbit, *xo_orbit_init_def*, *xo_orbit_init_file[_precise]* or *xo_orbit_cart_init[_precise]*, *xo_orbit_id_init*, to generate the internal data necessary for whatever calculation involving orbits. Note that time to orbit transformations cannot be computed if the orbit was initialised with *xo_orbit_cart_init*.
- A call to a *time/orbit transformation* or an *orbit information parameters* routine.
- When no more *time/orbit transformations* and *orbit information parameters* routines are going to be used, call to *xo_orbit_close* to free the memory allocated.
- The possible time/orbit transformation and orbit information parameters sequences of calls allowing to produce an orbit state vector are shown in Figure 1.
- A detailed description of each function is provided in section 7. Please refer also to:
- [MCD] for a detailed description of the time references and formats, reference frames, parameters and models used in this document.
- [GEN_SUM] for a complete overview of the CFI, and in particular the detailed description of the *Id* concept and the error handling functions.

Orbit Routines Data Flow

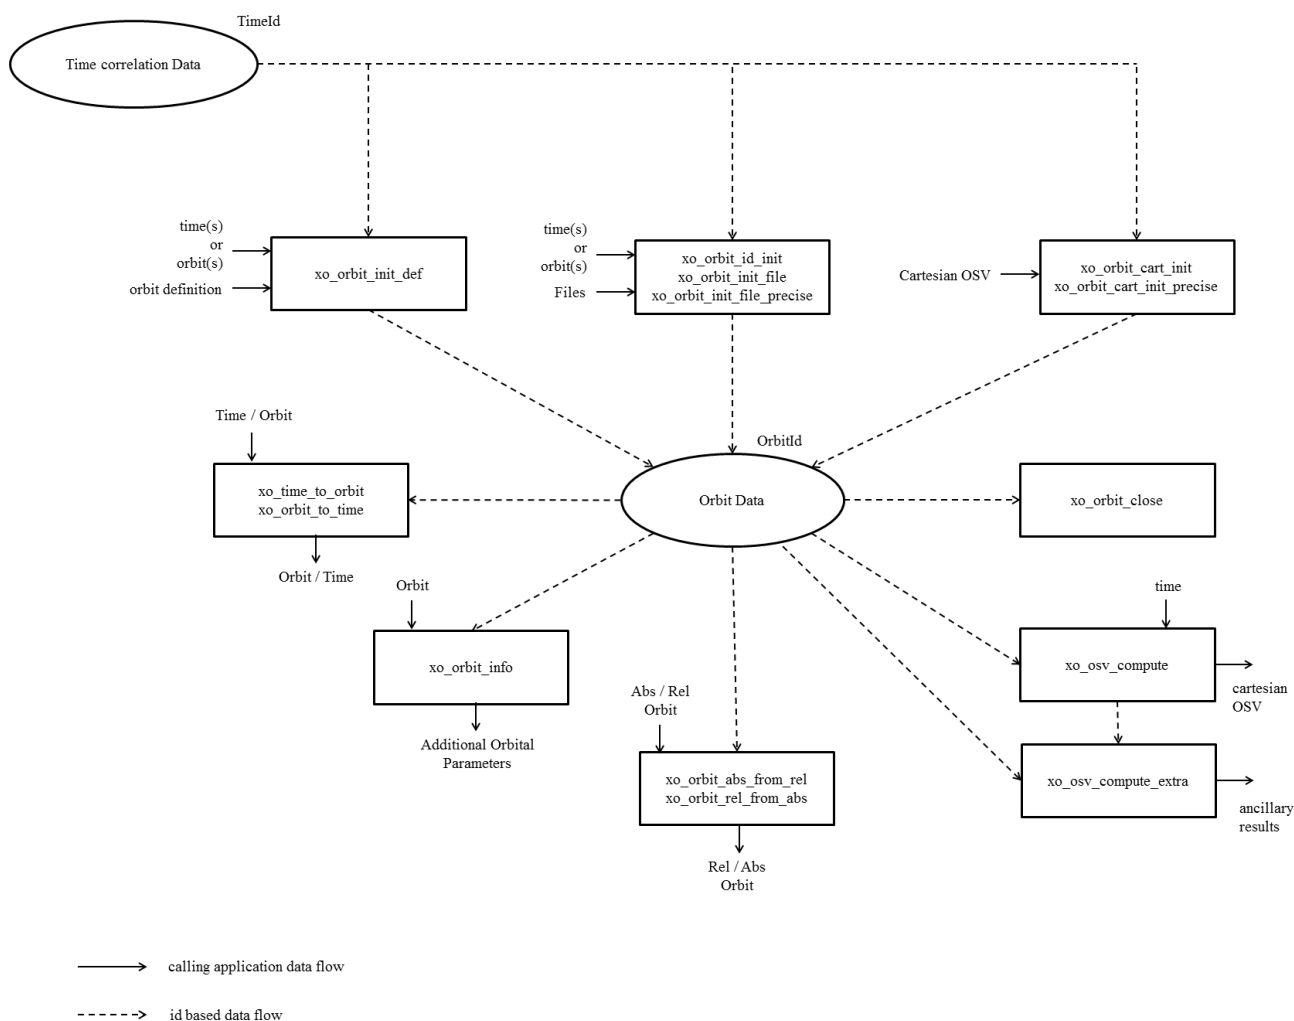 


Figure 1: Orbit Calling Sequence

4.4 File Generation Calling Sequence

The calling sequence for the file generators consists of:

- One call to a time initialization routine
- One call to the generation routine providing the input parameters. For `xo_gen_pof`, `xo_gen_rof`, `xo_gen_oef` and `xo_gen_dnf` a reference orbit file has to be provided as well.

The following figure shows an schema of the calling sequence:

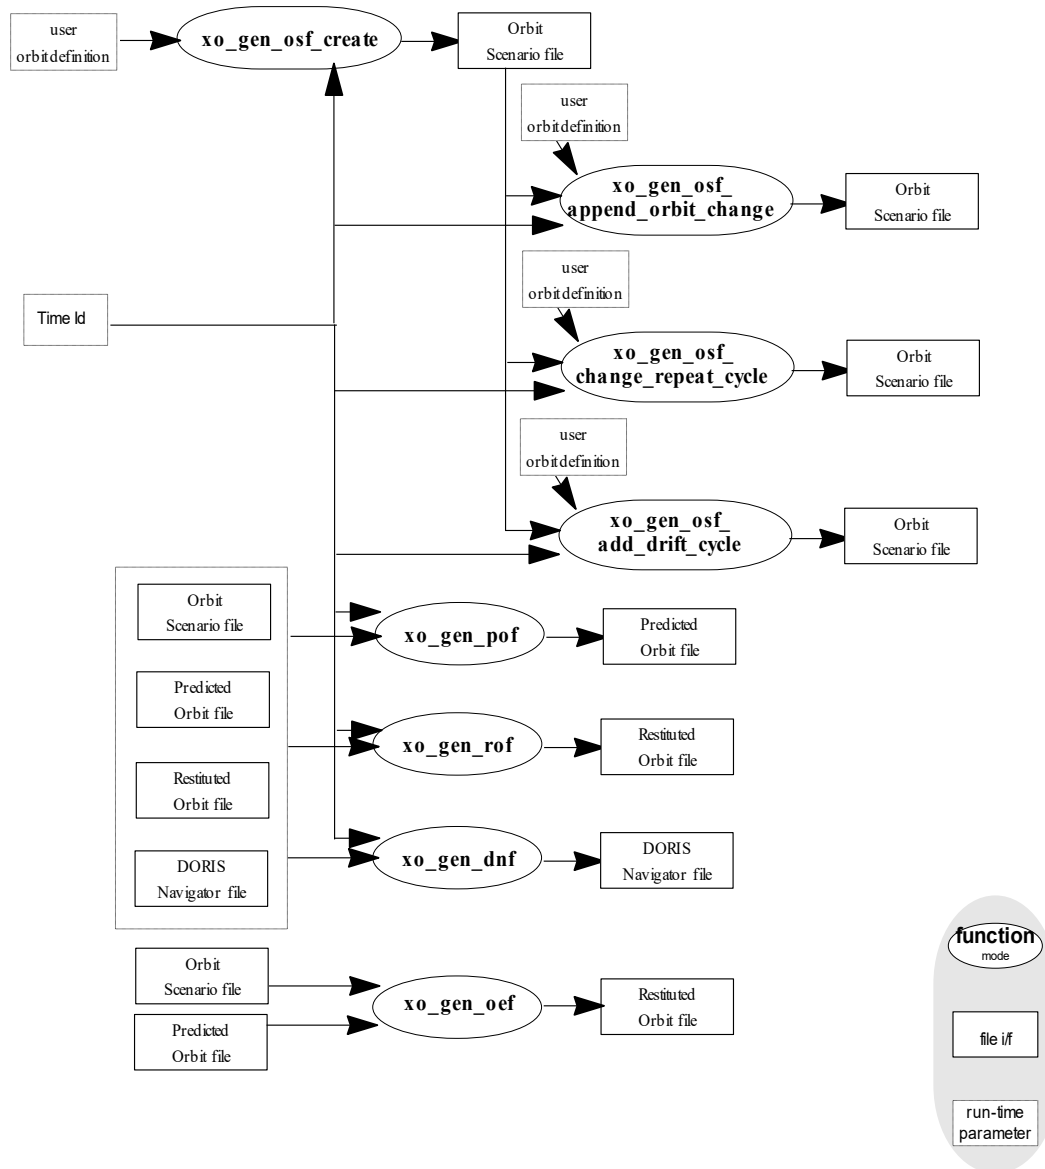 


Figure 2: File Generation Calling Sequence

5 LIBRARY INSTALLATION

For a detailed description of the installation of any CFI library, please refer to [GEN_SUM].

6 LIBRARY USAGE

The EO_ORBIT software library has the following dependencies:

- Other EOCFI libraries:
 - EO_FILE_HANDLING (See [F_H_SUM]).
 - EO_DATA_HANDLING (See [D_H_SUM]).
 - EO_LIB (See [LIB_SUM]).
- Third party libraries:
 - POSIX thread library: libpthread.so (Note: this library is normally pre-installed in Linux and MacOS platforms. For Windows platforms, pthread.lib is included in the distribution package, with license LGPL);
 - GEOTIFF, TIFF, PROJ, LIBXML2 libraries (these libraries are included in the distribution package. Their usage terms and conditions are available in the file "TERMS_AND_CONDITIONS.TXT" which is part of the distribution package).

The following is required to compile and link a Software application that uses the EO_ORBIT software library functions (it is assumed that the required EOCFI and third-part libraries are located in directory *cfi_lib_dir* and the required header files are located in *cfi_include*, see [GEN_SUM] for installation procedures):

1) include the following header files in the source code:

- explorer_orbit.h (for a C application)

2) use the following compile and link options:

Linux and MacOS platforms:

```
-Icfi_include_dir -Lcfi_lib_dir -lexplorer_orbit
```

```
-lexplorer_lib -lexplorer_data_dandling -lexplorer_file_handling -lgeotiff -ltiff -lproj -lxml2 -lm -lc -lpthread
```

Windows platforms:

```
/I "cfi_include_dir" /libpath:"cfi_lib_dir" libexplorer_orbit.lib
```

```
libexplorer_lib.lib libexplorer_data_handling.lib libexplorer_file_handling.lib libgeotiff.lib libtiff.lib libproj.lib libxml2.lib pthread.lib Ws2_32.lib
```

All functions described in this document have a name starting with the prefix *xo_*.

To avoid problems in linking a user application with the EO_ORBIT software library due to the existence of names multiple defined, the user application should avoid naming any global software item beginning with either the prefix *XO_* or *xo_*.

This is summarized in Table 1.

Table 1: CFI functions included within EO_ORBIT library

Function Name	Enumeration value	long
Main CFI Functions		
xo_orbit_init_def	XO_ORBIT_INIT_DEF_ID	0
xo_orbit_cart_init	XO_ORBIT_CART_INIT_ID	1
xo_orbit_cart_init_precise	XO_ORBIT_CART_INIT_PRECISE_ID	2
xo_orbit_id_init	XO_ORBIT_ID_INIT_ID	3
xo_orbit_init_file	XO_ORBIT_INIT_FILE_ID	4
xo_orbit_init_file_precise	XO_ORBIT_INIT_FILE_PRECISE_ID	5
xo_orbit_close	XO_ORBIT_CLOSE_ID	6
xo_osv_compute	XO_OSV_COMPUTE_ID	7
xo_osv_compute_extra	XO_OSV_COMPUTE_EXTRA_ID	8
xo_orbit_to_time	XO_ORBIT_TO_TIME_ID	9
xo_time_to_orbit	XO_TIME_TO_ORBIT_ID	10
xo_orbit_abs_from_rel	XO_ORBIT_ABS_FROM_REL_ID	11
xo_orbit_rel_from_abs	XO_ORBIT_REL_FROM_ABS_ID	12
xo_orbit_abs_from_phase	XO_ORBIT_ABS_FROM_PHASE_ID	13
xo_orbit_info	XO_ORBIT_INFO_ID	14
xo_osv_to_tle	XO_OSV_TO_TLE_ID	15
xo_run_init	XO_RUN_INIT_ID	16
xo_gen_odef	XO_GEN_OEF_ID	17
xo_gen_osf_create	XO_GEN_OSF_CREATE_ID	18
xo_gen_osf_append_orbit_change	XO_GEN_OSF_APPEND_ORBIT_CHANGE_ID	19
xo_gen_osf_change_repeat_cycle	XO_GEN_OSF_CHANGE_REPEAT_CYCLE_ID	20
xo_gen_osf_add_drift_cycle	XO_GEN_OSF_ADD_DRIFT_CYCLE_ID	21
xo_gen_pof	XO_GEN_POF_ID	22
xo_gen_rof	XO_GEN_ROF_ID	23
xo_gen_rof_prototype	XO_GEN_ROF_PROTOTYPE_ID	24
xo_gen_dnf	XO_GEN_DNF_ID	25
xo_gen_tle	XO_GEN_TLE_ID	26
xo_check_osf	XO_CHECK_OSF_ID	27

xo_check_oef	XO_CHECK_OEF_ID	28
xo_position_on_orbit_to_time	XO_POSITION_ON_ORBIT_TO_TIME_ID	29
xo_orbit_data_filter	XO_ORBIT_DATA_FILTER_ID	30
xo_orbit_id_init_data_close	XO_ORBIT_ID_INIT_DATA_CLOSE_ID	31
xo_orbit_id_change	XO_ORBIT_ID_CHANGE_ID	32
xo_orbit_info_configure	XO_ORBIT_INFO_CONFIGURE_ID	33
xo_osv_check	XO_OSV_CHECK_ID	34
xo_orbit_id_check	XO_ORBIT_ID_CHECK_ID	35
Error Handling Functions		
xo_verbose	not applicable	
xo_silent		
xo_get_code		
xo_get_msg		
xo_print_msg		

Notes about the table:

- To transform the status vector returned by a CFI function to either a list of error codes or list of error messages, the enumeration value (or the corresponding integer value) described in the table must be used.
- The error handling functions have no enumerated value.
- **Orbit Event File is deprecated, only supported for CRYOSAT mission**

6.1 Usage hints

Every CFI function has a different length of the Error Vector, used in the calling I/F examples of this SUM and defined at the beginning of the library header file. In order to provide the user with a single value that could be used as Error Vector length for every function, a generic value has been defined (XO_ERR_VECTOR_MAX_LENGTH) as the maximum of all the Error Vector lengths. This value can therefore be safely used for every call of functions of this library.

6.2 General enumerations

The aim of the current section is to present the enumeration values that can be used rather than integer parameters for some of the input parameters of the EO_ORBIT routines, as shown in the table below. The enumerations presented in [GEN_SUM] are also applicable

Table 2: Some enumerations within EO_ORBIT library

Input	Description	Enumeration value	Long
Propagation model	Propagation not initialized	XO_PROPAG_MODEL_NOT_INITIALIZED	-1
	Mean Kepler elements model	XO_PROPAG_MODEL_MEAN_KEPL	0
	SPOT elements model (this model is not implemented)	XO_PROPAG_MODEL_SPOT	1
	TLE model	XO_PROPAG_MODEL_TLE	2
	Precise model (analytical propagator)	XO_PROPAG_MODEL_PRECISE	3
	Auto initialization mode	XO_PROPAG_MODEL_AUTO	10
	Double initialization mode	XO_PROPAG_MODEL_DOUBLE	100
Non Sun-synchronous orbit characterisation	MLST drift	XO_NOSUNSYNC_DRIFT	0
	Inclination	XO_NOSUNSYNC_INCLINATION	1
	MLST non linear drift	XO_NOSUNSYNC_DRIFT_NONLINEAR	2
	Selection of simplified algorithm (additive value)	XO_NOSUNSYNC_USE_SIM_MODEL	10
Time inputs selection	Select the whole file	XO_SEL_FILE	0
	Time	XO_SEL_TIME	1
	Orbit	XO_SEL_ORBIT	2
	Default value	XO_SEL_DEFAULT	3
Interpolation model	Default	XO_INTERPOL_MODEL_DEFAULT	0
Orbit Init Model	Unknown mode	XO_ORBIT_INIT_UNKNOWN_MODE	-1
	Automatic detection of file	XO_ORBIT_INIT_AUTO	0
	Orbit Change mode	XO_ORBIT_INIT_ORBIT_CHANGE_MODE	1
	State Vector mode	XO_ORBIT_INIT_STATE_VECTOR_MODE	2
	Orbit Scenario File mode	XO_ORBIT_INIT_OSF_MODE	3
	Predicted Orbit File mode	XO_ORBIT_INIT_POF_MODE	4
	Restituted Orbit File mode	XO_ORBIT_INIT_ROF_MODE	5
	DORIS mode	XO_ORBIT_INIT_DORIS_MODE	6
	POF refined with DORIS mode	XO_ORBIT_INIT_POF_N_DORIS_MODE	7
	OSF part of the OEF mode	XO_ORBIT_INIT_OEF_OSF_MODE	8
	POF part of the OEF mode	XO_ORBIT_INIT_OEF_POF_MODE	9

	TLE file	XO_ORBIT_INIT_TLE_MODE	11
		XO_ORBIT_INIT_TLE_SGP4_MODE	36
		XO_ORBIT_INIT_TLE_SDP4_MODE	37
	SP3 file mode	XO_ORBIT_INIT_SP3_MODE	28
	OEM file mode	XO_ORBIT_INIT_OEM_MODE	32
	State Vector plus precise mode	XO_ORBIT_INIT_STATE_VECTOR_PRECISE_MODE	33
	Predicted Orbit File plus precise mode	XO_ORBIT_INIT_POF_PRECISE_MODE	34
	Restituted Orbit File plus precise mode	XO_ORBIT_INIT_ROF_PRECISE_MODE	35
	DORIS plus precise mode	XO_ORBIT_INIT_DORIS_PRECISE_MODE	36
	Orbit Event File plus precise mode	XO_ORBIT_INIT_OEF_POF_PRECISE_MODE	37
	POF and DORIS files plus precise mode	XO_ORBIT_INIT_POF_N_DORIS_PRECISE_MODE	38
	Geostationary satellite with fixed longitude and altitude	XO_ORBIT_INIT_GEO_LON_ALT_MODE	39
	TLE initialization with SGP4 propagator	XO_ORBIT_INIT_TLE_SGP4_MODE	40
	TLE initialization with SDP4 propagator	XO_ORBIT_INIT_TLE_SDP4_MODE	41
	Initialization with a generic list of state vectors	XO_ORBIT_INIT_USER_OSV_LIST_MODE	42
	Initialize with POF but update the state vector orbit numbers with the information of OSF	XO_ORBIT_INIT_POF_ORBNUM_ADJ_MODE	43
	Initialize with ROF but update the state vector orbit numbers with the information of OSF	XO_ORBIT_INIT_ROF_ORBNUM_ADJ_MODE	44
	Initialize with DORIS but update the state vector orbit numbers with the information of OSF	XO_ORBIT_INIT_DORIS_ORBNUM_ADJ_MODE	45
	Initialize with OEM but update the state vector orbit numbers with the information of OSF	XO_ORBIT_INIT_OEM_ORBNUM_ADJ_MODE	46
	Maximum value of enumeration	XO_ORBIT_INIT_MAX_VALUE	47
Phase increment	Do not increment phase number at next orbit change	XO_NO_PHASE_INCREMENT	0
	Do increment phase number at next orbit change	XO_PHASE_INCREMENT	1

Orbit change search direction	Search forward	XO_SEARCH_FORWARD	1
	Search backward	XO_SEARCH_BACKWARD	-1
File Type	Orbit Scenario File	XO_REF_FILETYPE_OSF	1
	OSF from an Orbit Event File	XO_REF_FILETYPE_OEF_OSF	2
	FOS Predicted Orbit File	XO_REF_FILETYPE_POF	3
	POF from an Orbit Event File	XO_REF_FILETYPE_OEF_POF	4
	DORIS Navigator File	XO_REF_FILETYPE_DORIS_NAV	5
	FOS Restituted Orbit File	XO_REF_FILETYPE_ROF	6
	DORIS Preliminary Orbit File	XO_REF_FILETYPE_DORIS_PREM	7
	DORIS Precise Orbit File	XO_REF_FILETYPE_DORIS_PREC	8
Precision for ROF and DORIS state vectors times	Default value, non-precise	XO_OSV_PRECISE_NO	1
	Precise location every integer minute	XO_OSV_PRECISE_MINUTE	2
	Precise location every ten seconds	XO_OSV_PRECISE_TEN_SECONDS	3
Number of parameters for Orbit file checking	Number of parameters to check in the functions for checking orbit files	XO_NUM_CHECK_PARAMS	6
TLE generation mode	The OSVs in the requested range are fitted to one TLE. For POF files, the set of OSVs to fit are generated with propagation. For ROF files, the set of OSVs are taken from the file.	XO_FIT_TLE	0
	The OSVs in the requested range are fitted to one TLE. The OSVs are taken from the file.	XO_FIT_TLE_LIST	1
	One TLE is generated for every OSV	XO_ONE_TLE_PER_OSV	2
Precise propagator user flag	Use predefined default values for some parameters	XO_DEFAULT_VALUES	0
	Use values introduced by use	XO_USER_VALUES	1
Precise propagator propagation contribution selection	Do not select contribution	XD_NOT_SELECT	0
	Select contribution	XD_SELECT	1
Precise propagator propagation SGA input data	Use SGA input parameter	XO_SGA_USE_PARAMETERS	0
	Read SGA values from files	XO_SGA_READ_VALUES_FROM_FILE	1
Reference time of records	TAI reference	XO_TIME_REF_OF_TAI	0
	UTC reference	XO_TIME_REF_OF_UTC	1

	UT1 reference	XO_TIME_REF_OF_UT1	2
Orbit id change enumeration	Update orbit numbers using OSF	XO_ORBIT_ID_CHANGE_OSF	0
	Update orbit number using input time+orbit	XO_ORBIT_ID_CHANGE_TIME_ORBIT	1
GEO input geodetic coordinates type	Only input longitude is taken into account for initialization	XO_GC_LONGITUDE_ONLY	0
Data filter type	Outliers filter	XO_FILTER_OUTLIERS	0
Data filter action	Remove the sample	XO_REMOVE	
Orbit info items	Spacecraft midnight (SMX)	XO_ORBIT_INFO_ITEM_SMX	0
Orbit info flag for activation/deactivation of computation of xo_orbit_info items	Deactivate computation	XO_DEACTIVATE_ITEM	0
	Activate computation	XO_ACTIVATE_ITEM	1
Orbit type: Absolute or relative (XO_Orbit_type_enum)	Absolute Orbit	XO_ORBIT_ABS	0
	Relative Orbit	XO_ORBIT_REL	1
Time type (XO_Time_type_enum)	Only UTC time info is provided	XO.UTC_TYPE	0
	Only orbit info is provided	XO_ORBIT_TYPE	1
	UTC time and orbit info is provided	XO_BOTH_TYPE	2

Note: Orbit Event File is deprecated, only supported for CRYOSAT mission

The use of the previous enumeration values could be restricted by the particular usage within the different CFI functions. The actual range to be used is indicated within a dedicated reference named **allowed range**. When there are not restrictions to be mentioned, the allowed range column is populated with the label **complete**.

6.3 Data Structures

The aim of the current section is to present the data structures that are used in the EO_ORBIT library. The structures are currently used for the CFI Identifiers accessor functions. The following table show the structures with their names and the data that contain:

Table 3: EO_ORBIT structures

Structure name	Data		
	Variable Name	C type	Description
xo_osv_rec	tai_time	double	TAI time for the state vector
	utc_time	double	UTC time for the state vector
	ut1_time	double	UT1 time for the state vector
	abs_orbit	long	Absolute orbit
	ref_frame	long	Reference frame
	time_ref_of	long	Reference time to be considered as base. This value is related to Time_Reference tag in orbit file. This parameter takes the values given by enumeration <i>Reference time values</i> (see Table 2 from [D_H_SUM])
	pos	double[3]	Position of the OSV (x, y, z) components
	vel	double[3]	Velocity of the OSV (x, y, z) components
quality	double	Quality index for DORIS Preliminary and DORIS Precise Orbit files, this value corresponds to the enumeration <i>Quality Index</i> (see Table 2 from [D_H_SUM])	
xo_anx_extra_info	abs_orbit	long	Absolute orbit number
	tanx	double	ANX time (UT1)
	tnod	double	Nodal period of the orbit
xo_mission_info	abs_orbit	long	Absolute orbit number
	rel_orbit	long	Relative orbit number
	cycle_num	long	Cycle number
	phase_num	long	Phase number
xo_ref_orbit_info	drift_mode	long	Non Sun-synchronous orbit characterisation (see Table 2 for possible values)
	inclination	double	Orbit inclination
	rep_cycle	long	Repeat cycle (days)
	cycle_len	long	Cycle length (orbits)

	ANX_long	double	ANX longitude
	mlst	double	MLST for the ANX
	mlst_drift	double	MLST drift
	mlst_nonlinear_drift	xo_mlst_nonlinear_drift	MLST non linear drift
xo_anx_info	anx_tai	double	TAI time for the ANX
	anx_utc	double	UTC time for the ANX
	anx_ut1	double	UT1 time for the ANX
	time_ref_of	long	Reference time of the ANX
	anx_pos	double[3]	Position vector
	anx_vel	double[3]	Velocity vector
	kepl	double[6]	Keplerian elements
	tnod	double	Nodal period
xo_osf_records	mission_info	xo_mission_info	Orbit numbers
	ref_orbit_info	xo_ref_orbit_info	Orbit Geometry data
	anx_info	xo_anx_info	ANX Data
xo_validity_time	time_ref	long	Time reference
	start	double	Validity star time
	stop	double	Validity stop time
xo_uni_propag	time_ref	long	Time reference in use
	val_time	xo_validity_time	validity propagation time range in UT1 time
	abs_orbit	long	Predicted Absolute orbit
	time_since_anx	double	Time since ANX
	time	double	Predicted time (UT1)
	pos	double[3]	Osculating position vector at pred. time (EF)
	vel	double[3]	Osculating velocity vector at pred. time (EF)
	acc	double[3]	Osculating acceleration vector at pred. time (EF)
	x	double[6];	Osculating keplerian elements at pred. time (TOD)
xo_propag_id_data	double_propag_flag	long	XL_TRUE if the using double propagation
	accu_mode	long	Flag to indicate if using high or low accuracy mode: 1 = low accuracy 2= high accuracy

	propag_osv	xo_uni_propag	Reference data for propagation
xo_interpol_id_data	time_ref	long	Time reference
	time	double	Time for the interpol reference state vector
	abs_orbit	long	Absolute orbit number
	time_since_anx	double	Time since ANX
	pos	double[3]	Position vector
	vel	double[3]	Velocity vector
	acc	double[3]	Acceleration vector
	kep	double[6]	Keplerian elements
	val_time	xo_validity_time	Interpolation validity time range
xo_propag_precise_config	user_flag	long	Indicates if default (XO_DEFAULT_VALUES) or user-defined (XO_USER_VALUES) values are used for some parameters.
	models_path	char[XD_MAX_STR]	Path where files necessary for models are looked for.
	gravity_flag	long	Gravity perturbation used (XO_SELECT) or not (XO_NOT_SELECT).
	thirdbody_flag	long	Third bodies (Sun and Moon) perturbation used (XO_SELECT) or not (XO_NOT_SELECT).
	atmos_flag	long	Atmosphere perturbation used (XO_SELECT) or not (XO_NOT_SELECT).
	srp_flag	long	Solar radiation pressure perturbation used (XO_SELECT) or not (XO_NOT_SELECT).
	step	double	Simulation step (seconds).
	grav_file	char[XD_MAX_STR]	File with data of gravitational model.
	grav_degree	long	Degree used gravity model.
	grav_order	long	Order used in gravity model.
	sga_flag	long	ap, f107 and f107a parameters used (XD_SGA_USE_PARAMETERS) or data read from files sga_ap_file and sga_f107_file (XD_SGA_READ_VALUES_FROM_FILE)
	sga_ap_file	char[XD_MAX_STR]	File with Geomagnetic Activity index values.
	sga_f107_file	char[XD_MAX_STR]	File with F10.7 Solar Activity index values.

	ap	double	Geomagnetic Activity Index (daily value).
	f107	double	F10.7 Index Solar Activity Index (daily value).
	f107a	double	F10.7 Index Solar Activity Index (value averaged over 3 months).
	sc_mass	double	S/C mass [kg].
	sc_drag_area	double	S/C effective drag area [m2].
	sc_drag_coeff	double	S/C drag coefficient.
	sc_srp_area	double	S/C effective Solar Radiation Pressure area [m2].
	sc_srp_coeff	double	S/C Solar Radiation Pressure coefficient
xo_mlst_nonlinear_drift	linear_approx_validity	long	Number of orbits in which MLST linear approximation is valid
	quadratic_term	double	MLST quadratic term
	nof_harmonics	long	Number of harmonics
	mlst_harmonics	xd_mlst_harmonics*	Array of Harmonics allocated with number of elements nof_harmonics
xo_orbit_id_init_data_union	file_set	xd_eocfi_file_set	Set of data structures with the data read from files
xo_orbit_id_init_data	data_type	long	Enumeration: only XO_FILE_DATA
	orbit_id_init_data	xo_orbit_id_init_data_union	Set of orbit data read from files
	change_data	xo_orbit_id_change_data	Values to be used to update the orbit numbers in the state vectors, if needed
xo_geo_geod_coord	gc_longitude	double	Geostationary geocentric longitude [deg]
	gd_latitude	double	Geostationary geodetic latitude [deg]
	gd_altitude	double	Geostationary geodetic altitude [m]
xo_geo_orbit_info	geod_coord	xo_geo_geod_coord	Geostationary geodetic coordinates
xo_geo_orbit_init_data	init_type	long	GEO orbit info type (see XO_Geo_coord_enum)
	geo_orbit_info	xo_geo_orbit_info	Geostationary orbit information
xo_orbit_filter_cfg_union	outliers_cfg	xo_orbit_filter_outliers_cfg	Outliers filter configuration
xo_orbit_filter_settings	type	long	Filter type (Data filter type enumeration)
	filter_cfg	xo_orbit_filter_cfg_union	Filter configuration
xo_orbit_filter_report	outliers_report	xo_orbit_filter_outliers	Outliers filter report

t_union		_report	
xo_orbit_filter_report	type	long	Filter type (Data filter type enumeration)
	filter_report	xo_orbit_filter_report_union	Filter report
xo_orbit_filter_outliers_cfg	threshold_pos	double	Threshold in position [m]
	threshold_vel	double	Threshold in velocity [m/s]
	action	long	Action to be taken (Data filter action enumeration)
xo_orbit_filter_outliers_report	nof_OSV_in	long	Number of input state vectors
	nof_OSV_filtered	long	Number of filtered state vectors
	min_time_gap	double	Minimum time gap between state vectors [seconds]
	max_time_gap	double	Maximum time gap between state vectors [seconds]
	min_RMS_pos	double	Minimum RMS for position.
	max_RMS_pos	double	Maximum RMS for position.
	min_RMS_vel	double	Minimum RMS for velocity.
	max_RMS_vel	double	Maximum RMS for velocity.
xo_orbit_id_change_data	change_mode	long	See Orbit id change enum
	eocfi_file	xd_eocfi_file	File to be used as reference for orbit update
	change_time_ref	long	Time reference
	change_time	double	Time corresponding to change_orbit (in change_time_ref reference time)
	change_orbit	long	Orbit corresponding to change_time
xo_time	type	long	Time value. According to XV_Time_type_enum, the time can be given as: <ul style="list-style-type: none"> • A UTC time value • An orbit number plus the time elapsed since the ANX • Both values above. The struct values below are filled according to the type given in this field.
	utc_time	double	UTC time value
	orbit_type	long	Orbit type number or orbit_num (according to XO_Orbit_type_enum)
	orbit_num	long	Orbit number (absolute or relative)
	cycle	long	Cycle number (if orbit type is a relative orbit)

	sec	long	Seconds after ANX
	msec	long	Microseconds after ANX
xo_time_interval	tstart	xo_time	Time interval start
	tstop	xo_time	Time interval stop
xo_orbit_id_check_osv_report	num_osvs_outside_loose_tolerance	long	Number of state vectors outside of loose tolerance
	index_osvs_outside_loose_tolerance	long*	Array with indices of state vectors outside of loose tolerance
	num_osvs_outside_tight_tolerance	long	Number of state vectors outside of tight tolerance
	index_osvs_outside_tight_tolerance	long*	Array with indices of state vectors outside of tight tolerance
xo_orbit_id_check_report	file_diag_report	xd_orbit_file_diagnostics_report	Diagnostics data from xd_orbit_file_diagnostics
	osv_report	xo_orbit_id_check_osv_report	Diagnostics data from xo_osv_check

7 CFI FUNCTIONS DESCRIPTION

The following sections describe each CFI function.

Input and output parameters of each CFI function are described in tables, where C programming language syntax is used to specify:

- Parameter types (e.g. long, double)
- Array sizes of N elements (e.g. param[N])
- Array element M (e.g. [M])

7.1 xo_orbit_init_def

7.1.1 Overview

The `xo_orbit_init_def` routine generates a Cartesian orbit state vector around the true ascending node crossings. The result is stored and returned through the `xo_orbit_id` variable so that can fed other routines involving orbit calculations. The data generated by the `xo_orbit_init_def` function is based on:

- Date (processing time),
- Longitude of the ascending node,
- Satellite Repeat Cycle and Cycle Length
- Mean local solar time at ascending node
- Drift of mean local solar time or the inclination

The user should take into account that `xo_orbit_init_def` only retrieve and stores internal data for one orbit.

The validity start and stop times of the initialization (`val_time0` and `val_time1` output parameters) represents the allowed time window for orbit calculations. If the `xo_orbit_init_def` function is called, this time window starts at the time of the first ANX and ends at 31/12/2099 23:59:59.

Before calling this function it is required to initialise the time correlations, using either `xl_time_ref_init` or `xl_time_ref_init_file` EO_LIB functions (see [LIB_SUM]).

In order to obtain results consistent with the ones obtained initializing the orbit id with an equivalent Orbit Scenario file, the `drift_mode` flag has to be set to `drift_mode = XO_NOSUNSYNC_DRIFT + XO_NOSUNSYNC_USE_SIM_MODEL`.

Warning: The algorithm used in this function is only valid for satellites with a finite valid range for the inclination and the semi-major axis of the orbit. In CRYOSAT, for example, as there are no minimum and maximum values defined of these two orbital elements, there are defined provisional ranges of the same size as the ones defined in ENVISAT until new requirements are defined. The nominal values have been taken from the [MCD]. There is not available any other nominal orbital element for any other satellite, so this routine is only valid (at this moment) for both CRYOSAT and ENVISAT.

A complete calling sequence of the orbit calculations procedure is presented in section 4.2.

Note: function `xo_orbit_init_def` is deprecated. It is recommended to use `xo_orbit_init_def_2` instead.

7.1.2 Calling interface

The calling interface of the `xo_orbit_init_def` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    long sat_id, propag_model, time_ref, time_init_mode;
    xl_model_id model_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long drift_mode, irep, icyc;
    long orbit0, orbit;
    double time0, time, val_time0, val_time1;
    double ascmlst_drift, inclination, rlong, ascmlst;
    long status, ierr[XO_NUM_ERR_ORBIT_INIT_DEF];
    status = xo_orbit_init_def (&sat_id, &model_id, &time_id,
                               &time_ref, &time0, &orbit0,
                               &drift_mode,
                               &ascmlst_drift, &inclination,
                               &irep, &icyc, &rlong, &ascmlst,
                               &val_time0, &val_time1,
                               &orbit_id, ierr);
}
```

7.1.3 Input parameters

The `xo_orbit_init_def` CFI function has the following input parameters:

Table 4: Input parameters of `xo_orbit_init_def` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
sat_id	long *	-	Satellite ID	-	Complete
model_id	xl_model_id*	-	Model ID	-	-
time_id	xl_time_id*	-	Structure that contains the time correlations	-	-
time_ref	long*	-	Time reference ID	-	Complete
time0	double*	-	Reference time	Decimal days (Processing format)	[-18262.0,36524.0]
orbit0	long*	-	Absolute orbit number of the reference orbit	-	>= 0
drift_mode	long*	-	<p>Flag to select between drift in mean local solar time and inclination as input characterization of the reference orbit.</p> <p><u>Note:</u> When initializing a Sun-synchronous orbit, the selected drift mode must be <code>XO_NOSUNSYNC_DRIFT</code> and the <code>ascmlst_drift</code> parameter must be set to zero.</p> <p><u>Note 2:</u> Add <code>XO_NOSUNSYNC_USE_SIM_MODEL</code> to the drift mode to select the simplified model in the algorithm.</p>	-	<p><code>XO_NOSUNSYNC_DRIFT</code>,</p> <p><code>XO_NOSUNSYNC_INCLINATION</code>,</p> <p><code>XO_NOSUNSYNC_DRIFT + XO_NOSUNSYNC_USE_SIM_MODEL</code>,</p> <p><code>XO_NOSUNSYNC_INCLINATION + XO_NOSUNSYNC_USE_SIM_MODEL</code></p>
ascmlst_drift	double*	-	<p>If <code>drift_mode = XO_NOSUNSYNC_DRIFT</code></p> <p>Drift in mean local solar time of the reference orbit:</p> <p>· $MLST[N+1]=MLST[N] + MLSTdrift$</p> <p>See <code>drift_mode</code> entry in this table.</p>	seconds/day	TBD
inclination	double*	-	If <code>drift_mode =</code>	deg	[0,180]

			<i>XO_NOSUNSYNC_INCLINATION</i> Inclination of the reference orbit		
irep	long *	-	Repeat cycle of the reference orbit The actual repeat cycle is calculated as per definition included in [MCD]	days	> 0
icyc	long *	-	Cycle length of the reference orbit	orbits	> 0
rlong	double*	-	Geocentric longitude of the [Earth fixed] ascending node (Earth fixed CS)	deg	[0,360)
ascmlst	double*	-	Mean local solar time at ascending node	Decimal hours	[0, 24)

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`. See [GEN_SUM].
- Time reference ID: `time_ref`. See [GEN_SUM].
- Time initialisation mode: `time_init_mode`. See [GEN_SUM].
- Drift mode: `drift_mode`. Current document, section 6.2.

7.1.4 Output parameters

The output parameters of the `xo_orbit_init_def` CFI function are:

Table 5: Output parameters of `xo_orbit_init_def` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_init_def</code>	long	-	Main status flag	-	-1, 0, +1
<code>val_time0</code>	double*	-	Validity start time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
<code>val_time1</code>	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure that contains the orbit initialization.	-	-
<code>ierr[XO_NUMBER_ORBIT_INIT_DEF]</code>	long	all	Status vector	-	-

7.1.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_init_def` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_init_def` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 6: Error messages of `xo_orbit_init_def` function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Wrong satellite flag	No calculation performed	XO_CFI_ORBIT_INIT_DEF_SAT_ERR	0
ERR	Geostationary satellite currently not supported for this function	No calculation performed	XO_CFI_ORBIT_INIT_DEF_GEO_SAT_ERR	1
ERR	Wrong input flag: %s	No calculation performed	XO_CFI_ORBIT_INIT_DEF_FLAG_ERR	2
ERR	Could not perform a time transformation	No calculation performed	XO_CFI_ORBIT_INIT_DEF_TIME_CHANGE_ERR	3
ERR	Input out of range: %s	No calculation performed	XO_CFI_ORBIT_INIT_DEF_INPUTS_ERR	4
ERR	An error occurred in the genstate routine	No calculation performed	XO_CFI_ORBIT_INIT_DEF_GENSTATE_ERR	5
ERR	Memory Error	No calculation performed	XO_CFI_ORBIT_INIT_DEF_MEMORY_ERR	6
ERR	Propagation cannot be initialised	No calculation performed	XO_CFI_ORBIT_INIT_DEF_PROPAG_INIT_ERR	7

7.2 **xo_orbit_init_def_2**

7.2.1 **Overview**

The **xo_orbit_init_def_2** is equivalent to **xo_orbit_init_def** except for the fact that this one allows to introduce as inputs non linear terms of Mean Local Solar Time.

7.2.2 Calling interface

The calling interface of the `xo_orbit_init_def_2` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    long sat_id, time_ref;
    xl_model_id model_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long orbit0;
    double time0;
    xo_ref_orbit_info ref_orbit_info;
    long status, ierr[XO_NUM_ERR_ORBIT_INIT_DEF];
    status = xo_orbit_init_def_2(&sat_id, &model_id, &time_id,
                                &time_ref, &time0, &orbit0,
                                &ref_orbit_info,
                                &val_time0, &val_time1,
                                &orbit_id, ierr);
}
```

7.2.3 Input parameters

The `xo_orbit_init_def_2` CFI function has the following input parameters:

Table 7: Input parameters of `xo_orbit_init_def_2` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
sat_id	long *	-	Satellite ID	-	Complete
model_id	xl_model_id*	-	Model ID	-	-
time_id	xl_time_id*	-	Structure that contains the time correlations	-	-
time_ref	long*	-	Time reference ID	-	Complete
time0	double*	-	Reference time	Decimal days (Processing format)	[-18262.0,36524.0]
orbit0	long*	-	Absolute orbit number of the reference orbit	-	>= 0
ref_orbit_info	xo_ref_orbit_info*	-	Struct with inputs for the function. The parameters are equivalent to the ones in <code>xo_orbit_init_def</code> (see table 4) but also MLST non linear terms can be introduced.	-	-

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`. See [GEN_SUM].
- Time reference ID: `time_ref`. See [GEN_SUM].

7.2.4 Output parameters

The output parameters of the `xo_orbit_init_def_2` CFI function are:

Table 8: Output parameters of `xo_orbit_init_def_2` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_init_def_2</code>	long	-	Main status flag	-	-1, 0, +1
val_time0	double*	-	Validity start time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
val_time1	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
orbit_id	xo_orbi	-	Structure that contains	-	-

	t_id*		the orbit initialization.		
ierr[XO_NUM_ER R_ORBIT_INIT_D EF]	long	all	Status vector	-	-

7.2.5 Warnings and errors

Warning and errors are the same as in function xo_orbit_init_def (see section 7.1.5).

7.3 xo_orbit_cart_init

7.3.1 Overview

This software initializes the orbit data using as input a Cartesian orbit state vector.

The validity start and stop times of the initialization (*val_time0* and *val_time1* output parameters) represents the allowed time window for orbit calculations. If the **xo_orbit_cart_init** function is called, this time window starts at 01/01/1950 00:00:00 and ends at 31/12/2099 23:59:59.

Before calling this function it is required to initialise the time correlations, using either **xl_time_ref_init** or **xl_time_ref_init_file** EO_LIB functions (see [LIB_SUM]).

A complete calling sequence of the orbit calculations procedure is presented in section 4.2.

7.3.2 Calling interface

The calling interface of the **xo_orbit_cart_init** CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xl_model_id model_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long sat_id, time_ref, abs_orbit;
    double time, pos[3], vel[3], val_time0, val_time1;
    long status, ierr[XO_NUM_ERR_ORBIT_CART_INIT];

    status = xo_orbit_cart_init(&sat_id, &model_id, &time_id,
                               &time_ref, &time,
                               pos, vel, &abs_orbit,
                               &val_time0, &val_time1,
                               &orbit_id, ierr);
}
```

7.3.3 Input parameters

The `xo_orbit_cart_init` CFI function has the following input parameters:

Table 9: Input parameters of `xo_orbit_cart_init` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
sat_id	long *	-	Satellite ID	-	Complete
model_id	xl_model_id*	-	Model ID	-	-
time_id	xl_time_id*	-	Structure that contains the time correlations	-	-
time_ref	long*	-	Time reference ID	-	Complete
time	double*	-	Reference time	Decimal days (Processing format)	[-18262.0,36524.0]
pos	double[3]	all	Initial osculating position vector (X, Y, Z) (EF reference frame)	m	-
vel	double[3]	all	Initial osculating velocity vector (X, Y, Z) (EF reference frame)	m/s	-
abs_orbit	long*	-	Orbit of the state vector	-	> 0

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`. See [GEN_SUM].
- Time reference ID: `time_ref`. See [GEN_SUM].

7.3.4 Output parameters

The output parameters of the `xo_orbit_cart_init` CFI function are:

Table 10: Output parameters of `xo_orbit_cart_init` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_cart_init</code>	long	-	Main status flag	-	-1, 0, +1
val_time0	double*	-	Validity start time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
val_time1	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]

orbit_id	xo_orbit_id *	-	Structure that contains the orbit initialization.	-	-
ierr[XO_NUM_ERR_ORBIT_CART_INIT]	long	all	Status vector	-	-

7.3.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_cart_init` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_cart_init` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 11: Error messages of xo_orbit_cart_init function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Wrong Satellite Id.	No calculation performed	XO_CFI_ORBIT_CART_INIT_SAT_ERR	0
ERR	Geostationary satellite currently not supported for this function	No calculation performed	XO_CFI_ORBIT_CART_INIT_GEO_SAT_ERR	1
ERR	Wrong input flag	No calculation performed	XO_CFI_ORBIT_CART_INIT_FLAG_ERR	2
ERR	Input Time Id. is not initialized.	No calculation performed	XO_CFI_ORBIT_CART_INIT_TIME_STATUS_ERR	3
ERR	Orbit Id is already initialized.	No calculation performed	XO_CFI_ORBIT_CART_INIT_STATUS_ERR	4
ERR	Time conversion error.	No calculation performed	XO_CFI_ORBIT_CART_INIT_TIME_TRANSFORMING_ERR	5
ERR	Time out of limits.	No calculation performed	XO_CFI_ORBIT_CART_INIT_TIME_RANGE_ERR	6
ERR	Memory allocation error.	No calculation performed	XO_CFI_ORBIT_CART_INIT_MEMORY_ERR	7

7.4 xo_orbit_cart_init_precise

7.4.1 Overview

This software initializes the orbit data using as input a Cartesian orbit state vector for precise propagation (the state vectors will be computed with a numeric propagator).

The validity start and stop times of the initialization (*val_time0* and *val_time1* output parameters) represents the allowed time window for orbit calculations. If the `xo_orbit_cart_init_precise` function is called, this time window starts at the time of the state vector and ends at 31/12/2099 23:59:59.

Before calling this function it is required to initialise the time correlations, using either `xl_time_ref_init` or `xl_time_ref_init_file` EO LIB functions (see [LIB_SUM]).

A complete calling sequence of the orbit calculations procedure is presented in section 4.2.

7.4.2 Calling interface

The calling interface of the `xo_orbit_cart_init_precise` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xl_model_id model_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long sat_id, time_ref, abs_orbit;
    double time, pos[3], vel[3], val_time0, val_time1;
    xo_propag_precise_config precise_conf;
    long status, ierr[XO_NUM_ERR_ORBIT_CART_INIT];
    status = xo_orbit_cart_init_precise(&sat_id, &model_id,
                                       &time_id,
                                       &time_ref, &time,
                                       pos, vel, &abs_orbit,
                                       &precise_conf,
                                       &val_time0, &val_time1,
                                       &orbit_id, ierr);
}
```


7.4.3 Input parameters

The `xo_orbit_cart_init_precise` CFI function has the following input parameters:

Table 12: Input parameters of `xo_orbit_cart_init_precise` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>sat_id</code>	<code>long *</code>	-	Satellite ID	-	Complete
<code>model_id</code>	<code>xl_model_id*</code>	-	Model ID	-	-
<code>time_id</code>	<code>xl_time_id*</code>	-	Structure that contains the time correlations	-	-
<code>time_ref</code>	<code>long*</code>	-	Time reference ID	-	Complete
<code>time</code>	<code>double*</code>	-	Reference time	Decimal days (Processing format)	[-18262.0,36524.0]
<code>pos</code>	<code>double[3]</code>	all	Initial osculating position vector (X, Y, Z) (EF reference frame)	m	-
<code>vel</code>	<code>double[3]</code>	all	Initial osculating velocity vector (X, Y, Z) (EF reference frame)	m/s	-
<code>abs_orbit</code>	<code>long*</code>	-	Orbit of the state vector	-	> 0
<code>precise_conf</code>	<code>xo_propag_precise_config*</code>	-	Configuration parameters for precise propagator.	-	struct members with restrictions: - All flags: 0 or 1. - step: > 0. - grav_degree, grav_order > 0. - ap, f107, f107a: >= 0. - sc_mass: > 0. - sc_drag_area: > 0. - sc_drag_coeff: > 0. - sc_srp_area: > 0. - sc_srp_coeff: > 0.

In `precise_conf` parameter, at least `user_flag`, `models_path` and `satellite` values (`sc_mass`, `sc_drag_area`, `sc_drag_coeff`, `sc_srp_area`, `sc_srp_coeff`) must be provided. The other values must be provided just in case the user does not want to use default values (`user_flag = XO_USER_VALUES`). If default values are selected (`user_flag = XO_DEFAULT_VALUES`), then the following values are used:

- `gravity_flag = XO_SELECT`;
- `thirdbody_flag = XO_SELECT`;

- `atmos_flag = XO_SELECT;`
- `srp_flag = XO_SELECT;`
- `step = 10. [s];`
- `grav_file = egm96.grv;`
- `grav_degree = 10;`
- `grav_order = 10;`
- `sga_flag = XO_SGA_READ_VALUES_FROM_FILE` (Use files, not constant values for AP and F107A);
- `sga_ap_file = ap_esa_ecss_jan2000_mean.sga;`
- `sga_f107_file = f107_esa_ecss_jan2000_mean.sga;`
- `ap = 0.;`
- `f107 = 0.;`
- `f107a = 0.;`

Some files that can be used or taken as example by the user are provided in the files/models directory of the EOCFI libraries. There are files for gravity model (egm96.grv), F10.7 index (f107_*.sga) and Geomagnetic activity index (ap_*.sga).

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`. See [GEN_SUM].
- Time reference ID: `time_ref`. See [GEN_SUM].

7.4.4 Output parameters

The output parameters of the `xo_orbit_cart_init_precise` CFI function are:

Table 13: Output parameters of `xo_orbit_cart_init_precise` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_cart_init_precise</code>	long	-	Main status flag	-	-1, 0, +1
<code>val_time0</code>	double*	-	Validity start time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
<code>val_time1</code>	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure that contains the orbit initialization.	-	-
<code>ierr[XO_NUM_ERR_ORBIT_CART_INIT_PRECISE]</code>	long	all	Status vector	-	-

7.4.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_cart_init_precise` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_cart_init_precise` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 14: Error messages of `xo_orbit_cart_init_precise` function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Error in call to function <code>xo_orbit_cart_init</code> .	No calculation performed	XO_CFI_ORBIT_CART_INIT_FLAG_ERR	0
ERR	Error initialising propagation.	No calculation performed	XO_CFI_ORBIT_CART_INIT_PRECISE_PROPAG_INIT_ERR	1
ERR	Time conversion error.	No calculation performed	XO_CFI_ORBIT_CART_INIT_PRECISE_TIME_CONVERSION_ERR	2
ERR	Error in precise propagator input parameters	No calculation performed	XO_CFI_ORBIT_CART_INIT_PRECISE_PRECISE_PARAMETERS_ERR	3

7.5 xo_orbit_init_file

7.5.1 Overview

The `xo_orbit_init_file` function is used for initializing the orbit calculations using one of these orbit files:

- One Orbit Scenario File providing orbital changes.
- TLE files. `xo_orbit_init_file` extracts and uses only those TLE entries with the default NORAD satellite designator correspondent to the input satellite Id. The correspondence table between satellite ids and default NORAD satellite designators is given in table 224 from the section 9.17, [D_H_SUM]. In case the input file is not compliant with this correspondence, the default designator can be changed by using function `xl_set_tle_sat_data`, section 7.48 [LIB_SUM].
- Files containing a list of state vectors (see also note below):
 - One or more FOS Predicted ascending node cartesian state vectors file. In case multiple files are used, the files should be time ordered and the gap between them (i.e. time difference between the last vector of nth file and the first vector of the nth+1 file) should be less than two orbital periods.
 - One FOS Predicted Orbit File plus a DORIS Navigator unconsolidated level-0 products file.
 - One or more Orbit Event files. **Note: Orbit Event File is deprecated, only supported for CRYOSAT mission**
 - One or more FOS Restituted orbit files.
 - One or more DORIS Navigator files. Three formats of DORIS Navigator files are supported and automatically detected: Cryosat, Sentinel 3 and Jason CS (see [D_H_SUM] for further details). Notice that when using DORIS Navigator files the orbit is initialized based only on the navigation data in the NAV_T (ITRF) packets, and the absolute orbit number provided in NAV_G (Geodetic) packets if available in the same input file. NAV_G (Geodetic) packets are expected only for Sentinel 3 and Jason CS DORIS Navigation files and, as referred in [D_H_SUM], in case NAV_G (Geodetic) packets are not available the orbit number will be set to 1 at the first OSV and increased at each ANX. To adjust the orbit number, use the function `xd_orbit_id_change` as described in section 7.60.
 - One or more DORIS Predicted files.
 - One or more DORIS Preliminary files.
 - One or more generic OSVS lists. In this case any file with a list of state vectors can be used, but the propagator is not initialized.
 - One or more SP3 files.
 - One or more OEM files. Of the fields read with the function `xd_read_oem` (see section 9.21 of [D_H_SUM]), the ones that are relevant for the orbit initialisation are: REF_FRAME, TIME_SYSTEM, Epoch, X, Y, Z, X_DOT, Y_DOT, Z_DOT.
- One Orbit Scenario file plus files containing a list of state vectors (i.e. FOS Predicted, FOS Restituted or DORIS files): in this case, the orbit id is initialized with state vectors, but the orbit number of every state vector is corrected to be consistent with the one expected from OSF. In this case, the OSF shall be the first item of the input files input array; the orbit file mode must be set explicitly to `XO_ORBIT_INIT_POF_ORBNUM_ADJ_MODE` respectively `XO_ORBIT_INIT_ROF_ORBNUM_ADJ_MODE`,

XO_ORBIT_INIT_DORIS_ORBNUM_ADJ_MODE,
 XO_ORBIT_INIT_OEM_ORBNUM_ADJ_MODE.

NOTE: OSVs are considered restituted if the time interval between one OSV and the next does not exceed 1800sec. In this case following OSV computation will be done via interpolation. In any other case, propagation will be used.

The format of the above files is described in [FORMATS].

In order to read files, `xo_orbit_init_file` function internally uses Data Handling functions. Please refer to [D_H_SUM], in particular sections 4.2 and 4.3, for further details.

Before calling this function it is required to initialise the time correlations, using either `xl_time_ref_init`, `xl_time_ref_init_file` or `xl_time_id_init` EO LIB functions (see [LIB_SUM]).

The user can select the time interval to be used from the input file(s) using three different ways:

Table 15: User requested time range in `xo_orbit_init_file`

time_mode (see 7.33.4)	input parameter	requested start time (t_req_start)	requested stop time (t_req_stop)
XL_SEL_TIME	time0 / time1	time0	time1
XL_SEL_ORBIT	orbit0 / orbit1	tANX(orbit0)	tANX(orbit1)
XL_SEL_FILE	-	first state vector in the file(s)	last state vector in the file(s)

The validity start and stop times of the initialization (`val_time0` and `val_time1` output parameters) represents the allowed time window for orbit calculation. The following table shows the validity time interval for the different input files:

Table 16: Validity periods for `xo_orbit_init_file`

Input file type	val_time0	val_time1
Orbit file providing Orbit changes	ANX Time of the first orbital change	Infinity
Orbit files providing a list of orbital state vectors (Predicted Orbit Files, Restituted Orbit Files, DORIS files, SP3 files)	time of the first state vector	Time of the last state vector
TLE files	time of the first TLE	Time of the last TLE + 1day

A complete calling sequence of the orbit calculation procedure is presented in section 4.2.

7.5.1.1 Recommendations on Orbit Files Usage

7.5.1.1.1 Reference Frames

The main usage of the Orbit Library is to support geo-location. As a consequence an Earth-Fixed frame is the natural reference frame to use, end-to-end. On the other hand, accurate conversion between inertial and earth-fixed frames happens only when polar motion data is available, more precisely when the `time_id` has been previously initialized with a IERS Bulletin.

Therefore, when polar motion data is not available, the user is recommended to initialize the orbit id by providing Orbit files with Earth-Fixed frame data (orbit state vectors), and to compute geo-location information in Earth-Fixed. This provides accurate computations. For any other usage the user shall be aware of the consequences and accept small inaccuracies, In particular:

- initializing the orbit id with inertial orbit data, and computing inertial parameters, is also supported and is accurate;
- initializing the orbit id with earth-fixed orbit data, and computing inertial parameters (or vice-versa), leads to slightly inaccurate computations and should be avoided unless ignoring polar motion is acceptable.

7.5.1.1.2 Time correlations

In order to get consistent results, the time correlations defined in the `time_id` shall be identical to those defined in the orbit file. In order to achieve this, the user is strongly recommended to initialize the `time_id` using the same orbit file with the function `xl_time_ref_init_file`. If time correlations in the `time_id` and the orbit file are not matching, `xo_orbit_init_file` issues a warning and recomputes the

times of the orbit file records to make them compatible with the `time_id` correlations. Therefore, the user shall be aware that, in case time correlations provided in the `time_id` and `orbit_id` initialization do not match, the time correlations provided in the `time_id` initialization will prevail and a warning will be raised during `orbit_id` initialization.

The value defined in the "Time_Reference" field in the variable header of the orbit file is used as base time for such re-computation. If this value is not provided, the input parameter `time_ref` is used.

For example, if the orbit file is a POF and `time_ref` is UTC, the UTC times are left unchanged but the TAI and UT1 times are recomputed applying to the UTC times the `time_id` correlations.

For Orbit Scenario Files (OSF), the time reference is always UT1 and, in case the time correlation defined in the `time_id` differs from the one defined in the OSF, a warning is issued and, in computations using the `orbit_id`, the time correlation defined in the `time_id` will prevail. For example, in the

computation of a state vector at a given UTC time, the input UTC time is converted to UT1 using the time correlation in the `time_id` and not the one in the OSF. Therefore, the user must be aware that, using a `time_id` with a time correlation different from the one defined in the OSF, he is altering the

orbit model defined in the OSF and he has to expect results different from those computed by systems that are using the OSF with the correct time correlation (this is often the case of planning systems). In order to avoid this inconsistency, it is always strongly advised to initialize the `time_id` using the same OSF file.

7.5.1.1.3 Delta UTC-UT1 in Orbit Scenario Files

The Reference Orbit defined within the Orbit Scenario File is based on the assumption that the Delta UTC-UT1 is zero and does not change across orbital changes.

Introducing changes in Delta UTC-DUT1 across consecutive orbital changes (for example, by using different time correlations in two consecutive orbital changes) may introduce discontinuities in orbit computations at the transition from one orbital change to the other.

7.5.1.1.4 Computing orbit diagnostics

The function computes internally diagnostics of OSV records for OEM/SP3/Doris/orbit files to check the parts of the file that are usable for orbit initialization. The following table describes the types of errors that are checked and the behaviour of the function when a particular error is found:

Table 17: OSV diagnostics behavior at orbit initialization

Type of error	Behavior
<i>Repeated OSV</i> ABS [OSV_TIME(N) – OSV_TIME(N-1)] < 1 microsecond	Warning at 1 st inconsistency Action: Discard OSV
<i>Going back OSV</i> OSV_TIME(N-1) – OSV_TIME(N) >= 1 microsecond	Warning at 1 st inconsistency Action: discard OSV
<i>GAP</i> ROF and DORIS: OSV_TIME(N) – OSV_TIME(N-1) > 330 seconds OEM and SP3: OSV_TIME(N) – OSV_TIME(N-1) > 30 minutes	Warning at 1 st gap found Action: stop loading OSVs at 1 st gap found.
<i>Orbit number not consistent:</i> orbit number should not decrease.	one warning at first inconsistency. Action: adjust orbit number.

NOTE: For POF files the diagnostics are not computed.

7.5.2 Calling interface

The calling interface of the xo_orbit_init_file CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
  xl_time_id time_id = {NULL};
  xl_model_id model_id = {NULL};
  xo_orbit_id orbit_id = {NULL};
  long sat_id, orbit_file_mode, n_files, time_mode;
  long time_ref, orbit0, orbit1;
  char **input_files;
  double time0, time1, val_time0, val_time1;
  long status, ierr[XO_NUM_ERR_ORBIT_INIT_FILE];
```

```
status = xo_orbit_init_file (&sat_id, &model_id, &time_id,  
                             &orbit_file_mode, &n_files,  
                             input_files,  
                             &time_mode, &time_ref,  
                             &time0, &time1, &orbit0, &orbit1,  
                             &val_time0, &val_time1,  
                             &orbit_id, ierr);  
}
```


7.5.3 Input parameters

The `xo_orbit_init_file` CFI function has the following input parameters:

Table 18: Input parameters of `xo_orbit_init_file` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>sat_id</code>	<code>long *</code>	-	Satellite ID	-	Complete (Geostationary satellites can only be used with TLE files) For SP3 files, see an explanation under the table.
<code>model_id</code>	<code>xo_model_id*</code>	-	Model ID	-	-
<code>time_id</code>	<code>xo_time_id*</code>	-	Structure that contains the time correlations	-	-
<code>orbit_file_mode</code>	<code>long*</code>	-	<p>Flag that indicates the type of the input orbit file.</p> <ul style="list-style-type: none"> There exists the possibility of detecting automatically the type of the files using the value <code>XO_ORBIT_INIT_AUTO</code>. The Orbit Event files are used as Orbit Scenario files if the AUTO mode is selected. In case they want to be used as Predicted orbit files, the option <code>XO_ORBIT_INIT_OEF_POF_MODE</code> should be chosen. If the AUTO mode is selected and the file type is a list of OSV (POF or ROF), the Software configures the <code>orbit_id</code> for propagation if the time interval between an OSV and the next is 1800 seconds (half an hour), for interpolation otherwise. The user can verify this configuration by calling <code>xo_orbit_get_propag_mode</code>. In case the type of initialization is <code>XO_ORBIT_INIT_USER_OSV_LIST_MODE</code>, the propagator/interpolator is not initialized, so any operation involving these computations will 	-	<code>XO_ORBIT_INIT_AUTO</code> <code>XO_ORBIT_INIT_OSF_MODE</code> <code>XO_ORBIT_INIT_POF_MODE</code> <code>XO_ORBIT_INIT_ROF_MODE</code> <code>XO_ORBIT_INIT_DORIS_MODE</code> <code>XO_ORBIT_INIT_POF_N</code> <code>XO_ORBIT_INIT_OEF_OSF_MODE</code> <code>XO_ORBIT_INIT_OEF_POF_MODE</code> <code>XO_ORBIT_INIT_TLE_MODE</code> <code>XO_ORBIT_INIT_TLE_SGP4_MODE</code> <code>XO_ORBIT_INIT_TLE_SDP4_MODE</code> <code>XO_ORBIT_INIT_USER_OSV_LIST_MODE</code> <code>XO_ORBIT_INIT_S</code>

			<p>return error.</p> <ul style="list-style-type: none"> In case the type of initialization is XO_ORBIT_INIT (POF/ROF/DORIS/OEM)_ORBNUM_ADJ_MODE, the OSF shall be the first item of the input files input array; the orbit file mode must be set explicitly, AUTO mode is not supported for these types. <p>A description of the propagation models is given in section 7.33.2</p>		<p>P3_MODE XO_ORBIT_INIT_P OF_ORBNUM_ADJ MODE XO_ORBIT_INIT_R OF_ORBNUM_ADJ _MODE XO_ORBIT_INIT_D ORIS_ORBNUM_A DJ_MODE XO_ORBIT_INIT_O EM_MODE XO_ORBIT_INIT_O EM_ORBNUM_ADJ _MODE</p>
n_files	long	-	Number of input files	-	>=1
input_files	char**	-	<p>Vector of orbit files.</p> <p>In case multiple files are used, they should be time ordered. If there is overlap between files, the newest data have precedence.</p>	-	-
time_init_mode	long*	-	<p>Flag for selecting the time range of the initialisation.</p> <p>For TLE files, the whole file is always selected (this flag and the parameters time0/time1, orbit0/orbit1 are dummies)</p>	-	<p>Select either:</p> <ul style="list-style-type: none"> XO_SEL_FILE XO_SEL_ORBIT XO_SEL_TIME <p>For DORIS Navigator files and SP3 files, XO_SEL_ORBIT is not allowed</p>
time_ref	long*	-	Time reference ID	-	<p>Complete</p> <p>When using DORIS Navigator files and time_mode is XO_SEL_TIME, only XL_TIME_UTC is allowed.</p>
time0	double*	-	<p>Start time. See section 7.33.1.</p> <p>Used only if:</p> <ul style="list-style-type: none"> time_init_mode=XO_SEL_TIME; <p>otherwise NULL can be passed</p>	Decimal days (Processing format)	[-18262.0,36524.0]
time1	double*	-	<p>Stop time. Used only if:</p> <ul style="list-style-type: none"> time_init_mode=XO_SEL_TIME; 	Decimal days (Processing format)	[-18262.0,36524.0]

			otherwise NULL can be passed	format)	
orbit0	long*	-	Absolute orbit number of the start orbit. Used only if: · time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-
orbit1	long*		Absolute orbit number of the stop orbit. Used only if: · time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-

Note: Orbit Event File is deprecated, only supported for CRYOSAT mission

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat_id. See [GEN_SUM].
- Orbit init mode: orbit_init_mode. Current document, section 6.2.
- Time mode: time_init_mode. See [GEN_SUM].
- Time reference ID: time_ref. See [GEN_SUM].

Note: For SP3 files, the sat_id must have the value XO_SAT_GENERIC_MEO plus the order of the satellite in the SP3 file in zero-based value. For example:

- If the satellite to be used in initialization is the 1st one in the SP3 file, then sat_id=XO_SAT_GENERIC_MEO.
- If the satellite to be used in initialization is the 10th in the SP3 file, then sat_id=XO_SAT_GENERIC_MEO+9

The order does not take into account type and identifier but only in which sequence state vectors are provided. For example, if rows 3 and 4 of the SP3 file are:

```
+ 28 G01G03G04G05G06G07G08G09G10G11G13G14G15G16G17G18G19
+    G20G21G22G23G24G25G26G27G28G29G30 0 0 0 0 0 0
```

And sat_id = XO_SAT_GENERIC_MEO+9, OSVs associated to satellite G11 will be selected.

7.5.4 Output parameters

The output parameters of the `xo_orbit_init_file` CFI function are:

Table 19: Output parameters of xo_orbit_init_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_init_file	long	-	Main status flag	-	-1, 0, +1
val_time0	double*	-	Validity start time of the initialization	Decimal days (Processing format)	See 7.33.1
val_time1	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	See 7.33.1
orbit_id	xo_orbi	-	Structure that	-	-

	t_id*		contains the orbit initialization data		
ierr[XO_NUM_ER R_ORBIT_INIT_FI LE]	long	all	Status vector	-	-

7.5.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_init_file` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_init_file` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 20: Error messages of `xo_orbit_init_file` function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong satellite flag.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_SAT_ERR	0
ERR	Geostationary satellite currently not supported for this function.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_GEO_SAT_ERR	1
ERR	Wrong input flag.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_FLAG_ERR	2
ERR	The Time Id was not initialized.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_TIME_STATUS_ERR	3
ERR	The Orbit Id is already initialized.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_ORBIT_STATUS_ERR	4
ERR	Memory allocation error.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_MEMORY_ERR	5
ERR	Could not detect input files.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_INPUT_FILES_ERR	6
ERR	Error reading OSF.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_WRONG_OSF_FILE_FORMAT_ERR	7
ERR	Wrong time on input.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_TIME_INPUT_INCORRECT_ERR	8
ERR	Error while processing DORIS file.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_DORIS_INIT_ERR	9
ERR	Time Conversion Error.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_TIME_CONVERSION_ERR	10
ERR	Error reading input files.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_READ_FILES_ERR	11
ERR	No data read within the input range.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_NO_ENOUGH_DATA_ERR	12

ERR	Error while computing ANX data for the state vectors	No calculation performed	XO_CFI_ORBIT_INIT_FILE_INTERPOL_INIT_ANX_ERR	13
ERR	Error computing the orbit number for every state vector	No calculation performed	XO_CFI_ORBIT_INIT_FILE_CALC_ORBIT_ERR	14
ERR	Propagation cannot be initialised	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PROPAG_INIT_ERR	15
ERR	Interpolation cannot be initialised	No calculation performed	XO_ORBIT_INIT_FILE_INTERPOL_INIT_ERR	16
WARN	Warnings while computing ANX data	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_INTERPOL_INIT_ANX_WARN	17
WARN	Warnings during DORIS initialization	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_DORIS_INIT_WARN	18
WARN	Warnings while reading the input file list	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_READ_FILES_WARN	19
WARN	Input time correlations not compatible with input file(s) time correlations	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_WRONG_TIME_CORRELATIONS_WARN	20
WARN	Overriding file time correlations	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_FILE_TIME_CORR_OVERRIDE_WARN	21
ERR	Error performing time conversion with reference	No calculation performed	XO_CFI_ORBIT_INIT_FILE_TIME_CONVERSION_WITH_REF_ERR	22
WARN	There is a discontinuity between overlapped files. Found in discarded OSV %s.	Calculation performed A message informs the user that there is a discontinuity between the input files.	XO_CFI_ORBIT_INIT_FILE_DISCARDED_OSV_WARN	23
WARN	The TLE SGP4 propagator will be used for the geostationary orbit	Calculation performed. When using calling <code>xo_osv_compute</code> , the OSV will be propagated with the SGP4 algorithm.	XO_CFI_ORBIT_INIT_FILE_GEO_AND_TLE_WARN	24
ERR	Cannot use <code>XO_ORBIT_INIT_TLE_MODE</code> for orbital periods >200 and <250 min	No calculation performed	XO_CFI_ORBIT_INIT_FILE_TLE_AUTO_ERR	25
ERR	Error reading OSF File to change Orbit_Id.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_READ_OSF_ERR	26
ERR	Error changing Orbit Id orbit numbers	No calculation performed	XO_CFI_ORBIT_INIT_FILE_ORBIT_ID_CHANGE_ERR	27
WARN	Input DORIS files are not consistent with the Satellite ID.	Calculation performed.	XO_CFI_ORBIT_INIT_FILE_DORIS_TYPE_WARN	32

WARN	No Orbit Number specified in DORIS file. Assuming orbit=1 for the 1st OSV	Calculation performed	XO_CFI_ORBIT_INIT_FILE_D EFAULT_ORBIT_WARN	33
ERR	Error analysing orbit diagnostics	No calculation performed	XO_CFI_ORBIT_INIT_FILE_A NALYZE_ORBIT_DIAGNOSTI CS_ERR	34
WARN	Gaps detected. All the OSVs that follows the first gap are discarded.	Calculation performed	XO_CFI_ORBIT_INIT_FILE_G APS_WARN	35
WARN	Time going back or repeated OSVs detected. Those OSVs (going bank or repeated) are discarded.	Calculation performed	XO_CFI_ORBIT_INIT_FILE_D UPLICATED_GOING_BACK_O SV_WARN	36
WARN	Inconsistent orbit number detected. The orbit number is recomputed.	Calculation performed	XO_CFI_ORBIT_INIT_FILE_IN CONSISTENT_ORBIT_NUM_ WARN	37

7.6 xo_orbit_init_file_precise

7.6.1 Overview

The `xo_orbit_init_file_precise` function is used for initializing the orbit calculations in the same way as `xo_orbit_inti_file`, but in this case precise propagation will be used in state vector propagation. One of these orbit files can be used:

- One or more FOS Predicted ascending node cartesian state vectors file. In case multiple files are used, the files should be time ordered and the gap between them (i.e. time difference between the last vector of nth file and the first vector of the nth+1 file) should be less than two orbital periods.
- One FOS Predicted Orbit File plus a DORIS Navigator unconsolidated level-0 products file.
- One or more FOS Restituted orbit files.
- One or more DORIS Navigator files. Three formats of DORIS Navigator files are supported and automatically detected: Cryosat, Sentinel 3 and Jason CS (see [D_H_SUM] for further details). Notice that when using DORIS Navigator files the orbit is initialized based only on the navigation data in the NAV_T (ITRF) packets, and the absolute orbit number provided in NAV_G (Geodetic) packets if available in the same input file. NAV_G (Geodetic) packets are expected only for Sentinel 3 and Jason CS DORIS Navigation files and, as referred in [D_H_SUM], in case NAV_G (Geodetic) packets are not available the orbit number will be set to 1 at the first OSV and increased at each ANX. To adjust the orbit number, use the function `xd_orbit_id_change` as described in section 7.60.
- One or more DORIS Predicted files.
- One or more DORIS Preliminary files.

The format of the above files is described in [FORMATS].

In order to read files, `xo_orbit_init_file_precise` function internally uses Data Handling functions. Please refer to [D_H_SUM], in particular sections 4.2 and 4.3, for further details.

Before calling this function it is required to initialise the time correlations, using either **xl_time_ref_init**, **xl_time_ref_init_file** or **xl_time_id_init** EO LIB functions (see [LIB_SUM]).

The user can select the time interval to be used from the input file(s) using three different ways:

Table 21: User requested time range in xo_orbit_init_file_precise

time_mode (see 7.33.4)	input parameter	requested start time (t_req_start)	requested stop time (t_req_stop)
XL_SEL_TIME	time0 / time1	time0	time1
XL_SEL_ORBIT	orbit0 / orbit1	tANX(orbit0)	tANX(orbit1)
XL_SEL_FILE	-	first state vector in the file(s)	last state vector in the file(s)

The validity start and stop times of the initialization (**val_time0** and **val_time1** output parameters) represents the allowed time window for orbit calculation. The following table shows the validity time interval for the different input files:

Table 22: Validity periods for xo_orbit_init_file_precise

Input file type	val_time0	val_time1
Any	time of the first state vector	Infinity

A complete calling sequence of the orbit calculation procedure is presented in section 4.2.

See Recommendations on Orbit Files Usage in 69

7.6.2 Calling interface

The calling interface of the `xo_orbit_init_file_precise` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xl_model_id time_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long sat_id, orbit_file_mode, n_files, time_mode;
    long time_ref, orbit0, orbit1;
    char **input_files;
    xo_propag_precise_config precise_conf;
    double time0, time1, val_time0, val_time1;
    long status, ierr[XO_NUM_ERR_ORBIT_INIT_FILE];

    status = xo_orbit_init_file_precise (&sat_id, &model_id,
                                        &time_id,
                                        &orbit_file_mode, &n_files,
                                        &input_files,
                                        &time_mode, &time_ref,
                                        &time0, &time1, &orbit0, &orbit1,
                                        &precise_conf,
                                        &val_time0, &val_time1,
                                        &orbit_id, ierr);
}
```

7.6.3 Input parameters

The `xo_orbit_init_file_precise` CFI function has the following input parameters:

Table 23: Input parameters of `xo_orbit_init_file_precise` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>sat_id</code>	<code>long *</code>	-	Satellite ID	-	Complete
<code>model_id</code>	<code>xo_model_id*</code>	-	Model ID	-	-
<code>time_id</code>	<code>xo_time_id*</code>	-	Structure that contains the time correlations	-	-
<code>orbit_file_mode</code>	<code>long*</code>	-	Flag that indicates the type of the input orbit file. - There exists the possibility of detecting automatically the type of the files using the value <code>XO_ORBIT_INIT_AUTO</code> .	-	<code>XO_ORBIT_INIT_AUTO</code> <code>XO_ORBIT_INIT_PRECISE_MODE</code> <code>XO_ORBIT_INIT_REF_PRECISE_MODE</code> <code>XO_ORBIT_INIT_DORIS_PRECISE_MODE</code> <code>XO_ORBIT_INIT_OTHER_PRECISE_MODE</code> <code>XO_ORBIT_INIT_OTHER_PRECISE_MODE</code> <code>XO_ORBIT_INIT_OTHER_PRECISE_MODE</code>
<code>n_files</code>	<code>long</code>	-	Number of input files	-	≥ 1
<code>input_files</code>	<code>char**</code>	-	Vector of orbit files	-	-
<code>time_init_mode</code>	<code>long*</code>	-	Flag for selecting the time range of the initialisation. For TLE files, the whole file is always selected (this flag and the parameters <code>time0/time1</code> , <code>orbit0/orbit1</code> are dummies)	-	Select either: · <code>XO_SEL_FILE</code> · <code>XO_SEL_ORBIT</code> · <code>XO_SEL_TIME</code> For DORIS Navigator files, <code>XO_SEL_ORBIT</code> is not allowed
<code>time_ref</code>	<code>long*</code>	-	Time reference ID	-	Complete

					When using DORIS Navigator files and time_mode is XO_SEL_TIME, only XL_TIME_UTC is allowed.
time0	double*	-	Start time. See section 7.33.1. Used only if: · time_init_mode=XO_SEL_TIME; otherwise NULL can be passed	Decimal days (Processing format)	[-18262.0,36524.0]
time1	double*	-	Stop time. Used only if: · time_init_mode=XO_SEL_TIME; otherwise NULL can be passed	Decimal days (Processing format)	[-18262.0,36524.0]
orbit0	long*	-	Absolute orbit number of the start orbit. Used only if: · time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-
orbit1	long*	-	Absolute orbit number of the stop orbit. Used only if: · time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-
precise_conf	xo_prop ag_preci se_conf g*	-	Configuration parameters for precise propagator.	-	-

For precise_conf, the same rules than in xo_orbit_cart_init_precise apply.

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat_id. See [GEN_SUM].
- Orbit init mode: orbit_init_mode. Current document, section 6.2.
- Time mode: time_init_mode. See [GEN_SUM].
- Time reference ID: time_ref. See [GEN_SUM].

7.6.4 Output parameters

The output parameters of the xo_orbit_init_file_precise CFI function are:

Table 24: Output parameters of xo_orbit_init_file_precise function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_init_file_precise	long	-	Main status flag	-	-1, 0, +1
val_time0	double*	-	Validity start time of	Decimal days	See 7.33.1

			the initialization	(Processing format)	
val_time1	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	see 7.33.1
orbit_id	xo_orbit_id*	-	Structure that contains the orbit initialization data	-	-
ierr[XO_NUM_ERROR_ORBIT_INIT_FILE_PRECISE]	long	all	Status vector	-	-

7.6.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_init_file_precise` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_init_file_precise` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 25: Error messages of `xo_orbit_init_file_precise` function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	File type not allowed for precise propagator initialisation	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PRECISE_NOT_ALLOWED_FILE_TYPE_ERR	0
ERR	Error initialising orbit.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PRECISE_INIT_FILE_ERR	1
ERR	Error initialising propagator.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PRECISE_PROPAGATOR_INIT_ERR	2
ERR	Could not detect input files.	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PRECISE_INPUT_FILES_ERR	3
ERR	Error in precise propagator input parameters	No calculation performed	XO_CFI_ORBIT_INIT_FILE_PRECISE_PRECISE_PARAMETERS_ERR	4

7.7 xo_orbit_id_init

7.7.1 Overview

The **xo_orbit_id_init** function is used for initializing the orbit calculations using a set of data structures that have been read for one of these orbit files:

- One or more orbit files (Predicted, Restituted Orbit Files or generic OSV list. In the last case, propagator is not initialized).
- One Orbit Scenario File providing orbital changes.
- One or more DORIS Navigator files. Three formats of DORIS Navigator files are supported and automatically detected: Cryosat, Sentinel 3 and Jason CS (see [D_H_SUM] for further details). Notice that when using DORIS Navigator files the orbit is initialized based only on the navigation data in the NAV_T (ITRF) packets, and the absolute orbit number provided in NAV_G (Geodetic) packets if available in the same input file. NAV_G (Geodetic) packets are expected only for Sentinel 3 and Jason CS DORIS Navigation files and, as referred in [D_H_SUM], in case NAV_G (Geodetic) packets are not available the orbit number will be set to 1 at the first OSV and increased at each ANX. To adjust the orbit number, use the function **xd_orbit_id_change** as described in section 7.60.
- One or more SP3 files
- TLE files. **xo_orbit_id_init** uses only those TLE entries with the default NORAD satellite designator correspondent to the input satellite Id. The correspondence table between satellite ids and default NORAD satellite designators is given in table 224 from the section 9.17, [D_H_SUM]. In case the input file is not compliant with this correspondence, the default designator can be changed by using function **xl_set_tle_sat_data**, section 7.48 [LIB_SUM].
- One or more OEM files. Of the fields read with the function **xd_read_oem** (see section 9.21 of [D_H_SUM]), the ones that are relevant for the orbit initialisation are: REF_FRAME, TIME_SYSTEM, Epoch, X, Y, Z, X_DOT, Y_DOT, Z_DOT.

Note: for Predicted, Restituted, DORIS files or OEM files, the *change_data* struct of **xo_orbit_id_init_data** can be used. The field *change_data* is used only if orbit init mode is set to **XO_ORBIT_INIT_(POF/ROF/DORIS/OEM)_ORBNUM_ADJ_MODE** and the corresponding POF/ROF/DORIS file is used as input. If these orbit modes are introduced, the orbit number of the state vectors will be updated with the information in *change_data* structure, as per function **xo_orbit_id_change** (see section 7.60).

This function provide an alternative to initialize the **orbit_id** that is completely equivalent to **xo_orbit_init_file** with the difference that this function does not need to read the input files, so that the runtime of the function is improved (See section 68 for details about the **orbit_id** initialization)

This function is specially useful when the input **time_id** is initialized with the same set of input files. In this case it is better to do the following calling sequence, so that input files are read once:

- Read input file (EO_DATA_HANDLING functions)
- Initialize **time_id** with **xl_time_id_init**.
- Initialize the **orbit_id** with **xo_orbit_id_init**.
- Clean the read data.

Before calling this function it is required to initialise the time correlations, using either **xl_time_ref_init**, **xl_time_ref_init_file** or **xl_time_id_init** EO LIB functions (see [LIB_SUM]).

The user can select the time interval to be used from the input file(s) using three different ways:

Table 26: User requested time range in `xo_orbit_id_init`

time_mode (see 7.33.4)	input parameter	requested start time (t_req_start)	requested stop time (t_req_stop)
XL_SEL_TIME	time0 / time1	time0	time1
XL_SEL_ORBIT	orbit0 / orbit1	tANX(orbit0)	tANX(orbit1)
XL_SEL_FILE	-	first state vector in the file(s)	last state vector in the file(s)

The validity start and stop times of the initialization (**val_time0** and **val_time1** output parameters) represents the allowed time window for orbit calculation. The following table shows the validity time interval for the different input files:

Table 27: Validity periods for `xo_orbit_id_init`

Input data type	val_time0	val_time1
Orbit data from Orbit Scenario	ANX Time of the first orbital change	Infinity
List of orbital state vectors	time of the first state vector	Time of the last state vector

A complete calling sequence of the orbit calculation procedure is presented in section 4.2.

See Recommendations on Orbit Files Usage in section 7.5.1.1

The function computes diagnostics of OSV records for OEM/SP3/Doris/orbit files. The behaviour at orbit initialization is defined in the table 17, see section 7.5.1.1.

7.7.2 Calling interface

The calling interface of the `xo_orbit_id_init` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xl_time_id time_id = {NULL};
    xl_model_id model_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long sat_id, orbit_file_mode, time_mode;
    long time_ref, orbit0, orbit1;
    xo_orbit_id_init_data orbit_data;
    double time0, time1, val_time0, val_time1;
    long status, ierr[XO_NUM_ERR_ORBIT_ID_INIT];

    status = xo_orbit_id_init (&sat_id, &model_id, &time_id,
                             &orbit_file_mode,
                             &orbit_data,
```

```
        &time_mode, &time_ref,  
        &time0, &time1, &orbit0, &orbit1,  
        &val_time0, &val_time1,  
        &orbit_id, ierr);  
}
```

7.7.3 Input parameters

The `xo_orbit_id_init` CFI function has the following input parameters:

Table 28: Input parameters of `xo_orbit_id_init` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>sat_id</code>	<code>long *</code>	-	Satellite ID	-	Complete. For SP3 files, see a description on how to set <code>sat_id</code> value under the present table.
<code>model_id</code>	<code>xo_model_id*</code>	-	Model ID	-	-
<code>time_id</code>	<code>xo_time_id*</code>	-	Structure that contains the time correlations	-	-
<code>orbit_file_mode</code>	<code>long*</code>	-	Flag that indicates the type of the input orbit file data. In case the type of initialization is <code>XO_ORBIT_INIT_USER_OSV_LIST_MODE</code> , the propagator/interpolator is not initialized, so any operation involving these computations will return error.	-	<code>XO_ORBIT_INIT_AUTO</code> <code>XO_ORBIT_INIT_OSF_MODE</code> <code>XO_ORBIT_INIT_POF_MODE</code> <code>XO_ORBIT_INIT_ROF_MODE</code> <code>XO_ORBIT_INIT_DORIS_MODE</code> <code>XO_ORBIT_INIT_OEF_OSF_MODE</code> <code>XO_ORBIT_INIT_OEF_POF_MODE</code> <code>XO_ORBIT_INIT_USER_OSV_LIST_MODE</code> <code>XO_ORBIT_INIT_SP3_MODE</code> <code>XO_ORBIT_INIT_POF_ORBNUM_ADJ_MODE</code> <code>XO_ORBIT_INIT_ROF_ORBNUM_ADJ_MODE</code> <code>XO_ORBIT_INIT_DORIS_ORBNUM_ADJ_MODE</code> <code>XO_ORBIT_INIT_OEM_MODE</code> <code>XO_ORBIT_INIT_OEM_ORBNUM_ADJ_MODE</code>
<code>orbit_data</code>	<code>xo_orbit_init_data*</code>	-	Vector of orbit files	-	-
<code>time_init</code>	<code>long*</code>	-	Flag for selecting the time range	-	Select either:

mode			of the initialisation.		<ul style="list-style-type: none"> · XO_SEL_FILE · XO_SEL_ORBIT · XO_SEL_TIME <p>For DORIS Navigator files and SP3 files, XO_SEL_ORBIT is not allowed</p>
time_ref	long*	-	Time reference ID	-	<p>Complete</p> <p>When using DORIS Navigator files and time_mode is XO_SEL_TIME, only XL_TIME_UTC is allowed.</p>
time0	double*	-	Start time. See section 7.33.1. Used only if: time_init_mode=XO_SEL_TIME; otherwise NULL can be passed	Decimal days (Processing format)	[-18262.0,36524.0]
time1	double*	-	Stop time. Used only if: time_init_mode=XO_SEL_TIME; otherwise NULL can be passed	Decimal days (Processing format)	[-18262.0,36524.0]
orbit0	long*	-	Absolute orbit number of the start orbit. Used only if: time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-
orbit1	long*		Absolute orbit number of the stop orbit. Used only if: time_init_mode=XO_SEL_ORBIT; otherwise NULL can be passed	-	-

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat_id. See [GEN_SUM].
- Orbit init mode: orbit_init_mode. Current document, section 6.2.
- Time mode: time_init_mode. See [GEN_SUM].
- Time reference ID: time_ref. See [GEN_SUM].

Note: For SP3 files, the sat_id must have the value XO_SAT_GENERIC_MEO plus the order of the satellite in the SP3 file in zero-based value. For example:

- If the satellite to be used in initialization is the 1st one in the SP3 file, then sat_id=XO_SAT_GENERIC_MEO.

- If the satellite to be used in initialization is the 10th in the SP3 file, then sat_id=XO_SAT_GENERIC_MEO+9

7.7.4 Output parameters

The output parameters of the `xo_orbit_id_init` CFI function are:

Table 29: Output parameters of `xo_orbit_id_init` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_id_init</code>	long	-	Main status flag	-	-1, 0, +1
<code>val_time0</code>	double*	-	Validity start time of the initialization	Decimal days (Processing format)	See 7.33.1
<code>val_time1</code>	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	See 7.33.1
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure that contains the orbit initialization data	-	-
<code>ierr[XO_NUM_ERR_ORBIT_ID_INIT]</code>	long	all	Status vector	-	-

7.7.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_id_init` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_id_init` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 30: Error messages of `xo_orbit_id_init` function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong satellite flag	No calculation performed	XO_CFI_ORBIT_ID_INIT_SAT_ERR	0
ERR	Geostationary satellite currently not supported for this function.	No calculation performed	XO_CFI_ORBIT_ID_INIT_GEO_SAT_ERR	1
ERR	Wrong input orbit file mode	No calculation performed	XO_CFI_ORBIT_ID_INIT_FLAG_ERR	2
ERR	The Time Id was not initialized	No calculation performed	XO_CFI_ORBIT_ID_INIT_TIME_STATUS_ERR	3
ERR	The Orbit Id is already initialized	No calculation performed	XO_CFI_ORBIT_ID_INIT_ORBIT_STATUS_ERR	4
ERR	Memory allocation error.	No calculation performed	XO_CFI_ORBIT_ID_INIT_MEMORY_ERR	5
ERR	No data in the input structures	No calculation performed	XO_CFI_ORBIT_ID_INIT_NO_DATA_ERR	6
ERR	Orbit model is not correct	No calculation performed	XO_CFI_ORBIT_ID_INIT_WRONG_ORBIT_MODEL_ERR	7
ERR	input data structure contains data for different file types	No calculation performed	XO_CFI_ORBIT_ID_INIT_INCONSISTENT_FILES_ERR	8
ERR	Error loading input <code>xo_orbit_id_init_data</code> structure	No calculation performed	XO_CFI_ORBIT_ID_INIT_LOAD_FILES_ERR	9
ERR	Wrong time on input.	No calculation performed	XO_CFI_ORBIT_ID_INIT_TIME_INPUT_INCORR_ERR	10

ERR	Error performing time conversion with reference.	No calculation performed	XO_CFI_ORBIT_ID_INIT_TIME_CONVERSION_WITH_REF_ERR	11
ERR	No data read within the input range	No calculation performed	XO_CFI_ORBIT_ID_INIT_NO_ENOUGH_DATA_ERR	12
ERR	Error while computing ANX data for the state vectors	No calculation performed	XO_CFI_ORBIT_ID_INIT_INTERPOL_INIT_ANX_ERR	13
ERR	Error computing the orbit number for every state vector	No calculation performed	XO_CFI_ORBIT_ID_INIT_CALC_ORBIT_ERR	14
ERR	Time Conversion Error.	No calculation performed	XO_CFI_ORBIT_ID_INIT_TIME_CONVERSION_ERR	15
ERR	Interpolation cannot be initialised	No calculation performed	XO_CFI_ORBIT_ID_INIT_INTERPOL_INIT_ERR	16
ERR	Propagation cannot be initialised	No calculation performed	XO_CFI_ORBIT_ID_INIT_PROPAG_INIT_ERR	17
WARN	There is a discontinuity between overlapped files. Found in discarded OSV %s.	Calculation performed. A message informs the user that there is a discontinuity between the input files.	XO_CFI_ORBIT_ID_INIT_DISCARDED_OSV_WARN	18
WARN	Only one OSF file is admitted for this initialisation mode	Calculation performed using data from the first OSF inserted in the init_data structure	XO_CFI_ORBIT_ID_INIT_ONLY_FIRST_OSF_WARN	19
WARN	Input time correlations not compatible with input file(s) time correlations.	Calculation performed.	XO_CFI_ORBIT_ID_INIT_WRONG_TIME_CORRELATIONS_WARN	20
WARN	Overriding file time correlations.	Calculation performed	XO_CFI_ORBIT_ID_INIT_FILE_TIME_CORR_OVERRIDE_WARN	21
WARN	Warnings while computing ANX data	No calculation performed	XO_CFI_ORBIT_ID_INIT_INTERPOL_INIT_ANX_WARN	22
ERR	Error changing Orbit Id orbit numbers.	No calculation performed	XO_CFI_ORBIT_ID_INIT_ORBIT_ID_CHANGE_ERR	23
WARN	No Orbit Number specified in DORIS file. Assuming orbit=1 for the 1st OSV	Calculation performed	XO_CFI_ORBIT_ID_INIT_DEFAULT_ORBIT_WARN	24

WARN	Input DORIS files are not consistent with the Satellite ID.	Calculation performed	XO_CFI_ORBIT_ID_INIT_DORIS_TYPE_WARN	25
ERR	Invalid file type. Orbit mode can not be automatically detected.	No calculation performed	XO_CFI_ORBIT_ID_INIT_INVALID_FILE_TYPE_ERR	26
ERR	Only one TLE file is admitted for this initialisation mode	No calculation performed	XO_CFI_ORBIT_ID_INIT_ONLY_FIRST_TLE_WARN	32
ERR	Cannot use XO_ORBIT_INIT_TLE_MODE for orbital periods >200 and <250 min	No calculation performed	XO_CFI_ORBIT_ID_INIT_TLE_AUTO_ERR	33
ERR	Error analysing orbit diagnostics	No calculation performed	XO_CFI_ORBIT_ID_INIT_ANALYZE_ORBIT_DIAGNOSTICS_ERR	34
WARN	Gaps detected. All the OSVs that follows the first gap are discarded.	Calculation performed	XO_ORBIT_ID_INIT_GAPS_WARN	35
WARN	Time going back or repeated OSVs detected. Those OSVs (going bank or repeated) are discarded.	Calculation performed	XO_ORBIT_ID_INIT_DUPLICATED_GOING_BACK_OSV_WARN	36
WARN	Inconsistent orbit number detected. The orbit number is recomputed.	Calculation performed	XO_ORBIT_ID_INIT_INCONSISTENT_ORBIT_NUMBER_WARN	37

7.8 **xo_orbit_init_geo**

7.8.1 **Overview**

This software initializes the orbit data of a geostationary orbit using as input the geodetic coordinates. The only input geodetic coordinate taken into account in initialization is the geocentric longitude; the latitude is set to 0. degrees and the altitude is set to 35786 km independently of the inputs.

The validity start and stop times of the initialization (*val_time0* and *val_time1* output parameters) represents the allowed time window for orbit calculations. If the **xo_orbit_init_geo** function is called, this time window starts at 01/01/1950 00:00:00 and ends at 31/12/2099 23:59:59.

Before calling this function it is required to initialise the time correlations, using either **xl_time_ref_init** or **xl_time_ref_init_file** EO_LIB functions (see [LIB_SUM]).

A complete calling sequence of the orbit calculations procedure is presented in section 4.2.

7.8.2 **Calling interface**

The calling interface of the **xo_orbit_init_geo** CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xl_model_id model_id = {NULL};
    xl_time_id time_id = {NULL};
    xo_orbit_id orbit_id = {NULL};
    long sat_id;
    xo_geo_orbit_init_data geo_orbit_init_data;
    double val_time0, val_time1;
    long status, ierr[XO_NUM_ERR_ORBIT_INIT_GEO];

    status = xo_orbit_init_geo(&sat_id, &model_id, &time_id,
                               &geo_orbit_init_data,
                               &val_time0, &val_time1,
                               &orbit_id, ierr);
}
```

7.8.3 Input parameters

The `xo_orbit_init_geo` CFI function has the following input parameters:

Table 31: Input parameters of `xo_orbit_init_geo` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
sat_id	long *	-	Satellite ID	-	Complete
model_id	xl_model_id*	-	Model ID	-	-
time_id	xl_time_id*	-	Structure that contains the time correlations	-	-
geo_orbit_info	xo_geo_orbit_info*	-	Input geodetic coordinates	Longitude, latitude → degrees Altitude → meters	$0 \leq \text{lon} < 360$. latitude and altitude are dummy parameters. They are set internally to default values (see section 7.8.1)

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat_id. See [GEN_SUM].

7.8.4 Output parameters

The output parameters of the `xo_orbit_init_geo` CFI function are:

Table 32: Output parameters of `xo_orbit_init_geo` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_init_geo	long	-	Main status flag	-	-1, 0, +1
val_time0	double*	-	Validity start time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
val_time1	double*	-	Validity stop time of the initialization	Decimal days (Processing format)	[-18262.0,36524.0]
orbit_id	xo_orbit_id*	-	Structure that contains the orbit initialization.	-	-
ierr[XO_NUM_ERR_ORBIT_INIT_GEO]	long	all	Status vector	-	-

7.8.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_init_geo` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_init_geo` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 33: Error messages of `xo_orbit_init_geo` function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Wrong Satellite Id.	No calculation performed	XO_CFI_ORBIT_INIT_G EO_SAT_ERR	0
ERR	Wrong longitude: out of range [0, 360.)	No calculation performed	XO_CFI_ORBIT_INIT_G EO_LON_ERR	1
ERR	Wrong geo orbit init type	No calculation performed	XO_CFI_ORBIT_INIT_G EO_TYPE_ERR	2
ERR	Input Time Id. is not initialized.	No calculation performed	XO_CFI_ORBIT_INIT_G EO_TIME_STATUS_ERR	3
ERR	Orbit Id is already initialized.	No calculation performed	XO_CFI_ORBIT_INIT_G EO_STATUS_ERR	4
ERR	Memory allocation error.	No calculation performed	XO_CFI_ORBIT_INIT_G EO_MEMORY_ERR	5
ERR	Error converting geodetic coordinates to cartesian coordinates	No calculation performed	XO_CFI_ORBIT_INIT_G EO_GEOD_TO_CART_ERR	6
ERR	Error initializing propagator	No calculation performed	XO_CFI_ORBIT_INIT_G EO_PROPAG_INIT_ERR	7

7.9 xo_orbit_close

7.9.1 Overview

The `xo_orbit_close` function is used to free the memory allocated by the other orbit initialization routines, and it must be called after using them.

A complete calling sequence of the propagation procedure is presented in section 4.2.

7.9.2 Calling interface

The calling interface of the `xo_orbit_close` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id = {NULL};
    long ierr[XO_NUM_ERR_ORBIT_CLOSE]
    long status;

    status = xo_orbit_close (&orbit_id, ierr);
}
```

7.9.3 Input parameters

The `xo_orbit_close` CFI function has the following input parameters:

Table 34: Input parameters of xo_orbit_close function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id *	-	Structure that contains the orbit initialization	-	-

7.9.4 Output parameters

The output parameters of the `xo_orbit_close` CFI function are:

Table 35: Output parameters of xo_orbit_close function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
ierr[XO_NUM_ERR_ORBIT_CLOSE]	long	all	Status vector	-	-
xo_orbit_close	long	-	Main status flag	-	-1, 0, +1

7.9.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_close` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_close` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 36: Error messages of `xo_orbit_close` function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Could not close the Orbit Id.	The Orbit Id. was not closed.	XO_CFI_ORBIT_CLOSE_WRONG_ID_ERR	0

7.10 xo_orbit_get_osv

7.10.1 Overview

The `xo_orbit_get_osv` CFI function returns a data structure containing the list of state vectors used for the initialisation of an `orbit_id`. This function only can be called if the `orbit_id` was initialized with orbital state vectors (i.e., with `xo_orbit_cart_init` or with `xo_orbit_init_file` and a file containing a list of state vectors such as predicted orbit file, a restituted orbit file...)

7.10.2 Calling interface

The calling interface of the `xo_orbit_get_osv` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_osv_rec* data;
    long status;
    status = xo_orbit_get_osv(&orbit_id, &num_rec, &data);
}
```

7.10.3 Input parameters

The `xo_orbit_get_osv` CFI function has the following input parameters:

Table 37: Input parameters of xo_orbit_get_osv function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure for orbit initialization	-	-

7.10.4 Output parameters

The output parameters of the `xo_orbit_get_osv` CFI function are:

Table 38: Output parameters of xo_orbit_get_osv function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_get_osv</code>	long	-	Status flag	-	-
<code>num_rec</code>	long	-	Number of records in the data array	-	-

data	xo_osv_rec	all	Dinamic array with the state vectors	-	-
------	------------	-----	--------------------------------------	---	---

The data structure `xo_osv_rec` can be seen in Table 3.

Note: The output `data` array is a pointer, not a static array. The memory for this dynamic array is allocated within the CFI function. So the user will only have to declare that pointer but not to allocate memory for it. However, once the function has returned without error, the user will have the responsibility of freeing the memory when it is not being used any more. For freeing the memory just call to (in a C program):

```
free(data);
```

7.10.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The `orbit_id` was not initialised.
- The `orbit_id` was initialised with orbital changes, instead of state vectors.

7.11 xo_orbit_set_osv

7.11.1 Overview

The `xo_orbit_set_osv` CFI function changes the list of state vectors used for the initialisation within an `orbit_id`. This function only can be called if the `orbit_id` was initialized with orbital state vectors (i.e., with `xo_orbit_cart_init` or with `xo_orbit_init_file` and a file containing a list of state vectors such as predicted orbit file, a restituted orbit file...)

7.11.2 Calling interface

The calling interface of the `xo_orbit_set_osv` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_osv_rec* data;
    long status;
    status = xo_orbit_set_osv(&orbit_id, &num_rec, data);
}
```

7.11.3 Input parameters

The `xo_orbit_set_osv` CFI function has the following input parameters:

Table 39: Input parameters of `xo_orbit_set_osv` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
num_rec	long	-	Number of records in the data array	-	-
data	xo_osv_rec	all	Dynamic array with the state vectors	-	-

7.11.4 Output parameters

The output parameters of the `xo_orbit_set_osv` CFI function are:

Table 40: Output parameters of `xo_orbit_set_osv` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_set_osv</code>	long	-	Status flag	-	-
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure for orbit initialization (input / output parameter)	-	-

7.11.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The `orbit_id` was not initialised.
- The `orbit_id` was initialised with orbital changes, instead of state vectors.

7.12 xo_orbit_get_anx

7.12.1 Overview

When initialising an `orbit_id` with a list of state vectors that are not in the ANX (restituted orbit file, DORIS Navigator files, SP3 files), the information about the ANX of the orbits of those state vectors are stored in the `orbit_id`. The `xo_orbit_get_anx` CFI function allows to retrieve that information.

This function only can be called if the `orbit_id` was initialized with orbital state vectors coming from:

- Restituted orbit file
- DORIS Navigator file(s).
- SP3 files. Note: since SP3 files has no orbit information inside the file itself, the orbit numbers for ANX start at 0.

7.12.2 Calling interface

The calling interface of the `xo_orbit_get_anx` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_anx_extra_info* extra_info;
    long status;
    status = xo_orbit_get_anx(&orbit_id, &num_rec, &extra_info);
}
```

7.12.3 Input parameters

The `xo_orbit_get_anx` CFI function has the following input parameters:

Table 41: Input parameters of xo_orbit_get_anx function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure for orbit initialization	-	-

7.12.4 Output parameters

The output parameters of the `xo_orbit_get_anx` CFI function are:

Table 42: Output parameters of *xo_orbit_get_anx* function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<i>xo_orbit_get_anx</i>	long	-	Status flag	-	-
<i>num_rec</i>	long	-	Number of records in the data array	-	-
<i>extra_info</i>	<i>xo_anx_extra_info</i>	all	Dynamic array with the ANX information	-	-

The data structure *xo_osv_rec* can be seen in Table 3.

Note: The output *extra_info* array is a pointer, not a static array. The memory for this dynamic array is allocated within the CFI function. So the user will only have to declare that pointer but not to allocate memory for it. However, once the function has returned without error, the user will have the responsibility of freeing the memory when it is not being used any more. For freeing the memory just call to (in a C program):

```
free(extra_info);
```

7.12.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The *orbit_id* was not initialised.
- The *orbit_id* was not initialised with the suitable file

7.13 xo_orbit_set_anx

7.13.1 Overview

The `xo_orbit_set_anx` CFI function changes the ANX info that is stored in an `orbit_id` when this orbit id was initialised with a restituted orbit file, a DORIS Navigator file or a SP3 file.

Three formats of DORIS Navigator files are supported and automatically detected: Cryosat, Sentinel 3 and Jason CS (see [D_H_SUM] for further details). Notice that when using DORIS Navigator files the orbit is initialized based only on the navigation data in the NAV_T (ITRF) packets, and the absolute orbit number provided in NAV_G (Geodetic) packets if available in the same input file. NAV_G (Geodetic) packets are expected only for Sentinel 3 and Jason CS DORIS Navigation files and, as referred in [D_H_SUM], in case NAV_G (Geodetic) packets are not available the orbit number will be set to 1 at the first OSV and increased at each ANX. To adjust the orbit number, use the function `xd_orbit_id_change` as described in section 7.60

Note: since SP3 files has no orbit information inside the file itself, the orbit numbers for ANX start at 0.

7.13.2 Calling interface

The calling interface of the `xo_orbit_set_anx` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_anx_extra_info* extra_info;
    long status;
    status = xo_orbit_set_anx(&orbit_id, &num_rec, extra_info);
}
```

7.13.3 Input parameters

The `xo_orbit_set_anx` CFI function has the following input parameters:

Table 43: Input parameters of `xo_orbit_set_anx` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
num_rec	long	-	Number of records in the data array	-	-
extra_info	xo_anx_extra_info	all	Dynamic array with the state vectors	-	-

7.13.4 Output parameters

The output parameters of the `xo_orbit_set_anx` CFI function are:

Table 44: Output parameters of `xo_orbit_set_anx` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_set_anx</code>	long	-	Status flag	-	-
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure for orbit initialization (input / output parameter)	-	-

7.13.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The `orbit_id` was not initialised.
- The `orbit_id` was initialised with orbital changes, instead of state vectors.

7.14 xo_orbit_get_osf_rec

7.14.1 Overview

The `xo_orbit_get_osf_rec` CFI function returns a data structure containing the list of orbital changes used for the initialisation of an `orbit_id`. This function only can be called if the `orbit_id` was initialized with orbital changes (i.e., with `xo_orbit_init_def` or with `xo_orbit_init_file` and an orbit scenario file)

7.14.2 Calling interface

The calling interface of the `xo_orbit_get_osf_rec` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_osf_records* data;
    long status;
    status = xo_orbit_get_osf_rec(&orbit_id, &num_rec, &data);
}
```

7.14.3 Input parameters

The `xo_orbit_get_osf_rec` CFI function has the following input parameters:

Table 45: Input parameters of xo_orbit_get_osf_rec function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.14.4 Output parameters

The output parameters of the `xo_orbit_get_osf_rec` CFI function are:

Table 46: Output parameters of xo_orbit_get_osf_rec function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_osf_rec	long	-	Status flag	-	-
num_rec	long	-	Number of records in the data array	-	-
data	xo_osf_rec	all	Dinamic array with	-	-

		the orbital changes		
--	--	---------------------	--	--

The data structure `xo_osf_rec` can be seen in Table 3.

Note: The output `data` array is a pointer, not a static array. The memory for this dynamic array is allocated within the CFI function. So the user will only have to declare that pointer but not to allocate memory for it. However, once the function has returned without error, the user will have the responsibility of freeing the memory when it is not being used any more. For freeing the memory just call to (in a C program):

```
free(data);
```

7.14.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The `orbit_id` was not initialised.
- The `orbit_id` was not initialised with orbital changes.

7.15 xo_orbit_set_osf_rec

7.15.1 Overview

The `xo_orbit_set_osf_rec` CFI function changes the list of orbital changes used for the initialisation within an `orbit_id`. This function only can be called if the `orbit_id` was initialized with `xo_orbit_init_def` or with `xo_orbit_init_file` and an orbit scenario file.

7.15.2 Calling interface

The calling interface of the `xo_orbit_set_osf_rec` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long num_rec;
    xo_osv_rec* data;
    long status;
    status = xo_orbit_set_osf_rec(&orbit_id, &num_rec, data);
}
```

7.15.3 Input parameters

The `xo_orbit_set_osf_rec` CFI function has the following input parameters:

Table 47: Input parameters of xo_orbit_set_osf_rec function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
num_rec	long	-	Number of records in the data array	-	-
data	xo_osf_rec	all	Dinamic array with the orbital changes	-	-

7.15.4 Output parameters

The output parameters of the `xo_orbit_set_osf_rec` CFI function are:

Table 48: Output parameters of *xo_orbit_set_osf_rec* function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_set_osf_rec	long	-	Status flag	-	-
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-

7.15.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.
- The orbit_id was not initialised with orbital changes.

7.16 xo_orbit_get_val_time

7.16.1 Overview

The `xo_orbit_get_val_time` CFI function returns the validity period of an `orbit_id`.

7.16.2 Calling interface

The calling interface of the `xo_orbit_get_val_time` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xo_validity_time val_time;
    long status;
    status = xo_orbit_get_val_time(&orbit_id, &val_time);
}
```

7.16.3 Input parameters

The `xo_orbit_get_val_time` CFI function has the following input parameters:

Table 49: Input parameters of xo_orbit_get_val_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.16.4 Output parameters

The output parameters of the `xo_orbit_get_val_time` CFI function are:

Table 50: Output parameters of xo_orbit_get_val_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_val_time	long	-	Status flag	-	-
val_time	xo_validity_time	-	Validity Time structure	-	-

The data structure `xo_validity_time` can be seen in Table 3.

7.16.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.

7.17 xo_orbit_set_val_time

7.17.1 Overview

The `xo_orbit_set_val_time` CFI function changes the validity period of an `orbit_id`.

7.17.2 Calling interface

The calling interface of the `xo_orbit_set_val_time` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xo_validity_time val_time;
    long status;
    status = xo_orbit_set_val_time(&orbit_id, &val_time);
}
```

7.17.3 Input parameters

The `xo_orbit_set_val_time` CFI function has the following input parameters:

Table 51: Input parameters of xo_orbit_set_val_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
val_time	xo_validity_time	-	Validity Time structure	-	-

7.17.4 Output parameters

The output parameters of the `xo_orbit_set_val_time` CFI function are:

Table 52: Output parameters of xo_orbit_set_val_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_set_val_time	long	-	Status flag	-	-
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-

7.17.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.

7.18 xo_orbit_get_precise_propag_config

7.18.1 Overview

The `xo_orbit_get_precise_propag_config` CFI function returns the configuration structure of precise propagation.

7.18.2 Calling interface

The calling interface of the `xo_orbit_get_precise_propag_config` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xo_propag_precise_config precise_conf;
    long status;
    status = xo_orbit_get_precise_propag_config(&orbit_id,
                                                &precise_conf);
}
```

7.18.3 Input parameters

The `xo_orbit_get_precise_propag_config` CFI function has the following input parameters:

Table 53: Input parameters of xo_orbit_get_precise_propag_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-

7.18.4 Output parameters

The output parameters of the `xo_orbit_get_precise_propag_config` CFI function are:

Table 54: Output parameters of xo_orbit_get_precise_propag_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_precise_propag_config	long	-	Status flag	-	-
precise_conf	xo_propag_precise_config	-	Precise propagator configuration	-	-

			structure		
--	--	--	-----------	--	--

7.18.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.

7.19 xo_orbit_set_precise_propag_config

7.19.1 Overview

The `xo_orbit_set_precise_propag_config` CFI function sets the configuration structure of precise propagation.

7.19.2 Calling interface

The calling interface of the `xo_orbit_set_precise_propag_config` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xo_propag_precise_config precise_conf;
    long status;
    status = xo_orbit_set_precise_propag_config(&orbit_id,
                                                &precise_conf);
}
```

7.19.3 Input parameters

The `xo_orbit_set_precise_propag_config` CFI function has the following input parameters:

Table 55: Input parameters of `xo_orbit_set_precise_propag_config` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
precise_conf	xo_propag_precise_config	-	Precise propagator configuration structure	-	-

7.19.4 Output parameters

The output parameters of the `xo_orbit_get_precise_propag_config` CFI function are:

Table 56: Output parameters of `xo_orbit_set_precise_propag_config` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_set_precise_propag_config	long	-	Status flag	-	-

orbit_id	xo_orbit_id*	-	Structure for orbit initialization (input / output parameter)	-	-
----------	--------------	---	---	---	---

7.19.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.

7.20 xo_orbit_get_time_id

7.20.1 Overview

The `xo_orbit_get_time_id` CFI function returns the `time_id` structure used for the `orbit_id` initialisation.

7.20.2 Calling interface

The calling interface of the `xo_orbit_get_time_id` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xl_time_id time_id;
    time_id = xo_orbit_get_time_id(&orbit_id);
}
```

7.20.3 Input parameters

The `xo_orbit_get_time_id` CFI function has the following input parameters:

Table 57: Input parameters of xo_orbit_get_time_id function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.20.4 Output parameters

The output parameters of the `xo_orbit_get_time_id` CFI function are:

Table 58: Output parameters of xo_orbit_get_time_id function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_time_id	xl_time_id	-	time id used for the orbit_id initialisation	-	-

7.20.5 Warnings and errors

This function does not return any error/warning code. In case of error, an empty `time_id` is returned (initialised with NULL)

The possible causes of error are:

- The orbit_id was not initialised

7.21 xo_orbit_get_model_id

7.21.1 Overview

The `xo_orbit_get_model_id` CFI function returns the `model_id` structure used for the `orbit_id` initialisation.

7.21.2 Calling interface

The calling interface of the `xo_orbit_get_model_id` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id = {NULL};
    xl_model_id model_id = {NULL};
    model_id = xo_orbit_get_model_id(&orbit_id);
}
```

7.21.3 Input parameters

The `xo_orbit_get_model_id` CFI function has the following input parameters:

Table 59: Input parameters of xo_orbit_get_model_id function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.21.4 Output parameters

The output parameters of the `xo_orbit_get_model_id` CFI function are:

Table 60: Output parameters of xo_orbit_get_model_id function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_model_id	xl_model_id	-	model id used for the orbit_id initialisation	-	-

7.21.5 Warnings and errors

This function does not return any error/warning code. In case of error, an empty `time_id` is returned (initialised with NULL)

The possible causes of error are:

- The orbit_id was not initialised.

7.22 xo_orbit_get_osv_compute_validity

7.22.1 Overview

The `xo_orbit_get_osv_compute_validity` CFI function returns the validity time interval where it is possible to compute an state vector using the CFI function `xo_osv_compute`. Out of this interval, the functions would return an error.

The validity interval for using `xo_osv_compute` depends on the type of data used for the orbit initialisation. In general, that interval will be different from the validity of the input `orbit_id`. More information about the validity interval for `xo_osv_compute` can be found in section 7.33.2.

7.22.2 Calling interface

The calling interface of the `xo_orbit_get_osv_compute_validity` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    xo_validity_time val_time;
    time_id = xo_orbit_get_osv_compute_validity(&orbit_id,
                                              &val_time);
}
```

7.22.3 Input parameters

The `xo_orbit_get_osv_compute_validity` CFI function has the following input parameters:

Table 61: Input parameters of xo_orbit_get_osv_compute_validity function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.22.4 Output parameters

The output parameters of the `xo_orbit_get_osv_compute_validity` CFI function are:

Table 62: Output parameters of xo_orbit_get_osv_compute_validity function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_osv_compute_validity	xo_validity_time	-	validity time interval for the function <code>xo_osv_compute</code>	-	-

The data structure `xo_validity_time` can be seen in Table 3.

7.22.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The `orbit_id` was not initialised.

7.23 xo_orbit_get_propag_mode

7.23.1 Overview

The `xo_orbit_get_propag_mode` CFI function returns the propagation mode that will be used to propagate the state vector when using the input `orbit_id`.

7.23.2 Calling interface

The calling interface of the `xo_orbit_get_propag_mode` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long mode;
    mode = xo_orbit_get_propag_mode(&orbit_id);
}
```

7.23.3 Input parameters

The `xo_orbit_get_propag_mode` CFI function has the following input parameters:=

Table 63: Input parameters of xo_orbit_get_propag_mode function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.23.4 Output parameters

The output parameters of the `xo_orbit_get_propag_mode` CFI function are:

Table 64: Output parameters of xo_orbit_get_propag_mode function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_propag_mode	long	-	propagation mode. -1 if the orbit_id is not initialised for propagation.	-	-

7.23.5 Warnings and errors

This function does not return any error/warning code. If the orbit_id is not initialised or it is not initialised with propagation data, then the returned mode is -1.

7.24 xo_orbit_get_interpol_mode

7.24.1 Overview

The `xo_orbit_get_interpol_mode` CFI function returns the interpolation mode that will be used to interpolate the state vector when using the input `orbit_id`.

7.24.2 Calling interface

The calling interface of the `xo_orbit_get_interpol_mode` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long mode;
    mode = xo_orbit_get_interpol_mode(&orbit_id);
}
```

7.24.3 Input parameters

The `xo_orbit_get_interpol_mode` CFI function has the following input parameters:

Table 65: Input parameters of xo_orbit_get_interpol_mode function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>orbit_id</code>	<code>xo_orbit_id*</code>	-	Structure for orbit initialization	-	-

7.24.4 Output parameters

The output parameters of the `xo_orbit_get_interpol_mode` CFI function are:

Table 66: Output parameters of xo_orbit_get_interpol_mode function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_orbit_get_interpol_mode</code>	<code>long</code>	-	propagation mode. -1 if the <code>orbit_id</code> is not initialised for interpolations.	-	-

7.24.5 Warnings and errors

This function does not return any error/warning code. If the orbit_id is not initialised or it is not initialised with interpolation data, then the returned mode is -1.

7.25 xo_orbit_get_propag_config

7.25.1 Overview

The `xo_orbit_get_propag_config` CFI function returns the propagation data that will be used to propagate the state vector when using the input `orbit_id`.

7.25.2 Calling interface

The calling interface of the `xo_orbit_get_propag_config` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long status;
    xo_propag_id_data propag_data;
    status = xo_orbit_get_propag_config(&orbit_id,
                                       &propag_data);
}
```

7.25.3 Input parameters

The `xo_orbit_get_propag_config` CFI function has the following input parameters:

Table 67: Input parameters of xo_orbit_get_propag_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.25.4 Output parameters

The output parameters of the `xo_orbit_get_propag_config` CFI function are:

Table 68: Output parameters of xo_orbit_get_propag_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_propag_config	long	-	status	-	-
propag_data	xo_propag_id_data	-	Configuration data used to launch the propagation	-	-

The data structure `xo_propag_id_data` can be seen in Table 3.

7.25.5 Warnings and errors

This function does not return any error/warning code. If the `orbit_id` is not initialised or it is not initialised with propagation data, then the returned status is -1.

7.26 xo_orbit_get_interpol_config

7.26.1 Overview

The `xo_orbit_get_interpol_config` CFI function returns the propagation data that will be used to interpolate the state vector when using the input `orbit_id`.

7.26.2 Calling interface

The calling interface of the `xo_orbit_get_interpol_config` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long status;
    xo_interpol_id_data interpol_data;
    status = xo_orbit_get_interpol_config(&orbit_id,
                                         &interpol_data);
}
```

7.26.3 Input parameters

The `xo_orbit_get_interpol_config` CFI function has the following input parameters:

Table 69: Input parameters of xo_orbit_get_interpol_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.26.4 Output parameters

The output parameters of the `xo_orbit_get_interpol_config` CFI function are:

Table 70: Output parameters of xo_orbit_get_interpol_config function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_propag_config	long	-	status	-	-
interpol_data	xo_interpol_id_data	-	Configuration data used to launch the interpolation	-	-

The data structure `xo_interpol_id_data` can be seen in Table 3.

7.26.5 Warnings and errors

This function does not return any error/warning code. If the `orbit_id` is not initialised or it is not initialised with propagation data, then the returned status is -1.

7.27 xo_orbit_get_geo_orbit_info

7.27.1 Overview

The `xo_orbit_get_geo_orbit_info` CFI function returns the geostationary geodetic coordinates from `orbit_id` initialized with a geostationary satellite.

7.27.2 Calling interface

The calling interface of the `xo_orbit_get_geo_orbit_info` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long status;
    xo_geo_orbit_info geo_orbit_info;
    status = xo_orbit_get_geo_orbit_info(&orbit_id,
                                        &geo_orbit_info);
}
```

7.27.3 Input parameters

The `xo_orbit_get_geo_orbit_info` CFI function has the following input parameters:

Table 71: Input parameters of xo_orbit_get_geo_orbit_info function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.27.4 Output parameters

The output parameters of the `xo_orbit_get_geo_orbit_info` CFI function are:

Table 72: Output parameters of xo_orbit_get_geo_orbit_info function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_get_geo_orbit_info	long	-	status	-	-
xo_geo_orbit_info	xo_geo_orbit_info	-	Geodetic coordinates of geostationary satellite	-	-

The data structure `xo_geo_orbit_info` can be seen in Table 3.

7.27.5 Warnings and errors

This function does not return any error/warning code. If the `orbit_id` is not initialized or it is not initialized with geostationary satellite, then the returned status is -1.

7.28 xo_orbit_set_geo_orbit_info

7.28.1 Overview

The `xo_orbit_set_geo_orbit_info` CFI function sets the geostationary geodetic coordinates for an `orbit_id` initialized with a geostationary satellite.

7.28.2 Calling interface

The calling interface of the `xo_orbit_set_geo_orbit_info` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id;
    long status;
    xo_geo_orbit_info geo_orbit_info;
    status = xo_orbit_set_geo_orbit_info(&orbit_id,
                                        &geo_orbit_info);
}
```

7.28.3 Input parameters

The `xo_orbit_set_geo_orbit_info` CFI function has the following input parameters:

Table 73: Input parameters of xo_orbit_set_geo_orbit_info function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure for orbit initialization	-	-
geo_orbit_info	xo_geo_orbit_info*	-	Input geodetic coordinates	Longitude, latitude → degrees Altitude → meters	0 ≤ lon < 360. -90. ≤ lat ≤ 90. 0. ≤ altitude

7.28.4 Output parameters

The output parameters of the `xo_orbit_set_geo_orbit_info` CFI function are:

Table 74: Output parameters of xo_orbit_set_geo_orbit_info function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
--------	--------	---------------	-------------------------	---------------	---------------

xo_orbit_set_geo_orbit_info	long	-	status	-	-
-----------------------------	------	---	--------	---	---

The data structure xo_geo_orbit_info can be seen in Table 3.

7.28.5 Warnings and errors

This function does not return any error/warning code. The returned status is -1 in the following cases:

- The orbit id is not initialized.
- The orbit id is not initialized with a geostationary satellite.
- The input parameters are not inside the allowed ranges.

7.29 xo_orbit_id_clone

7.29.1 Overview

The `xo_orbit_id_clone` CFI function copies the input `orbit_id` structure to the output one.

7.29.2 Calling interface

The calling interface of the `xo_orbit_id_clone` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id_in, xo_orbit_id_out;
    long status;
    status = xo_orbit_id_clone(&orbit_id_in, &orbit_id_out);
}
```

7.29.3 Input parameters

The `xo_orbit_id_clone` CFI function has the following input parameters:

Table 75: Input parameters of xo_orbit_id_clone function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id_in	xo_orbit_id*	-	Structure for orbit initialization	-	-

7.29.4 Output parameters

The output parameters of the `xo_orbit_id_clone` CFI function are:

Table 76: Output parameters of xo_orbit_id_clone function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_id_clone	long	-	status	-	-
orbit_id_out	xo_orbit_id	-	Output orbit_id	-	-

7.29.5 Warnings and errors

This function does not return any error/warning code. Only the status of the function indicates if the execution was correct or not.

The possible causes of error are:

- The orbit_id was not initialised.

7.30 xo_run_init

7.30.1 Overview

The `xo_run_init` CFI function adds to the *run Id* the *orbit id*.

7.30.2 Calling interface

The calling interface of the `xo_run_init` CFI function is the following:

```
#include <explorer_orbit.h>
{
    long run_id;
    xo_orbit_id orbit_id = {NULL};
    long ierr[XO_NUM_ERR_RUN_INIT], status;
    status = xo_run_init (&run_id, &orbit_id,
                          ierr);
}
```

7.30.3 Input parameters

The `xo_run_init` CFI function has the following input parameters:

Table 77: Input parameters of xo_run_init function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
run_id	long *	-	Run ID	-	>=0
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-

7.30.4 Output parameters

The output parameters of the `xo_run_init` CFI function are:

Table 78: Output parameters of xo_run_init function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_run_init	long	-	Status flag	-	-
run_id	long *	-	Run ID	-	>=0
ierr	long	-	Error vector	-	-

7.30.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo_run_init** CFI function after translating the returned extended status flag into the equivalent list of error messages by calling the function of the EO_ORBIT software library **xo_get_msg** (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation.

The table is completed by the error code and value. These error codes can be obtained translating the extended status flag returned by the **xo_run_init** function by calling the function of the EO_ORBIT software library **xo_get_code** (see [GEN_SUM])

Table 79: Error messages of xo_run_init function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Inputs Id no initialized or incompatible.	No calculation performed	XO_CFI_RUN_INIT_STATUS_ERR	0
ERR	Memory allocation error.	No calculation performed	XO_CFI_RUN_INIT_MEMORY_ERR	1
ERR	Input Ids incompatible with the run_id.	No calculation performed	XO_CFI_RUN_INIT_INCONSISTENCY_ERR	2

7.31 xo_run_get_ids

7.31.1 Overview

The `xo_run_get_ids` CFI function returns the *ids* being used..

7.31.2 Calling interface

The calling interface of the `xo_run_get_ids` CFI function is the following:

```
#include <explorer_orbit.h>
{
    long run_id;
    xo_orbit_id orbit_id = {NULL};
    xo_run_get_ids (&run_id,
                  &orbit_id);
}
```

7.31.3 Input parameters

The `xo_run_get_ids` CFI function has the following input parameters:

Table 80: Input parameters of xo_run_get_ids function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
run_id	long *	-	Run ID	-	>=0

7.31.4 Output parameters

The output parameters of the `xo_run_get_ids` CFI function are:

Table 81: Output parameters of xo_run_get_ids function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_run_get_ids	void	-	-	-	-
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-

7.31.5 Warnings and errors

This function does not return any error/warning code.

7.32 xo_run_close

7.32.1 Overview

The `xo_run_close` CFI function cleans up any memory allocation performed by the initialization functions.

7.32.2 Calling interface

The calling interface of the `xo_run_close` CFI function is the following:

```
#include <explorer_orbit.h>
{
    long run_id;
    xo_run_close (&run_id);
}
```

7.32.3 Input parameters

The `xo_run_close` CFI function has the following input parameters:

Table 82: Input parameters of xo_run_close function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
run_id	long *	-	Run ID	-	>=0

7.32.4 Output parameters

The output parameters of the `xo_run_close` CFI function are:

Table 83: Output parameters of xo_run_close function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_run_close	void	-	-	-	-

7.32.5 Warnings and errors

This function does not return any error/warning code.

7.33 xo_osv_compute

7.33.1 Overview

The **xo_osv_compute** function computes accurate state vectors for user requested times.

This function needs as input an `orbit_id` that contains the orbit initialisation data. The behavior of the function depends strongly in the way in which the `orbit_id` was initialised (see section 7.33.2).

During the computation, some results are stored in the input `orbit_id`. Those results can be used afterwards for other computations (in **xo_osv_compute** or **xo_osv_compute_extra**). This has to be taken into account when working with **multi-threads programs**. In those cases a different `orbit_id` has to be used in every thread to avoid problems. The orbit id can be initialised in every thread or copied (this is more efficient) to different `orbit_id` variables with **xo_orbit_id_clone**.

An OSV can be computed within a validity time range that also depends on input `orbit_id` variable. This validity time range can be retrieved with the CFI function **xo_orbit_get_osv_compute_validity** (see section 7.22).

For a general description of the initialization routines and how to use them in conjunction to the **xo_osv_compute** function, see section 4.1.2.

7.33.2 Computation methods (Propagation/interpolation)

The methods used to compute the state vector depend on the way in which the orbit was initialised. Note that the computation method is selected automatically by the routine. The Table 84 summarises the dependency of the computation method with the orbit initialisation. The first column indicates the orbit mode which is a parameter that can be get with the CFI function **xo_orbit_get_mode**. The methods in the second column are described in detail in the following subsections.

Table 84: OSV computation methods

Orbit initialisation mode	OSV computation method
XO_ORBIT_INIT_ORBIT_CHANGE_MODE Initialised with xo_orbit_init_def	Mean Keplerian Propagation Model with "AUTO" and "DOUBLE" modes (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_OSF_MODE XO_ORBIT_INIT_OEF_OSF_MODE Initialised with xo_orbit_init_file with an OSF (or an OEF but reading the list of orbital changes in the data block of the file)	
XO_ORBIT_INIT_POF_MODE XO_ORBIT_INIT_OEF_POF_MODE Initialised with xo_orbit_init_file with a POF (or an OEF but reading the list of State Vectors in the data block)	

of the file)	
XO_ORBIT_INIT_STATE_VECTOR_MODE Initialised with xo_orbit_cart_init	Mean Keplerian Propagation Model (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_POF_N_DORIS_MODE: Initialised with xo_orbit_init_file with a POF and a DORIS file	
XO_ORBIT_INIT_TLE_MODE Initialised with xo_orbit_init_file with a TLE file	TLE propagation mode with "AUTO" mode (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_TLE_SGP4_MODE Initialised with xo_orbit_init_file with a TLE file	TLE propagation mode with "SGP4" mode (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_TLE_SDP4_MODE Initialised with xo_orbit_init_file with a TLE file	TLE propagation mode with "SDP4" mode (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_POF_PRECISE_MODE XO_ORBIT_INIT_OEF_POF_PRECISE_MODE Initialised with xo_orbit_init_file_precise with a POF (or an OEF but reading the list of State Vectors in the data block of the file)	Numerical propagator with "AUTO" mode (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_ROF_PRECISE_MODE Initialised with xo_orbit_init_file_precise with a ROF file	
XO_ORBIT_INIT_DORIS_PRECISE_MODE Initialised with xo_orbit_init_file_precise with a DORIS Navigator file	
XO_ORBIT_INIT_STATE_VECTOR_PRECISE_MODE Initialised with xo_orbit_cart_init_precise	Numerical propagator (see section 7.33.2.1 and Table 85)
XO_ORBIT_INIT_POF_N_DORIS_PRECISE_MODE Initialised with xo_orbit_init_file_precise with a POF and a DORIS Navigator file	
XO_ORBIT_INIT_ROF_MODE Initialised with xo_orbit_init_file with a ROF file	Interpolation (see section 7.33.2.2)
XO_ORBIT_INIT_DORIS_MODE Initialised with xo_orbit_init_file with a DORIS Navigator file	
XO_ORBIT_INIT_SP3_MODE Initialised with xo_orbit_init_file with a SP3 file	
XO_ORBIT_INIT_OEM_MODE Initialised with xo_orbit_init_file with OEM file	
XO_ORBIT_INIT_GEO_LON_ALT_MODE Initialised with xo_orbit_init_geo	No propagation is performed. The state vector corresponding to orbit initialization values is returned

Note: Orbit Event File is deprecated, only supported for CRYOSAT mission

7.33.2.1 Propagation methods

For the time being, the following propagation models are supported:

- *Mean Keplerian model.* It implies the use of a formulation for the time rates of change for the different mean Kepler elements as functions of a given initial set of mean Kepler elements. Using the above time rates of change, the mean orbital elements can be propagated forward or backward in time by extrapolating the individual time slopes of the superimposed secular and long-periodic perturbations functions. As the long periodic variations have typically periods on the order of months, a near-linear time slope for prediction intervals of many orbits is warranted.
- *TLE model.* This model propagates the state vector using the NORAD “two line elements” (TLE) and the SGP4 or SDP4 propagation algorithm. This theory was designed for near Earth Satellites (nodal period less than 225 minutes). The SGP4 theory uses an Earth gravitational field through zonal terms J2, J3 and J4 and a power density function for the atmospheric model (assuming a non-rotating spherical model).

The algorithm to be used in the propagation is selected based on the input Orbit Init Mode:

- *XO_ORBIT_INIT_TLE_SGP4_MODE* – Forces to use the SGP4 algorithm
- *XO_ORBIT_INIT_TLE_SDP4_MODE* – Forces to use the SDP4 algorithm
- *XO_ORBIT_INIT_TLE_MODE* – Chooses the algorithm depending on the orbital period: if less than 200 minutes, the SGP4 is selected, if greater than 250 minutes, the SDP4 algorithm is chosen. If the orbital period is between 200 and 250 minutes the user cannot use this mode, it is mandatory to use one of the specific SDP4/SGP4 forcing modes, otherwise the CFI will return an error *.XO_ORBIT_INIT_FILE_TLE_AUTO_ERR..*
- *Numerical propagator.* This model consists on a numerical propagator that integrates the movement equations using a Runge-Kutta algorithm of 8th order. This propagator is expected to produce more precise results than the other models as it can be configured by the user (through the orbit initialisation function) to take into account the following perturbations:
 - Non-spherical gravity: the model Earth Gravity Model 1996 is used. The file with the coefficients of the spherical harmonics must be provided by the user, besides the order and degree to be used in the calculations.
 - Atmospheric drag: MSIS-E-90 atmospheric density model is used. The user must provide the Solar Geomagnetic Activity and F107 coefficient, either as input files or with constant values. The values can be obtained from ESA-ECSS or NASA documentation. The user must provide the drag effective area and drag coefficient of the satellite, besides the mass of the satellite.
 - Solar radiation pressure: it is calculated using the solar radiation pressure effective area and solar radiation pressure coefficient of the satellite provided by the user.
 - Third body perturbations: the perturbations produced by the Sun and the Moon gravities are calculated.

Apart from these models, in table there are two additional modes: “AUTO” and “DOUBLE”. They refer to the way in which the seed (initial state vector used as reference to begin the propagation) is taken:

- AUTO mode: The seed is taken to be the closer ANX or OSV to the requested time. The propagation seed could change from one propagation to the following.
- DOUBLE mode: the two ANX covering the propagation time are used as seeds. When calling `xo_osv_compute`, the propagation is performed from each of the ANX and then a weighted average is done. The weight function is

$$\cos^2\left(\frac{\pi}{2} \cdot \frac{\Delta t}{T}\right)$$

where $Dt = t - t_{ANX}$ and T is the nodal period of the orbit.




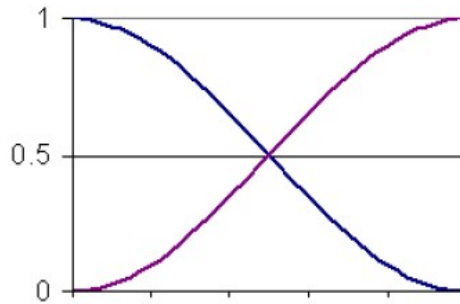


Figure 3: Weight Function for Double Propagation Model


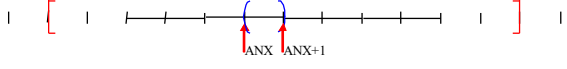
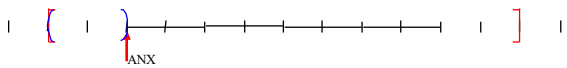
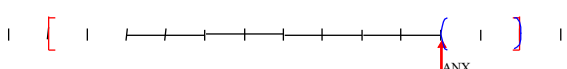


This propagation method removes any discontinuity that may arise when changing the state vector around the true ascending node crossing used as seed for the propagation.

Finally, the validity time interval for the propagation also depends on the propagation method. This validity interval can be computed with the CFI function `xo_orbit_get_osv_compute_validity` (section 7.22). The table summarises all the propagation cases, explaining the seed that is taken in every case and how the validity interval is taken. In the table, t_0 represent the input time for `xo_osv_compute`. In the fourth column, the horizontal solid line in the graphic represents the list of OSV or ANX that are stored in the orbit initialisation, t_{start} and t_{stop} are the first and last OSV(ANX) in that line. Red square brackets represent the validity period for propagation. When using the AUTO mode, the seed for the propagation changes if t_0 jumps out of the region in blue brackets. The red arrow(s) represent the chosen seed(s) (OSV or ANX).

Table 85: Validity Time Intervals for Propagation

Propag model ²	Requested time	Propagation seed	Validity time interval
Mean Keplerian + AUTO + DOUBLE Mode	$t_{start} < t_0 < t_{stop}$	The two ANX that are before and after t_0	$[t_{start} - 2 \text{ orbits}, t_{stop} + 2 \text{ orbits}]$; (ANX, ANX + 1orbit) 
	$t_0 < t_{start}$	The first ANX in the orbit_id	$[t_{start} - 2 \text{ orbits}, t_{stop} + 2 \text{ orbits}]$;  (ANX - 2 orbits, ANX)
	$t_0 > t_{stop}$	The last ANX in the orbit_id	$[t_{start} - 2 \text{ orbits}, t_{stop} + 2 \text{ orbits}]$;  (ANX , ANX + 2 orbits)
Mean Keplerian	$t_{start} - 2\text{orbits}$	The state vector used to initialise	$[t_{start} - 2 \text{ orbits}, t_{stop} + 2 \text{ orbits}]$

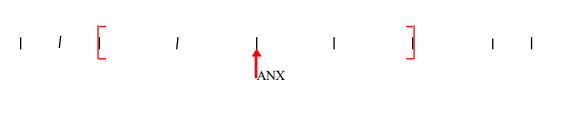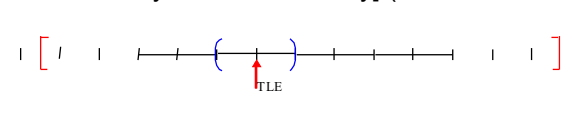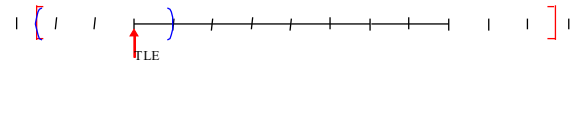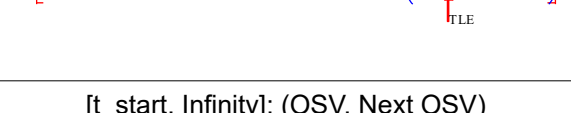2 This column relates with the “OSV computation method” column in Table 84.

Mode	< t0 < t_stop+2orbits Note that t_start = t_stop as there is only one OSV	the orbit_id (there is only one)	
TLE + AUTO Mode	t_start < t0 < t_stop	TLE that is before t0	[1st.TLE - 1day, Last TLE+ 1 day] (-1 TLE, +1 TLE) 
	t0 < t_start	First TLE	[1st.TLE - 1day, Last TLE+ 1 day] (TLE - 1day, + 1 TLE) 
	t0 > t_stop	Last TLE	[1st.TLE - 1day, Last TLE+ 1 day] (-1 TLE, TLE + 1 day) 
Numerical + AUTO Mode	t_start < t0 < t_stop	OSV that is before t0	[t_start, Infinity]; (OSV, Next OSV) 
	t0 < t_start	Propagation is not possible	-
	t0 > t_stop	Last OSV	[t_start, Infinity]; (OSV, Infinity) 

Note that the cases with “NO AUTO” mode are similar to those with “AUTO” mode with one OSV.

The precise propagator stores the result of the last propagation, so that the next propagation begins from that point if the time begins after the last propagation (it saves computation time). If the propagation is requested at a time that is before the time of the previous propagation time, then the original seed is taken.

7.33.2.2 Interpolation methods

The function `xo_osv_compute` computes the OSV using an interpolation algorithm when the orbit_id is initialised with `xo_orbit_init_file` plus ROF's, DORIS Navigator files or SP3 files.

The interpolation is highly accurate (1 mm. accuracy TBC) when it is performed between 4 OSV's time intervals after start of file(s) and before end of file(s), but it degrades in the first 4 OSV's time intervals of the file and the last 4 OSV's time intervals of the file. The degradation depends strongly in the length of the OSV's time intervals: it can be of the order of mm. for 1 second up to some cm. for 60 seconds. Figure 4 provides a graphical explanation.

The `xo_osv_compute` function allows to extrapolate, that is, compute results for at least 60 seconds before start of the input file(s) and after end of the input file. Anyway, extrapolation is not recommended. In this case, the extrapolation window is NOT included in the valid time interval. The following table shows some values for the degradation of the extrapolation:

Time out of validity interval [number of OSV time steps]	Error in position [m] as a function of the OSV time step			
	1 sec	10 sec	30 sec	60 sec
1	0.01	0.05	0.06	0.09
2	0.22	0.39	0.40	0.56
3	1.16	1.65	1.68	2.25
4	4.21	5.23	5.20	6.89

When the interpolation is in “degraded” mode, that is, when extrapolation is used, or when there is less than four orbit state vectors available in the input file before or after the requested time, `xo_osv_compute` function will issue different warnings messages indicating that a degraded interpolation or extrapolation is performed. If the requested time is out the allowed extrapolation range, the function will return an error message.

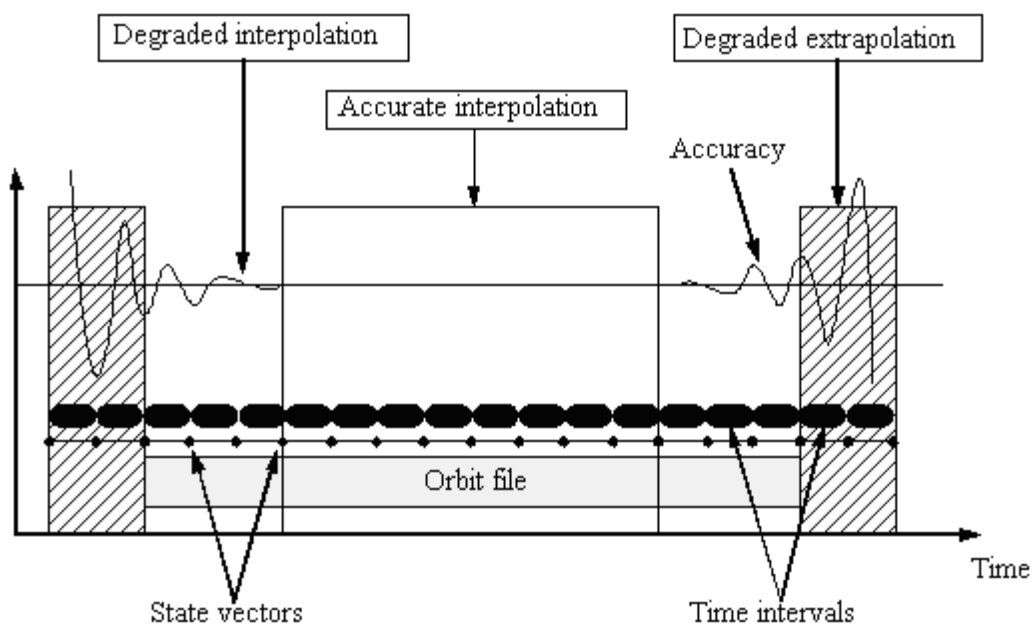


Figure 4: Performances of the interpolation algorithm

7.33.3 Calling interface

The calling interface of the `xo_osv_compute` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
  xo_orbit_id orbit_id = {NULL};
  long mode, time_ref;
  double time, pos_out[3], vel_out[3], acc_out[3];
  long status, ierr[XO_NUM_ERR_OSV_COMPUTE];

  status = xo_osv_compute (&orbit_id, &mode, &time_ref, &time,
                          pos_out, vel_out, acc_out, ierr);

  /* Or, using the run_id */
  long run_id;

  status = xo_osv_compute_run (&run_id, &mode, &time_ref, &time,
                              pos_out, vel_out, acc_out, ierr);
}
```

7.33.4 Input parameters

The `xo_osv_compute` CFI function has the following input parameters:

Table 86: Input parameters of `xo_osv_compute` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
mode	long *	-	Propagation model. Dummy input for current version.	-	-
time_ref	long*	-	Time reference ID	-	Complete
time	double*	-	Reference time	Decimal days (Processing format)	[-18262.0,36524.0]

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Time reference ID: `time_ref`. See [GEN_SUM].

7.33.5 Output parameters

The output parameters of the `xo_osv_compute` CFI function are:

Table 87: Output parameters of `xo_osv_compute` function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_osv_compute</code>	long	-	Main status flag	-	-1, 0, +1
<code>pos_out[3]</code>	double	all	Osculating position vector at predicted time (Earth fixed CS)	m	-
<code>vel_out[3]</code>	double	all	Osculating velocity vector at predicted time (Earth fixed CS)	m/s	-
<code>acc_out[3]</code>	double	all	Osculating acceleration vector at predicted time (Earth fixed CS)	m/s ²	-
<code>ierr[XO_NUM_ERR_PROG]</code>	long	all	Status vector	-	-

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Time reference ID: `time_ref`. See [GEN_SUM].

7.33.6 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo_osv_compute** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library **xo_get_msg** (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xo_osv_compute** CFI function by calling the function of the EO_ORBIT software library **xo_get_code** (see [GEN_SUM]).

Table 88: Error messages of xo_osv_compute function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Could not initialise the propagation	No calculation performed	XO_CFI_OSV_COMPUTE_PROPAG_INIT_ERR	0
ERR	The internal data were not initialized	No calculation performed	XO_CFI_OSV_COMPUTE_NOT_INTERNAL_DATA_ERR	1
ERR	Could not propagate the state vector	No calculation performed	XO_CFI_OSV_COMPUTE_PROPAG_ERR	2
ERR	Could not interpolate the state vector	No calculation performed	XO_CFI_OSV_COMPUTE_INTERPOL_ERR	3
ERR	Warnings during the propagation	No calculation performed	XO_CFI_OSV_COMPUTE_PROPAG_WARN	4
ERR	Warnings during the interpolation	No calculation performed	XO_CFI_OSV_COMPUTE_INTERPOL_WARN	5
ERR	Neither propagation nor interpolation can be performed with USER OSV LIST orbit initialization	No calculation performed	XO_CFI_OSV_COMPUTE_USER_OSV_LIST_ERR	6
WARN	Warnings during the propagation using a TLE File.	No calculation performed	XO_CFI_OSV_COMPUTE_TLE_OSV_GAP_WARN	7
WARN	Warnings during the acceleration computation	No calculation performed	XO_CFI_OSV_COMPUTE_INTERPOL_ACCELERATION_WARN	8

7.34 **xo_osv_compute_extra**

7.34.1 **Overview**

This software returns ancillary results derived from an orbit state vector obtained from the **xo_osv_compute** routine (stored within the *orbit Id*). This state vector depends on which is the last function called:

- when calling **xo_osv_compute_extra** after initialising the *orbit Id*, the selected state vector is:
 - the one that is selected as seed for the propagation.
 - the first OSV stored in the *orbit_id* if it is initialised for interpolation.
- when calling after **xo_osv_compute**, the Cartesian orbit state vector is the one predicted at the requested time in that routine.

A description of the ancillary results may be found in the section 7.34.5.

A complete calling sequence of the computation procedure is presented in section 4.2.

Note: model dependent parameters are not applicable to geostationary satellites and therefore are not computed.

7.34.2 **Calling interface**

The calling interface of the **xo_osv_compute_extra** CFI function is the following:

```
#include <explorer_orbit.h>
{
    xo_orbit_id orbit_id = {NULL};
    long extra_choice;
    double model_out[XO_ORBIT_EXTRA_NUM_DEP_ELEMENTS],
    extra_out[XO_ORBIT_EXTRA_NUM_INDEP_ELEMENTS];
    long status, ierr[XO_NUM_ERR_OSV_COMPUTE_EXTRA];

    status = xo_osv_compute_extra (&orbit_id, &extra_choice,
    model_out, extra_out, ierr);

    /* Or, using the run_id */
    long run_id;

    status = xo_osv_compute_run (&run_id, &extra_choice,
    model_out, extra_out, ierr);
}
```


7.34.3 Input parameters

The `xo_osv_compute_extra` CFI function has the following input parameters:

Table 89: Input parameters of `xo_osv_compute_extra`

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit initialisation data	-	-
extra_choice	long *	-	Flag to allow an ancillary results choice	-	[0, 4095]

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Flag to select ancillary results: `extra_choice`. See tables below:

Table 90: Enumeration values of `extra_choice` input flag

Model independant	Description	Long
XO_ORBIT_EXTRA_NO_RESULTS	No extra results	0
XO_ORBIT_EXTRA_GEOLOCATION	Geolocation results	1
XO_ORBIT_EXTRA_GEOLOCATION_D	Geolocation rate results	2
XO_ORBIT_EXTRA_GEOLOCATION_2D	Geolocation rate-rate results	4
XO_ORBIT_EXTRA_GEOLOCATION_EXTRA	Geolocation extra results	8
XO_ORBIT_EXTRA_EARTH_FIXED_D	Earth fixed velocity results	16
XO_ORBIT_EXTRA_EARTH_FIXED_2D	Earth fixed acceleration results	32
XO_ORBIT_EXTRA_SUN	Sun results	64
XO_ORBIT_EXTRA_MOON	Moon results	128
XO_ORBIT_EXTRA_OSCULATING_KEPLER	Osculating keplerian elements	256
XO_ORBIT_EXTRA_INERTIAL_AUX	Inertial auxiliary results	512
Model dependant (Mean Keplerian model)	Description	Long
XO_ORBIT_EXTRA_DEP_ANX_TIMING	ANX timing results	1024
XO_ORBIT_EXTRA_DEP_MEAN_KEPLER	Mean keplerian elements	2048

To calculate all results there is an extra enumeration value, defined as the addition of all the enumeration result values:

Enumeration value	Description	Long
XO_ORBIT_EXTRA_ALL_RESULTS	All results	4095

The elements calculated in each case are shown in section 7.34.5. It is possible to select the calculation of different sets of output parameters, or to make any combination of them by adding the results enumeration desired. In order to calculate some elements it might be necessary to calculate elements which have not been explicitly requested. The function identifies internally all the dependencies and those elements are also returned in the result vectors.

7.34.4 Output parameters

The output parameters of the `xo_osv_compute_extra` CFI function are:

Table 91: Output parameters of `xo_osv_compute_extra`

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
<code>xo_osv_compute_extra</code>	long	-	Main status flag	-	-1, 0, +1
<code>model_out[XO_ORBIT_EXTRA_NUM_DEP_ELEMENTS]</code>	double	all	Vector of model-dependent parameters	-	-
<code>extra_out[XO_ORBIT_EXTRA_NUM_INDEP_ELEMENTS]</code>	double	all	Vector of model-independent parameters. It depends upon extra-choice	-	-
<code>ierr[XO_NUM_ERR_OSV_COMPUTE_EXTRA]</code>	long	all	Status vector	-	-

7.34.5 Results vectors

The following tables describe the set of parameters are computed with `xo_osv_compute_extra`.

The model-dependent parameters vector (note that there is an enumeration associated to the elements of the results vectors) is in Table 92. These parameters depends on the way in which the input `orbit_id` was initialised (the orbit mode). So, in table a column “OSV compute model” indicates the models for which that parameter can be computed. To simplify, the models are indicated with the following correspondence:

Orbit initialisation mode	OSV compute model
XO_ORBIT_INIT_ORBIT_CHANGE_MODE XO_ORBIT_INIT_OSF_MODE XO_ORBIT_INIT_OEF_OSF_MODE XO_ORBIT_INIT_POF_MODE XO_ORBIT_INIT_OEF_POF_MODE XO_ORBIT_INIT_STATE_VECTOR_MODE XO_ORBIT_INIT_POF_N_DORIS_MODE	Mean Kepler
XO_ORBIT_INIT_TLE_MODE XO_ORBIT_INIT_TLE_SGP4_MODE XO_ORBIT_INIT_TLE_SDP4_MODE	TLE
XO_ORBIT_INIT_POF_PRECISE_MODE XO_ORBIT_INIT_OEF_POF_PRECISE_MODE XO_ORBIT_INIT_ROF_PRECISE_MODE XO_ORBIT_INIT_DORIS_PRECISE_MODE XO_ORBIT_INIT_STATE_VECTOR_PRECISE_MODE XO_ORBIT_INIT_POF_N_DORIS_PRECISE_MODE	Precise
XO_ORBIT_INIT_ROF_MODE XO_ORBIT_INIT_DORIS_MODE XO_ORBIT_INIT_SP3_MODE XO_ORBIT_INIT_OEM_MODE	Interpolation

Table 92: Ancillary results vector. Model-dependent parameters

Result parameter	Set	Description (Reference)	Unit (Format)	Allowed Range	OSV compute model
[0] XO_ORBIT_EXTRA_DEP_NODAL_PERIOD	ANX Timing ^a	Nodal period	s	>= 0	<ul style="list-style-type: none"> Mean Kepler Interpolation
[1]		Time of current ANX	decimal days (Processing	-	

XO_ORBIT_EXTRA_DEP.UTC_CURRENT_ANX			format)		
[2] XO_ORBIT_EXTRA_DEP_ORBIT_NUMBER	Position in orbit ³	Absolute Orbit Number		> 0	<ul style="list-style-type: none"> • Mean Kepler • TLE • Interpolation • Precise
[3] XO_ORBIT_EXTRA_DEP_SEC_SINCE_ANX		Time since ANX	s	>= 0 < Nodal Period	
[4:9] XO_ORBIT_EXTRA_DEP_MEAN_KEPL_A XO_ORBIT_EXTRA_DEP_MEAN_KEPL_E XO_ORBIT_EXTRA_DEP_MEAN_KEPL_I XO_ORBIT_EXTRA_DEP_MEAN_KEPL_RA XO_ORBIT_EXTRA_DEP_MEAN_KEPL_W XO_ORBIT_EXTRA_DEP_MEAN_KEPL_M	Mean Kepler ^b	Mean Kepler elements of the propagated OSV (True of Date)	-	-	<ul style="list-style-type: none"> • Mean Kepler • Precise

a. For TLE and Precise, these parameters can be computed by calling the CFI function `xo_orbit_info`.

b. For TLE and Interpolation, these parameters can be computed by calling the CFI function `xo_orbit_info`.

The model-independent parameters vector (note that there is an enumeration associated to the elements of the results vectors) is in Table 93:

Table 93: Ancillary results vector. Model-independent parameters

Result parameter (res element)	Set	Description (Reference)	Unit (Format)	Allowed Range
[0] XO_ORBIT_EXTRA_GEOC_LONG	Geolocation	Geocentric longitude of satellite and SSP (EF frame)	deg	>= 0 < 360
[1] XO_ORBIT_EXTRA_GEOD_LAT		Geodetic latitude of satellite and SSP (EF frame)	deg	>= -90 <= +90
[2] XO_ORBIT_EXTRA_GEOD_ALT		Geodetic altitude of the satellite (EF frame)	m	-
[3] XO_ORBIT_EXTRA_GEOC_LONG_D	Geolocation rate	Geocentric longitude rate of satellite and SSP (EF frame)	deg/s	-
[4] XO_ORBIT_EXTRA_GEOD_LAT_D		Geodetic latitude rate of satellite and SSP (EF frame)	deg/s	-
[5] XO_ORBIT_EXTRA_GEOD_ALT_D		Geodetic altitude rate of the satellite (EF frame)	m/s	-
[6] XO_ORBIT_EXTRA_GEOC_LONG_2D	Geolocation rate rate	Geocentric longitude rate-rate of satellite and SSP (EF frame)	deg/s ²	-
[7] XO_ORBIT_EXTRA_GEOD_LAT_2D		Geodetic latitude rate-rate of satellite and SSP (EF frame)	deg/s ²	-

3 These parameters are calculated only when initialising with `xo_orbit_init_file` and `xo_orbit_init_def`

[8] XO_ORBIT_EXTRA_GEOD_ALT_2D		Geodetic altitude rate-rate of the satel lite (EF frame)	m/s2	-
[9] XO_ORBIT_EXTRA_RAD_CUR_PARALLEL_MERIDIAN	Geolocation extra	Radius of curvature parallel to meridian at the SSP (EF frame)	m	>= 0
[10] XO_ORBIT_EXTRA_RAD_CUR_ORTHO_MERIDIAN		Radius of curvature orthogonal to meridian at the SSP (EF frame)	m	>= 0
[11] XO_ORBIT_EXTRA_RAD_CUR_ALONG_GROUNDTRACK		Radius of curvature along groundtrack at the SSP (EF frame)	m	>= 0
[12] XO_ORBIT_EXTRA_NORTH_VEL	Earth-fixed velocity	Northward component of the velocity relative to the Earth of the SSP (Topocentric frame)	m/s	-
[13] XO_ORBIT_EXTRA_EAST_VEL		Eastward component of the velocity relative to the Earth of the SSP (Topocentric frame)	m/s	-
[14] XO_ORBIT_EXTRA_MAG_VEL		Magnitude of the velocity relative to the Earth of the SSP (Topocentric frame)	m/s	>= 0
[15] XO_ORBIT_EXTRA_AZ_VEL		Azimuth of the velocity relative to the Earth of the SSP (Topocentric frame)	deg	>= 0 < 360
[16] XO_ORBIT_EXTRA_NORTH_ACC	Earth-fixed acceleration	Northward component of the acceleration relative to the Earth of the SSP (Topocentric frame)	m/s2	-
[17] XO_ORBIT_EXTRA_EAST_ACC		Eastward component of the acceleration relative to the Earth of the SSP (Topocentric frame)	m/s2	-
[18] XO_ORBIT_EXTRA_GROUNDTRACK_TANG_ACC		Groundtrack tangential component of the acceleration relative to the Earth of the SSP (Topocentric frame)	m/s2	-
[19] XO_ORBIT_EXTRA_AZ_ACC		Azimuth of the acceleration relative to the Earth of the SSP (Topocentric frame)	deg	>= 0 < 360
[20] XO_ORBIT_EXTRA_SAT_ECLIPSE_FLAG	Sun	Satellite eclipse flag 0 = No 1 = Yes		0, 1
[21] XO_ORBIT_EXTRA_SZA		Sun Zenith Angle	deg	>= 0 < 180
[22]		Mean local solar time at the SSP	decimal hour	>= 0

XO_ORBIT_EXTRA_MLST				< 24
[23] XO_ORBIT_EXTRA_TLST		True local solar time at the SSP	decimal hour	>= 0 < 24
[24] XO_ORBIT_EXTRA_TRUE_SUN_RA		True Sun's (centre) right ascension (TOD frame)	deg	>= 0 < 360
[25] XO_ORBIT_EXTRA_TRUE_SUN_DEC		True Sun's (centre) declination (TOD frame)	deg	>= -90 <= +90
[26] XO_ORBIT_EXTRA_TRUE_SUN_SEMI_DIAM		True Sun's semi-diameter	deg	>= 0
[27] XO_ORBIT_EXTRA_MOON_RA	Moon	Moon's (centre) right ascension (TOD frame)	deg	>= 0 < 360
[28] XO_ORBIT_EXTRA_MOON_DEC		Moon's (centre) declination (TOD frame)	deg	>= -90 <= +90
[29] XO_ORBIT_EXTRA_MOON_SEMI_DIAM		Moon's semi-diameter	deg	>= 0
[30] XO_ORBIT_EXTRA_MOON_AREA_LIT		Area of Moon lit by Sun		>= 0 <= 1
[31:36] XO_ORBIT_EXTRA_OSC_KEPL_A XO_ORBIT_EXTRA_OSC_KEPL_E XO_ORBIT_EXTRA_OSC_KEPL_I XO_ORBIT_EXTRA_OSC_KEPL_RA XO_ORBIT_EXTRA_OSC_KEPL_W XO_ORBIT_EXTRA_OSC_KEPL_M	Osculating Kepler	Osculating Keplerian elements of the OSV (TOD frame)		
[37] XO_ORBIT_EXTRA_ORBIT_RAD	Inertial Aux	Orbit radius (TOD frame)	m	>= 0
[38] XO_ORBIT_EXTRA_RADIAL_ORB_VELOCITY		Radial orbit velocity component (TOD frame)	m/s	-
[39] XO_ORBIT_EXTRA_TRANS_ORB_VELOCITY		Transversal orbit velocity component (TOD frame)	m/s	-
[40] XO_ORBIT_EXTRA_ORB_VELOCITY_MAG		Orbit velocity magnitude (TOD frame)	m/s	>= 0
[41]		Right ascension of the satellite	deg	>= 0

XO_ORBIT_EXTRA_RA_SAT	(TOD frame)		< 360
[42]	Declination of the satellite	deg	>= -90
XO_ORBIT_EXTRA_DEC_SAT	(TOD frame)		<= +90
[43]	Earth rotation angle [H]	deg	>= 0
XO_ORBIT_EXTRA_EARTH_ROTATION_ANGLE			< 360
[44]	Right ascension rate of the satellite (TOD frame)	deg/s	-
XO_ORBIT_EXTRA_RA_SAT_D			
[45]	Right ascension rate-rate of the satellite (TOD frame)	deg/s ²	-
XO_ORBIT_EXTRA_RA_SAT_2D			
[46]	Satellite osculating true latitude (EF frame)	deg	>= 0
XO_ORBIT_EXTRA_OSC_TRUE_LAT			< 360
[47]	Satellite osculating true latitude rate (EF frame)	deg/s	-
XO_ORBIT_EXTRA_OSC_TRUE_LAT_D			
[48]	Satellite osculating true latitude rate-rate (EF frame)	deg/s ²	-
XO_ORBIT_EXTRA_OSC_TRUE_LAT_2D			

7.34.6 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_osv_compute_extra` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library `xo_get_msg` (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_osv_compute_extra` CFI function by calling the function of the EO_ORBIT software library `xo_get_code` (see [GEN_SUM]).

Table 94: Error messages of `xo_osv_compute_extra` function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Could not initialise the propagation	No calculation performed	XO_CFI_OSV_COMPUTE_EXTRA_PROPAG_INIT_ERR	0
ERR	The internal data were not initialized	No calculation performed	XO_CFI_OSV_COMPUTE_EXTRA_NOT_INTERNAL_DATA_ERR	1
ERR	Could not propagate the state vector	No calculation performed	XO_CFI_OSV_COMPUTE_EXTRA_PROPAG_ERR	2
ERR	Could not interpolate the state vector	No calculation performed	XO_CFI_OSV_COMPUTE_EXTRA_INTERPOL_ERR	3

7.35 xo_orbit_to_time

7.35.1 Overview

The `xo_orbit_to_time` function converts an orbit-relative time into processing time.

7.35.2 Calling sequence of `xo_orbit_to_time`:

For C programs, the call to `xo_orbit_to_time` is (input parameters are underlined):

```
#include <explorer_orbit.h>
{
    xo_orbit_id  orbit_id = {NULL};
    long time_ref;
    long orbit, second, microsec;
    long status, ierr[XO_NUM_ERR_ORBIT_TO_TIME];
    double  time;

    status = xo_orbit_to_time (&uorbit_id ,
                              &uorbit, &usecond, &umicrosec,
                              &utime_ref,
                              &time,      ierr);

    /* Or, using the run_id */
    long run_id;

    status = xo_orbit_to_time_run (&urun_id ,
                                   &uorbit, &usecond, &umicrosec,
                                   &utime_ref,
                                   &time,      ierr);
}
```

7.35.3 Input parameters

Table 95: Input parameters for *xo_orbit_to_time*

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
orbit	long*		Absolute orbit number		> 0
second	long*		Seconds since ascending node	s	>= 0 <orbital period
microsec	long*		Micro seconds within second	μs	0 =< =< 999999
time_ref	long*		Time reference ID	-	Complete

7.35.4 Output parameters

Table 96: Output parameters for *xo_orbit_to_time*

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit_to_time	long		Main status flag		-1, 0, 1
time	double*		Resulting time	Dedimal days (processing format)	[-18262.0, +36519.0]
ierr[XO_NUM_ERR_ORBIT_TO_TIME]	long		Error status flags		

7.35.5 Warnings and errors

Next table lists the possible error messages that can be returned by the *xo_orbit_to_time* CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_ORBIT software library *xo_get_msg* (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the *xo_orbit_to_time* CFI function by calling the function of the EO_ORBIT software library *xo_get_code* (see [GEN_SUM]).

Table 97: Error messages of xo_orbit_to_time function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong input flag	Computation not performed	XO_CFI_ORBIT_TO_TIME_FLAG_ERR	0
ERR	Input incorrect: negative orbit number	Computation not performed	XO_CFI_ORBIT_TO_TIME_ORB_NUM_1ST_ERR	1
ERR	Orbit Id. is not initialised.	Computation not performed	XO_CFI_ORBIT_TO_TIME_ORBIT_STATUS_ERR	2
ERR	Seconds and microseconds greater than nodal period	Computation not performed	XO_CFI_ORBIT_TO_TIME_SEC_MICROSEC_ERR	3
ERR	Requested orbit less than the first orbital change	Computation not performed	XO_CFI_ORBIT_TO_TIME_ORB_ERR	4
ERR	Input incorrect: negative number of seconds	Computation not performed	XO_CFI_ORBIT_TO_TIME_SEC_ERR	5
ERR	Input incorrect: number of microseconds out of range	Computation not performed	XO_CFI_ORBIT_TO_TIME_MICROSEC_ERR	6
ERR	Error computing time.	Computation not performed	XO_CFI_ORBIT_TO_TIME_COMPUTE_ERR	7
ERR	Could not make a time transformation	Computation not performed	XO_CFI_ORBIT_TO_TIME_TIME_CHANGE_ERR	8
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XO_CFI_ORBIT_TO_TIME_GEO_SAT_ERR	9
ERR	SP3 files do not have orbit information	Computation not performed	XO_CFI_ORBIT_TO_TIME_SP3_ERR	10

7.35.6 Executable Program

The conversion from orbit to time described before can be carried out by the **orbit_to_time** executable program as follows:

```
orbit_to_time -sat satellite_name
               -file Orbit file
               -tref time_ref
               -orb orbit
               -anx anx_time (seconds)
               [-v ]
               [-xl_v ]
               [-xo_v ]
               [-help ]
```

```
[ -show]
{ (-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
  (-tmod time_model -tfile time_file -trid time_reference
    {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) } ) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [**-xl_v**] option for EO_LIB Verbose mode.
- [**-xo_v**] option for EO_ORBIT Verbose mode.
- [**-v**] option for Verbose mode for all libraries (default is Silent).
- [**-show**] displays the inputs of the function and the results.
- Possible values for *satellite_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM_A, SWARM_B, SWARM_C, SENTINEL_1A, SENTINEL_1B, SENTINEL_1C, SENTINEL_2A, SENTINEL_2B, SENTINEL_2C, SENTINEL_3A, SENTINEL_3B, SENTINEL_3C, JASON_CSA, JASON_CSB, METOP_SG_A1, METOP_SG_A2, METOP_SG_A3, METOP_SG_B1, METOP_SG_B2, METOP_SG_B3, SENTINEL_5P, SENTINEL_5, BIOMASS, SAOCOM_CS, FLEX, SEOSAT, GENERIC.
- Possible values for *time_model*: USER, NONE, IERS_B_PREDICTED, IERS_B_RESTITUTED, FOS_PREDICTED, FOS_RESTITUTED, DORIS_PRELIMINARY, DORIS_PRECISE, DORIS_NAVIGATOR, OSF
- Possible values for *time_ref* and *time_reference*: UNDEF, TAI, UTC, UT1, GPS.
- Data for initialising the time references are needed only when using an Orbit Scenario file. For other files the data is optional. In that case, if the initialization parameters are not provided, the time correlations are initialised with the input orbit file.

The inputs needed for time initialization are provided in the last three lines of parameters. Note that only one set of parameters should be introduced:

- TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
 - A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)
- Example:
- ```
orbit_to_time -sat CRYOSAT -file EARTH_EXPLORER_FPO -tref UTC
 -orb 1001 -anx 0.0 -show -v
```

## 7.36 xo\_time\_to\_orbit

### 7.36.1 Overview

The `xo_time_to_orbit` function converts an orbit-relative time into processing time.

### 7.36.2 Calling sequence

For C programs, the call to `xo_time_to_orbit` is (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long time_ref;
 long orbit, second, microsec;
 long status, ierr[XO_NUM_ERR_ORBIT_TO_TIME];
 double time;

 status = xo_time_to_orbit (&orbit_id,
 &time_ref, &time,
 &orbit, &second, µsec,
 ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_time_to_orbit_run (&run_id,
 &time_ref, &time,
 &orbit, &second, µsec,
 ierr);
}
```

### 7.36.3 Input parameters

Table 98: Input parameters for `xo_time_to_orbit` function

| C name   | C type       | Array Element | Description (Reference)                | Unit (Format)                    | Allowed Range        |
|----------|--------------|---------------|----------------------------------------|----------------------------------|----------------------|
| orbit_id | xo_orbit_id* | -             | Structure that contains the orbit data | -                                | -                    |
| time_ref | long*        |               | Time reference ID                      | -                                | Complete             |
| time     | double*      |               | Requested time                         | Decimal days (processing format) | [-18262.0, +36519.0] |

### 7.36.4 Output parameters

Table 99: Output parameters for `xo_time_to_orbit`

| C name                          | C type | Array Element | Description (Reference)      | Unit (Format) | Allowed Range           |
|---------------------------------|--------|---------------|------------------------------|---------------|-------------------------|
| xo_time_to_orbit                | long   |               | Main status flag             |               | -1, 0, 1                |
| orbit                           | long*  |               | Absolute orbit number        |               | > 0                     |
| second                          | long*  |               | Seconds since ascending node | s             | >= 0<br><orbital period |
| microsec                        | long*  |               | Micro seconds within second  | μs            | 0 =<<br>=< 999999       |
| ierr[XO_NUM_ERR_TI ME_TO_ORBIT] | long   |               | Error status flags           |               |                         |

### 7.36.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_time_to_orbit` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_time_to_orbit` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 100: Error messages of xo\_time\_to\_orbit function**

| Error type | Error message                                                        | Cause and impact          | Error Code                                  | Error No |
|------------|----------------------------------------------------------------------|---------------------------|---------------------------------------------|----------|
| ERR        | Wrong input flag                                                     | Computation not performed | XO_CFI_TIME_TO_ORBIT_FLAG_ERR               | 0        |
| ERR        | Orbit Id. was not initialized.                                       | Computation not performed | XO_CFI_TIME_TO_ORBIT_ORBIT_STATUS_ERR       | 1        |
| ERR        | Input incorrect: time out of range.                                  | Computation not performed | XO_CFI_TIME_TO_ORBIT_TIME_ERR               | 2        |
| ERR        | Input time smaller than the first ANX time.                          | Computation not performed | XO_CFI_TIME_TO_ORBIT_BEFORE_RANGE_ERR       | 3        |
| ERR        | Could not compute the orbit number.                                  | Computation not performed | XO_CFI_TIME_TO_ORBIT_COMPUTE_ERR            | 4        |
| ERR        | The current orbit initialization does not allow to compute the time. | Computation not performed | XO_CFI_TIME_TO_ORBIT_WRONG_ORBIT_MODE_ERR   | 5        |
| WARN       | Input time before first orbit.                                       | Computation performed     | XO_CFI_TIME_TO_ORBIT_TIME_BEFORE_RANGE_WARN | 6        |
| WARN       | Input time after first orbit.                                        | Computation performed     | XO_CFI_TIME_TO_ORBIT_TIME_AFTER_RANGE_WARN  | 7        |
| WARN       | Orbit number computed with warnings.                                 | Computation performed     | XO_CFI_TIME_TO_ORBIT_COMPUTE_WARN           | 8        |
| ERR        | Geostationary satellite not allowed for this function.               | Computation not performed | XO_CFI_TIME_TO_ORBIT_GEO_SAT_ERR            | 9        |
| ERR        | SP3 files do not have orbit information                              | Computation not performed | XO_CFI_TIME_TO_ORBIT_SP3_ERR                | 10       |

### **7.36.6 Executable Program**

The conversion from time to orbit described before can be carried out by the **time\_to\_orbit** executable program as follows:

```
time_to_orbit -sat satellite_name
 -file Orbit file
 -tref time_ref
```

```
{-time time (days) | -atime time (CCSDSA format)}
[-v]
[-xl_v]
[-xo_v]
[-help]
[-show]
{(-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
(-tmod time_model -tfile time_file -trid time_reference
{(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) }) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ **-xl\_v** ] option for EO\_LIB Verbose mode.
- [ **-xo\_v** ] option for EO\_ORBIT Verbose mode.
- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CS, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *time\_ref* and *time\_reference*: UNDEF, TAI, UTC, UT1, GPS.
- Data for initialising the time references are needed only when using an Orbit Scenario file. For other files the data are optional. In that case, if the initialization parameters are not provided, the time correlations are initialised with the input orbit file

The inputs needed for time initialization are provided in the last three lines of parameters. Note that only one set of parameters should be introduced:

- TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
- A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)

Example:

```
time_to_orbit -sat CRYOSAT -file EARTH_EXPLORER_FPO -tref UTC
-time -2010.108657407 -show -v
```



## 7.37 xo\_orbit\_info

### 7.37.1 Overview

The `xo_orbit_info` function retrieves from the orbit initialisation, information related with a certain orbit (specified by means of absolute orbit number).

Note: the computation of the parameter Spacecraft Midnight (SMX) is disabled by default. To enable the computation of this parameter the function `xo_orbit_info_configure` must be used (see section 7.38).

### 7.37.2 Calling sequence

For C programs, the call to `xo_orbit_info` is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long abs_orbit;
 long ierr[XO_NUM_ERR_ORBIT_INFO], status;
 double result_vector[XO_ORBIT_INFO_EXTRA_NUM_ELEMENTS];

 status = xo_orbit_info (&orbit_id,
 &abs_orbit,
 result_vector, ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_orbit_info_run (&run_id,
 &abs_orbit,
 result_vector, ierr);
}
```

### 7.37.3 Input parameters

Table 101: Input parameters for xo\_orbit\_info

| C name    | C type       | Array Element | Description (Reference)                 | Unit (Format) | Allowed Range         |
|-----------|--------------|---------------|-----------------------------------------|---------------|-----------------------|
| orbit_id  | xo_orbit_id* | -             | Structure that contains the orbit data. | -             | -                     |
| abs_orbit | long *       |               | Absolute orbit number                   |               | within orbit_id range |

### 7.37.4 Output parameters

Table 102: Output parameters for xo\_orbit\_info

| C name                                           | C type | Array Element                                                                                                                                                                                                   | Description (Reference)        | Unit (Format)            | Allowed Range |
|--------------------------------------------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|--------------------------|---------------|
| xo_orbit_info                                    | long   |                                                                                                                                                                                                                 | Main status flag,              |                          | -1, 0, 1      |
| result_vector [XO_ORBIT_INFO_EXTRA_NUM_ELEMENTS] | double | XO_ORBIT_INFO_EXTRA_REPEAT_CYCLE                                                                                                                                                                                | repeat_cycle <sup>4</sup>      | days                     | >0            |
|                                                  |        | XO_ORBIT_INFO_EXTRA_CYCLE_LENGTH                                                                                                                                                                                | cycle_length <sup>a</sup>      | orbits                   | >0            |
|                                                  |        | XO_ORBIT_INFO_EXTRA_MLST_DRIFT                                                                                                                                                                                  | MLST drift                     | s/day                    |               |
|                                                  |        | XO_ORBIT_INFO_EXTRA_MLST                                                                                                                                                                                        | MLST <sup>5</sup>              | hours                    | >0<br><24     |
|                                                  |        | XO_ORBIT_INFO_EXTRA_ANX_LONG                                                                                                                                                                                    | phasing                        | deg                      | >0<br><360    |
|                                                  |        | XO_ORBIT_INFO_EXTRA_UTC_ANX                                                                                                                                                                                     | UTC time at ascending node     | days (processing format) |               |
|                                                  |        | XO_ORBIT_INFO_EXTRA_POS_X<br>XO_ORBIT_INFO_EXTRA_POS_Y<br>XO_ORBIT_INFO_EXTRA_POS_Z                                                                                                                             | position at ANX                | m                        |               |
|                                                  |        | XO_ORBIT_INFO_EXTRA_VEL_X<br>XO_ORBIT_INFO_EXTRA_VEL_Y<br>XO_ORBIT_INFO_EXTRA_VEL_Z                                                                                                                             | velocity at ANX                | m/s                      |               |
|                                                  |        | XO_ORBIT_INFO_EXTRA_MEAN_KEPL_A<br>XO_ORBIT_INFO_EXTRA_MEAN_KEPL_E<br>XO_ORBIT_INFO_EXTRA_MEAN_KEPL_I<br>XO_ORBIT_INFO_EXTRA_MEAN_KEPL_RA<br>XO_ORBIT_INFO_EXTRA_MEAN_KEPL_W<br>XO_ORBIT_INFO_EXTRA_MEAN_KEPL_M | mean keplerian elements at ANX |                          |               |
|                                                  |        | XO_ORBIT_INFO_EXTRA_OSC_KEPL_A                                                                                                                                                                                  | osculating                     |                          |               |

4 This parameter is only computed if the input orbit\_id was computed either with an Orbit Scenario File using xo\_orbit\_init\_file or with xo\_orbit\_init\_def

5 This parameter is not computed if the input orbit\_id was computed using a Restituted Orbit file or a DORIS file

|                                      |      |                                                                                                                                                                         |                                                                                        |                                    |  |
|--------------------------------------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------------|--|
|                                      |      | XO_ORBIT_INFO_EXTRA_OSC_KEPL_E<br>XO_ORBIT_INFO_EXTRA_OSC_KEPL_I<br>XO_ORBIT_INFO_EXTRA_OSC_KEPL_RA<br>XO_ORBIT_INFO_EXTRA_OSC_KEPL_W<br>XO_ORBIT_INFO_EXTRA_OSC_KEPL_M | keplerian elements<br>ments at ANX                                                     |                                    |  |
|                                      |      | XO_ORBIT_INFO_EXTRA_NODAL_PERIOD                                                                                                                                        | Nodal period                                                                           | s                                  |  |
|                                      |      | XO_ORBIT_INFO_EXTRA_UTC_SMX                                                                                                                                             | UTC time of<br>Spacecraft<br>Midnight (see<br>below the table for<br>more information) | days<br>(processi<br>ng<br>format) |  |
| tierr[XO_ORBIT_I<br>NFO<br>FROM ABS] | long | all                                                                                                                                                                     | Error status flags                                                                     |                                    |  |

Note: the Spacecraft Midnight (SMX) is the time just halfway the nadir day → night transition (the first transition of this type after ANX of the orbit) and the nadir night → day transition (the first transition of this type after the previous day → night transition). Such transitions are times at which the Sun Zenith Angle (SZA, angle satellite-nadir-sun) is 90 deg. In the day → night transition, the SZA is increasing (i.e. there is a transition from SZA<90 to SZA>90). In the night → day transition the SZA is decreasing (i.e. there is a transition from SZA>90 to SZA<90).

### 7.37.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_orbit\_info** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **pv\_utcanx** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 103: Error messages of xo\_orbit\_info function**

| Error type | Error message                                          | Cause and impact                                                                 | Error Code                                   | Error No |
|------------|--------------------------------------------------------|----------------------------------------------------------------------------------|----------------------------------------------|----------|
| ERR        | Orbit Id. No initialised.                              | Computation not performed                                                        | XO_CFI_ORBIT_INFO_ORBIT_INIT_ERR             | 0        |
| ERR        | Orbit out of initialised limits.                       | Computation not performed                                                        | XO_CFI_ORBIT_INFO_OUT_OF_LIMITS_ERR          | 1        |
| ERR        | Could not compute extra results                        | Computation not performed                                                        | XO_CFI_ORBIT_INFO_RESULTS_ERR                | 2        |
| ERR        | Geostationary satellite not allowed for this function. | Computation not performed                                                        | XO_CFI_ORBIT_INFO_GEO_SAT_ERR                | 3        |
| ERR        | Input orbit mode not allowed                           | Computation not performed                                                        | XO_CFI_ORBIT_INFO_ORBIT_MODE_NOT_ALLOWED_ERR | 4        |
| ERR        | Error computing Spacecraft Midnight                    | Computation not performed                                                        | XO_CFI_ORBIT_INFO_SMX_ERR                    | 5        |
| WARN       | No Spacecraft Midnight point found for the orbit       | Computation performed. This is true except for SMX parameter, which is set to 0. | XO_CFI_ORBIT_INFO_NO_SMX_WARN                | 6        |

## 7.38 xo\_orbit\_info\_configure

### 7.38.1 Overview

The `xo_orbit_info_configure` function can be used to activate (or deactivate) the computation of several parameters in `xo_orbit_info` function. Some parameters computed by `xo_orbit_info` require a significant computation time, so their computation is disabled by default and must be activated with `xo_orbit_info_configure` function. The parameters that can be activated currently are the following ones:

- Spacecraft Midnight (SMX)

### 7.38.2 Calling sequence

For C programs, the call to `xo_orbit_info_configure` is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long item, flag;
 long ierr[XO_NUM_ERR_ORBIT_INFO_CONFIGURE], status;

 status = xo_orbit_info_configure (&orbit_id,
 &item, &flag,
 ierr);
}
```

### 7.38.3 Input parameters

Table 104: Input parameters for *xo\_orbit\_info\_configure*

| C name   | C type       | Array Element | Description (Reference)                                          | Unit (Format) | Allowed Range                          |
|----------|--------------|---------------|------------------------------------------------------------------|---------------|----------------------------------------|
| orbit_id | xo_orbit_id* | -             | Structure that contains the orbit data.                          | -             | -                                      |
| Item     | long *       | -             | Item to be activated/deactivated                                 | -             | Orbit items enumeration. (see Table 2) |
| flag     | long *       | -             | Flag that indicates if the item must be activated or deactivated | -             | Orbit flag enumeration (see Table 2)   |

### 7.38.4 Output parameters

Table 105: Output parameters for *xo\_orbit\_info\_configure*

| C name                         | C type | Array Element | Description (Reference) | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|-------------------------|---------------|---------------|
| xo_orbit_info_configure        | long   |               | Main status flag,       |               | -1, 0, 1      |
| xierr[XO_ORBIT_INFO_CONFIGURE] | long   | all           | Error status flags      |               |               |

### 7.38.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_info_configure` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `pv_utcanx` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 106: Error messages of `xo_orbit_info_configure` function**

| Error type | Error message             | Cause and impact          | Error Code                                    | Error No |
|------------|---------------------------|---------------------------|-----------------------------------------------|----------|
| ERR        | Orbit Id not initialised. | Computation not performed | XO_ORBIT_INFO_CONFIGURE_ORBIT_INIT_STATUS_ERR | 0        |
| ERR        | Wrong input option        | Computation not performed | XO_ORBIT_INFO_CONFIGURE_WRONG_OPTION_ERR      | 1        |
| ERR        | Wrong input item          | Computation not performed | XO_ORBIT_INFO_CONFIGURE_WRONG_ITEM_ERR        | 2        |

## 7.39 `xo_orbit_rel_from_abs`

### 7.39.1 Overview

The `xo_orbit_rel_from_abs` function retrieves from an Orbit Scenario File (previously initialised through the *orbit Id*) the relative orbit corresponding to a given absolute orbit number.

### 7.39.2 Calling sequence

For C programs, the call to `xo_orbit_rel_from_abs` is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long abs_orbit, rel_orbit, cycle, phase;
 long ierr[XO_NUM_ERR_ORBIT_REL_FROM_ABS], status;

 status = xo_orbit_rel_from_abs (&orbit_id,
 &abs_orbit,
 &rel_orbit, &cycle,
 &phase, ierr);

 /* Or, using the run_id */
 long run_id;
 status = xo_orbit_rel_from_abs_run (&run_id,
 &abs_orbit,
 &rel_orbit, &cycle,
 &phase, ierr);
}
```



### 7.39.3 Input parameters

Table 107: Input parameters for *xo\_orbit\_rel\_from\_abs*

| C name    | C type       | Array Element | Description (Reference)                | Unit (Format) | Allowed Range         |
|-----------|--------------|---------------|----------------------------------------|---------------|-----------------------|
| orbit_id  | xo_orbit_id* | -             | Structure that contains the orbit data | -             | -                     |
| abs_orbit | long *       |               | Absolute orbit number                  |               | within orbit_id range |

### 7.39.4 Output parameters

Table 108: Output parameters for *xo\_orbit\_rel\_from\_abs*

| C name                      | C type | Array Element | Description (Reference) | Unit (Format) | Allowed Range |
|-----------------------------|--------|---------------|-------------------------|---------------|---------------|
| xo_orbit_rel_from_abs       | long   |               | Main status flag,       |               | -1, 0, 1      |
| rel_orbit                   | long * |               | Relative orbit number   |               |               |
| cycle                       | long * |               | Cycle number            |               |               |
| phase                       | long * |               | Phase number            |               |               |
| ierr[XO_ORBIT_REL_FROM_ABS] | long   | all           | Error status flags      |               |               |

### 7.39.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_orbit\_rel\_from\_abs** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **pv\_utcanx** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 109: Error messages of xo\_orbit\_rel\_from\_abs function**

| Error type | Error message                                                                   | Cause and impact          | Error Code                                     | Error No |
|------------|---------------------------------------------------------------------------------|---------------------------|------------------------------------------------|----------|
| ERR        | Orbit Id. is not initialised.                                                   | Computation not performed | XO_CFI_ORBIT_REL_FROM_ABS_ORBIT_INIT_ERR       | 0        |
| ERR        | The relative orbit could not be computed with the current orbit initialization. | Computation not performed | XO_CFI_ORBIT_REL_FROM_ABS_ORBIT_WRONG_MODE_ERR | 1        |
| ERR        | Wrong input orbit number                                                        | Computation not performed | XO_CFI_ORBIT_REL_FROM_ABS_WRONG_ORBIT          | 2        |

## 7.40 `xo_orbit_abs_from_rel`

### 7.40.1 Overview

The `xo_orbit_abs_from_rel` function retrieves from an Orbit Scenario File (previously initialised through the *orbit Id*) the absolute orbit corresponding to a given relative orbit number and cycle.

### 7.40.2 Calling sequence

For C programs, the call to `xo_orbit_abs_from_rel` is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long abs_orbit, rel_orbit, cycle, phase;
 long ierr[XO_NUM_ERR_ORBIT_ABS_FROM_REL], status;

 status = xo_orbit_abs_from_rel (&orbit_id,
 &rel_orbit, &cycle,
 &abs_orbit, &phase, ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_orbit_abs_from_rel_run (&run_id,
 &rel_orbit, &cycle,
 &abs_orbit, &phase, ierr);
}
```

### 7.40.3 Input parameters

Table 110: Input parameters for *xo\_orbit\_abs\_from\_rel*

| C name    | C type       | Array Element | Description (Reference)                | Unit (Format) | Allowed Range |
|-----------|--------------|---------------|----------------------------------------|---------------|---------------|
| orbit_id  | xo_orbit_id* | -             | Structure that contains the orbit data | -             | -             |
| rel_orbit | long *       |               | Relative orbit number                  |               |               |
| cycle     | long *       |               | Cycle number                           |               |               |

### 7.40.4 Output parameters

Table 111: Output parameters for *xo\_orbit\_abs\_from\_rel*

| C name                      | C type | Array Element | Description (Reference) | Unit (Format) | Allowed Range         |
|-----------------------------|--------|---------------|-------------------------|---------------|-----------------------|
| xo_orbit_abs_from_rel       | long   |               | Main status flag,       |               | -1, 0, 1              |
| abs_orbit                   | long * |               | Absolute orbit number   |               | within orbit_id range |
| phase                       | long * |               | Phase number            |               |                       |
| ierr[XO_ORBIT_ABS_FROM_REL] | long   | all           | Error status flags      |               |                       |

### 7.40.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_orbit_abs_from_rel` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `pv_utcanx` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 112: Error messages of `xo_orbit_abs_from_rel` function**

| Error type | Error message                                                                  | Cause and impact          | Error Code                                             | Error No |
|------------|--------------------------------------------------------------------------------|---------------------------|--------------------------------------------------------|----------|
| ERR        | Orbit Id. is not initialised.                                                  | Computation not performed | XO_CFI_ORBIT_ABS_FR<br>OM_REL_ORBIT_INIT_E<br>RR       | 0        |
| ERR        | The orbit numbers could not be computed with the current orbit initialization. | Computation not performed | XO_CFI_ORBIT_ABS_FR<br>OM_REL_ORBIT_WRON<br>G_MODE_ERR | 1        |
| ERR        | Wrong input relative orbit and/or cycle.                                       | Computation not performed | XO_CFI_ORBIT_ABS_FR<br>OM_REL_INPUT_PARAM<br>ETER_ERR  | 2        |

## 7.41 **xo\_orbit\_abs\_from\_phase**

### 7.41.1 Overview

The **xo\_orbit\_abs\_from\_phase** function retrieves from an Orbit Scenario File (previously initialised through the *orbit Id*) the absolute orbit corresponding to a given phase.

### 7.41.2 Calling sequence

For C programs, the call to **xo\_orbit\_abs\_from\_phase** is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long abs_orbit, rel_orbit, cycle, phase;
 long ierr[XO_NUM_ERR_ORBIT_ABS_FROM_REL], status;

 status = xo_orbit_abs_from_phase (&orbit_id,
 &phase,
 &abs_orbit,
 &rel_orbit, &cycle,
 ierr);

 /* Or, using the run_id */
 long run_id;
 status = xo_orbit_abs_from_phase_run (&run_id,
 &phase,
 &abs_orbit,
 &rel_orbit, &cycle,
 ierr);
}
```

### 7.41.3 Input parameters

Table 113: Input parameters for *xo\_orbit\_abs\_from\_phase*

| C name   | C type       | Array Element | Description (Reference)                | Unit (Format) | Allowed Range |
|----------|--------------|---------------|----------------------------------------|---------------|---------------|
| orbit_id | xo_orbit_id* | -             | Structure that contains the orbit data | -             | -             |
| phase    | long *       |               | Phase number                           |               |               |

### 7.41.4 Output parameters

Table 114: Output parameters for *xo\_orbit\_abs\_from\_phase*

| C name                        | C type | Array Element | Description (Reference) | Unit (Format) | Allowed Range         |
|-------------------------------|--------|---------------|-------------------------|---------------|-----------------------|
| xo_orbit_abs_from_phase       | long   |               | Main status flag,       |               | -1, 0, 1              |
| abs_orbit                     | long * |               | Absolute orbit number   |               | within orbit_id range |
| rel_orbit                     | long * |               | Relative orbit number   |               |                       |
| cycle                         | long * |               | Cycle number            |               |                       |
| ierr[XO_ORBIT_ABS_FROM_PHASE] | long   | all           | Error status flags      |               |                       |

### 7.41.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_orbit\_abs\_from\_phase** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **pv\_utcanx** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 115: Error messages of xo\_orbit\_abs\_from\_phase function**

| Error type | Error message                                                                  | Cause and impact          | Error Code                                       | Error No |
|------------|--------------------------------------------------------------------------------|---------------------------|--------------------------------------------------|----------|
| ERR        | Orbit Id. is not initialised.                                                  | Computation not performed | XO_CFI_ORBIT_ABS_FROM_PHASE_ORBIT_INIT_ERR       | 0        |
| ERR        | The orbit numbers could not be computed with the current orbit initialization. | Computation not performed | XO_CFI_ORBIT_ABS_FROM_PHASE_ORBIT_WRONG_MODE_ERR | 1        |
| ERR        | Wrong input phase number.                                                      | Computation not performed | XO_CFI_ORBIT_ABS_FROM_PHASE_INPUT_PARAMETER_ERR  | 2        |



## 7.42 xo\_osv\_to\_tle

### 7.42.1 Overview

The `xo_osv_to_tle` function generates a TLE by fitting the set of orbit state vectors stored in the `orbit_id`. This set of OSVs are selected from the input `orbit_id` for the orbit/time requested range in the following way:

- If the `orbit_id` mode is `XO_ORBIT_INIT_USER_OSV_LIST_MODE`, `XO_ORBIT_INIT_ROF_MODE` or `XO_ORBIT_INIT_DORIS_MODE`, all the OSVs in the input interval are fitted to the TLE by the Least Square method.
- In other cases (Predicted Orbit files), the input interval is populated with propagated OSV's. These OSV's are fitted to a single TLE by the Least Square method.

### 7.42.2 Calling sequence

For C programs, the call to `xo_osv_to_tle` is (input parameters are underlined, some may be input or output depending on the calling mode):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 xd_tle_rec tle_rec;
 long time_mode, time_ref, orbit0, orbit1;
 double time0, time1;
 long ierr[XO_NUM_ERR_OSV_TO_TLE], status;

 status = xo_osv_to_tle (&orbit_id,
 &time_mode, &time_ref,
 &time0, &time1,
 &orbit0, &orbit1,
 /* outputs */
 &tle_rec,
 ierr);
}
```

### 7.42.3 Input parameters

Table 116: Input parameters for *xo\_osv\_to\_tle*

| C name    | C type       | Array Element | Description (Reference)                                                                                                     | Unit (Format) | Allowed Range                                 |
|-----------|--------------|---------------|-----------------------------------------------------------------------------------------------------------------------------|---------------|-----------------------------------------------|
| orbit_id  | xo_orbit_id* | -             | Structure that contains the orbit data                                                                                      | -             | -                                             |
| time_mode | long         | -             | time/orbit selection mode.<br><br>For the XL_SEL_DEFAULT mode, the whole range of orbits stored in the orbit_id is selected | -             | XO_SEL_TIME<br>XO_SEL_ORBIT<br>XO_SEL_DEFAULT |
| time_ref  | long         | -             | time reference (only used if time_mode is XO_SEL_TIME)                                                                      | -             | Complete                                      |
| time0     | double       | -             | Start time                                                                                                                  | days          | Start validity time for the orbit_id          |
| time1     | double       | -             | Output time                                                                                                                 | days          | Stop validity time for the orbit_id           |
| orbit0    | long         | -             | Start orbit                                                                                                                 | -             | First orbit stored in the orbit_id            |
| orbit1    | long         | -             | Stop orbit                                                                                                                  | -             | Last orbit stored in the orbit_id             |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- time\_mode: See [LIB\_SUM], section 6.2 (Time Initialization)
- time\_ref: See [LIB\_SUM], section 6.2 (Time reference).

### 7.42.4 Output parameters

Table 117: Output parameters for *xo\_osv\_to\_tle*

| C name        | C type     | Array Element | Description (Reference) | Unit (Format) | Allowed Range |
|---------------|------------|---------------|-------------------------|---------------|---------------|
| xo_osv_to_tle | long       | -             | Main status flag        | -             | -1, 0, 1      |
| tle_rec       | xd_tle_rec | -             | TLE record data         | -             | -             |
| ierr          | long       | all           | error array             | -             | -             |

### 7.42.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_osv_to_tle` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 118: Error messages of `xo_osv_to_tle` function**

| Error type | Error message                                         | Cause and impact          | Error Code                                 | Error No |
|------------|-------------------------------------------------------|---------------------------|--------------------------------------------|----------|
| ERR        | Input orbit_id is initialised with an incorrect model | Computation not performed | XO_CFI_OSV_TO_TLE_WRONG_FILE_MODEL_ERR     | 0        |
| ERR        | The input time/orbit interval is not correct          | Computation not performed | XO_CFI_OSV_TO_TLE_WRONG_INPUT_INTERVAL_ERR | 1        |
| ERR        | Error in a time transformation                        | Computation not performed | XO_CFI_OSV_TO_TLE_TIME_TRANS_ERR           | 2        |
| ERR        | Incorrect input time mode                             | Computation not performed | XO_CFI_OSV_TO_TLE_WRONG_TIME_MODEL_ERR     | 3        |
| ERR        | Could not change from EF CS to TEME CS                | Computation not performed | XO_CFI_OSV_TO_TLE_CHANGE_CS_ERR            | 4        |
| ERR        | Could not get keplerian elements for absolute orbit   | Computation not performed | XO_CFI_OSV_TO_TLE_CART_TO_KEPLER_ERR       | 5        |
| ERR        | Error fitting OSVs to compute TLE                     | Computation not performed | XO_CFI_OSV_TO_TLE_FIT_ERR                  | 6        |

## 7.43 xo\_gen\_osf\_create

### 7.43.1 Overview

The `xo_gen_osf_create` CFI function creates a reference Orbit Scenario File (OSF) with one orbit change data structure using only user inputs in the calling interface. This data structure characterizes the reference orbit by means of the following parameters:

- Absolute orbit number
- Relative orbit number
- Cycle number
- Phase number
- Repeat cycle (days)
- Cycle length (orbits)
- Ascending crossing node longitude
- Mean local solar time of the ascending crossing node
- Mean local solar time drift (seconds per day)
- Time of the ascending crossing node (TAI, UTC and UT1)

In order to write files, `xo_gen_osf_create` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

Note: function `xo_gen_osf_create` is deprecated. It is recommended to use `xo_gen_osf_create_2` instead.

### 7.43.2 Calling interface

The calling interface of the `xo_gen_osf_create` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long abs_orbit_number, cycle_number, phase_number,
 repeat_cycle, cycle_length, drift_mode, version_number;
 double anx_long, inclination, mlst_drift, mlst, date;
 char output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_gen_osf_create (&sat_id, &model_id, &time_id,
 &abs_orbit_number,
 &cycle_number, &phase_number,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
```

```
 &inclination, &mlst_drift,
 &mlst, &date,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_osf_create_run (&run_id, &abs_orbit_number,
 &cycle_number, &phase_number,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
 &inclination, &mlst_drift,
 &mlst, &date,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
}
```

### 7.43.3 Input parameters

The `xo_gen_osf_create` CFI function has the following input parameters:

**Table 119: Input parameters of `xo_gen_osf_create` function**

| C name           | C type      | Array Element | Description (Reference)                                                                                                                         | Unit (Format) | Allowed Range |
|------------------|-------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| sat_id           | long *      | -             | Satellite ID                                                                                                                                    | -             | Complete      |
| model_id         | xl_model_id | -             | Model ID                                                                                                                                        | -             | Complete      |
| time_id          | xl_time_id* | -             | Structure that contains the time correlations.                                                                                                  | -             | -             |
| abs_orbit_number | long*       | -             | Orbit number in OSF first orbit change                                                                                                          | -             | >= 1          |
| cycle_number     | long*       | -             | Cycle number in OSF first orbit change                                                                                                          | -             | >= 1          |
| phase_number     | long*       | -             | Phase number in OSF first orbit change                                                                                                          | -             | >= 1          |
| repeat_cycle     | long*       | -             | Repeat cycle of the reference orbit                                                                                                             | days          | >= 1          |
| cycle_length     | long*       | -             | Cycle length of the reference orbit                                                                                                             | orbits        | >= 14         |
| anx_long         | double*     | -             | Reference orbit ascending node crossing longitude                                                                                               | deg           | [-180, 180]   |
| drift_mode       | long*       | -             | Flag to select between drift in mean local solar time and inclination as input characterization of the reference orbit                          | -             | [0,1]         |
| inclination      | double*     | -             | If <i>drift_mode</i> = <i>XO_NOSUNSYNC_INCLINATION</i><br>Inclination of the reference orbit                                                    | deg           | [0,180]       |
| mlst_drift       | double*     | -             | If <i>drift_mode</i> = <i>XO_NOSUNSYNC_DRIFT</i><br>Drift in mean local solar time of the reference orbit:<br>· $MLST[N+1]=MLST[N]+MLST\ drift$ | seconds/day   | TBD           |
| mlst             | double*     | -             | Mean local solar time at ascending node                                                                                                         | decimal hours | [0,24)        |
| date             | double*     | -             | ANX date                                                                                                                                        | decimal days  | -             |
| output_dir       | char*       | -             | Directory where the resulting OSF is written (if empty (i.e. ""), the current directory is used)                                                | -             | -             |

|                 |       |   |                                                                                                                                                                                                               |   |      |
|-----------------|-------|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|------|
| output_filename | char* | - | Output OSF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | - | -    |
| file_class      | char* | - | File class for output Orbit file                                                                                                                                                                              | - | -    |
| version_number  | long* | - | Version number of output Orbit file                                                                                                                                                                           | - | >= 1 |
| fh_system       | char* | - | System field of the output Orbit file fixed header                                                                                                                                                            | - | -    |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Drift mode: mlst\_drift.

This CFI can generate Orbit Scenario Files for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT` and `mlst_drift = 0.0` for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.43.4 Output parameters

The output parameters of the `xo_gen_osf_create` CFI function are:

**Table 120: Output parameters of xo\_gen\_osf\_create function**

| C name                         | C type | Array Element | Description (Reference)                                                                                                                          | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| output_filename                | char*  | -             | Name for output file.<br><br><u>This is only an output parameter when it is empty (i.e. ""; see description of this parameter in Table 119 )</u> | -             | -             |
| ierr[XO_ERR_VECTOR_MAX_LENGTH] | long   | all           | Status vector                                                                                                                                    | -             | -             |

### 7.43.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_osf_create` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_osf_create` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 121: Error messages of `xo_gen_osf_create` function**

| Error type | Error message                | Cause and impact                                                                                                                                                                                | Error code                           | Error No |
|------------|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|----------|
| ERR        | Wrong input values           | Wrong value of one or more of the following input parameters:<br>abs_orbit_number,<br>cycle_number,<br>phase_number,<br>repeat_cycle,<br>cycle_length,<br>mlst<br><br>Computation not performed | XO_CFI_GEN_OSF_CREATE_INPUTS_ERR     | 0        |
| ERR        | Time ID is not initialized   | Time correlations were not initialized.<br><br>Computation not performed                                                                                                                        | XO_CFI_GEN_OSF_CREATE_TIME_INIT_ERR  | 1        |
| ERR        | Memory allocation error      | Memory allocation error for the orbit change data structure<br><br>Computation not performed                                                                                                    | XO_CFI_GEN_OSF_CREATE_ALLOC_ERR      | 2        |
| ERR        | Wrong drift mode             | Wrong drift mode flag value for characterization of non-sun.synchronous orbits<br><br>Computation not performed                                                                                 | XO_CFI_GEN_OSF_CREATE_DRIFT_MODE_ERR | 3        |
| ERR        | Error calculating MLST drift | Error calculating MLST drift from inclination<br><br>Computation not performed                                                                                                                  | XO_CFI_GEN_OSF_CREATE_DRIFT_CALC_ERR | 4        |
| ERR        | Error calculating UTC of ANX | Error calculating the UTC time of the orbit ascending node                                                                                                                                      | XO_CFI_GEN_OSF_CREATE_UTC_CALC_ERR   | 5        |



|      |                                                                                                     |                                                                                         |                                       |    |
|------|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|---------------------------------------|----|
|      |                                                                                                     | Computation not performed                                                               |                                       |    |
| ERR  | Error calculating TAI of ANX                                                                        | Error calculating the TAI time of the orbit ascending node<br>Computation not performed | XO_CFI_GEN_OSF_CREATE_TAI_CALC_ERR    | 6  |
| ERR  | Error calculating UT1 of ANX                                                                        | Error calculating the UT1 time of the orbit ascending node<br>Computation not performed | XO_CFI_GEN_OSF_CREATE_UT1_CALC_ERR    | 7  |
| ERR  | Error calculating the Fixed Header data                                                             | Error getting the data for the Fixed Header.<br>Computation not performed               | XO_CFI_GEN_OSF_CREATE_GET_FH_ERR      | 8  |
| ERR  | Error getting schema                                                                                | Computation not performed                                                               | XO_CFI_GEN_OSF_CREATE_GET_SCHEMA_ERR  | 9  |
| ERR  | Error writing file to disk                                                                          | Error writing the data structure to a file on disk<br>Computation not performed         | XO_CFI_GEN_OSF_CREATE_WRITE_ERR       | 10 |
| WARN | Function <code>xo_gen_osf_create</code> is deprecated. Use <code>xo_gen_osf_create_2</code> instead | Computation performed                                                                   | XO_CFI_GEN_OSF_CREATE_DEPRECATED_WARN | 11 |

### 7.43.6 Executable Program

The `gen_osf_create` executable program can be called from a Unix shell as:

```
gen_osf_create -sat satellite_name
 -orbit abs_orbit_number
 -cyc cycle_number
 -pha phase_number
 -repcyc repeat_cycle(days)
 -cyclen cycle_length(orbits)
 -anx anx_long(deg)
 { -mlstdr mlst_drift | -inc inclination }
 -mlst mlst
 -date anx_date
 [-phinc]
 [-dir dir_name] (current directory by default)
 [-osf output_filename] (default: name generated automatically)
 [-flcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 { (-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) }) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.

- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [-**phinc**] option for `phase_increment`. Default value for `phase_increment` is `xo_NO_PHASE_INCREMENT`. When the option is written, `phase_increment` is `xo_PHASE_INCREMENT`.
- [-**xl\_v**] option for EO\_LIB Verbose mode.
- [-**xo\_v**] option for EO\_ORBIT Verbose mode.
- [-**v**] option for Verbose mode for all libraries (default is Silent).
- [-**show**] displays the inputs of the function and the results.
- Possible values for `satellite_name`: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for `time_model`: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for `ffs_version`: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for `time_reference`: UNDEF, TAI, UTC, UT1, GPS.
- The last three lines of parameters are used to initialize the time references. In order to do this, only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
  - A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)

Example:

```
gen_osf_create -sat CRYOSAT -orbit 1 -cyc 1 -pha 1 -repcyc 2
 -cyclen 29 -inc 92 -mlst 21 -date 790 -anx 130
 -dir ./gen_osf -osf mpl_orb_sc_at_302
 -tai -1100.1 -utc -1100.099595
 -ut1 -1100.0995914352 -gps -1100.0997801
```

## 7.44 xo\_gen\_osf\_create\_2

### 7.44.1 Overview

The `xo_gen_osf_create_2` behaves the same way as `xo_gen_osf_create` with the difference that it supports Mean Local Solar Time non linear parameters as input.

In order to write files, `xo_gen_osf_create_2` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.44.2 Calling interface

The calling interface of the `xo_gen_osf_create_2` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 xo_mission_info mission_info;
 double date;
 xo_ref_orbit_info ref_orbit_info;
 char output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_gen_osf_create_2(&sat_id, &model_id, &time_id,
 &date,
 &mission_info, &ref_orbit_info,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_gen_osf_create_run_2 (&run_id, &date,
 &mission_info, &ref_orbit_info,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
}
```

### 7.44.3 Input parameters

The `xo_gen_osf_create2` CFI function has the following input parameters:

**Table 122: Input parameters of `xo_gen_osf_create_2` function**

| C name          | C type             | Array Element | Description (Reference)                                                                                                                                                                                       | Unit (Format) | Allowed Range |
|-----------------|--------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| sat_id          | long *             | -             | Satellite ID                                                                                                                                                                                                  | -             | Complete      |
| model_id        | xl_model_id        | -             | Model ID                                                                                                                                                                                                      | -             | Complete      |
| time_id         | xl_time_id*        | -             | Structure that contains the time correlations.                                                                                                                                                                | -             | -             |
| date            | double*            | -             | ANX date                                                                                                                                                                                                      | decimal days  | -             |
| mission_info    | xo_mission_info*   | -             | Information about the orbit (equivalent to orbit information in <code>xo_gen_osf_create</code> , see table 119)                                                                                               | -             | -             |
| ref_orbit_info  | xo_ref_orbit_info* | -             | Struct with inputs for the function. The parameters are equivalent to the ones in <code>xo_orbit_init_def</code> (table 119) but also MLST non linear terms can be introduced.                                | -             | -             |
| output_dir      | char*              | -             | Directory where the resulting OSF is written (if empty (i.e. ""), the current directory is used)                                                                                                              | -             | -             |
| output_filename | char*              | -             | Output OSF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | -             | -             |
| file_class      | char*              | -             | File class for output Orbit file                                                                                                                                                                              | -             | -             |
| version_number  | long*              | -             | Version number of output Orbit file                                                                                                                                                                           | -             | >= 1          |
| fh_system       | char*              | -             | System field of the output Orbit file fixed header                                                                                                                                                            | -             | -             |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`.
- Drift mode: `mlst_drift`.

This CFI can generate Orbit Scenario Files for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT`, `mlst_drift = 0.0` and zero MLST non linear parameters for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.44.4 Output parameters

The output parameters of the `xo_gen_osf_create_2` CFI function are:

**Table 123: Output parameters of `xo_gen_osf_create_2` function**

| C name                                      | C type             | Array Element | Description (Reference)                                                                                                                    | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>output_filename</code>                | <code>char*</code> | -             | Name for output file.<br><br>This is only an output parameter when it is empty (i.e. "" ; see description of this parameter in Table 122 ) | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector                                                                                                                              | -             | -             |

### 7.44.5 Warnings and errors

Errors and warnings are the same as for function `xo_gen_osf_create` (see section 192).

## 7.45 xo\_gen\_osf\_append\_orbit\_change

### 7.45.1 Overview

The `xo_gen_osf_append_orbit_change` CFI function appends an orbit change to an existing reference Orbit Scenario File (OSF). The user must provide in the calling interface the name of the existing OSF, the parameters describing the new orbit change and the output file name where the old OSF with the appended orbit change will be written. No output file is generated if the resulting orbit is discontinuous in terms of ascending node longitude, mean local solar time.

Note: function `xo_gen_osf_append_orbit_change` is deprecated. It is recommended to use `xo_gen_osf_append_orbit_change_2` instead.

In order to read and write files, `xo_gen_osf_append_orbit_change` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.45.2 Calling interface

The calling interface of the `xo_gen_osf_append_orbit_change` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_time_id time_id = {NULL};
 xl_model_id model_id = {NULL};
 long abs_orbit_number, repeat_cycle, cycle_length,
 drift_mode, phase_increment, version_number;
 double anx_long, inclination, mlst_drift, mlst;
 char input_filename[XD_MAX_STR],
 output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_gen_osf_append_orbit_change (&sat_id, &model_id,
 &time_id,
 &input_filename,
 &abs_orbit_number,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
 &inclination, &mlst_drift,
 &mlst, &phase_increment,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
```

```
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_osf_append_orbit_change_run (&run_id,
 &input_filename,
 &abs_orbit_number,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
 &inclination, &mlst_drift,
 &mlst, &phase_increment,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
}
```



### 7.45.3 Input parameters

The `xo_gen_osf_append_orbit_change` CFI function has the following input parameters:

**Table 124: Input parameters of `xo_gen_osf_append_orbit_change` function**

| C name           | C type      | Array Element | Description (Reference)                                                                                                                       | Unit (Format) | Allowed Range                                     |
|------------------|-------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------|
| sat_id           | long *      | -             | Satellite ID                                                                                                                                  | -             | Complete                                          |
| model_id         | long *      | -             | Model ID                                                                                                                                      | -             | -                                                 |
| time_id          | xl_time_id* | -             | Structure that contains the time correlations.                                                                                                | -             | -                                                 |
| input_filename   | char*       | -             | Input OSF to which the orbit change is appended                                                                                               |               |                                                   |
| abs_orbit_number | long*       | -             | Absolute orbit number of the new orbit change                                                                                                 | -             | > abs orbit number in input OSF last orbit change |
| repeat_cycle     | long*       | -             | Repeat cycle of the new reference orbit                                                                                                       | days          | >= 1                                              |
| cycle_length     | long*       | -             | Cycle length of the new reference orbit                                                                                                       | orbits        | >= 14                                             |
| anx_long         | double*     | -             | Requested orbit ascending node crossing longitude                                                                                             | deg           | [-180, 180]                                       |
| drift_mode       | long*       | -             | Flag to select between drift in mean local solar time and inclination as input characterization of the reference orbit                        | -             | [0, 1]                                            |
| inclination      | double*     | -             | If <code>drift_mode = XO_NOSUNSYNC_INCLINATION</code><br>Inclination of the reference orbit                                                   | deg           | [0, 180]                                          |
| mlst_drift       | double*     | -             | If <code>drift_mode = XO_NOSUNSYNC_DRIFT</code><br>Drift in mean local solar time of the reference orbit:<br>· $MLST[N+1]=MLST[N]+MLST$ drift | seconds/day   | TBD                                               |
| mlst             | double*     | -             | Mean local solar time at ascending node                                                                                                       | decimal hours | [0,24)                                            |
| phase_increment  | long*       | -             | If 1 then<br>$phase [N+1] = phase [N] + 1$<br>If 0 then<br>$phase [N+1] = phase [N]$                                                          | -             | [0, 1]                                            |

|                 |       |   |                                                                                                                                                                                                           |   |      |
|-----------------|-------|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|------|
| output_dir      | char* | - | Directory where the resulting OSF is written (if empty (i.e. ""), the current directory is used)                                                                                                          | - | -    |
| output_filename | char* | - | Output OSF name<br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | - | -    |
| file_class      | char* | - | File class for output Orbit file                                                                                                                                                                          | - | -    |
| version_number  | long* | - | Version number of output Orbit file                                                                                                                                                                       | - | >= 1 |
| fh_system       | char* | - | System field of the output Orbit file fixed header                                                                                                                                                        | - | -    |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id. See [GEN\_SUM].
- Drift mode: mlst\_drift.
- Phase increment.

This CFI can append orbit changes for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT` and `mlst_drift = 0.0` for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.45.4 Output parameters

The output parameters of the `xo_gen_osf_append_orbit_change` CFI function are:

**Table 125: Output parameters of `xo_gen_osf_append_orbit_change` function**

| C name                         | C type | Array Element | Description (Reference)                                                                                                                       | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| output_filename                | char*  | -             | Name for output file.<br><u>This is only an output parameter when it is empty (i.e. ""); see description of this parameter in Table 124 )</u> | -             | -             |
| ierr[XO_ERR_VECTOR_MAX_LENGTH] | long   | all           | Status vector                                                                                                                                 | -             | -             |

### 7.45.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_osf_append_orbit_change` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_osf_append_orbit_change` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 126: Error messages of `xo_gen_osf_append_orbit_change` function**

| Error type | Error message                      | Cause and impact                                                                                                                                                              | Error code                                | Error No |
|------------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|----------|
| ERR        | Wrong input values                 | Wrong value of one or more of the following input parameters:<br>abs_orbit_number,<br>repeat_cycle,<br>cycle_length,<br>mlst,<br>phase_increment<br>Computation not performed | XO_CFI_GEN_OSF_APPE<br>ND_INPUTS_ERR      | 0        |
| ERR        | Time ID is not initialized         | Time correlations were not initialized.<br>Computation not performed                                                                                                          | XO_CFI_GEN_OSF_APPE<br>ND_TIME_INIT_ERR   | 1        |
| ERR        | Cannot read input OSF              | Computation not performed                                                                                                                                                     | XO_CFI_GEN_OSF_APPE<br>ND_READ_IN_OSF_ERR | 2        |
| WARN       | Very large ANX long jump (%lf deg) | Requested ANX long leads to an orbit discontinuity.<br>Computation performed                                                                                                  | XO_CFI_GEN_OSF_APPE<br>ND_ANX_LONG_WARN   | 3        |
| WARN       | Very large MLST jump (%lf hours)   | Requested MLST leads to an orbit discontinuity.<br>Computation performed                                                                                                      | XO_CFI_GEN_OSF_APPE<br>ND_MLST_WARN       | 4        |
| ERR        | Wrong drift mode                   | Wrong drift mode flag value for characterization of non-sun.synchronous orbits<br>Computation not performed                                                                   | XO_CFI_GEN_OSF_APPE<br>ND_DRIFT_MODE_ERR  | 5        |
| ERR        | Error calculating MLST drift       | Error calculating MLST drift from inclination<br>Computation not performed                                                                                                    | XO_CFI_GEN_OSF_APPE<br>ND_DRIFT_CALC_ERR  | 6        |

|     |                                         |                                                                                             |                                        |    |
|-----|-----------------------------------------|---------------------------------------------------------------------------------------------|----------------------------------------|----|
| ERR | Error calculating UTC of ANX            | Error calculating the UTC time of the orbit ascending node<br><br>Computation not performed | XO_CFI_GEN_OSF_APPE<br>ND_UTC_CALC_ERR | 7  |
| ERR | Error calculating TAI of ANX            | Error calculating the TAI time of the orbit ascending node<br><br>Computation not performed | XO_CFI_GEN_OSF_APPE<br>ND_TAI_CALC_ERR | 8  |
| ERR | Error calculating UT1 of ANX            | Error calculating the UT1 time of the orbit ascending node<br><br>Computation not performed | XO_CFI_GEN_OSF_APPE<br>ND_UT1_CALC_ERR | 9  |
| ERR | Memory allocation error                 | Computation not performed                                                                   | XO_CFI_GEN_OSF_APPE<br>ND_ALLOC_ERR    | 10 |
| ERR | Error calculating the Fixed Header data | Computation not performed                                                                   | XO_CFI_GEN_OSF_APPE<br>ND_GET_FH_ERR   | 11 |
| ERR | Error writing file to disk              | Error writing the data structure to a file on disk<br><br>Computation not performed         | XO_CFI_GEN_OSF_APPE<br>ND_WRITE_ERR    | 12 |

## 7.45.6 Executable Program

The `gen_osf_append_orbit_change` executable program can be called from a Unix shell as:

```
gen_osf_append_orbit_change -sat satellite_name
 -inosf input_filename
 -orbit abs_orbit_number
 -repcyc repeat_cycle(days)
 -cyclen cycle_length(orbits)
 -anx anx_long(deg)
 { -mlstdr mlst_drift | -inc inclination }
 -mlst mlst
 [-phinc]
 [-dir output_dir] (current directory by default)
 [-osf output_filename] (default: name generated automatically)
 [-flcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 { (-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 { (-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) }) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.

- [-**phinc**] option for `phase_increment`. Default value for `phase_increment` is `xo_NO_PHASE_INCREMENT`. When the option is written, `phase_increment` is `xo_PHASE_INCREMENT`.
- [-**xl\_v**] option for EO\_LIB Verbose mode.
- [-**xo\_v**] option for EO\_ORBIT Verbose mode.
- [-**v**] option for Verbose mode for all libraries (default is Silent).
- [-**show**] displays the inputs of the function and the results.
- Possible values for `satellite_name`: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for `time_model`: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for `ffs_version`: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for `time_reference`: UNDEF, TAI, UTC, UT1, GPS.
- The last three lines of parameters are used to initialize the time references. In order to do this, only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
  - A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)

#### Example:

```
gen_osf_append_orbit_change -sat CRYOSAT
 -inosf CS_TEST_MPL_ORBREF_20020301T122001_99999999T999999_0001.EEF
 -orbit 30 -repcyc 366 -cyclen 5344 -anx 129.9986 -mlst 20.90083
 -inc 92 -dir ./gen_osf -osf mpl_orb_sc_at_303
 -tai -1100.1 -utc -1100.099595
 -ut1 -1100.0995914352 -gps -1100.0997801
```

## 7.46xo\_gen\_osf\_append\_orbit\_change\_2

### 7.46.1 Overview

The `xo_gen_osf_append_orbit_change_2` CFI function appends an orbit change to an existing reference Orbit Scenario File (OSF) in the same way as `xo_gen_osf_append_orbit_change`, but allowing the introduction and management of Mean Local Solar Time non linear terms.

In order to read and write files, `xo_gen_osf_append_orbit_change_2` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.46.2 Calling interface

The calling interface of the `xo_gen_osf_append_orbit_change_2` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_time_id time_id = {NULL};
 xl_model_id model_id = {NULL};
 long abs_orbit_number, phase_increment, version_number;
 char input_filename[XD_MAX_STR],
 output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_gen_osf_append_orbit_change_2 (&sat_id, &model_id,
 &time_id,
 &input_filename,
 &abs_orbit_number,
 &ref_orbit_info, &phase_increment,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_gen_osf_append_orbit_change_run_2 (&run_id,
 &input_filename,
 &abs_orbit_number,
 &ref_orbit_info, &phase_increment,
```

```
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
 }
```



### 7.46.3 Input parameters

The `xo_gen_osf_append_orbit_change_2` CFI function has the following input parameters:

**Table 127: Input parameters of `xo_gen_osf_append_orbit_change_2` function**

| C name                        | C type             | Array Element | Description (Reference)                                                                                                                                                                                   | Unit (Format) | Allowed Range                                     |
|-------------------------------|--------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------|
| <code>sat_id</code>           | long *             | -             | Satellite ID                                                                                                                                                                                              | -             | Complete                                          |
| <code>model_id</code>         | long *             | -             | Model ID                                                                                                                                                                                                  | -             | -                                                 |
| <code>time_id</code>          | xl_time_id*        | -             | Structure that contains the time correlations.                                                                                                                                                            | -             | -                                                 |
| <code>input_filename</code>   | char*              | -             | Input OSF to which the orbit change is appended                                                                                                                                                           | -             | -                                                 |
| <code>abs_orbit_number</code> | long*              | -             | Absolute orbit number of the new orbit change                                                                                                                                                             | -             | > abs orbit number in input OSF last orbit change |
| <code>ref_orbit_info</code>   | xo_ref_orbit_info* | -             | Struct with inputs for the function. The parameters are equivalent to the ones in <code>xo_orbit_init_def</code> (see table 124) but also MLST non linear terms can be introduced.                        | -             | -                                                 |
| <code>phase_increment</code>  | long*              | -             | If 1 then<br>$\text{phase}[N+1] = \text{phase}[N] + 1$<br>If 0 then<br>$\text{phase}[N+1] = \text{phase}[N]$                                                                                              | -             | [0, 1]                                            |
| <code>output_dir</code>       | char*              | -             | Directory where the resulting OSF is written (if empty (i.e. ""), the current directory is used)                                                                                                          | -             | -                                                 |
| <code>output_filename</code>  | char*              | -             | Output OSF name<br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | -             | -                                                 |
| <code>file_class</code>       | char*              | -             | File class for output Orbit file                                                                                                                                                                          | -             | -                                                 |
| <code>version_number</code>   | long*              | -             | Version number of output Orbit file                                                                                                                                                                       | -             | >= 1                                              |
| <code>fh_system</code>        | char*              | -             | System field of the output Orbit file fixed header                                                                                                                                                        | -             | -                                                 |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id. See [GEN\_SUM].
- Drift mode: mlst\_drift.
- Phase increment.

This CFI can append orbit changes for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT`, `mlst_drift = 0.0` and zero MLST non linear terms for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.46.4 Output parameters

The output parameters of the `xo_gen_osf_append_orbit_change_2` CFI function are:

**Table 128: Output parameters of `xo_gen_osf_append_orbit_change_2` function**

| C name                         | C type | Array Element | Description (Reference)                                                                                                                       | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| output_filename                | char*  | -             | Name for output file.<br><u>This is only an output parameter when it is empty (i.e. "" ; see description of this parameter in Table 127 )</u> | -             | -             |
| ierr[XO_ERR_VECTOR_MAX_LENGTH] | long   | all           | Status vector                                                                                                                                 | -             | -             |

### **7.46.5 Warnings and errors**

Errors and warning are the same as in the function `xo_gen_osf_append_orbit_change`. See section 203 for details.

## 7.47 xo\_gen\_osf\_change\_repeat\_cycle

### 7.47.1 Overview

Given a reference orbit from an existing OSF and a new target orbit (repeat cycle, cycle length, ascending node longitude and inclination or mean local solar time drift), the **xo\_gen\_osf\_change\_repeat\_cycle** CFI function finds an optimum orbit change such that the target orbit can be reached from the found orbit change. This function will write a new OSF with the found orbit change appended to the content of the old OSF.

In order to read and write files, **xo\_gen\_osf\_change\_repeat\_cycle** function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

Note: function **xo\_gen\_osf\_change\_repeat\_cycle** is deprecated. It is recommended to use **xo\_gen\_osf\_change\_repeat\_cycle\_2** instead.

### 7.47.2 Calling interface

The calling interface of the **xo\_gen\_osf\_change\_repeat\_cycle** CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long abs_orbit_number, search_direction, repeat_cycle,
 cycle_length, drift_mode, phase_increment, version_number;
 double anx_long, inclination, mlst_drift;
 char input_filename[XD_MAX_STR],
 output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_gen_osf_change_repeat_cycle (&sat_id, &model_id,
 &time_id, &input_filename,
 &abs_orbit_number,
 &search_direction,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
 &inclination, &mlst_drift,
 &phase_increment,
 &output_dir, &output_filename,
 &file_class, &version_number,
```

```
 fh_system,
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_osf_change_repeat_cycle_run (&run_id,
 &input_filename, &abs_orbit_number,
 &search_direction,
 &repeat_cycle, &cycle_length,
 &anx_long, &drift_mode,
 &inclination, &mlst_drift,
 &phase_increment,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
}
```

### 7.47.3 Input parameters

The `xo_gen_osf_change_repeat_cycle` CFI function has the following input parameters:

**Table 129: Input parameters of `xo_gen_osf_change_repeat_cycle` function**

| C name           | C type       | Array Element | Description (Reference)                                                                                                                        | Unit (Format) | Allowed Range                                     |
|------------------|--------------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------|
| sat_id           | long *       | -             | Satellite ID                                                                                                                                   | -             | Complete                                          |
| model_id         | xl_model_id* | -             | Model ID                                                                                                                                       | -             | -                                                 |
| time_id          | xl_time_id*  | -             | Structure that contains the time correlations.                                                                                                 | -             | -                                                 |
| input_filename   | char*        | -             | Input OSF to which the orbit change is appended                                                                                                |               |                                                   |
| abs_orbit_number | long*        | -             | Absolute orbit number from which the optimum transition search starts                                                                          | -             | > abs orbit number in input OSF last orbit change |
| search_direction | long*        | -             | Search for optimum transition after or before abs_orbit_number                                                                                 |               | {-1, 1}                                           |
| repeat_cycle     | long*        | -             | Repeat cycle of the new reference orbit                                                                                                        | days          | >= 1                                              |
| cycle_length     | long*        | -             | Cycle length of the new reference orbit                                                                                                        | orbits        | >= 14                                             |
| anx_long         | double*      | -             | Target orbit ascending node crossing longitude                                                                                                 | deg           | [-180, 180]                                       |
| drift_mode       | long*        | -             | Flag to select between drift in mean local solar time and inclination as input characterization of the reference orbit                         | -             | [0, 1]                                            |
| inclination      | double*      | -             | If <code>drift_mode = XO_NOSUNSYNC_INCLINATION</code><br>Inclination of the reference orbit                                                    | deg           | [0, 180]                                          |
| mlst_drift       | double*      | -             | If <code>drift_mode = XO_NOSUNSYNC_DRIFT</code><br>Drift in mean local solar time of the reference orbit:<br>· $MLST[N+1]=MLST[N]+MLST\ drift$ | seconds/day   | TBD                                               |
| phase_increment  | long*        | -             | If 1 then<br>$phase\ [N+1] = phase\ [N] + 1$<br>If 0 then<br>$phase\ [N+1] = phase\ [N]$                                                       | -             | [0, 1]                                            |

|                 |       |   |                                                                                                                                                                                                           |   |      |
|-----------------|-------|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|------|
| output_dir      | char* | - | Directory where the resulting OSF is written (if NULL, the current directory is used)                                                                                                                     | - | -    |
| output_filename | char* | - | Output OSF name<br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | - | -    |
| file_class      | char* | - | File class for output Orbit file                                                                                                                                                                          | - | -    |
| version_number  | long* | - | Version number of output Orbit file                                                                                                                                                                       | - | >= 1 |
| fh_system       | char* | - | System field of the output Orbit file fixed header                                                                                                                                                        | - | -    |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Search direction.
- Drift mode: mlst\_drift.
- Phase increment.

This CFI can append orbit changes for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT` and `mlst_drift = 0.0` for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.47.4 Output parameters

The output parameters of the `xo_gen_osf_change_repeat_cycle` CFI function are:

**Table 130: Output parameters of xo\_gen\_osf\_change\_repeat\_cycle function**

| C name                         | C type | Array Element | Description (Reference)                                                                                                                      | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| output_filename                | char*  | -             | Name for output file.<br><u>This is only an output parameter when it is empty</u> (i.e. ""; see description of this parameter in Table 129 ) | -             | -             |
| ierr[XO_ERR_VECTOR_MAX_LENGTH] | long   | all           | Status vector                                                                                                                                | -             | -             |

### 7.47.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_osf_change_repeat_cycle` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_osf_change_repeat_cycle` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 131: Error messages of `xo_gen_osf_change_repeat_cycle` function**

| Error type | Error message                | Cause and impact                                                                                                                                                                          | Error code                                  | Error No |
|------------|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|----------|
| ERR        | Wrong input values           | Wrong value of one or more of the following input parameters:<br>abs_orbit_number,<br>search_direction,<br>repeat_cycle,<br>cycle_length,<br>phase_increment<br>Computation not performed | XO_CFI_GEN_OSF_CHAN<br>GE_INPUTS_ERR        | 0        |
| ERR        | Time ID is not initialized   | Computation not performed                                                                                                                                                                 | XO_CFI_GEN_OSF_CHAN<br>GE_TIME_INIT_ERR     | 1        |
| ERR        | Cannot read input OSF        | Computation not performed                                                                                                                                                                 | XO_CFI_GEN_OSF_CHAN<br>GE_READ_IN_OSF_ERR   | 2        |
| ERR        | Wrong drift mode             | Wrong drift mode flag value for characterization of non-sun-synchronous orbits<br>Computation not performed                                                                               | XO_CFI_GEN_OSF_CHAN<br>GE_DRIFT_MODE_ERR    | 3        |
| ERR        | Error calculating MLST drift | Error calculating MLST drift from inclination<br>Computation not performed                                                                                                                | XO_CFI_GEN_OSF_CHAN<br>GE_DRIFT_CALC_ERR    | 4        |
| ERR        | No transition found          | No optimum transition found keeping orbit continuity<br>Computation not performed                                                                                                         | XO_CFI_GEN_OSF_CHAN<br>GE_NO_TRANSITION_ERR | 5        |
| ERR        | Error calculating UTC of ANX | Error calculating the UTC time of the orbit ascending node<br>Computation not performed                                                                                                   | XO_CFI_GEN_OSF_CHAN<br>GE_UTC_CALC_ERR      | 6        |
| ERR        | Error calculating TAI of ANX | Error calculating the TAI                                                                                                                                                                 | XO_CFI_GEN_OSF_CHAN                         | 7        |



|      |                                                                                                                               |                                                                                         |                                                 |    |
|------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|-------------------------------------------------|----|
|      |                                                                                                                               | time of the orbit ascending node<br>Computation not performed                           | GE_TAI_CALC_ERR                                 |    |
| ERR  | Error calculating UT1 of ANX                                                                                                  | Error calculating the UT1 time of the orbit ascending node<br>Computation not performed | XO_CFI_GEN_OSF_CHAN<br>GE_UT1_CALC_ERR          | 8  |
| ERR  | Memory allocation error                                                                                                       | Computation not performed                                                               | XO_CFI_GEN_OSF_CHAN<br>GE_ALLOC_ERR             | 9  |
| ERR  | Error calculating the Fixed Header data                                                                                       | Computation not performed                                                               | XO_CFI_GEN_OSF_CHAN<br>GE_GET_FH_ERR            | 10 |
| ERR  | Error writing file to disk                                                                                                    | Error writing the data structure to a file on disk<br>Computation not performed         | XO_CFI_GEN_OSF_CHAN<br>GE_WRITE_ERR             | 11 |
| WARN | Function <code>xo_gen_osf_change_repeat_cycle</code> is deprecated. Use <code>xo_gen_osf_change_repeat_cycle_2</code> instead | Computation performed                                                                   | XO_GEN_OSF_CHANGE_<br>DEPRECATED_WARN           | 12 |
| ERR  | Error in selecting schema                                                                                                     | Computation not performed                                                               | XO_CFI_GEN_OSF_CHAN<br>GE_SELECT_SCHEMA_ER<br>R | 13 |

## 7.47.6 Executable Program

The `gen_osf_change_repeat_cycle` executable program can be called from a Unix shell as:

```
gen_osf_change_repeat_cycle -sat satellite_name
 -inosf input_filename
 -orbit abs_orbit_number
 [-back]
 -repcyc repeat_cycle(days)
 -cyclen cycle_length(orbits)
 -anx anx_long(deg)
 { -mlstdr mlst_drift | -inc inclination }
 [-phinc]
 [-dir output_dir] (current directory by default)
 [-osf output_filename] (default: name generated automatically)
 [-fcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 { (-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) }) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ **-back** ] option for `search_direction`. Default value is `xo_SEARCH_FORWARD`. When the option is written, `search_direction` value is `xo_SEARCH_BACKWARD`.
- [ **-phinc** ] option for `phase_increment`. Default value is `xo_NO_PHASE_INCREMENT`. When the option is written, `phase_increment` value is `xo_PHASE_INCREMENT`.

- [ **-xl\_v** ] option for EO\_LIB Verbose mode.
- [ **-xo\_v** ] option for EO\_ORBIT Verbose mode.
- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for *time\_reference*: UNDEF, TAI, UTC, UT1, GPS.
- The last three lines of parameters are used to initialize the time references. In order to do this, only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
  - A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)

#### Example:

```
gen_osf_change_repeat_cycle -sat CRYOSAT
 -inosf CS_TEST_MPL_ORBREF_20020301T122001_99999999T999999_0001.EEF
 -orbit 400 -repcyc 369 -cyclen 5344 -anx 286.524398 -inc 92
 -dir ./gen_osf -osf mpl_orb_sc_at_304
 -tai -1100.1 -utc -1100.099595
 -ut1 -1100.0995914352 -gps -1100.0997801
```

## 7.48 xo\_gen\_osf\_change\_repeat\_cycle\_2

### 7.48.1 Overview

Performs the same operations as `xo_gen_osf_change_repeat_cycle` but adding support for Mean Local Solar Time non linear drift.

In order to read and write files, `xo_gen_osf_change_repeat_cycle_2` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.48.2 Calling interface

The calling interface of the `xo_gen_osf_change_repeat_cycle_2` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long abs_orbit_number, search_direction, phase_increment,
version_number;
 xo_ref_orbit_info ref_orbit_info;
 char input_filename[XD_MAX_STR],
 output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_gen_osf_change_repeat_cycle_2 (&sat_id, &model_id,
 &time_id, &input_filename,
 &abs_orbit_number,
 &search_direction,
 &ref_orbit_info,
 &phase_increment,
 &output_dir, &output_filename,
 &file_class, &version_number,
 &fh_system,
 ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_gen_osf_change_repeat_cycle_run_2 (&run_id,
```

```
 &input_filename, &abs_orbit_number,
 &search_direction,
 &ref_orbit_info,
 &phase_increment,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
 }
```

### 7.48.3 Input parameters

The `xo_gen_osf_change_repeat_cycle_2` CFI function has the following input parameters:

**Table 132: Input parameters of `xo_gen_osf_change_repeat_cycle_2` function**

| C name           | C type             | Array Element | Description (Reference)                                                                                                                                                                                   | Unit (Format) | Allowed Range                                     |
|------------------|--------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------|
| sat_id           | long *             | -             | Satellite ID                                                                                                                                                                                              | -             | Complete                                          |
| model_id         | xl_model_id*       | -             | Model ID                                                                                                                                                                                                  | -             | -                                                 |
| time_id          | xl_time_id*        | -             | Structure that contains the time correlations.                                                                                                                                                            | -             | -                                                 |
| input_filename   | char*              | -             | Input OSF to which the orbit change is appended                                                                                                                                                           |               |                                                   |
| abs_orbit_number | long*              | -             | Absolute orbit number from which the optimum transition search starts                                                                                                                                     | -             | > abs orbit number in input OSF last orbit change |
| search_direction | long*              | -             | Search for optimum transition after or before abs_orbit_number                                                                                                                                            |               | {-1, 1}                                           |
| ref_orbit_info   | xo_ref_orbit_info* | -             | Struct with inputs for the function. The parameters are equivalent to the ones in <code>xo_gen_osf_change_repeat_cycle</code> (see table 129) but also MLST non linear terms can be introduced.           | -             | -                                                 |
| phase_increment  | long*              | -             | If 1 then<br>phase [N+1] = phase [N] + 1<br>If 0 then<br>phase [N+1] = phase [N]                                                                                                                          | -             | [0, 1]                                            |
| output_dir       | char*              | -             | Directory where the resulting OSF is written (if NULL, the current directory is used)                                                                                                                     | -             | -                                                 |
| output_filename  | char*              | -             | Output OSF name<br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | -             | -                                                 |
| file_class       | char*              | -             | File class for output Orbit file                                                                                                                                                                          | -             | -                                                 |
| version_number   | long*              | -             | Version number of output Orbit file                                                                                                                                                                       | -             | >= 1                                              |
| fh_system        | char*              | -             | System field of the output Orbit                                                                                                                                                                          | -             | -                                                 |

|  |  |                   |  |  |
|--|--|-------------------|--|--|
|  |  | file fixed header |  |  |
|--|--|-------------------|--|--|

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`.
- Search direction.
- Drift mode: `mlst_drift`.
- Phase increment.

This CFI can append orbit changes for both sun-synchronous orbits and quasi-sun-synchronous orbits.

Use `drift_mode=XO_NOSUNSYNC_DRIFT` and `mlst_drift = 0.0` for a sun-synchronous orbit.

Use any other combination for the general case of quasi-sun-synchronous orbit.

### 7.48.4 Output parameters

The output parameters of the `xo_gen_osf_change_repeat_cycle` CFI function are:

**Table 133: Output parameters of `xo_gen_osf_change_repeat_cycle_2` function**

| C name                                      | C type             | Array Element | Description (Reference)                                                                                                                    | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>output_filename</code>                | <code>char*</code> | -             | Name for output file.<br><br>This is only an output parameter when it is empty (i.e. "" ; see description of this parameter in Table 132 ) | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector                                                                                                                              | -             | -             |

### **7.48.5 Warnings and errors**

The warnings and errors are the same as for function `xo_gen_osf_change_repeat_cycle` (see section 216).



## 7.49 xo\_gen\_osf\_add\_drift\_cycle

### 7.49.1 Overview

Given a reference orbit from an existing OSF, a new requested orbit with a particular ascending node longitude and an orbit for the manoeuvre, the `xo_gen_osf_add_drift_cycle` CFI function fits a repeat cycle/cycle length between the manoeuvre orbit (drift start) and the requested orbit (drift stop) such that the longitude of the ascending node at the drift stop orbit be the one requested.

The drift orbit is constrained by a maximum altitude difference with respect to the reference orbit.

Furthermore, if the reference orbit is sun-synchronous, the drift orbit shall also be sun-synchronous; but if the reference orbit is not sun-synchronous, the drift orbit shall keep the inclination constant.

This CFI appends two orbit changes to the existing OSF:

- The first one for the drift manoeuvre
- The second one for restoring the old reference orbit characteristics at the requested ascending node longitude

In order to read and write files, `xo_gen_osf_add_drift_cycle` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

Note: function `xo_gen_osf_add_drift_cycle` is deprecated. It is recommended to use `xo_gen_osf_add_drift_cycle_2` instead.

### 7.49.2 Calling interface

The calling interface of the `xo_gen_osf_add_drift_cycle` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long drift_start_orbit, drift_stop_orbit,
 phase_inc_start, phase_inc_stop, version_number;
 double drift_stop_anx_long, max_altitude_change;
 char input_filename[XD_MAX_STR],
 output_dir[XD_MAX_STR], output_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_gen_osf_add_drift_cycle (&sat_id, &model_id,
 &time_id,
 &input_filename,
 &drift_start_orbit,
 &drift_stop_orbit,
```

```
 &drift_stop_anx_long,
 &max_altitude_change,
 &phase_inc_start, &phase_inc_stop,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_osf_add_drift_cycle_run (&run_id,
 &input_filename,
 &drift_start_orbit,
 &drift_stop_orbit,
 &drift_stop_anx_long,
 &max_altitude_change,
 &phase_inc_start, &phase_inc_stop,
 output_dir, output_filename,
 file_class, &version_number,
 fh_system,
 ierr);
}
```

### 7.49.3 Input parameters

The `xo_gen_osf_add_drift_cycle` CFI function has the following input parameters:

**Table 134: Input parameters of `xo_gen_osf_add_drift_cycle` function**

| C name              | C type       | Array Element | Description (Reference)                                                                                                                             | Unit (Format) | Allowed Range                                     |
|---------------------|--------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------|
| sat_id              | long *       | -             | Satellite ID                                                                                                                                        | -             | Complete                                          |
| model_id            | xl_model_id* | -             | Model ID                                                                                                                                            | -             | -                                                 |
| time_id             | xl_time_id*  | -             | Structure that contains the time correlations.                                                                                                      | -             | -                                                 |
| input_filename      | char*        | -             | Input OSF to which the orbit changes are appended                                                                                                   |               |                                                   |
| drift_start_orbit   | long*        | -             | Absolute orbit number at the drift start                                                                                                            | -             | > abs orbit number in input OSF last orbit change |
| drift_stop_orbit    | long*        | -             | Absolute orbit number at the drift stop                                                                                                             | -             | > drift_start_orbit                               |
| drift_stop_anx_long | double*      | -             | Drift stop orbit ascending node crossing longitude                                                                                                  | deg           | [-180, 180]                                       |
| max_altitude_change | double*      | -             | Maximum variation in altitude between the reference orbit and the drift orbit                                                                       | m             |                                                   |
| phase_inc_start     | long*        | -             | Phase increment at drift start<br>If 1 then<br>phase [N+1] = phase [N] + 1<br>If 0 then<br>phase [N+1] = phase [N]                                  | -             | [0, 1]                                            |
| phase_inc_stop      | long*        | -             | Phase increment at drift stop<br>If 1 then<br>phase [N+1] = phase [N] + 1<br>If 0 then<br>phase [N+1] = phase [N]                                   | -             | [0, 1]                                            |
| output_dir          | char*        | -             | Directory where the resulting OSF is written (if empty (i.e. ""), the current directory is used)                                                    | -             | -                                                 |
| output_filename     | char*        | -             | Output OSF name<br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such | -             | -                                                 |

|                |       |   |                                                       |   |      |
|----------------|-------|---|-------------------------------------------------------|---|------|
|                |       |   | case, the generated name is returned in this variable |   |      |
| file_class     | char* | - | File class for output Orbit file                      | - | -    |
| version_number | long* | - | Version number of output Orbit file                   | - | >= 1 |
| fh_system      | char* | - | System field of the output Orbit file fixed header    | - | -    |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Search direction.
- Drift mode: mlst\_drift.
- Phase increment.

### 7.49.4 Output parameters

The output parameters of the `xo_gen_osf_add_drift_cycle` CFI function are:

**Table 135: Output parameters of `xo_gen_osf_add_drift_cycle` function**

| C name                         | C type | Array Element | Description (Reference)                                                                                                                      | Unit (Format) | Allowed Range |
|--------------------------------|--------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| output_filename                | char*  | -             | Name for output file.<br><u>This is only an output parameter when it is empty (i.e. "";</u> see description of this parameter in Table 134 ) | -             | -             |
| ierr[XO_ERR_VECTOR_MAX_LENGTH] | long   | all           | Status vector                                                                                                                                | -             | -             |

### 7.49.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_osf_add_drift_cycle` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_osf_add_drift_cycle` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 136: Error messages of `xo_gen_osf_add_drift_cycle` function**

| Error | Error message | Cause and impact | Error code | Error |
|-------|---------------|------------------|------------|-------|
|-------|---------------|------------------|------------|-------|

| type |                                         |                                                                                                                                                                              |                                          | No |
|------|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|----|
| ERR  | Wrong input values                      | Wrong value of one or more of the following input parameters:<br>drift_start_orbit,<br>drift_stop_orbit,<br>phase_inc_start,<br>phase_inc_stop,<br>Computation not performed | XO_CFI_GEN_OSF_DRIFT<br>_INPUTS_ERR      | 0  |
| ERR  | Time ID is not initialized              | Computation not performed                                                                                                                                                    | XO_CFI_GEN_OSF_DRIFT<br>_TIME_INIT_ERR   | 1  |
| ERR  | Cannot read input OSF                   | Computation not performed                                                                                                                                                    | XO_CFI_GEN_OSF_DRIFT<br>_READ_IN_OSF_ERR | 2  |
| ERR  | No drift orbit necessary                | Computation not performed                                                                                                                                                    | XO_CFI_GEN_OSF_DRIFT<br>_NO_ADD_ERR      | 3  |
| ERR  | Error calculating inclination           | Error calculating inclination for a no sun-synchronous orbit in order to keep inclination constant during the drift phase<br>Computation not performed                       | XO_CFI_GEN_OSF_DRIFT<br>_INCL_CALC_ERR   | 4  |
| ERR  | No drift orbit found                    | No drift orbit has been found that matches the drift start and stop ANX longitude<br>Computation not performed                                                               | XO_CFI_GEN_OSF_DRIFT<br>_NOT_FOUND_ERR   | 5  |
| ERR  | Error calculating UTC of ANX            | Error calculating the UTC time of the orbit ascending node<br>Computation not performed                                                                                      | XO_CFI_GEN_OSF_DRIFT<br>_UTC_CALC_ERR    | 6  |
| ERR  | Error calculating TAI of ANX            | Error calculating the TAI time of the orbit ascending node<br>Computation not performed                                                                                      | XO_CFI_GEN_OSF_DRIFT<br>_TAI_CALC_ERR    | 7  |
| ERR  | Error calculating UT1 of ANX            | Error calculating the UT1 time of the orbit ascending node<br>Computation not performed                                                                                      | XO_CFI_GEN_OSF_DRIFT<br>_UT1_CALC_ERR    | 8  |
| ERR  | Memory allocation error                 | Computation not performed                                                                                                                                                    | XO_GEN_OSF_DRIFT_ALL<br>OC_ERR           | 9  |
| ERR  | Error calculating the Fixed Header data | Computation not performed                                                                                                                                                    | XO_GEN_OSF_DRIFT_GE<br>T_FH_ERR          | 10 |
| ERR  | Error writing file to disk              | Error writing the data structure to a file on disk                                                                                                                           | XO_CFI_GEN_OSF_DRIFT<br>_WRITE_ERR       | 11 |

---

|  |  |                           |  |  |
|--|--|---------------------------|--|--|
|  |  | Computation not performed |  |  |
|--|--|---------------------------|--|--|

## 7.49.6 Executable Program

The `gen_osf_add_drift_cycle` executable program can be called from a Unix shell as:

```
gen_osf_add_drift_cycle -sat satellite_name
 -inosf input_filename
 -drorb0 drift_start_orbit
 -drorb1 drift_stop_orbit
 -anx drift_stop_anx_long (deg)
 -alt max_altitude_change (m)
 [-phinc0]
 [-phinc1]
 [-dir output_dir] (current directory by default)
 [-osf output_filename] (default: name generated automatically)
 [-flcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 { (-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) }) }
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ **-phinc0** ] option for `phase_inc_start`. Default value is `xo_NO_PHASE_INCREMENT`. When the option is written, `phase_inc_start` value is `xo_PHASE_INCREMENT`.
- [ **-phinc1** ] option for `phase_inc_stop`. Default value is `xo_NO_PHASE_INCREMENT`. When the option is written, `phase_inc_stop` value is `xo_PHASE_INCREMENT`.
- [ **-xl\_v** ] option for `EO_LIB` Verbose mode.

- [ **-xo\_v** ] option for EO\_ORBIT Verbose mode.
- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for *time\_reference*: UNDEF, TAI, UTC, UT1, GPS.
- The last three lines of parameters are used to initialize the time references. In order to do this, only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in `xl_time_ref_init`)
  - A file with time reference data, the time mode, the time reference name and a time range (as in `xl_time_ref_init_file`)

Example:

```
gen_osf_add_drift_cycle -sat CRYOSAT
-inosf CS_TEST_MPL_ORBREF_20020301T122001_99999999T999999_0001.EEF
-drorb0 30 -drorb1 2702 -anx 310 -alt 15000 -dir ./gen_osf
-osf mpl_orb_sc_at_305
-tai -1100.1 -utc -1100.099595 -ut1 -1100.0995914352 -gps -1100.0997801
```



## 7.50 xo\_gen\_rof

### 7.50.1 Overview

The **xo\_gen\_rof** CFI function creates a Restituted Orbit File (ROF) using as input one of the following reference file types:

- Orbit Scenario File
- FOS Predicted Orbit File
- DORIS Navigator File(s).
- FOS Restituted Orbit File
- DORIS Preliminary Orbit File
- DORIS Precise Orbit FileTime of the ascending crossing node (TAI, UTC and UT1)
- The accepted output file types are:
  - FOS Restituted Orbit File
  - DORIS Preliminary Orbit File
  - DORIS Precise Orbit FileTime
  - TLE File

The time interval between consecutive OSVs can be selected by the user by means of a parameter in the calling interface. A flag for precise location of OSVs at “integer intervals” (e.g. every exact minute) is also available. If the reference file and the Restituted Orbit File contain OSVs at the same time, these OSVs will be identical.

In order to read and write files, **xo\_gen\_rof** function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

The value of the tag `Time_Reference` in variable header is set using the input parameter `time_ref`. Note: when using an OSF or Predicted Orbit file, the maximum time interval within the output Restituted orbit file is limited to 2 orbital periods before and after the middle point of the user requested time range.

### 7.50.2 Calling interface

The calling interface of the **xo\_gen\_rof** CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long time_init, time_ref, start_orbit, stop_orbit,
 ref_filetype, rof_filetype, osv_precise, version_number;
 double start_time, stop_time, osv_interval;
 char reference_file[XD_MAX_STR], output_dir[XD_MAX_STR],
 rof_filename[XD_MAX_STR], precise_conf_file[XD_MAX_STR];
```

```
char *file_class, *fh_system;
long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
status = xo_gen_rof(&sat_id, &model_id, &time_id, &time_init,
 &time_ref, &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 &osv_interval, &osv_precise,
 &ref_filetype, reference_file,
 precise_conf_file,
 &rof_filetype, output_dir, rof_filename,
 file_class, &version_number, fh_system,
 /* output */
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_rof_run(&run_id, &time_init, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 &osv_interval, &osv_precise,
 &ref_filetype, reference_file,
 precise_conf_file,
 &rof_filetype,
 output_dir, rof_filename,
 file_class, &version_number, fh_system,
 /* output */
 ierr);
}
```

### 7.50.3 Input parameters

The `xo_gen_rof` CFI function has the following input parameters:

*Table 137: Input parameters of `xo_gen_rof` function*

| C name                    | C type       | Array Element | Description (Reference)                                                                                                                                                                                                                                                                                                        | Unit (Format)         | Allowed Range                                                                                            |
|---------------------------|--------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|----------------------------------------------------------------------------------------------------------|
| <code>sat_id</code>       | long *       | -             | Satellite ID                                                                                                                                                                                                                                                                                                                   | -                     | Complete                                                                                                 |
| <code>model_id</code>     | xl_model_id* | -             | Model ID                                                                                                                                                                                                                                                                                                                       | -                     | -                                                                                                        |
| <code>time_id</code>      | xl_time_id*  | -             | Structure that contains the time correlations.<br><br>NOTE: If <code>time_id</code> is not initialized, then time correlations will be initialized internally using the input reference file.                                                                                                                                  | -                     | -                                                                                                        |
| <code>time_init</code>    | long*        | -             | Flag for selecting the time range of the initialisation.                                                                                                                                                                                                                                                                       | -                     | Select either:<br>· <code>XO_SEL_ORBIT</code><br>· <code>XO_SEL_TIME</code>                              |
| <code>time_ref</code>     | long*        | -             | Time reference ID (see note in the <code>ref_file</code> type field)                                                                                                                                                                                                                                                           | -                     | Select either:<br>· <code>XO_TIME_TAI</code><br>· <code>XO_TIME_UTC</code><br>· <code>XO_TIME_UT1</code> |
| <code>start_time</code>   | double*      | -             | Processing time corresponding to the beginning of the required interval                                                                                                                                                                                                                                                        | Decimal days, MJD2000 | [-18262.0,36524.0]                                                                                       |
| <code>stop_time</code>    | double*      | -             | Processing time corresponding to the end of the required interval                                                                                                                                                                                                                                                              | Decimal days, MJD2000 | [-18262.0,36524.0]                                                                                       |
| <code>start_orbit</code>  | long*        | -             | Orbit number corresponding to the beginning of the required interval                                                                                                                                                                                                                                                           | orbits                | >= 1                                                                                                     |
| <code>stop_orbit</code>   | long*        | -             | Orbit number corresponding to the end of the required interval                                                                                                                                                                                                                                                                 | orbits                | >= 1                                                                                                     |
| <code>osv_interval</code> | double*      | -             | Interval between consecutive state vector.<br><br>This parameter should be coherent with the <code>osv_precise</code> flag (see below). If <code>osv_precise</code> is set to:<br><ul style="list-style-type: none"><li>· <code>xo OSV_PRECISE_MINUTE</code>: <code>osv</code> will be forced to be a multiple of 60</li></ul> | secs                  | >=0                                                                                                      |

|                    |       |   |                                                                                                                                                                                                               |   |                                                                                                                                |
|--------------------|-------|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------------------------------------------------------------------|
|                    |       |   | seconds.<br><ul style="list-style-type: none"> <li>• <code>xo_OSV_PRECISE_TEN_SECONDS</code>: osv will be forced to be a multiple of 10 seconds.</li> </ul>                                                   |   |                                                                                                                                |
| osv_precise        | long* | - | Flag to indicate if state vectors should be placed at exact time locations                                                                                                                                    | - | Complete                                                                                                                       |
| ref_filetype       | long* | - | File type of the input reference file.<br><br>(Note: When generating a ROF file from a DORIS NAVIGATOR file, the input times should be expressed in UTC)                                                      | - | Complete                                                                                                                       |
| reference_filename | char* | - | Reference File name                                                                                                                                                                                           | - |                                                                                                                                |
| precise_conf_file  | char* | - | File with configuration parameters for precise propagator                                                                                                                                                     | - | If it is neither NULL nor "", precise propagation will be used                                                                 |
| rof_filetype       | long* | - | File type of the output reference file                                                                                                                                                                        | - | <code>xo_REF_FILETYPE_ROF</code><br><br><code>xo_REF_FILETYPE_DORIS_PREM</code><br><br><code>xo_REF_FILETYPE_DORIS_PREC</code> |
| output_dir         | char* | - | Directory where the resulting ROF is written (if NULL, the current directory is used)                                                                                                                         | - | -                                                                                                                              |
| rof_filename       | char* | - | Output ROF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | - | -                                                                                                                              |
| file_class         | char* | - | File class for output Restituted file                                                                                                                                                                         | - | -                                                                                                                              |
| version_number     | long* | - | Version number of output Restituted file                                                                                                                                                                      | - | >= 1                                                                                                                           |
| fh_system          | char* | - | System field of the output Restituted file fixed header                                                                                                                                                       | - | -                                                                                                                              |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Time initialisation: time\_init.
- Time reference: time\_ref.
- OSV precise: osv\_precise. See this SUM.
- File type: ref\_filetype and rof\_filetype. See this SUM.

## 7.50.4 Output parameters

The output parameters of the `xo_gen_rof` CFI function are:

**Table 138: Output parameters of `xo_gen_rof` function**

| C name                                      | C type             | Array Element | Description (Reference)                                                                                                                               | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>rof_filename</code>                   | <code>char*</code> | -             | Name for the output file.<br><br><u>This is only an output parameter when it is empty</u> (i.e. "" ; see description of this parameter in Table 137 ) | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector                                                                                                                                         | -             | -             |

## 7.50.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_rof` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_rof` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 139: Error messages of `xo_gen_rof` function**

| Error type | Error message                           | Cause and impact          | Error code                                             | Error No |
|------------|-----------------------------------------|---------------------------|--------------------------------------------------------|----------|
| ERR        | Wrong satellite flag                    | Computation not performed | <code>XO_CFI_GEN_ROF_WRONG_SAT_ID_ERR</code>           | 0        |
| ERR        | Wrong input flag                        | Computation not performed | <code>XO_CFI_GEN_ROF_WRONG_FLAG_ERR</code>             | 1        |
| ERR        | Time ID is not initialized              | Computation not performed | <code>XO_CFI_GEN_ROF_TIME_ID_INIT_ERR</code>           | 2        |
| ERR        | Could not initialise the time reference | Computation not performed | <code>XO_CFI_GEN_ROF_TIME_ID_INITIALIZATION_ERR</code> | 3        |
| ERR        | Cannot initialise orbit ID              | Computation not performed | <code>XO_CFI_GEN_ROF_ORBIT_INIT_FILE_ERR</code>        | 4        |
| ERR        | Cannot initialise the propagator        | Computation not performed | <code>XO_CFI_GEN_ROF_PROPAG_INIT_ERR</code>            | 5        |

|     |                                                                                                   |                                                                   |                                             |    |
|-----|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|---------------------------------------------|----|
| ERR | Could not perform a time <-> orbit transformation                                                 | Computation not performed                                         | XO_CFI_GEN_ROF_TIME_ORBIT_ERR               | 6  |
| ERR | Cannot initialise interpolation                                                                   | Computation not performed                                         | XO_CFI_GEN_ROF_INTERPOL_INIT_ERR            | 7  |
| ERR | Cannot calculate state vector                                                                     | Computation not performed                                         | XO_CFI_GEN_ROF_CALCULATING_STATE_VECTOR_ERR | 8  |
| ERR | Cannot convert time to processing format                                                          | Computation not performed                                         | XO_CFI_GEN_ROF_TIME_ERR                     | 9  |
| ERR | Cannot convert time from processing to external                                                   | Computation not performed                                         | XO_CFI_GEN_ROF_TIME_TO_EXTERNAL_ERR         | 10 |
| ERR | Cannot write ROF file to disk                                                                     | Computation not performed                                         | XO_CFI_GEN_ROF_WRITE_ERR                    | 11 |
| ERR | Error freeing memory                                                                              | Computation not performed                                         | XO_CFI_GEN_ROF_CLOSE_ERR                    | 12 |
| ERR | Memory allocation error                                                                           | Computation not performed                                         | XO_CFI_GEN_ROF_MEMORY_ERR                   | 13 |
| ERR | Error getting fixed header                                                                        | Computation not performed                                         | XO_CFI_GEN_ROF_GET_FIXED_HEADER_ERR         | 14 |
| ERR | OSV interval is not compatible with OSV Precise flag. The OSV Interval will be set to %f seconds. | Computation performed with a different value for the osv_interval | XO_CFI_GEN_ROF_WRONG_INTERVAL_WARN          | 15 |
| ERR | OSV Interval is < 0                                                                               | Computation not performed                                         | XO_CFI_GEN_ROF_WRONG_OSV_INTERVAL_ERR       | 16 |
| ERR | Error reading precise propagator configuration file                                               | Computation not performed                                         | XO_CFI_GEN_ROF_READ_PRECISE_FILE_ERR        | 17 |
| ERR | Time reference ID is not allowed                                                                  | Computation not performed                                         | XO_CFI_GEN_ROF_TIME_ID_NOT_ALLOWED_ERR      | 18 |
| ERR | With TLE Orbit File, the Time instance should be initialized                                      | Computation not performed                                         | XO_CFI_GEN_ROF_TIME_TLE_INITIALIZATION_ERR  | 19 |
| ERR | Error in selecting schema                                                                         | Computation not performed                                         | XO_CFI_GEN_ROF_SELECT_SCHEMA_ERR            | 20 |

## 7.50.6 Executable Program

The `gen_rof` executable program can be called from a Unix shell as:

```
gen_rof -sat satellite_name
 -tref time_ref
 { -tstart start_time -tstop stop_time (decimal days) |
 -tastart start_time -tastop stop_time (CCSDSA format) |
 -ostart start_orbit -ostop stop_orbit (orbits) }
 -osvint osv_interval
 [-osvpre]
 -reftyp ref_file_type
 -ref reference_file
 -roftyp rof_file_type
 [-precfile precise_conf_file] (empty string by default)
 [-dir output_dir] (current directory by default)
 [-rof output_filename] (default: name generated automatically)
 [-fcl file_class] (empty string by default)
 [-vers version] (version= 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 [(-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) })]
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ `-osvpre` ] option for `osv_precise`. Default value is `xo_OSV_PRECISE_NO`. When the option is written, `osv_precise` value is `xo_OSV_PRECISE_MINUTE`.



- [ **-xl\_v** ] option for EO\_LIB Verbose mode.
- [ **-xo\_v** ] option for EO\_ORBIT Verbose mode.
- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *ref\_file\_type*: OSF, POF, DORISNAV, ROF, TLE, DORISPREM, DORISPREC.
- Possible values for *rof\_file\_type*: ROF, DORISPREM, DORISPREC.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for *time\_ref* and *time\_reference*: UNDEF, TAI, UTC, UT1.
- The value of the tag Time\_Reference in variable header is set using the input parameter *time\_ref*.
- Time references need to be initialized only when using OSF as the type of the input reference file. The inputs needed for this issue are provided in the last three lines of parameters. Note that only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in *xl\_time\_ref\_init*)
  - A file with time reference data, the time mode, the time reference name and a time range (as in *xl\_time\_ref\_init\_file*)
- Precise propagation is used if prefile is provided.

Example:

```
gen_rof -sat CRYOSAT -tref TAI -ostart 1000 -ostop 1001
 -osvint 300 -reftyp OSF
 -ref
 CS_TEST_MPL_ORBREF_20020301T122001_99999999T999999_0001.EEF
 -roftyp ROF -dir ./gen_rof/ -rof orb_res_file_at_306
 -tmod FOS_PREDICTED -tfile ./data/test.fpo -trid TAI
 -tm0 0 -tm1 10000
```

## 7.51 xo\_gen\_rof\_prototype

### 7.51.1 Overview

The `xo_gen_rof_prototype` CFI function creates a Restituted Orbit File (ROF) using the following input parameters:

- Date (processing time) and orbit
- Longitude of the ascending node,
- Satellite Repeat Cycle and Cycle Length
- Mean local solar time at ascending node
- Drift of mean local solar time or the inclination

The time interval between consecutive OSVs can be selected by the user by means of a parameter in the calling interface.

A file with the configuration parameters for precise propagator can be introduced. In this case, the numeric propagator is used.

In order to write files, `xo_gen_rof_prototype` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.51.2 Calling interface

The calling interface of the `xo_gen_rof_prototype` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long propag_model, time_ref, time_init_mode;
 long orbit0, drift_mode, irep, icyc, start_orbit, stop_orbit;
 double time0, start_time, stop_orbit, osv_interval;
 double ascmlst_drift, inclination, rlong, ascmlst;
 char output_dir[XD_MAX_STR], rof_filename[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH], version_number;

 status = xo_gen_rof_prototype (&sat_id, &model_id, &time_id,
 &propag_model, &time_ref,
 &time0, &orbit0, &time_init_mode,
 &start_time, &start_orbit,
 &stop_time, &stop_orbit,
 &drift_mode,
```

```
 &ascmlst_drift, &inclination,
 &irep, &icyc, &rlong, &ascmlst,
 &osv_interval
 output_dir, rof_filename,
 file_class, &version_number,
fh_system,
 /* output */
 ierr);
/* Or, using the run_id */
long run_id;

status = xo_gen_rof_prototype_run (&run_id,
 &propag_model, &time_ref,
 &time0, &orbit0, &time_init_mode,
 &start_time, &start_orbit
 &stop_time, &stop_orbit,
 &drift_mode,
 &ascmlst_drift, &inclination,
 &irep, &icyc, &rlong, &ascmlst,
 &osv_interval
 output_dir, rof_filename,
 file_class, &version_number,
fh_system,
 /* output */
 ierr);
}
```

### 7.51.3 Input parameters

The `xo_gen_rof_prototype` CFI function has the following input parameters:

**Table 140: Input parameters of `xo_gen_rof_prototype` function**

| C name         | C type       | Array Element | Description (Reference)                                                                                                | Unit (Format)                     | Allowed Range                                     |
|----------------|--------------|---------------|------------------------------------------------------------------------------------------------------------------------|-----------------------------------|---------------------------------------------------|
| sat_id         | long *       | -             | Satellite ID                                                                                                           | -                                 | Complete                                          |
| model_id       | xl_model_id* | -             | Model ID                                                                                                               | -                                 | -                                                 |
| time_id        | xl_time_id*  | -             | Structure that contains the time correlations.                                                                         | -                                 | -                                                 |
| propag_model   | long*        | -             | Propagation model ID                                                                                                   | -                                 | Complete                                          |
| time_ref       | long*        | -             | Time reference ID                                                                                                      | -                                 | Complete                                          |
| time0          | double*      | -             | Reference time                                                                                                         | Decimal days (Processing for mat) | [-18262.0,36524.0]                                |
| orbit0         | long*        | -             | Absolute orbit number of the reference orbit                                                                           | -                                 | >= 0                                              |
| time_init_mode | long*        | -             | Flag for selecting the time range of the initialisation.                                                               | -                                 | Select either:<br>· XO_SEL_ORBIT<br>· XO_SEL_TIME |
| start_time     | double*      | -             | Processing time corresponding to the beginning of the required interval                                                | Decimal days, MJD2000             | [-18262.0,36524.0]                                |
| start_orbit    | long*        | -             | Orbit number corresponding to the beginning of the required interval                                                   | orbits                            | >= 1                                              |
| stop_time      | double*      | -             | Processing time corresponding to the end of the required interval                                                      | Decimal days, MJD2000             | [-18262.0,36524.0]                                |
| stop_orbit     | long*        | -             | Orbit number corresponding to the end of the required interval                                                         | orbits                            | >= 1                                              |
| drift_mode     | long*        | -             | Flag to select between drift in mean local solar time and inclination as input characterization of the reference orbit | -                                 | Complete                                          |
| ascmlst_drift  | double*      | -             | If <code>drift_mode = XO_NOSUNSYNC_MLST</code><br>Drift in mean local solar time of the reference orbit                | seconds/day                       | TBD                                               |
| inclination    | double*      | -             | If <code>drift_mode = XO_NOSUNSYNC_INCLINATION</code>                                                                  | deg                               | [0,180]                                           |

|                |         |   | Inclination of the reference orbit                                                                                                                                                                            |        |         |
|----------------|---------|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|---------|
| irep           | long *  | - | Repeat cycle of the reference orbit<br><br>The actual repeat cycle is calculated as per definition included in [MCD].                                                                                         | days   | > 0     |
| icyc           | long *  | - | Cycle length of the reference orbit                                                                                                                                                                           | orbits | > 0     |
| rlong          | double* | - | Geocentric longitude of the [Earth fixed] ascending node (Earth fixed CS)                                                                                                                                     | deg    | [0,360) |
| ascmlst        | double* | - | Mean local solar time at ascending node                                                                                                                                                                       | hours  | [0, 24) |
| osv_interval   | double* | - | Interval between consecutive state vector                                                                                                                                                                     | secs   | >=0     |
| output_dir     | char*   | - | Directory where the resulting ROF is written (if NULL, the current directory is used)                                                                                                                         | -      | -       |
| rof_filename   | char*   | - | Output ROF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | -      | -       |
| file_class     | char*   | - | File class for output Restituted file                                                                                                                                                                         | -      | -       |
| version_number | long*   | - | Version number of output Restituted file                                                                                                                                                                      | -      | >= 1    |
| fh_system      | char*   | - | System field of the output Restituted file fixed header                                                                                                                                                       | -      | -       |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Time initialisation: time\_init.
- Time reference: time\_ref.
- Drift Mode: drift\_mode.

## 7.51.4 Output parameters

The output parameters of the `xo_gen_rof_prototype` CFI function are:

**Table 141: Output parameters of `xo_gen_rof_prototype` function**

| C name                                      | C type             | Array Element | Description (Reference)                                                                                                                       | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>rof_filename</code>                   | <code>char*</code> | -             | Name for the output file.<br><br>This is only an output parameter when it is empty (i.e. "" ; see description of this parameter in Table 143) | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector                                                                                                                                 | -             | -             |

## 7.51.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_rof_prototype` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_rof_prototype` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 142: Error messages of `xo_gen_rof_prototype` function**

| Error type | Error message                 | Cause and impact          | Error code                                                | Error No |
|------------|-------------------------------|---------------------------|-----------------------------------------------------------|----------|
| ERR        | Wrong satellite flag          | Computation not performed | <code>XO_CFI_GEN_ROF_PROTOTYPE_WRONG_SAT_ID_ERR</code>    | 0        |
| ERR        | Time ID is not initialized    | Computation not performed | <code>XO_CFI_GEN_ROF_PROTOTYPE_TIME_ID_ERR</code>         | 1        |
| ERR        | Wrong input flag              | Computation not performed | <code>XO_CFI_GEN_ROF_PROTOTYPE_WRONG_FLAG_ERR</code>      | 2        |
| ERR        | Cannot initialise propagator  | Computation not performed | <code>XO_CFI_GEN_ROF_PROTOTYPE_PROPAG_INIT_DEF_ERR</code> | 3        |
| ERR        | Cannot calculate state vector | Computation not performed | <code>XO_CFI_GEN_ROF_PROTOTYPE_CALCULATIN</code>          | 3        |

|     |                                                 |                           |                                               |    |
|-----|-------------------------------------------------|---------------------------|-----------------------------------------------|----|
|     |                                                 |                           | G_STATE_VECTOR_ERR                            |    |
| ERR | Cannot convert time in processing reference     | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_TIME_ERR             | 5  |
| ERR | Cannot convert time from processing to external | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_TIME_TO_EXTERNAL_ERR | 6  |
| ERR | Error freeing memory                            | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_CLOSE_ERR            | 7  |
| ERR | Error creating the fixed header                 | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_GET_FH_ERR           | 8  |
| ERR | Memory allocation error                         | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_MEMORY_ERR           | 9  |
| ERR | Cannot write ROF XML file                       | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_WRITE_ERR            | 10 |
| ERR | Error in selecting schema                       | Computation not performed | XO_CFI_GEN_ROF_PROTOTYPE_SELECT_SCHEMA_ERR    | 11 |

## 7.52 xo\_gen\_pof

### 7.52.1 Overview

The `xo_gen_pof` CFI function creates a Predicted Orbit File (POF) with one state vector per orbit using as input one of the following reference file types:

- Orbit Scenario File
- FOS Predicted Orbit File
- DORIS Navigator File(s).
- FOS Restituted Orbit File
- DORIS Preliminary Orbit File
- DORIS Precise Orbit FileTime of the ascending crossing node (TAI, UTC and UT1)
- TLE File

The location of the state vector within the orbit can be selected by the user by means of a parameter in the calling interface. If the reference file and the Predicted Orbit File contain OSVs at the same time, these OSVs will be identical.

A file with the configuration parameters for precise propagator can be introduced. In this case, the numeric propagator is used.

In order to read and write files, `xo_gen_pof` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

The value of the tag `Time_Reference` in variable header is set using the input parameter `time_ref`.

### 7.52.2 Calling interface

The calling interface of the `xo_gen_pof` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 long time_init, time_ref, start_orbit, stop_orbit,
 ref_filetype, pof_filetype, version_number;
 double start_time, stop_time, osv_location;
 char reference_file[XD_MAX_STR], output_dir[XD_MAX_STR],
 pof_filename[XD_MAX_STR], precise_conf_file[XD_MAX_STR];
 char *file_class, *fh_system;
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_gen_pof(&sat_id, &model_id, &time_id,
 &time_init, &time_ref,
 &start_time, &stop_time,
```



```
 &start_orbit, &stop_orbit, &osv_location,
 &ref_filetype, reference_file,
 precise_conf_file,
 &pof_filetype, output_dir,
pof_filename,
 file_class, &version_number, fh_system,
/* output */
 ierr);

/* Or, using the run_id */
long run_id;
status = xo_gen_pof_run(&run_id,
 &time_init, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 &osv_location,
 &ref_filetype, reference_file,
 precise_conf_file,
&pof_filetype, output_dir,
 pof_filename,
 file_class, &version_number, fh_system,
/* output */
 ierr);
}
```

### 7.52.3 Input parameters

The `xo_gen_pof` CFI function has the following input parameters:

**Table 143: Input parameters of `xo_gen_pof` function**

| C name       | C type      | Array Element | Description (Reference)                                                                                                                                                         | Unit (Format)         | Allowed Range                                                     |
|--------------|-------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|-------------------------------------------------------------------|
| sat_id       | long *      | -             | Satellite ID                                                                                                                                                                    | -                     | Complete                                                          |
| model_id     | xl_model_id | -             | Model ID                                                                                                                                                                        | -                     | Complete                                                          |
| time_id      | xl_time_id* | -             | Structure that contains the time correlations.<br><br>NOTE: If time_id is not initialized, then time correlations will be initialized internally using the input reference file | -                     | -                                                                 |
| time_init    | long*       | -             | Flag for selecting the time range of the initialisation.                                                                                                                        | -                     | Select either:<br>· XO_SEL_ORBIT<br>· XO_SEL_TIME                 |
| time_ref     | long*       | -             | Time reference ID. (See note in the ref_filetype field)                                                                                                                         | -                     | Select either:<br>· XO_TIME_TAI<br>· XO_TIME_UTC<br>· XO_TIME_UT1 |
| start_time   | double*     | -             | Processing time corresponding to the beginning of the required interval                                                                                                         | Decimal days, MJD2000 | [-18262.0,36524.0]                                                |
| stop_time    | double*     | -             | Processing time corresponding to the end of the required interval                                                                                                               | Decimal days, MJD2000 | [-18262.0,36524.0]                                                |
| start_orbit  | long*       | -             | Orbit number corresponding to the beginning of the required interval                                                                                                            | orbits                | >= 1                                                              |
| stop_orbit   | long*       | -             | Orbit number corresponding to the end of the required interval                                                                                                                  | orbits                | >= 1                                                              |
| osv_location | double*     | -             | Location of the state vector within the orbit                                                                                                                                   | secs                  | >=0<br>< 1 nodal period                                           |
| ref_filetype | long*       | -             | File type of the input reference file.<br><br>(Note: When generating a POF file from a DORIS NAVIGATOR file, the input times should be expressed in UTC)                        | -                     | Complete                                                          |

|                    |       |   |                                                                                                                                                                                                               |   |                                                                    |
|--------------------|-------|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------|
| reference_filename | char* | - | Reference File name                                                                                                                                                                                           | - |                                                                    |
| precise_conf_file  | char* | - | File with precise propagator configuration                                                                                                                                                                    | - | If it is not neither NULL nor "", precise propagation will be used |
| pof_filetype       | long* | - | File type of the output reference file                                                                                                                                                                        | - | XO_REF_FILETYPE<br>PE_POF                                          |
| output_dir         | char* | - | Directory where the resulting POF is written (if NULL, the current directory is used)                                                                                                                         | - | -                                                                  |
| pof_filename       | char* | - | Output POF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | - | -                                                                  |
| file_class         | char* | - | File class for output Predicted file                                                                                                                                                                          | - | -                                                                  |
| version_number     | long* | - | Version number of output Predicted file                                                                                                                                                                       | - | >= 1                                                               |
| fh_system          | char* | - | System field of the output Predicted file fixed header                                                                                                                                                        | - | -                                                                  |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Time initialisation: time\_init.
- Time reference: time\_ref.
- File type: ref\_filetype and pof\_filetype. See section 6.2 in this SUM.

### 7.52.4 Output parameters

The output parameters of the `xo_gen_pof` CFI function are:

**Table 144: Output parameters of `xo_gen_pof` function**

| C name              | C type | Array Element | Description (Reference)                                                                                                                              | Unit (Format) | Allowed Range |
|---------------------|--------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| pof_filename        | char*  | -             | Name for the output file.<br><br><u>This is only an output parameter when it is empty</u> (i.e. ""); see description of this parameter in Table 140) | -             | -             |
| ierr[XO_ERR_VECTOR_ | long   | all           | Status vector                                                                                                                                        | -             | -             |

|             |  |  |  |  |  |
|-------------|--|--|--|--|--|
| MAX_LENGTH] |  |  |  |  |  |
|-------------|--|--|--|--|--|

### 7.52.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_gen\_pof** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xo\_gen\_pof** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 145: Error messages of xo\_gen\_pof function**

| Error type | Error message                           | Cause and impact          | Error code                                  | Error No |
|------------|-----------------------------------------|---------------------------|---------------------------------------------|----------|
| ERR        | Wrong satellite flag                    | Computation not performed | XO_CFI_GEN_POF_WRONG_SAT_ID_ERR             | 0        |
| ERR        | Wrong input flag                        | Computation not performed | XO_CFI_GEN_POF_WRONG_FLAG_ERR               | 1        |
| ERR        | Time ID is not initialized              | Computation not performed | XO_CFI_GEN_POF_TIME_INIT_ERR                | 2        |
| ERR        | Could not initialise the time reference | Computation not performed | XO_CFI_GEN_POF_TIME_INITIALIZATION_ERR      | 3        |
| ERR        | Cannot initialise orbit                 | Computation not performed | XO_CFI_GEN_POF_ORBIT_INIT_FILE_ERR          | 4        |
| ERR        | Cannot initialise propagation           | Computation not performed | XO_CFI_GEN_POF_PROPAG_INIT_ERR              | 5        |
| ERR        | Cannot initialise interpolation         | Computation not performed | XO_CFI_GEN_POF_INTERPOL_INIT_ERR            | 6        |
| ERR        | Wrong interpol initialisation           | Computation not performed | XO_CFI_GEN_POF_INTERPOL1_ERR                | 7        |
| ERR        | Cannot calculate state vector           | Computation not performed | XO_CFI_GEN_POF_CALCULATING_STATE_VECTOR_ERR | 8        |
| ERR        | Error freeing memory                    | Computation not performed | XO_CFI_GEN_POF_CLOSE_ERR                    | 9        |
| ERR        | Time transformation error               | Computation not performed | XO_CFI_GEN_POF_TIME_TRANS_ERR               | 10       |
| ERR        | Memory allocation error                 | Computation not performed | XO_CFI_GEN_POF_MEMORY_ERR                   | 11       |
| ERR        | Error creating the fixed header         | Computation not performed | XO_CFI_GEN_POF_GET_FH_ERR                   | 12       |
| ERR        | Error writing POF file to disk          | Computation not performed | XO_CFI_GEN_POF_WRITE_ERR                    | 13       |

|     |                                                          |                           | TE_ERR                                 |    |
|-----|----------------------------------------------------------|---------------------------|----------------------------------------|----|
| ERR | Error reading configuration file for precise propagation | Computation not performed | XO_CFI_GEN_POF_READ_PPRECISE_FILE_ERR  | 14 |
| ERR | Error converting time to orbit or orbit to time          | Computation not performed | XO_CFI_GEN_POF_ORBIT_TIME_ERR          | 15 |
| ERR | Time reference ID is not allowed                         | Computation not performed | XO_CFI_GEN_POF_TIME_ID_NOT_ALLOWED_ERR | 16 |

## 7.52.6 Executable Program

The `gen_pof` executable program can be called from a Unix shell as:

```
gen_pof -sat satellite_name
 -tref time_ref
 { -tstart start_time -tstop stop_time (decimal days) |
 -tastart start_time -tastop stop_time (CCSDSA format) |
 -ostart start_orbit -ostop stop_orbit (orbits) }
 -osvloc osv_location (secs)
 -reftyp ref_file_type
 -ref reference_file
 -pof typ pof_file_type
 [-precf file precise_conf_file] (empty string by default)
 [-dir output_dir] (current directory by default)
 [-pof output_filename] (default: name generated automatically)
 [-fcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [-with_xslt] (add xslt reference with default style sheet)
 [(-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) })]
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ `-xl_v` ] option for EO\_LIB Verbose mode.
- [ `-xo_v` ] option for EO\_ORBIT Verbose mode.

- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *ref\_file\_type* and *pof\_file\_type*: OSF, POF, DORISNAV, ROF, TLE, DORISPREM, DORISPREC.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for *time\_ref* and *time\_reference*: UNDEF, TAI, UTC, UT1.
- The value of the tag *Time\_Reference* in variable header is set using the input parameter *time\_ref*.
- Time references need to be initialized only when using OSF as the type of the input reference file. The inputs needed for this issue are provided in the last three lines of parameters. Note that only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in *xl\_time\_ref\_init*)
  - A file with time reference data, the time mode, the time reference name and a time range (as in *xl\_time\_ref\_init\_file*)
- Precise propagation is used if prefile is provided.

#### Example:

```
gen_pof -sat CRYOSAT -tref TAI -ostart 13 -ostop 14 -osvloc 0 -reftyp OSF
 -ref CS_TEST_MPL_ORBREF_20020301T122001_99999999T999999_0001.EEF
-poftyp POF -dir ./gen_pof/ -pof orb_pre_file_at_307
 -tai -1100.1 -utc -1100.099595 -ut1 -1100.0995914352
 -gps -1100.0997801
```

## 7.53 xo\_gen\_oef

### 7.53.10v erview

The `xo_gen_oef` CFI function creates an Orbit Event by merging an Orbit Scenario file (OSF) and a Predicted Orbit File.

In order to read and write files, `xo_gen_oef` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

**Orbit Event File is deprecated and is only supported for Cryosat mission.**

### 7.53.2 Calling interface

The calling interface of the `xo_gen_oef` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 char oef[XD_MAX_STR], osf[XD_MAX_STR],
 pof[XD_MAX_STR];
 char *file_class, *fh_system;
 long version_number;
 long status, ierr[XO_NUM_ERR_GEN_OEF];
 status = xo_gen_oef(&oef, &osf, &pof,
 file_class, &version_number, fh_system,
 /* output */
 ierr);
}
```

### 7.53.3 Input parameters

The `xo_gen_oef` CFI function has the following input parameters:

**Table 146: Input parameters of xo\_gen\_oef function**

| C name | C type | Array Element | Description (Reference)                                                                                                                                                                                    | Unit (Format) | Allowed Range |
|--------|--------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| oef    | char[] | -             | Output OEF name.<br>If empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable | -             | -             |
| osf    | char*  | -             | Orbit Scenario File name                                                                                                                                                                                   | -             | -             |
| pof    | char*  | -             | Predicted Orbit File name                                                                                                                                                                                  | -             | -             |



|                |       |   |                                                                             |   |      |
|----------------|-------|---|-----------------------------------------------------------------------------|---|------|
| file_class     | char* | - | File class for output file (dummy in the current version)                   | - | -    |
| version_number | long* | - | Version number of output file (dummy in the current version)                | - | >= 1 |
| fh_system      | char* | - | System field of the output file fixed header (dummy in the current version) | - | -    |

### 7.53.4 Output parameters

The output parameters of the `xo_gen_oef` CFI function are:

**Table 147: Output parameters of `xo_gen_oef` function**

| C name                  | C type | Array Element | Description (Reference)                                                                                                                          | Unit (Format) | Allowed Range |
|-------------------------|--------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>xo_gen_oef</code> | long   | -             | Main status flag                                                                                                                                 | -             | -1, 0, +1     |
| <code>oef</code>        | char*  | -             | Name for the output file.<br><u>This is only an output parameter when it is empty (i.e. ""); see description of this parameter in Table 146)</u> | -             | -             |
| <code>ierr[]</code>     | long   | all           | Status vector                                                                                                                                    | -             | -             |

### 7.53.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_oef` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_oef` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 148: Error messages of `xo_gen_oef` function**

| Error type | Error message                          | Cause and impact          | Error code                   | Error No |
|------------|----------------------------------------|---------------------------|------------------------------|----------|
| ERR        | Could not open output file for writing | Computation not performed | XO_CFI_GEN_OEF_OPEN_FILE_ERR | 0        |
| ERR        | Could not copy the Orbit Scenario file | Computation not performed | XO_CFI_GEN_OEF_COPY_FILE_ERR | 1        |
| ERR        | Could not copy                         | Computation not performed | XO_CFI_GEN_OEF_COPY          | 2        |

|      |                                                              |                                                                                                 |                                     |   |
|------|--------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-------------------------------------|---|
|      | "List_of_OSVs" in the output file                            |                                                                                                 | _NODE_ERR                           |   |
| ERR  | Could not close output file                                  | Computation not performed                                                                       | XO_CFI_GEN_OEF_CLOS<br>E_ERR        | 3 |
| ERR  | Error reading the fixed header from the Orbit Scenario file  | Computation not performed                                                                       | XO_CFI_GEN_OEF_READ<br>_OSF_ERR     | 4 |
| ERR  | Error reading the fixed header from the Predicted Orbit file | Computation not performed                                                                       | XO_CFI_GEN_OEF_READ<br>_POF_ERR     | 5 |
| ERR  | Could not write the Orbit Event file                         | Computation not performed                                                                       | XO_CFI_GEN_OEF_WRITE<br>_ERR        | 6 |
| ERR  | Could not get the current time                               | Computation not performed                                                                       | XO_CFI_GEN_OEF_CURR<br>ENT_TIME_ERR | 7 |
| WARN | Cannot write schema in the file                              | Computation performed.<br>The output file does not contain the schema reference in the root tag | XO_CFI_GEN_OEF_SET_S<br>HEMA_WARN   | 8 |

### 7.53.6 Executable Program

The `gen_oeff` executable program can be called from a Unix shell as:

```
gen_oeff -osf name of the orbit scenario file
 -pof
 [-oeff] (default: name generated automatically)
 [-flcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-oeffs ffs_version] (Earth Observation File Format Standard Version)
 [-xd_v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ -xl\_v ] option for EO\_LIB Verbose mode.
- [ -xo\_v ] option for EO\_ORBIT Verbose mode.
- [ -v ] option for Verbose mode for all libraries (default is Silent).
- [ -show ] displays the inputs of the function and the results.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).

Example:

```
gen_oeff -osf ./input_osf.xml -pof ./input_pof.xml
 -flcl OPER -vers 0 -show -v
```

## 7.54 xo\_gen\_dnf

### 7.54.1 Overview

The `xo_gen_dnf` CFI function creates a DORIS Navigator File using as input one of the following reference file types:

- Orbit Scenario File
- FOS Predicted Orbit File
- FOS Restituted Orbit File
- DORIS Navigator File(s).
- DORIS Preliminary Orbit File
- DORIS Precise Orbit FileTime of the ascending crossing node (TAI, UTC and UT1)
- The accepted output file types are:
  - FOS Restituted Orbit File
  - DORIS Preliminary Orbit File
  - DORIS Precise Orbit FileTime

The time interval between consecutive OSVs can be selected by the user by means of a parameter in the calling interface. A flag for precise location of OSVs at “integer intervals” (e.g. every exact minute or every ten seconds) is also available. If the reference file and the DORIS Navigator File contain OSVs at the same time, these OSVs will be identical.

An optional control file can be introduced to correct the state vectors. This file contains the corrections for position and velocity in the along, across and radial directions. The format of this file is shown in [D\_H\_SUM].

A file with the configuration parameters for precise propagator can be introduced. In this case, the numeric propagator is used.

In order to read and write files, `xo_gen_dnf` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

Note: when using an OSF or Predicted Orbit file, the maximum time interval within the output Doris Navigator file is limited to 2 orbital periods before and after the middle point of the user requested time range.

### 7.54.2 Calling interface

The calling interface of the `xo_gen_dnf` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_time_id time_id = {NULL};
 xl_model_id model_id = {NULL};
 long time_init, time_ref, start_orbit, stop_orbit,
```

```
 ref_filetype, dnf_filetype, osv_precise, version_number;
double start_time, stop_time, osv_interval;
char reference_file[XD_MAX_STR], output_dir[XD_MAX_STR],
 dnf_filename[XD_MAX_STR], ctrl_file[XD_MAX_STR],
 precise_conf_file[XD_MAX_STR];
char *file_class, *fh_system;
long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

status = xo_gen_dnf(&sat_id, &model_id, &time_id,
 &time_init, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 &osv_interval, &osv_precise,
 &ref_filetype, reference_file, ctrl_file,
 precise_conf_file,
 &dnf_filetype, output_dir, dnf_filename,
 file_class, &version_number, fh_system,
 /* output */
 ierr);

/* Or, using the run_id */
long run_id;

status = xo_gen_dnf_run(&run_id,
 &time_init, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 &osv_interval, &osv_precise,
 &ref_filetype, reference_file, ctrl_file,
 precise_conf_file,
 &dnf_filetype, output_dir, dnf_filename,
 file_class, &version_number, fh_system,
 /* output */
 ierr);
}
```

### 7.54.3 Input parameters

The `xo_gen_dnf` CFI function has the following input parameters:

*Table 149: Input parameters of `xo_gen_dnf` function*

| C name       | C type      | Array Element | Description (Reference)                                                                                                                                                                                                                                                                                                                                              | Unit (Format)         | Allowed Range                                     |
|--------------|-------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|---------------------------------------------------|
| sat_id       | long *      | -             | Satellite ID                                                                                                                                                                                                                                                                                                                                                         | -                     | Complete                                          |
| model_id     | xl_model_id | -             | Model ID                                                                                                                                                                                                                                                                                                                                                             | -                     | -                                                 |
| time_id      | xl_time_id* | -             | Structure that contains the time correlations.<br><br>NOTE: If time_id is not initialized, then time correlations will be initialized internally using the input reference file                                                                                                                                                                                      | -                     | -                                                 |
| time_init    | long*       | -             | Flag for selecting the time range of the initialisation.                                                                                                                                                                                                                                                                                                             | -                     | Select either:<br>· XO_SEL_ORBIT<br>· XO_SEL_TIME |
| time_ref     | long*       | -             | Time reference ID (see note in the ref_filetype field)                                                                                                                                                                                                                                                                                                               | -                     | Complete                                          |
| start_time   | double*     | -             | Processing time corresponding to the beginning of the required interval                                                                                                                                                                                                                                                                                              | Decimal days, MJD2000 | [-18262.0,36524.0]                                |
| stop_time    | double*     | -             | Processing time corresponding to the end of the required interval                                                                                                                                                                                                                                                                                                    | Decimal days, MJD2000 | [-18262.0,36524.0]                                |
| start_orbit  | long*       | -             | Orbit number corresponding to the beginning of the required interval                                                                                                                                                                                                                                                                                                 | orbits                | >= 1                                              |
| stop_orbit   | long*       | -             | Orbit number corresponding to the end of the required interval                                                                                                                                                                                                                                                                                                       | orbits                | >= 1                                              |
| osv_interval | double*     | -             | Interval between consecutive state vector.<br><br>This parameter should be coherent with the osv_precise flag (see below). If osv_precise is set to:<br><ul style="list-style-type: none"> <li>• xo_OSV_PRECISE_MINUTE: osv will be forced to be a multiple of 60 seconds.</li> <li>• xo_OSV_PRECISE_TENS_SECONDS: osv will be forced to be a multiple of</li> </ul> | secs                  | >=0                                               |

|                    |       |   |                                                                                                                                                                                                                                                                                                                    |   |                                                                    |
|--------------------|-------|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------|
|                    |       |   | 10 seconds.                                                                                                                                                                                                                                                                                                        |   |                                                                    |
| osv_precise        | long* | - | Flag to indicate if state vectors should be placed at exact time locations                                                                                                                                                                                                                                         | - | Complete                                                           |
| ref_filetype       | long* | - | File type of the input reference file.<br><br>(Note: When generating a DNF file from another DORIS NAVIGA TOR file, the input times should be expressed in UTC)                                                                                                                                                    | - | Complete                                                           |
| reference_filename | char* | - | Reference File name                                                                                                                                                                                                                                                                                                | - |                                                                    |
| ctrl_file          | char* | - | Control File in xml format. This file contains the corrections for position and velocity in the along, across and radial directions together with the position accuracy(see [D_H_SUM].)<br><br>If empty string (""), no corrections will be performed and the accuracy (quality index in the DNF)will be set to 1. | - | -                                                                  |
| precise_conf_file  | char* | - | File with precise propagator configuration                                                                                                                                                                                                                                                                         | - | If it is not neither NULL nor "", precise propagation will be used |
| dnf_filetype       | long* | - | File type of the output DORIS Navigator file                                                                                                                                                                                                                                                                       | - | xo_REF_FILETYPE_DORIS_NAV                                          |
| output_dir         | char* | - | Directory where the resulting DNF is written (if NULL, the current directory is used)                                                                                                                                                                                                                              | - | -                                                                  |
| dnf_filename       | char* | - | Output DNF name<br><br>if empty (i.e. ""), the software will generate the filename according to file name specification presented in [FORMATS]. In such case, the generated name is returned in this variable                                                                                                      | - | -                                                                  |
| file_class         | char* | - | File class for output file (dummy in the current version)                                                                                                                                                                                                                                                          | - | -                                                                  |
| version_number     | long* | - | Version number of output file (dummy in the current version)                                                                                                                                                                                                                                                       | - | >= 1                                                               |
| fh_system          | char* | - | System field of the output file fixed header (dummy in the current version)                                                                                                                                                                                                                                        | - | -                                                                  |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: `sat_id`.
- Time initialisation: `time_init`.
- Time reference: `time_ref`.
- OSV precise: `osv_precise`. See this SUM.
- File type: `ref_filetype` and `rof_filetype`. See this SUM.

### 7.54.4 Output parameters

The output parameters of the `xo_gen_dnf` CFI function are:

**Table 150: Output parameters of `xo_gen_dnf` function**

| C name                                      | C type             | Array Element | Description (Reference)                                                                                                                         | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| <code>dnf_filename</code>                   | <code>char*</code> | -             | Name for the output file.<br><u>This is only an output parameter when it is empty</u> (i.e. ""; see description of this parameter in Table 149) | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector                                                                                                                                   | -             | -             |



### 7.54.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_dnf` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_dnf` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 151: Error messages of `xo_gen_dnf` function**

| Error type | Error message                                     | Cause and impact          | Error code                                  | Error No |
|------------|---------------------------------------------------|---------------------------|---------------------------------------------|----------|
| ERR        | Wrong satellite flag                              | Computation not performed | XO_CFI_GEN_DNF_WRONG_SAT_ID_ERR             | 0        |
| ERR        | Wrong input flag                                  | Computation not performed | XO_CFI_GEN_DNF_WRONG_FLAG_ERR               | 1        |
| ERR        | Time ID is not initialized                        | Computation not performed | XO_CFI_GEN_DNF_TIME_ID_INIT_ERR             | 2        |
| ERR        | Could not initialise the time reference           | Computation not performed | XO_CFI_GEN_DNF_TIME_ID_INITIALIZATION_ERR   | 3        |
| ERR        | Cannot initialise orbit ID                        | Computation not performed | XO_CFI_GEN_DNF_ORBIT_INIT_FILE_ERR          | 4        |
| ERR        | Cannot initialise the propagator                  | Computation not performed | XO_CFI_GEN_DNF_PROPAGATOR_INIT_ERR          | 5        |
| ERR        | Cannot initialise interpolation                   | Computation not performed | XO_CFI_GEN_DNF_INTERPOLATION_INIT_ERR       | 6        |
| ERR        | Could not perform a time <-> orbit transformation | Computation not performed | XO_CFI_GEN_DNF_TIME_ORBIT_ERR               | 7        |
| ERR        | Error in a time transformation function           | Computation not performed | XO_CFI_GEN_DNF_TIME_TRANS_ERR               | 8        |
| ERR        | Memory allocation error                           | Computation not performed | XO_CFI_GEN_DNF_MEMORY_ERR                   | 9        |
| ERR        | Cannot calculate state vector                     | Computation not performed | XO_CFI_GEN_DNF_CALCULATING_STATE_VECTOR_ERR | 10       |
| ERR        | Error reading the Control File                    | Computation not performed | XO_CFI_GEN_DNF_READ_CONTROL_FILE_ERR        | 11       |
| ERR        | Cannot correct state vector                       | Computation not performed | XO_CFI_GEN_DNF_CORRECT_OSV_ERR              | 12       |
| ERR        | Error changing state vector                       | Computation not performed | XO_CFI_GEN_DNF_CHANGING_STATE_VECTOR_ERR    | 13       |

|      |                                                                                                   |                                                                   |                                      |    |
|------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|--------------------------------------|----|
|      | from EF to J2000                                                                                  |                                                                   | GE_COORD_ERR                         |    |
| ERR  | Error creating the DORIS header                                                                   | Computation not performed                                         | XO_CFI_GEN_DNF_COMPUTE_HEADER_ERR    | 14 |
| ERR  | Error freeing memory                                                                              | Computation not performed                                         | XO_CFI_GEN_DNF_CLOSE_ERR             | 15 |
| ERR  | Cannot write DORIS Data Block file                                                                | Computation not performed                                         | XO_CFI_GEN_DNF_WRITE_FILE_ERR        | 16 |
| WARN | OSV interval is not compatible with OSV Precise flag. The OSV Interval will be set to %f seconds. | Computation performed with a different value for the osv_interval | XO_CFI_GEN_DNF_WRONG_INTERVAL_WARN   | 17 |
| ERR  | Error reading precise propagator configuration file                                               | Computation not performed                                         | XO_CFI_GEN_DNF_READ_PRECISE_FILE_ERR | 18 |

## 7.54.6 Executable Program

The `gen_dnf` executable program can be called from a Unix shell as:

```
gen_dnf -sat satellite_name
 -tref time_ref
 { -tstart start_time -tstop stop_time (decimal days) |
 -tastart start_time -tastop stop_time (CCSDSA format) |
 -ostart start_orbit -ostop stop_orbit (orbits) }
 -osvint osv_interval
 [-osvpre]
 -reftyp ref_file_type
 -ref reference_file
 [-ctrl control_file]
 [-precf file precise_conf_file] (empty string by default)
 [-dir output_dir] (current directory by default)
 [-dnf output_filename] (default: name generated automatically)
 [-fcl file_class] (empty string by default)
 [-vers version] (version = 1 by default)
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-fhsys fh_system] (empty string by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
 [(-tai TAI_time -gps GPS_time -utc UTC_time -ut1 UT1_time) |
 (-tmod time_model -tfile time_file -trid time_reference
 {(-tm0 time0 -tm1 time1) | (-orb0 orbit0 -orb1 orbit1) })]
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ **-osvpre** ] option for `osv_precise`. Default value is `xo_OSV_PRECISE_NO`. When the option is written, `osv_precise` value is `xo_OSV_PRECISE_MINUTE`.
- [ **-xl\_v** ] option for `EO_LIB` Verbose mode.

- [ **-xo\_v** ] option for EO\_ORBIT Verbose mode.
- [ **-v** ] option for Verbose mode for all libraries (default is Silent).
- [ **-show** ] displays the inputs of the function and the results.
- Possible values for *satellite\_name*: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for *time\_model*: USER, NONE, IERS\_B\_PREDICTED, IERS\_B\_RESTITUTED, FOS\_PREDICTED, FOS\_RESTITUTED, DORIS\_PRELIMINARY, DORIS\_PRECISE, DORIS\_NAVIGATOR, OSF.
- Possible values for *ref\_file\_type*: OSF, POF, DORISNAV, ROF, DORISPREM, DORISPREC.
- Possible values for *ffs\_version*: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for *time\_ref* and *time\_reference*: UNDEF, TAI, UTC, UT1, GPS.
- Time references need to be initialized only when using OSF as the type of the input reference file. The inputs needed for this issue are provided in the last three lines of parameters. Note that only one set of parameters should be introduced:
  - TAI, GPS, UTC and UT1 input times (as in *xl\_time\_ref\_init*)
  - A file with time reference data, the time mode, the time reference name and a time range (as in *xl\_time\_ref\_init\_file*)
- Precise propagation is used if *precf* is provided.

Example:

```
gen_dnf -sat CRYOSAT -tref UTC -tstart 0.99650462962963
-tstop 01386574074708 -osvint 20 -reftyp ROF
-ref EARTH_EXPLORER_FRO_TO_DORIS_2000
-ctrl CONTROL_FILE.xml -dir ./gen_dnf/ -dnf doris_nav_at_308
-tai 0.000000 -utc -4.0509259e-4 -ut1 -4.1435185185e-4
-gps 2.1991e-4 -show
```

## 7.55 xo\_gen\_tle

### 7.55.1 Overview

The `xo_gen_tle` CFI function creates TLE File using as input a Predicted or Restituted Orbit File. It is possible to select the way in which the TLE records are generated:

- Generate a TLE record per OSV in the orbit file (XO\_ONE\_TLE\_PER\_OSV).
- Find the best TLE record which fits to the OSVs in the orbit file (XO\_FIT\_TLE/XO\_FIT\_TLE\_LIST).

These modes are explained in more detail in section 7.55.3.

In order to read and write files, `xo_gen_tle` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.55.2 Calling interface

The calling interface of the `xo_gen_tle` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_time_id time_id = {NULL};
 long fit_mode, time_mode, time_ref, start_orbit, stop_orbit;
 double start_time, stop_time;
 char reference_file[XD_MAX_STR], tle_filename[XD_MAX_STR];
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_gen_tle (&sat_id, &fit_mode,
 &time_mode, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 reference_file, tle_filename,
 ierr);
}
```

### 7.55.3 Input parameters

The `xo_gen_tle` CFI function has the following input parameters:

**Table 152: Input parameters of `xo_gen_tle` function**

| C name                      | C type               | Array Element | Description (Reference)                                                         | Unit (Format)         | Allowed Range                                                         |
|-----------------------------|----------------------|---------------|---------------------------------------------------------------------------------|-----------------------|-----------------------------------------------------------------------|
| <code>sat_id</code>         | <code>long *</code>  | -             | Satellite ID                                                                    | -                     | Complete                                                              |
| <code>fit_mode</code>       | <code>long*</code>   | -             | fitting mode                                                                    | -                     | XO_FIT_TLE<br>XO_FIT_TLE_LIST<br>XO_ONE_TLE_PER_OSV                   |
| <code>time_mode</code>      | <code>long*</code>   | -             | Flag for selecting the time range of the initialization.                        | -                     | Select either:<br>• XO_SEL_ORBIT<br>• XO_SEL_TIME<br>• XO_SEL_DEFAULT |
| <code>time_ref</code>       | <code>long*</code>   | -             | Time reference for the input <code>start_time</code> and <code>stop_time</code> | -                     | Complete                                                              |
| <code>start_time</code>     | <code>double*</code> | -             | Processing time corresponding to the beginning of the required interval         | Decimal days, MJD2000 | [-18262.0,36524.0]                                                    |
| <code>stop_time</code>      | <code>double*</code> | -             | Processing time corresponding to the end of the required interval               | Decimal days, MJD2000 | [-18262.0,36524.0]                                                    |
| <code>start_orbit</code>    | <code>long*</code>   | -             | Orbit number corresponding to the beginning of the required interval            | orbits                | >= 1                                                                  |
| <code>stop_orbit</code>     | <code>long*</code>   | -             | Orbit number corresponding to the end of the required interval                  | orbits                | >= 1                                                                  |
| <code>reference_file</code> | <code>char*</code>   | -             | Reference File name                                                             | -                     | -                                                                     |

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Fitting mode: `fit_mode`. See this SUM.
- Satellite ID: `sat_id`.
- Time initialisation: `time_mode`.
- Time reference: `time_ref`.

The behavior of the generator depends on the input arguments *fitmode* and *input file type*:

- `XO_ONE_TLE_PER_OSV`: one TLE record will be computed for each Orbit State Vector in the input file and written into the output TLE file.
- `XO_FIT_TLE`: a single TLE record will be computed and written in the output TLE file by fitting a list of OSVs obtained as follows:

- ◆ If the input is a POF, the list will be generated by propagating in the selected time interval,
- ◆ otherwise (ROF), the list will be taken from the file in the selected time interval as it is.
- **XO\_FIT\_TLE\_LIST**: a single TLE record will be computed and written in the output TLE file by fitting a list of OSVs taken from the file in the selected time interval as it is.

## 7.55.4 Output parameters

The output parameters of the `xo_gen_tle` CFI function are:

**Table 153: Output parameters of `xo_gen_tle` function**

| C name                                      | C type             | Array Element | Description (Reference)   | Unit (Format) | Allowed Range |
|---------------------------------------------|--------------------|---------------|---------------------------|---------------|---------------|
| <code>tle_filename</code>                   | <code>char*</code> | -             | Name for the output file. | -             | -             |
| <code>ierr[XO_ERR_VECTOR_MAX_LENGTH]</code> | <code>long</code>  | all           | Status vector             | -             | -             |

## 7.55.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_gen_tle` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_gen_tle` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 154: Error messages of `xo_gen_tle` function**

| Error type | Error message                                                  | Cause and impact          | Error code                                          | Error No |
|------------|----------------------------------------------------------------|---------------------------|-----------------------------------------------------|----------|
| ERR        | Wrong satellite ID.                                            | Computation not performed | <code>XO_CFI_GEN_TLE_WRONG_SAT_ID_ERR</code>        | 0        |
| ERR        | Wrong input time reference                                     | Computation not performed | <code>XO_CFI_GEN_TLE_WRONG_FLAG_ERR</code>          | 1        |
| ERR        | Wrong input fitting mode                                       | Computation not performed | <code>XO_CFI_GEN_TLE_WRONG_FIT_MODE_ERR</code>      | 2        |
| ERR        | Could not initialise the time correlations from input file: %s | Computation not performed | <code>XO_CFI_GEN_TLE_TIME_INITIALIZATION_ERR</code> | 3        |
| ERR        | Could not initialise the orbit data from input file: %s        | Computation not performed | <code>XO_CFI_GEN_TLE_ORBIT_INIT_FILE_ERR</code>     | 4        |
| ERR        | Memory allocation error                                        | Computation not performed | <code>XO_CFI_GEN_TLE_MEMORY_ERR</code>              | 5        |
| ERR        | Could not generate the TLE for orbit %ld                       | Computation not performed | <code>XO_CFI_GEN_TLE_OSV_TO_TLE_ERR</code>          | 6        |
| ERR        | Could not close an ID                                          | Computation not performed | <code>XO_CFI_GEN_TLE_CLOSE</code>                   | 7        |



|      |                                                                                            |                                                                                          | _ERR                             |    |
|------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|----------------------------------|----|
| ERR  | Could not write output file to disk                                                        | Computation not performed                                                                | XO_CFI_GEN_TLE_WRITE_FILE_ERR    | 8  |
| ERR  | Could not propagate orbit for time                                                         | Computation not performed                                                                | XO_GEN_TLE_OSV_COMPUTE_ERR       | 9  |
| ERR  | Error getting orbit for provided time                                                      | Computation not performed                                                                | XO_GEN_TLE_TIME_TO_ORBIT_ERR     | 10 |
| ERR  | Cannot generate TLE with input<br>XD_USER_OSV_LIST_TYPE and Fit mode<br>XO_ONE_TLE_PER_OSV | Computation not performed                                                                | XO_GEN_TLE_INVALID_INIT_MODE_ERR | 11 |
| WARN | Error generating the output filename. Creating file: %s                                    | File generated with auxiliary name and not following the file format standard convention | XO_GEN_TLE_FILENAME_WARN         | 12 |

## 7.55.6 Executable Program

The `gen_tle` executable program can be called from a Unix shell as:

```
gen_tle -sat satellite_name
 -tref time_ref
 -tastart start_time -tastop stop_time (CCSDSA format) |
 -ref reference_file
 -fitmode fit_mode
 -tle tle_name
 [-tstep num_days]
 [-eoffs ffs_version] (Earth Observation File Format Standard Version)
 [-dir output_dir] (current directory by default)
 [-v]
 [-xl_v]
 [-xo_v]
 [-help]
 [-show]
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory.
- Options between curly brackets and separated by a vertical bar are mutually exclusive.
- [ `-xl_v` ] option for `EO_LIB` Verbose mode.
- [ `-xo_v` ] option for `EO_ORBIT` Verbose mode.
- [ `-v` ] option for Verbose mode for all libraries (default is Silent).
- [ `-show` ] displays the inputs of the function and the results.
- Possible values for `satellite_name`: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM\_A, SWARM\_B, SWARM\_C, SENTINEL\_1A, SENTINEL\_1B, SENTINEL\_1C, SENTINEL\_2A, SENTINEL\_2B, SENTINEL\_2C, SENTINEL\_3A, SENTINEL\_3B, SENTINEL\_3C, JASON\_CSA, JASON\_CSB, METOP\_SG\_A1, METOP\_SG\_A2, METOP\_SG\_A3, METOP\_SG\_B1, METOP\_SG\_B2, METOP\_SG\_B3, SENTINEL\_5P, SENTINEL\_5, BIOMASS, SAOCOM\_CS, SEOSAT, GENERIC.
- Possible values for `ffs_version`: 0 (Default FFS), 1 (FFS version 1), 2 (FFS version 2), 3 (FFS version 3).
- Possible values for `time_ref` and `time_reference`: UNDEF, TAI, UTC, UT1.
- Possible values for `fitmode`:
  - `ONE_TLE_PER_OSV`: one TLE record will be computed for each Orbit State Vector in the

- input file and written into the output TLE file.
- FIT: a single TLE record will be computed and written in the output TLE file by fitting a list of OSVs obtained as follows:
  - If the input is a POF, the list will be generated by propagating in the selected time interval,
  - otherwise (ROF), the list will be taken from the file in the selected time interval as it is.
- FIT\_LIST: a single TLE record will be computed and written in the output TLE file by fitting a list of OSVs taken from the file in the selected time interval as it is.
- If *tstep* is defined, one TLE record will be computed for each *tstep* time interval, from *start\_time* until *stop\_time*, and written in the output TLE file.

Depending on the inputs the output will change:

- ONE\_TLE\_PER\_OSV: the generator will propagate and generate one OSV every *tstep* time, from *start\_time* until *stop\_time*, and then, for each OSV it will create one TLE record
- FIT: One TLE to be generated every *tstep* time, from *start\_time* until *stop\_time*, by fitting a list of OSVs obtained as described above.
- FIT\_LIST: FIT\_LIST: for each *tstep* interval, a single TLE record will be computed (and written in the output TLE file) by fitting a list of OSVs taken from the file within the selected *tstep* time interval.

Example:

```
gen_tle -sat SENTINEL_1A
 -tref UTC
 -tastart "2013-07-06T00:00:00.000000"
 -tastop "2013-07-06T23:59:00.000000"
 -tstep 0.5
 -ref OSV_LIST.EOF
 -fitmode FIT
 -tle S1A_TLE_OUT.TLE
 -show
```

## 7.56 xo\_check\_osf

### 7.56.1 Overview

The `xo_check_osf` CFI function checks the continuity of the orbital parameters at the transition from one orbital change and the next one in an Orbit Scenario file.

In order to read and write files, `xo_check_osf` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

### 7.56.2 Calling interface

The calling interface of the `xo_check_osf` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_model_id model_id = {NULL};
 xl_time_id time_id = {NULL};
 char *osf_file;
 long transition_number;
 double threshold[XO_NUM_CHECK_PARAMS],
 diffs[XO_NUM_CHECK_PARAMS];
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_check_osf(&sat_id, &model_id, &time_id,
 osf_file, &transition_number,
 threshold,
 /* output */
 diffs, ierr);

 /* Or, using the run_id */
 long run_id;

 status = xo_check_osf_run(&run_id,
 osf_file, &transition_number,
 threshold,
 /* output */
 diffs, ierr);
}
```

### 7.56.3 Input parameters

The `xo_check_osf` CFI function has the following input parameters:

*Table 155: Input parameters of `xo_check_osf` function*

| C name            | C type                          | Array Element | Description (Reference)                                                         | Unit (Format) | Allowed Range                 |
|-------------------|---------------------------------|---------------|---------------------------------------------------------------------------------|---------------|-------------------------------|
| sat_id            | long *                          | -             | Satellite ID                                                                    | -             | Complete                      |
| model_id          | xl_model_id*                    | -             | Model ID                                                                        | -             | -                             |
| time_id           | xl_time_id*                     | -             | Structure that contains the time correlations.                                  | -             | -                             |
| osf_file          | char*                           | -             | Orbit Scenario file to be checked                                               | -             | -                             |
| transition_number | long*                           | -             | Number of the transition to be checked.<br>If 0, the last transition is checked | -             | >1<br><=Number of transitions |
| threshold         | double<br>[XO_NUM_CHECK_PARAMS] | 0             | Threshold for the time at ANX                                                   | s             | >0                            |
|                   |                                 | 1             | Threshold for the ANX longitude                                                 | deg           |                               |
|                   |                                 | 2             | Threshold for the MLST                                                          | s             |                               |
|                   |                                 | 3             | Threshold for the osculating semi-axis major                                    | m             |                               |
|                   |                                 | 4             | Threshold for the osculating inclination                                        | deg           |                               |
|                   |                                 | 5             | Threshold for the nodal period                                                  | s             |                               |

### 7.56.4 Output parameters

The output parameters of the `xo_check_osf` CFI function are:

*Table 156: Output parameters of `xo_check_osf` function*

| C name       | C type                          | Array Element | Description (Reference)          | Unit (Format) | Allowed Range |
|--------------|---------------------------------|---------------|----------------------------------|---------------|---------------|
| xo_check_osf | long                            | -             | Status                           | -             | -1, 0, 1      |
| diffs        | double<br>[XO_NUM_CHECK_PARAMS] | 0             | Difference for the time at ANX   | s             | >0            |
|              |                                 | 1             | Difference for the ANX longitude | deg           |               |

|      |       |     |                                               |     |
|------|-------|-----|-----------------------------------------------|-----|
|      |       | 2   | Difference for the MLST                       | s   |
|      |       | 3   | Difference for the osculating semi-axis major | m   |
|      |       | 4   | Difference for the osculating inclination     | deg |
|      |       | 5   | Difference for the nodal period               | s   |
| ierr | long* | all | Status vector                                 | -   |

### 7.56.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_check\_osf** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xo\_check\_osf** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 157: Error messages of xo\_ckeck\_osf function**

| Error type | Error message                                          | Cause and impact          | Error code                            | Error No |
|------------|--------------------------------------------------------|---------------------------|---------------------------------------|----------|
| ERR        | Time correlations are not initialized                  | Computation not performed | XO_CFI_CHECK_OSF_TIME_INIT_ERR        | 0        |
| ERR        | Error reading the Orbit Scenario file                  | Computation not performed | XO_CFI_CHECK_OSF_OSF_READ_ERR         | 1        |
| ERR        | Wrong transition number                                | Computation not performed | XO_CFI_CHECK_OSF_WRONG_TRANSITION_ERR | 2        |
| ERR        | Couldn't initialize the orbit                          | Computation not performed | XO_CFI_CHECK_OSF_ORBIT_INIT_ERR       | 3        |
| ERR        | Error in xo_orbit_info                                 | Computation not performed | XO_CFI_CHECK_OSF_ORBIT_INFO_ERR       | 4        |
| WARN       | UTC at ANX exceeds the input threshold                 | Computation performed     | XO_CFI_CHECK_OSF_UTC_WARN             | 5        |
| WARN       | ANX Longitude exceeds the input threshold              | Computation performed     | XO_CFI_CHECK_OSF_ANX_LONG_WARN        | 6        |
| WARN       | MLST exceeds the input threshold                       | Computation performed     | XO_CFI_CHECK_OSF_MLST_WARN            | 7        |
| WARN       | Osculating semi-major axis exceeds the input threshold | Computation performed     | XO_CFI_CHECK_OSF_OSC_A_WARN           | 8        |
| WARN       | Osculating inclination                                 | Computation performed     | XO_CFI_CHECK_OSF_OSC_I_WARN           | 9        |

|      |                                          |                       |                                |    |
|------|------------------------------------------|-----------------------|--------------------------------|----|
|      | exceeds the input threshold              |                       | C_I_WARN                       |    |
| WARN | Nodal period exceeds the input threshold | Computation performed | XO_CFI_CHECK_OSF_TN<br>OD_WARN | 10 |

## 7.57 xo\_check\_oef

### 7.57.1 Overview

The `xo_check_oef` CFI function checks the consistency between the list of orbital changes and the list of state vectors in an Orbit Event file.

In order to read and write files, `xo_check_oef` function internally uses Data Handling functions. Please refer to [D\_H\_SUM], in particular sections 4.2 and 4.3, for further details.

**Note:** Orbit Event File is deprecated, only supported for CRYOSAT mission

### 7.57.2 Calling interface

The calling interface of the `xo_check_oef` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long sat_id;
 xl_time_id time_id = {NULL};
 xl_model_id model_id = {NULL};
 char *oef_file;
 long time_mode, time_ref;
 double start_time, stop_time;
 long start_orbit, stop_orbit;
 double threshold[XO_NUM_CHECK_PARAMS],
 max_diffs[XO_NUM_CHECK_PARAMS],
 rms[XO_NUM_CHECK_PARAMS];
 long status, ierr[XO_ERR_VECTOR_MAX_LENGTH];
 status = xo_check_oef(&sat_id, &model_id, &time_id,
 &time_mode, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
 oef_file, threshold,
 /* output */
 max_diffs, rms, ierr);

 /* Or, using the run_id */
 long run_id;
 status = xo_check_oef_run(&run_id,
 time_mode, &time_ref,
 &start_time, &stop_time,
 &start_orbit, &stop_orbit,
```



```

 oef_file, threshold,
 /* output */
 max_diffs, rms, ierr);
 }

```

### 7.57.3 Input parameters

The `xo_check_oef` CFI function has the following input parameters:

**Table 158: Input parameters of `xo_check_oef` function**

| C name      | C type                          | Array Element | Description (Reference)                                                                                                                                         | Unit (Format) | Allowed Range                                |
|-------------|---------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------------------------------------------|
| sat_id      | long *                          | -             | Satellite ID                                                                                                                                                    | -             | Complete                                     |
| model_id    | xl_model_id*                    | -             | Model ID                                                                                                                                                        | -             | -                                            |
| time_id     | xl_time_id*                     | -             | Structure that contains the time correlations.                                                                                                                  | -             | -                                            |
| time_mode   | long*                           | -             | Flag for the input time range selection: whole file, time or orbits                                                                                             | -             | XO_SEL_FILE,<br>XO_SEL_TIME,<br>XO_SEL_ORBIT |
| time_ref    | long*                           | -             | Time reference for the <code>start_time</code> and <code>stop_time</code> input parameters (only needed if <code>time_mode</code> is <code>XO_SEL_TIME</code> ) | -             | Complete                                     |
| start_time  | double*                         | -             | Start time for the time range to be checked (only needed if <code>time_mode</code> is <code>XO_SEL_TIME</code> )                                                | days          | [-18262.0, 36524.0]                          |
| stop_time   | double*                         | -             | Stop time for the time range to be checked (only needed if <code>time_mode</code> is <code>XO_SEL_TIME</code> )                                                 | days          | [-18262.0, 36524.0]                          |
| start_orbit | long*                           | -             | Start orbit for the orbit range to be checked (only needed if <code>time_mode</code> is <code>XO_SEL_ORBIT</code> )                                             | -             | file range                                   |
| stop_orbit  | long*                           | -             | Stop orbit for the orbit range to be checked (only needed if <code>time_mode</code> is <code>XO_SEL_ORBIT</code> )                                              | -             | file range                                   |
| oef_file    | char*                           | -             | Orbit Event file to be checked                                                                                                                                  | -             | -                                            |
| threshold   | double<br>[XO_NUM_CHECK_PARAMS] | 0             | Threshold for the time at ANX                                                                                                                                   | s             | >0                                           |
|             |                                 | 1             | Threshold for the ANX longitude                                                                                                                                 | deg           |                                              |
|             |                                 | 2             | Threshold for the MLST                                                                                                                                          | s             |                                              |
|             |                                 | 3             | Threshold for the osculating semi-axis major                                                                                                                    | m             |                                              |
|             |                                 | 4             | Threshold for the osculating inclination                                                                                                                        | deg           |                                              |

|  |  |   |                                |   |  |
|--|--|---|--------------------------------|---|--|
|  |  | 5 | Threshold for the nodal period | s |  |
|--|--|---|--------------------------------|---|--|

It is possible to use enumeration values rather than integer values for some of the input arguments:

- Satellite ID: sat\_id.
- Time inputs selection: time\_mode
- Time reference: time\_ref.

### 7.57.4 Output parameters

The output parameters of the **xo\_check\_oef** CFI function are:

**Table 159: Output parameters of xo\_check\_oef function**

| C name       | C type                          | Array Element | Description (Reference)                                                                                                                                                                                          | Unit (Format) | Allowed Range |
|--------------|---------------------------------|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| xo_check_oef | long                            | -             | Status                                                                                                                                                                                                           | -             | -1, 0, 1      |
| max_diffs    | double<br>[XO_NUM_CHECK_PARAMS] | All           | The following parameters are computed using the list of orbital changes and the list of state vectors.<br><br>The maximum value of these differences for the requested interval are returned in this array.      | -             | >0            |
|              |                                 | 0             | Time at ANX                                                                                                                                                                                                      | s             |               |
|              |                                 | 1             | ANX longitude                                                                                                                                                                                                    | deg           |               |
|              |                                 | 2             | MLST                                                                                                                                                                                                             | s             |               |
|              |                                 | 3             | Osculating semi-axis major                                                                                                                                                                                       | m             |               |
|              |                                 | 4             | Osculating inclination                                                                                                                                                                                           | deg           |               |
| rms          | double<br>[XO_NUM_CHECK_PARAMS] | All           | The following parameters are computed using the list of orbital changes and the list of state vectors.<br><br>The standard deviation of these differences for the requested interval are returned in this array. | -             | >0            |
|              |                                 | 1             | ANX longitude                                                                                                                                                                                                    | deg           |               |
|              |                                 | 2             | MLST                                                                                                                                                                                                             | s             |               |
|              |                                 | 3             | Osculating semi-axis major                                                                                                                                                                                       | m             |               |
|              |                                 | 4             | Osculating inclination                                                                                                                                                                                           | deg           |               |

|      |       |     |               |   |  |
|------|-------|-----|---------------|---|--|
|      |       | 5   | Nodal period  | s |  |
| ierr | long* | all | Status vector | - |  |

### 7.57.5 Warnings and errors

Next table lists the possible error messages that can be returned by the `xo_check_oef` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_check_oef` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 160: Error messages of `xo_ckeck_oef` function**

| Error type | Error message                                          | Cause and impact          | Error code                      | Error No |
|------------|--------------------------------------------------------|---------------------------|---------------------------------|----------|
| ERR        | Error in <code>xo_orbit_info</code>                    | Computation not performed | XO_CFI_CHECK_OEF_ORBIT_INIT_ERR | 0        |
| ERR        | Couldn't initialize the orbit                          | Computation not performed | XO_CFI_CHECK_OEF_ORBIT_INFO_ERR | 1        |
| ERR        | Memory allocation error                                | Computation not performed | XO_CFI_CHECK_OEF_MEMORY_ERR     | 2        |
| WARN       | UTC at ANX exceeds the input threshold                 | Computation performed     | XO_CFI_CHECK_OEF_UTC_WARN       | 3        |
| WARN       | ANX Longitude exceeds the input threshold              | Computation performed     | XO_CFI_CHECK_OEF_ANX_LONG_WARN  | 4        |
| WARN       | MLST exceeds the input threshold                       | Computation performed     | XO_CHECK_OEF_MLST_WARN          | 5        |
| WARN       | Osculating semi-major axis exceeds the input threshold | Computation performed     | XO_CFI_CHECK_OEF_OSC_A_WARN     | 6        |
| WARN       | Osculating inclination exceeds the input threshold     | Computation performed     | XO_CFI_CHECK_OEF_OSC_I_WARN     | 7        |
| WARN       | Nodal period exceeds the input threshold               | Computation performed     | XO_CFI_CHECK_OEF_TNOD_WARN      | 8        |

## 7.58 xo\_position\_on\_orbit\_to\_time

### 7.58.1 Overview

The xo\_position\_on\_orbit\_to\_time calculates the time, position and velocity vectors in Earth-Fixed associated to a given position on orbit. This position on orbit is defined as the angle between the satellite position and the intersection of the orbital plane with a reference plane (the reference plane is the equator in GM2000, ToD or EF CS).

**COMPATIBILITY NOTE:** the output of this function is consistent with the calculation of orbit number and time from ANX within the EO CFI only when the input angle is compliant with [EO\_OPS] and [MCD] i.e. either ToD or EF. Using other angle types (e.g. J2000) will result in an output time that cannot be used as input elsewhere in the EO CFI, notably in the xo\_time\_to\_orbit function.

### 7.58.2 Calling Interface

The calling interface of the xo\_position\_on\_orbit\_to\_time CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 xo_orbit_id orbit_id = {NULL};
 long * abs_orbit_number,
 angle_type,
 deriv,
 time_ref;
 double * angle,
 angle_rate,
 angle_rate_rate,
 time;
 double pos[3],
 vel[3],
 acc[3];
 long status,
 ierr[XO_ERR_VECTOR_MAX_LENGTH];

 status = xo_position_on_orbit_to_time (&orbit_id,
 &abs_orbit_number, &angle_type,
 angle, &angle_rate, &angle_rate_rate,
 &deriv, &time_ref,
 /* Output */
 &time, pos, vel, acc,
 ierr);
}
```

}

### 7.58.3 Input Parameters

The `xo_position_on_orbit_to_time` CFI function has the following input parameters:

**Table 161: Input parameters of `xo_position_on_orbit_to_time` function**

| C name           | C type        | Array Element | Description (Reference)                    | Unit (Format) | Allowed Range                                                                            |
|------------------|---------------|---------------|--------------------------------------------|---------------|------------------------------------------------------------------------------------------|
| orbit_id         | xo_orbit_id * | -             | Orbit ID                                   | -             | Complete                                                                                 |
| abs_orbit_number | long *        | -             | Absolute orbit number                      | -             | Complete                                                                                 |
| angle_type       | long *        | -             | Type of angle                              | -             | XL_ANGLE_TYPE_TRUE_LAT_TOD<br>XL_ANGLE_TYPE_TRUE_LAT_GM2000<br>XL_ANGLE_TYPE_TRUE_LAT_EF |
| angle            | double *      | -             | Angle describing the position in the orbit | -             | -                                                                                        |
| angle_rate       | double *      | -             | 1st derivate from Angle                    | -             | -                                                                                        |
| angle_rate_rate  | double *      | -             | 2nd derivate from Angle                    | -             | -                                                                                        |
| deriv            | long *        | -             | Derivative ID                              | -             | Allowed values:<br>(0) XP_NO_DER<br>(1) XP_DER_1ST<br>(2) XP_DER_2ND                     |
| time_ref         | long *        | -             | Time Reference                             | -             | Complete                                                                                 |

### 7.58.4 Output Parameters

The output parameters of the `xo_position_on_orbit_to_time` CFI function are:

**Table 162: Output parameters of `xo_position_on_orbit_to_time` function**

| C name | C type    | Array Element | Description (Reference)                    | Unit (Format)                    | Allowed Range |
|--------|-----------|---------------|--------------------------------------------|----------------------------------|---------------|
| time   | double *  | -             | Resulting time                             | Decimal days (processing format) | -             |
| pos    | double[3] | all           | Satellite position vector (Earth Fixed CS) | m                                | -             |
| vel    | double[3] | all           | Satellite velocity vector                  | m/s                              | -             |

|      |           |     |                                                |      |   |
|------|-----------|-----|------------------------------------------------|------|---|
|      |           |     | (Earth Fixed CS)                               |      |   |
| acc  | double[3] | all | Satellite acceleration vector (Earth Fixed CS) | m/s2 | - |
| ierr | long      | .   | Error vector                                   | -    | - |

### 7.58.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xo\_position\_on\_orbit\_to\_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library **xo\_get\_msg** (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xo\_position\_on\_orbit\_to\_time** CFI function by calling the function of the EO\_ORBIT software library **xo\_get\_code** (see [GEN\_SUM]).

**Table 163: Error messages of xo\_position\_on\_orbit\_to\_time function**

| Error type | Error message                                          | Cause and impact          | Error code                                 | Error No |
|------------|--------------------------------------------------------|---------------------------|--------------------------------------------|----------|
| ERR        | The Orbit Id was not initialized.                      | Computation not performed | XO_POSITION_ON_ORBIT_ORBIT_INIT_STATUS_ERR | 0        |
| ERR        | Error calculating orbit info                           | Computation not performed | XO_POSITION_ON_ORBIT_ORBIT_INFO_ERR        | 1        |
| ERR        | Could not compute the ANX time for the requested orbit | Computation not performed | XO_POSITION_ON_ORBIT_ORBIT_TO_TIME_ERR     | 2        |
| ERR        | Could not compute orbit state vectors                  | Computation not performed | XO_POSITION_ON_ORBIT_OSV_COMPUTE_ERR       | 3        |
| ERR        | Error calculating satellite position                   | Computation not performed | XO_POSITION_ON_ORBIT_POSITION_ON_ORBIT_ERR | 4        |
| ERR        | Error calculating time: maximum iterations reached     | Computation not performed | XO_POSITION_ON_ORBIT_MAX_ITERATIONS_ERR    | 5        |

## 7.59 xo\_orbit\_data\_filter

### 7.59.1 Overview

The function `xo_orbit_data_filter` filters data stored in the `xo_orbit_id_init_data` input structures and returns the result of such filtering in `xo_orbit_id_init_data` output structure and associated statistics in `xo_orbit_filter_report` report structure. The user can select the filter and set its configuration via the filter setting structure.

#### 7.59.1.1 Outliers filter

The outliers filter works this way:

- For every input state vector time, a new state vector is computed using interpolation, taking as input for interpolation the 10 state vectors around that time.
- The interpolated state vector is compared with the one present in the file. If the difference between them (in position or velocity) is bigger than the input thresholds, the state vector is removed.

### 7.59.2 Calling Interface

The calling interface of the `xo_orbit_data_filter` CFI function is the following (input parameters are underlined>):

```
#include <explorer_orbit.h>
{
 long ierr[XO_ERR_VECTOR_MAX_LENGTH];
 xo_orbit_id_init_data orbit_data_in;
 xo_orbit_filter_settings filter_settings;
 xo_orbit_id_init_data orbit_data_out;
 xo_orbit_filter_report report;

 status = xo_orbit_data_filter(&orbit_data_in, &filter_settings,
 &orbit_data_out, &report, ierr);

 status = xo_orbit_data_filter_close(&orbit_data_out, ierr);
}
```

Note that it is necessary to call `xo_orbit_data_filter_close()` to free the memory reserved inside the `orbit_data_filter` function for the output data.

### 7.59.3 Input Parameters

The `xo_orbit_data_filter` CFI function has the following input parameters:

**Table 164: Input parameters of `xo_orbit_data_filter` function**

| C name | C type | Array | Description | Unit | Allowed Range |
|--------|--------|-------|-------------|------|---------------|
|--------|--------|-------|-------------|------|---------------|

|                 |                          | Element | (Reference)            | (Format) |  |
|-----------------|--------------------------|---------|------------------------|----------|--|
| orbit_data_in   | xo_orbit_id_init_data    |         | Input data structure   | -        |  |
| filter_settings | xo_orbit_filter_settings |         | Input filter structure | -        |  |

## 7.59.4 Output Parameters

The `xo_orbit_data_filter` CFI function has the following output parameters:

**Table 165: Output parameters of `xo_orbit_data_filter` function**

| C name         | C type                 | Array Element | Description (Reference)                     | Unit (Format) | Allowed Range |
|----------------|------------------------|---------------|---------------------------------------------|---------------|---------------|
| orbit_data_out | xo_orbit_id_init_data  |               | Output data structure with filtered samples | -             |               |
| report         | xo_orbit_filter_report |               | Output Report                               | -             |               |
| ierr           | long                   | .             | Error vector                                | -             | -             |

## 7.59.5 Warnings and errors

The next table lists the possible error messages that can be returned by the `xo_orbit_data_filter` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_data_filter` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 166: Error messages of `xo_orbit_data_filter` function**

| Error type | Error message                                 | Cause and impact                                                       | Error code                              | Error No |
|------------|-----------------------------------------------|------------------------------------------------------------------------|-----------------------------------------|----------|
| ERR        | Unknown Filter provided                       | Input filter not recognized.<br>Execution aborted                      | XO_ORBIT_DATA_FILTER_UNKNOWN_FILTER_ERR | 0        |
| ERR        | The Input Orbit file does not contain any OSV | No OSV samples found in the input files.<br>Execution aborted.         | XO_ORBIT_DATA_FILTER_NO_OSV_ERR         | 1        |
| ERR        | Input file not supported: Orbit or Doris only | Input file is neither an Orbit nor a Doris file.<br>Execution Aborted. | XO_ORBIT_DATA_FILTER_FILE_ERR           | 2        |
| ERR        | Error Interpolating OSV for orbit <orbit #>   | Execution Aborted.                                                     | XO_ORBIT_DATA_FILTER_INTERPOL_ERR       | 3        |



|     |                                                                    |                    |                                             |   |
|-----|--------------------------------------------------------------------|--------------------|---------------------------------------------|---|
| ERR | Error analysing sample to validate OSV                             | Execution Aborted. | XO_ORBIT_DATA_FILTER_ANALYSE_OSV_SAMPLE_ERR | 4 |
| ERR | Could not find 10 valid OSV samples to interpolate point at <time> | Execution Aborted. | XO_ORBIT_DATA_FILTER_SAMPLES_ERR            | 5 |

## 7.60 xo\_orbit\_id\_change

### 7.60.1 Overview

The function **xo\_orbit\_id\_change** updates the orbit number in the state vectors of an orbit id that has been previously initialized with Predicted Orbit, Restituted Orbit or DORIS files. The correction to be applied to orbit numbers is calculated depending on the input provided in the *change\_data* input parameter:

- With an OSF (*change\_data.change\_mode* = XO\_ORBIT\_ID\_CHANGE\_OSF). In this case, the time of the first state vector in the orbit id is used to compute the orbit number that the OSF file predicts for that time. All the state vector orbit numbers are corrected accordingly: if the orbit number and time of the first OSV in the orbit id are respectively N and T and the orbit number of the OSV computed at the same time T using the OSF is M, then the orbit numbers of all OSVs in the orbit id are increased of M-N. The field *change\_data.eocfi\_file* is of type *xd\_eocfi\_file* (only OSF file type is supported).
- With an input TIME+ORBIT (*change\_data.change\_mode* = XO\_ORBIT\_ID\_CHANGE\_TIME\_ORBIT). In this case, if T and M are respectively time and orbit provided by the user, the function first computes the OSV at time T and the corresponding orbit number N, then the orbit numbers of all OSVs in the orbit id are increased of M-N. Time T shall be within the orbit id validity.

### 7.60.2 Calling Interface

The calling interface of the **xo\_orbit\_id\_change** CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long ierr[XO_ERR_VECTOR_MAX_LENGTH];
 xo_orbit_id_change_data change_data;
 xo_orbit_id orbit_id;

 status = xo_orbit_id_change(&orbit_id, &change_data, ierr);
}
```

### 7.60.3 Input Parameters

The **xo\_orbit\_id\_change** CFI function has the following input parameters:

**Table 167: Input parameters of xo\_orbit\_id\_change function**

| C name      | C type                | Array Element | Description (Reference)          | Unit (Format) | Allowed Range |
|-------------|-----------------------|---------------|----------------------------------|---------------|---------------|
| orbit_id    | xo_orbit_id*          |               | Input orbit id                   | -             |               |
| change_data | xo_orbit_change_data* |               | Input orbit correction structure | -             |               |

### 7.60.4 Output Parameters

The `xo_orbit_id_change` CFI function has the following output parameters:

**Table 168: Output parameters of xo\_orbit\_id\_change function**

| C name   | C type       | Array Element | Description (Reference)                                                                                                                                       | Unit (Format) | Allowed Range |
|----------|--------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------|
| orbit_id | xo_orbit_id* | -             | This parameter is also an output parameter, since the orbits of the state vectors stored internally are changed according to input parameters to the function |               |               |
| ierr     | long         | .             | Error vector                                                                                                                                                  | -             | -             |

### 7.60.5 Warnings and errors

The next table lists the possible error messages that can be returned by the `xo_orbit_id_change` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_id_change` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 169: Error messages of xo\_orbit\_id\_change function**

| Error type | Error message                               | Cause and impact         | Error code                                 | Error No |
|------------|---------------------------------------------|--------------------------|--------------------------------------------|----------|
| ERR        | Invalid Change mode provided.               | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_MODE_ERR        | 0        |
| ERR        | Provided Orbit Id change data is not valid. | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_CHANGE_DATA_ERR | 1        |
| ERR        | Provided Orbit Id is NULL.                  | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_ID_NULL_ERR     | 2        |

|     |                                                                                  |                          |                                                   |   |
|-----|----------------------------------------------------------------------------------|--------------------------|---------------------------------------------------|---|
| ERR | Could not initialize time id with the provided OSF.                              | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_TIME_ID_ERR            | 3 |
| ERR | Could not initialize orbit id with the provided OSF.                             | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_ORBIT_ID_ERR           | 4 |
| ERR | Error propagating time of first OSV of the Orbit file using the provided OSF.    | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_PROPAG_ERR             | 5 |
| ERR | Error propagating time %f using the provided OSF.                                | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_PROP_TIME_ERR          | 6 |
| ERR | Error closing orbit_id initialized with the provided OSF for orbit change.       | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_CLOSE_ORBIT_ID_ER<br>R | 7 |
| ERR | Error closing time_id initialized with the provided Orbit file for orbit change. | No computation performed | XO_CFI_ORBIT_ID_CHAN<br>GE_CLOSE_TIME_ID_ERR      | 8 |

## 7.61 xo\_osv\_check

### 7.61.1 Overview

The function `xo_osv_check` provides a way to check if an orbit state vector (OSV) is compatible with the nominal orbit of a given satellite. The function checks that semi-major axis, inclination and eccentricity corresponding to the OSV are within certain tolerances. Two types of tolerances are defined (the values for each satellite can be found in section 5 of [MSC]):

- *Tight tolerances*: these are tolerances very close to the nominal orbit expected for the satellite. If the state vector values are inside the interval defined by these tolerances, the state vector is considered valid. If is outside the interval but inside the interval defined by loose tolerances (see next point), the state vector is considered correct but slightly away from nominal orbit. A warning is returned in this case (`XO_CFI_OSV_CHECK_TIGHT_TOLERANCE_WARN`).
- *Loose tolerances*: these are wider tolerances. If the state vector values are outside the interval defined by these tolerances, the state vector is considered wrong and an error is returned (`XO_CFI_OSV_CHECK_LOOSE_TOLERANCE_ERR`).

### 7.61.2 Calling Interface

The calling interface of the `xo_osv_check` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long ierr[XO_NUM_ERR_OSV_CHECK];
 xl_model_id model_id;
 xl_time_id time_id;
 long sat_id, time_ref;
 double time, pos[3], vel[3];

 status = xo_osv_check(&model_id, sat_id, &time_id, time_ref, time,
 pos, vel, ierr);
}
```

### 7.61.3 Input Parameters

The `xo_osv_check` CFI function has the following input parameters:

**Table 170: Input parameters of xo\_osv\_check function**

| C name   | C type       | Array Element | Description (Reference) | Unit (Format) | Allowed Range                 |
|----------|--------------|---------------|-------------------------|---------------|-------------------------------|
| model_id | xl_model_id* |               | Input model id          | -             |                               |
| sat_id   | long         |               | Input satellite id      | -             | See enum satellite in Table 2 |

|          |             |  |                                                          |               |                                    |
|----------|-------------|--|----------------------------------------------------------|---------------|------------------------------------|
| time_id  | xl_time_id* |  | Input time id                                            | -             |                                    |
| time_ref | long        |  | Time reference                                           | -             | See enum time reference in Table 2 |
| time     | double      |  | Time                                                     | days          |                                    |
| pos      | double*     |  | Position of the satellite in Earth Fixed reference frame | meters        |                                    |
| vel      | double*     |  | Velocity of the satellite in Earth Fixed reference frame | meters/second |                                    |

### 7.61.4 Output Parameters

The `xo_osv_check` CFI function has the following output parameters:

**Table 171: Output parameters of `xo_osv_check` function**

| C name | C type | Array Element | Description (Reference) | Unit (Format) | Allowed Range |
|--------|--------|---------------|-------------------------|---------------|---------------|
| iterr  | long   | .             | Error vector            | -             | -             |

### 7.61.5 Warnings and errors

The next table lists the possible error messages that can be returned by the `xo_osv_check` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_osv_check` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 172: Error messages of `xo_osv_check` function**

| Error type | Error message                   | Cause and impact         | Error code                             | Error No |
|------------|---------------------------------|--------------------------|----------------------------------------|----------|
| ERR        | Error transforming to TOD frame | No computation performed | XO_CFI_OSV_CHECK_CHANGE_CART_CS_ERR    | 0        |
| ERR        | Orbit radius = 0                | No computation performed | XO_CFI_OSV_CHECK_ORBIT_RADIUS_ZERO_ERR | 1        |
| ERR        | Orbit velocity = 0              | No computation performed | XO_CFI_OSV_CHECK_ORBIT_VEL_ZERO_ERR    | 2        |
| ERR        | Orbit semi-major axis           | No computation performed | XO_CFI_OSV_CHECK_SE                    | 3        |

|      |                                        |                          |                                           |   |
|------|----------------------------------------|--------------------------|-------------------------------------------|---|
|      | undefined                              |                          | MI_MAJOR_AXIS_ERR                         |   |
| WARN | Inclination = 0 or 180 deg             | Computation performed    | XO_CFI_OSV_CHECK_INC<br>LINATION_WARN     | 4 |
| ERR  | Error getting satellite<br>information | No computation performed | XO_CFI_OSV_CHECK_SAT<br>_ARRAY_ERR        | 5 |
| ERR  | Loose tolerances are not<br>met        | No computation performed | XO_CFI_OSV_CHECK_LO<br>OSE_TOLERANCE_ERR  | 6 |
| WARN | Tight tolerances are not met           | Computation performed    | XO_CFI_OSV_CHECK_TIG<br>HT_TOLERANCE_WARN | 7 |

## 7.62 xo\_orbit\_id\_check

### 7.62.1 Overview

The **xo\_orbit\_id\_check** CFI function computes diagnostics data related to the OSVs contained in orbit id. The following information is returned:

- Size of the interval covered by the file.
- Times of first and last OSV.
- Number and interval of GAPS in the file.
- Number and indexes of duplicated OSVs, i.e. OSVs whose time is the same as the one of previous OSV; i.e. if *time\_osv1* and *time\_osv2* are the times of one OSV and the following one respectively, the duplicated OSVs fulfill the following condition:

$$|time\_osv2 - time\_osv1| < diagnostics\_settings.duplicated\_osv\_threshold$$

being *diagnostics\_settings* one input parameter to the function (check section 7.62.3).

- Number and indexes of the OSVs going back in time, i.e. OSVs whose time is in the past with respect to the previous one; i.e. the OSVs are not identified as duplicated OSVs and fulfill the following conditions:
  - 1)  $time\_osv2 - time\_osv1 < 0$ .
  - 2)  $|time\_osv2 - time\_osv1| > diagnostics\_settings.duplicated\_osv\_threshold$
- Number and indexes of OSVs with inconsistent orbit number (i.e. OSVs whose number is not correlated with its neighbours OSVs).
- Number and indexes of OSVs with non-equally spaced OSVs (i.e. OSVs that are separated from its neighbours a different step from the one expected).
- Number and indexes of OSVs whose orbit parameters are beyond loose tolerances for corresponding satellite.
- Number and indexes of OSVs whose orbit parameters are beyond tight tolerances for corresponding satellite.

For DORIS files only EF OSVS are checked, because they are the ones used by orbit initialization.

## 7.62.2 Calling Interface

The calling interface of the `xo_orbit_id_check` CFI function is the following (input parameters are underlined):

```
#include <explorer_orbit.h>
{
 long ierr[XO_NUM_ERR_ORBIT_ID_CHECK];
 xo_orbit_id orbit_id;
 xd_orbit_file_diagnostics_settings diag_settings;
 xo_orbit_id_check_report report;

 status = xo_orbit_id_check(&orbit_id, &diag_settings, &report,
 ierr);
}
```

## 7.62.3 Input Parameters

The `xo_orbit_id_check` CFI function has the following input parameters:

**Table 173: Input parameters of `xo_orbit_id_check` function**

| C name        | C type                              | Array Element | Description (Reference)                                  | Unit (Format) | Allowed Range |
|---------------|-------------------------------------|---------------|----------------------------------------------------------|---------------|---------------|
| orbit_id      | xo_orbit_id*                        |               | Input orbit id                                           | -             |               |
| diag_settings | xd_orbit_file_diagnostics_settings* |               | Input settings struct (see <b>[D_H_SUM]</b> for details) | -             |               |

## 7.62.4 Output Parameters

The `xo_orbit_id_check` CFI function has the following output parameters:

**Table 174: Output parameters of `xo_orbit_id_check` function**

| C name | C type                    | Array Element | Description (Reference)                       | Unit (Format) | Allowed Range |
|--------|---------------------------|---------------|-----------------------------------------------|---------------|---------------|
| report | xo_orbit_id_check_report* |               | Output data structure for diagnostics results |               |               |
| ierr   | long                      | .             | Error vector                                  | -             | -             |

## 7.62.5 Warnings and errors

The next table lists the possible error messages that can be returned by the `xo_orbit_id_check` CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO\_ORBIT software library `xo_get_msg` (see [GEN\_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the `xo_orbit_id_check` CFI function by calling the function of the EO\_ORBIT software library `xo_get_code` (see [GEN\_SUM]).

**Table 175: Error messages of `xo_orbit_id_check` function**

| Error type | Error message                                     | Cause and impact         | Error code                                       | Error No |
|------------|---------------------------------------------------|--------------------------|--------------------------------------------------|----------|
| ERR        | Orbit id is not initialised.                      | No computation performed | XO_CFI_ORBIT_ID_CHECK_ORBIT_ID_UNINITIALIZED_ERR | 0        |
| ERR        | Output report is null.                            | No computation performed | XO_ORBIT_ID_CHECK_NULL_OUTPUT_ERR                | 1        |
| ERR        | No OSVs found in given orbit id                   | No computation performed | XO_ORBIT_ID_CHECK_NO_OSVS_ERR                    | 2        |
| ERR        | Couldn't retrieve time id from orbit id           | No computation performed | XO_ORBIT_ID_CHECK_NO_TIME_ID_ERR                 | 3        |
| ERR        | Error in <code>xd_orbit_file_diagnostics()</code> | No computation performed | XO_ORBIT_ID_CHECK_FILE_DIAGNOSTICS_ERR           | 4        |
| ERR        | Error in <code>xo_osv_check()</code>              | No computation performed | XO_ORBIT_ID_CHECK_OSV_CHECK_ERR                  | 5        |
| ERR        | Memory allocation error                           | No computation performed | XO_ORBIT_ID_CHECK_MEMORY_ALLOC_ERR               | 6        |



## 8 RUNTIME PERFORMANCES

The library performance has been measured by dedicated test procedures run in 5 different platforms under the below specified machines:

| <i>OS ID</i>   | <i>Processor</i>                                    | <i>OS</i>                                  | <i>RAM</i> |
|----------------|-----------------------------------------------------|--------------------------------------------|------------|
| LINUX64        | Intel(R) Xeon(R) CPU E5-2609 v4 @ 1.70GHz (8 cores) | GNU LINUX 4.10.0-42-generic (Ubuntu 17.04) | 64 GB      |
| LINUX64_LEGACY | Intel(R) Xeon(R) CPU E5-2470 0 @ 2.30GHz (16 cores) | GNU LINUX 2.6.24-16-generic (Ubuntu 10.04) | 16 GB      |
| MACIN64        | Intel Core i7 4 cores @2,6 GHz                      | MACOSX 10.12                               | 16 GB      |
| WINDOWS64      | Intel(R) Xeon(R)CPU ES-2630 @ 2.40GHz<br>2.40GHz    | Microsoft Windows 7                        | 16 GB      |

The table below shows the time (in milliseconds - ms) each function takes to be run under each platform:

| <i>Function ID</i>                   | <i>WINDOWS64</i> | <i>LINUX64</i> | <i>LINUX64_<br/>LEGACY</i> | <i>MACIN64</i> |
|--------------------------------------|------------------|----------------|----------------------------|----------------|
| xo_orbit_init_def                    | 0.263200         | 0.205000       | 0.156000                   | 0.088000       |
| xo_osv_compute_extra                 | 0.079900         | 0.050000       | 0.062000                   | 0.029000       |
| xo_osv_compute *<br>(PROPAGATION)    | 0.036400         | 0.015000       | 0.017000                   | 0.009000       |
| xo_orbit_cart_init                   | 0.087400         | 0.038000       | 0.039000                   | 0.023000       |
| xo_orbit_init_file *<br>3 OSVs read. | 0.767000         | 0.428000       | 0.318000                   | 0.280000       |
| xo_osv_compute                       | 0.016800         | 0.007000       | 0.008000                   | 0.005000       |
| xo_orbit_to_time                     | 0.051778         | 0.071690       | 0.042430                   | 0.020800       |
| xo_time_to_orbit                     | 0.156400         | 0.215000       | 0.126000                   | 0.062000       |
| xo_orbit_rel_from_abs                | 0.000043         | 0.000040       | 0.000020                   | 0.000020       |

| <i>Function ID</i>             | <i>WINDOWS64</i> | <i>LINUX64</i> | <i>LINUX64_<br/>LEGACY</i> | <i>MACIN64</i> |
|--------------------------------|------------------|----------------|----------------------------|----------------|
| xo_orbit_info                  | 0.054700         | 0.073000       | 0.044000                   | 0.021000       |
| xo_orbit_abs_from_rel          | 0.000047         | 0.000040       | 0.000020                   | 0.000020       |
| xo_orbit_abs_from_phase        | 0.000032         | 0.000030       | 0.000020                   | 0.000020       |
| xo_orbit_init_status           | 0.000005         | 0.000000       | 0.000010                   | 0.000000       |
| xo_orbit_get_sat_id            | 0.000004         | 0.000004       | 0.000003                   | 0.000003       |
| xo_orbit_get_mode              | 0.000004         | 0.000000       | 0.000000                   | 0.000000       |
| xo_orbit_get_osf_rec           | 0.000621         | 0.000260       | 0.000250                   | 0.000170       |
| xo_orbit_set_osf_rec           | 0.000593         | 0.000500       | 0.000370                   | 0.000380       |
| xo_orbit_get_val_time          | 0.000009         | 0.000010       | 0.000000                   | 0.000000       |
| xo_orbit_set_val_time          | 0.000011         | 0.000010       | 0.000010                   | 0.000010       |
| xo_orbit_get_propag_config     | 0.000071         | 0.000030       | 0.000020                   | 0.000010       |
| XO_Interpol_get_id_data        | 0.000044         | 0.000020       | 0.000020                   | 0.000020       |
| xo_gen_osf_create_2            | 1.830000         | 0.900000       | 0.500000                   | 0.600000       |
| xo_gen_osf_append_orbit_change | 2.410000         | 1.400000       | 0.800000                   | 1.200000       |
| xo_gen_osf_change_repeat_cycle | 3.010000         | 1.800000       | 1.000000                   | 1.400000       |
| xo_gen_osf_add_drift_cycle     | 3.470000         | 2.600000       | 1.500000                   | 1.800000       |
| xo_gen_rof                     | 32.889999        | 31.900000      | 26.700001                  | 31.500000      |
| xo_gen_pof *                   | 4.390000         | 3.900000       | 2.400000                   | 2.800000       |
| 16 OSVs generated              |                  |                |                            |                |
| xo_gen_dnf                     | 148.020004       | 234.399994     | 206.699997                 | 199.399994     |
| xo_gen_oef *                   | 4.870000         | 3.400000       | 2.100000                   | 3.200000       |
| 16 OSVs generated              |                  |                |                            |                |
| xo_check_osf                   | 1.115400         | 0.808000       | 0.609000                   | 0.455000       |
| xo_check_oef                   | 4.623300         | 3.618000       | 2.834000                   | 2.149000       |
| xo_gen_tle                     | 3.770000         | 1.800000       | 1.700000                   | 1.600000       |
| xo_orbit_init_def_2            | 0.260000         | 0.200000       | 0.100000                   | 0.100000       |

| <i>Function ID</i>                                      | <i>WINDOWS64</i> | <i>LINUX64</i> | <i>LINUX64_<br/>LEGACY</i> | <i>MACIN64</i> |
|---------------------------------------------------------|------------------|----------------|----------------------------|----------------|
| xo_orbit_init_file_precise *<br>Includes xo_orbit_close | 2.260000         | 1.900000       | 0.000000                   | 1.600000       |
| xo_orbit_cart_init_precise *<br>Includes xo_orbit_close | 0.010000         | 0.010000       | 0.010000                   | 0.010000       |
| xo_orbit_set_osv                                        | 0.112102         | 0.049013       | 0.047813                   | 0.028790       |
| xo_orbit_set_precise_propag_config                      | 0.000536         | 0.000790       | 0.000800                   | 0.000540       |
| xo_osv_to_tle                                           | 0.218600         | 0.118000       | 0.121000                   | 0.085000       |
| xo_orbit_init_geo                                       | 0.008600         | 0.003000       | 0.001000                   | 0.003000       |
| xo_position_on_orbit_to_time                            | 0.198800         | 0.083000       | 0.089000                   | 0.053000       |
| xo_orbit_data_filter *<br>Processing 1600 OSV           | 0.000400         | 0.001000       | 0.000000                   | 0.000000       |
| xo_orbit_data_filter                                    | 0.100000         | 0.000000       | 0.100000                   | 0.100000       |

Note that when the value “0.000000” is defined for a function in a certain platform, it means that its running time is lower than 1 nano-second and so it can be considered as “0”.

## 9 LIBRARY PRECAUTIONS

The following precautions shall be taken into account when using EO\_ORBIT software library:

- When a message like

<LIBRARY NAME> >>> ERROR in *xo\_function*: Internal computation error # *n*

or

<LIBRARY NAME> >>> WARNING in *xo\_function*: Internal computation warning # *n*

appears, run the program in *verbose* mode for a complete description of warnings and errors, and call for maintenance if necessary.