



Earth Observation Mission CFI Software

EO_VISIBILITY SOFTWARE USER MANUAL

Code: EO-MA-DMS-GS-0006

Issue: 4.4

Date: 05/07/12

Name Function Signature

Prepared by: José Antonio González Abeytua Project Manager

Juan José Borrego Bote Project Engineer
Carlos Villanueva Muñoz Project Engineer

Rubén Castro Project Engineer

Checked by: José Antonio González Abeytua Project Manager

Approved by: José Antonio González Abeytua Project Manager

DEIMOS Space S.L.U Ronda de Poniente, 19 Edificio Fiteni VI, Portal 2, 2ª Planta 28760 Tres Cantos (Madrid), SPAIN Tel.: +34 91 806 34 50

Fax: +34 91 806 34 51 E-mail: deimos@deimos-space.com

© DEIMOS Space S.L.U

All Rights Reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of DEIMOS Space S.L.U or ESA.





DOCUMENT INFORMATION

	Contract Data	Classification	n
Contract Number:	15583/01/NL/GS	Internal	
		Public	
Contract Issuer:	ESA / ESTEC	Industry	Х
		Confidential	

External Distribution			
Name	Organisation	Copies	

Electronic handling	
Word Processor:	LibreOffice 3.5
Archive Code:	P/SUM/DMS/01/026-029
Electronic file name:	eo-ma-dms-gs-006-21





DOCUMENT STATUS LOG

Issue	Change Description	Date	Approval
1.0	Unreleased	19/06/02	
2.0	Complete document	29/11/02	
2.1	Maintenance release with the following main changes: • xv_multizones_vis_time added. • xv_multistation_vis_time added. • xv_time_segment_mapping added. • xv_orbit_extra added.	13/05/03	
2.2	Maintenance release	30/09/03	
2.2.2	Small interface chance in xv_time_segments_delta and xv_orbit_extra	26/04/04	
3.0	New initialisation strategy and interfaces.	21/07/04	
3.1	New features for xv_zone_vis_time function:Use of Predicted Orbit/Orbit event files.Use of Swath Definition files.	13/10/04	
3.2	Maintenance release	15/11/04	
3.3	Vee of Predicted Orbit/Orbit event files for all visibility functions. Use of Swath Definition files for all visibility functions. ENVISAT ASCII files are no longer supported	11/07/05	
3.4	Maintenance release.gen_swath executable moved to this library.Changes in the xv_swath_pos interface	18/11/05	
3.5	Maintenance release.	26/05/06	
3.6	Maintenance release.	24/11/06	





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 4

3.7	 Maintenance release. New features: xv_gen_scf expcfi_check_libs xv_zone_vis_time_no_file xv_station_vis_time_no_file xv_gen_swath_no_file library version for Mac OS X on Intel (32 and 64 bits) 	13/07/07	
3.7.2	 Maintenance release. New features: Curved and closed swaths for xv_zone_vis_time 	31/07/08	
4.0	Maintenance release.	19/01/09	
4.1	Maintenance release New features: - AOS/LOS mask mode from Ground Station DB 1.4 file - Visibility across orbital changes Maintenance release New features: - Support of visibility functions with TLE and	07/05/10	
4.3	precise propagatorMaintenance release		
4.4	Maintenance release New features: - Function xv_sc_vis_time	05/07/12	





Page: 5

TABLE OF CONTENTS

DOCUMENT INFORMATION	2
DOCUMENT STATUS LOG	3
TABLE OF CONTENTS	5
LIST OF TABLES	11
LIST OF FIGURES	13
1 SCOPE	14
2 ACRONYMS, NOMENCLATURE AND TERMINOLOGY	15
2.1 Acronyms	15
2.2 Nomenclature	15
2.3 Note on Terminology	16
3 APPLICABLE AND REFERENCE DOCUMENTS	17
3.1 Applicable Documents	17
3.2 Reference Documents	17
4 INTRODUCTION	18
4.1 Functions Overview	18
4.2 Calling Sequence	20
5 LIBRARY INSTALLATION	21
6 LIBRARY USAGE	22
6.1 Usage hints	24
6.2 General enumerations	24
6.3 Data Structures	25





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	(

7.1 xv_zone_vis_time	28
7.1.1 Overview	
7.1.2 Swath Definition	30
7.1.2.1 Earth-observing Instruments Swath Definition	30
7.1.2.2 Limb-sounding Instruments Swath Definition	31
7.1.2.3 Limb-sounding Instruments Inertial Swath Definition	33
7.1.2.4 Swath Definition for Envisat	33
7.1.3 Zone Borders and Projection	35
7.1.4 Zone Definition	35
7.1.5 Intersection Definition	37
7.1.6 Intersection Algorithm	38
7.1.6.1 Intersection with a point swath	38
7.1.6.2 Intersection with a segment swath	38
7.1.6.3 Intersection with a multi-segment swath	39
7.1.7 Usage Hints	40
7.1.7.1 Limb-sounding Instruments Intersection.	40
7.1.7.2 Zone Coverage	40
7.1.7.3 Combined use of xv_swath_pos and the coverage flag	41
7.1.8 Calling sequence.	42
7.1.9 Input parameters	44
7.1.10 Output parameters	47
7.1.11 Warnings and errors	49
7.2 xv_zone_vis_time_no_file	54
7.2.1 Overview	54
7.2.2 Calling sequence	54
7.2.3 Input parameters	56
7.2.4 Output parameters	59
7.2.5 Warnings and errors	61
7.3 xv_station_vis_time	62
7.3.1 Overview	
7.3.2 Calling interface	64
7.3.3 Input parameters	66





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	7

7.3.4 Output parameters	69
7.3.5 Warnings and errors	71
7.4 xv_station_vis_time_no_file	74
7.4.1 Overview	
7.4.2 Calling interface.	74
7.4.3 Input parameters	76
7.4.4 Output parameters	79
7.4.5 Warnings and errors	81
7.5 xv_sc_vis_time	82
7.5.1 Overview	82
7.5.2 Calling interface.	82
7.5.3 Input parameters	85
7.5.4 Output parameters	87
7.5.5 Warnings and errors.	89
7.6 xv_swath_pos	91
7.6.1 Overview	91
7.6.2 Calling sequence of xv_swath_pos	92
7.6.3 Input parameters xv_swath_pos	93
7.6.4 Output parameters xv_swath_pos	93
7.6.5 Warnings and errors	95
7.7 xv_star_vis_time	98
7.7.1 Overview	98
7.7.2 Swath Definition	99
7.7.2.1 Inertial Swaths	99
7.7.2.2 Splitting swaths	100
7.7.2.3 Orbital Changes	100
7.7.2.4 Format of Swath Template File	101
7.7.2.5 MLST non linear drift	101
7.7.3 Calling sequence xv_star_vis_time	102
7.7.4 Input parameters xv_star_vis_time	104
7.7.5 Output parameters xv_star_vis_time	106
7.7.6 Warnings and errors	108





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	8

7.8 xv_multizones_vis_time	111
7.8.1 Overview	111
7.8.2 Calling sequence xv_multizones_vis_time	113
7.8.3 Input parameters xv_multizones_vis_time	115
7.8.4 Output parameters xv_multizones_vis_time	118
7.8.5 Warnings and errors	120
7.9 xv_multistations_vis_time	121
7.9.1 Overview	121
7.9.2 Calling sequence xv_multistations_vis_time	123
7.9.3 Input parameters xv_multistations_vis_time	125
7.9.4 Output parameters xv_multistations_vis_time	127
7.9.5 Warnings and errors	129
7.10 xv_orbit_extra	130
7.10.1 Overview	130
7.10.2 Calling sequence xv_orbit_extra	131
7.10.3 Input parameters xv_orbit_extra	132
7.10.4 Output parameters xv_orbit_extra	133
7.10.5 Warnings and errors	135
7.11 xv_gps_vis_time	136
7.12 xv_time_segments_not	137
7.12.1 Overview	137
7.12.2 Calling sequence xv_time_segments_not	138
7.12.3 Input parameters xv_time_segments_not	140
7.12.4 Output parameters xv_time_segments_not	141
7.12.5 Warnings and errors	142
7.13 xv_time_segments_or	143
7.13.1 Overview	
7.13.2 Calling sequence xv_time_segments_or	144
7.13.3 Input parameters xv_time_segments_or	146
7.13.4 Output parameters xv_time_segments_or	148
7.13.5 Warnings and errors	149
7.14 xv_time_segments_and	150





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	9

7.14.1	Overview	150
7.14.2	Calling sequence xv_time_segments_and	151
7.14.3	Input parameters xv_time_segments_and	153
7.14.4	Output parameters xv_time_segments_and	155
7.14.5	Warnings and errors	156
7.15 xv_	_time_segments_sort	157
7.15.1	Overview	157
7.15.2	Calling sequence xv_time_segments_sort	157
7.15.3	Input parameters xv_time_segments_sort	159
7.15.4	Output parameters xv_time_segments_sort	160
7.15.5	Warnings and errors	161
7.16 xv_	_time_segments_merge	162
7.16.1	Overview	162
7.16.2	Calling sequence xv_time_segments_merge	163
7.16.3	Input parameters xv_time_segments_merge	165
7.16.4	Output parameters xv_time_segments_merge	166
7.16.5	Warnings and errors	167
7.17 xv_	_time_segments_delta	168
7.17.1	Overview	168
7.17.2	Calling sequence xv_time_segments_delta	169
7.17.3	Input parameters xv_time_segments_delta	171
7.17.4	Output parameters xv_time_segments_delta	172
7.17.5	Warnings and errors	173
7.18 xv_	_time_segments_mapping	175
7.18.1	Overview	175
7.18.2	Calling sequence xv_time_segments_mapping	177
7.18.3	Input parameters xv_time_segments_mapping	179
7.18.4	Output parameters xv_time_segments_mapping	182
7.18.5	Warnings and errors	184
7.19 xv_	_gen_swath	186
7.19.1	Overview	186
7.19.2	Calling interface	187





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	10

7.19.3	Input parameters	188
7.19.4	Output parameters	189
7.19.5	Warnings and errors	190
7.19.6	Executable Program	192
7.20 xv_	gen_swath_no_file	194
7.20.1	Overview	194
7.20.2	Calling interface	194
7.20.3	Input parameters	195
7.20.4	Output parameters	195
7.20.5	Warnings and errors.	196
7.21 xv_	gen_scf	197
7.21.1	Overview	197
7.21.2	Calling interface	197
7.21.3	Input parameters	198
7.21.4	Output parameters	199
7.21.5	Warnings and errors	200
8 RUNT	IME PERFORMANCES	201
o KNOV	IN DDORLEMS	204





LIST OF TABLES

Table 1: CFI functions included within EO_VISIBILITY library	
Table 2: Some enumerations within EO_VISIBILITY library	24
Table 3: EO_VISIBILITY structures	
Table 4: Envisat Swaths	33
Table 5: Zone definition	35
Table 6: Input parameters of xv_zone_vis_time function	44
Table 7: Output parameters of xv_zone_vis_time function	47
Table 8: Error messages and codes for xv_zone_vis_time	49
Table 9: Input parameters of xv_zone_vis_time_no_file function	56
Table 10: Output parameters of xv_zone_vis_time_no_file function	
Table 11: Input parameters of xv_station_vis_time	
Table 12: Output parameters of xv_station_vis_time function	69
Table 13: Error messages and codes for xv_station_vis_time	71
Table 14: Input parameters of xv_station_vis_time_no_file	76
Table 15: Output parameters of xv_station_vis_time_no_file function	
Table 16: Input parameters of xv_sc_vis_time	85
Table 17: Output parameters of xv_sc_vis_time function	87
Table 18: Error messages of xv_sc_vis_time	89
Table 19: Input parameters of xv_swath_pos	93
Table 20: Output parameters of xv_swath_pos	93
Table 21: Error messages and codes	
Table 22: Input parameters of xv_star_vis_time	104
Table 23: Output Parameters of xv_star_vis_time	106
Table 24: Error messages and codes	
Table 25: Input parameters of xv_multizones_vis_time	115
Table 26: Output parameters of xv_multizones_vis_time	118
Table 27: Error messages and codes	120
Table 28: Input parameters of xv_multistations_vis_time	125
Table 29: Output parameters of xv_multistations_vis_time	127
Table 30: Error messages and codes	129
Table 31: Input parameters of xv_orbit_extra	132
Table 32: Output parameters of xv_orbi_extra	133
Table 33: Error messages and codes	135
Table 34: Input parameters of xv_time_segments_not	140
Table 35: Output parameters of xv_time_segments_not	141
Table 36: Error messages and codes	
Table 37: Input parameters of xv_time_segments_or	146
Table 38: Output parameters of xv_time_segments_or	
Table 39: Error messages and codes	
Table 40: Input parameters of xv_time_segments_and	153
Table 41: Output parameters of xv_time_segments_and	155
Table 42: Error messages and codes	
Table 43: xv_time_segments_sort function	157
Table 44: Input parameters of xv_time_segments_sort	
Table 45: Output parameters of xv_time_segments_sort	
Table 46: Error messages and codes	





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
ssue:	4.4
Page:	12

Table 47: Input parameters of xv time segments merge	165
Table 48: Output parameters of xv time segments merge	
Table 49: Error messages and codes	167
Table 50: Input parameters of xv time segments delta	171
Table 51: Output parameters of xv time segments delta	172
Table 52: Error messages and codes	173
Table 53: Input parameters of xv_time_segments_mapping	179
Table 54: Output parameters of xv_time_segments_mapping	182
Table 55: Error messages and codes	184
Table 56: Swath geometry definition (algorithm)	186
Table 57: Input parameters of xv_gen_swath function	188
Table 58: Output parameters of xv gen swath function	189
Table 59: Error messages of xv_gen_swath function	190
Table 60: Input parameters of xv_gen_swath_no_file function	195
Table 61: Output parameters of xv_gen_swath_no_file function	195
Table 62: Input parameters of xv_gen_scf function	198
Table 63: Output parameters of xv_gen_scf function	199
Table 64: Error messages of xv_gen_scf function	200
Table 65: Known problems	204





Code:	EO-MA-DMS-GS-0006
Date:	05/07/12
Issue:	4.4
Page:	13

LIST OF FIGURES

Figure I: EO_VISIBILITY Data Flow	20
Figure 2: Segment Definition xv_zone_vis_time	28
Figure 3: Earth-observing instrument: swath definition	
Figure 4: Limb-sounding instrument: swath definition (1)	32
Figure 5: Limb-sounding instrument: swath definition (2)	32
Figure 6: Zone examples	36
Figure 7: Intersection examples	
Figure 8: Swath points	
Figure 9: Swath coverage definition	
Figure 10: Two tangent altitudes over the ellipsoid	99
Figure 11: Instantaneous FOV projected on the celestial sphere	100
Figure 12: xv_multizones_vis_time function	111
Figure 13: xv_time_segment_not_function	137
Figure 14: xv_time_segments_or_function	143
Figure 15: xv_time_segments_and_function	150
Figure 16: xv_time_segments_merge function	162
Figure 17: Different mappings with common segments	175





1 SCOPE

The EO_VISIBILITY Software User Manual provides a detailed description of usage of the CFI functions included within the EO_VISIBILITY CFI software library.





ACRONYMS, NOMENCLATURE AND TERMINOLOGY

2.1 Acronyms

ANX Ascending Node Crossing

AOCS Attitude and Orbit Control Subsystem

CFI Customer Furnished Item

EF Earth Fixed reference frame

ESA European Space Agency

ESTEC European Space Technology and Research Centre

FOS Flight Operations Segment

Ground Station GS

OSF Orbit Scenario File SCF Swath Control File SDF Swath Definition File

SRAR Satellite Relative Actual Reference

SSP Sub-Satellite Point

STF Swath Template File

SUM Software User Manual

TOD True of Date reference frame Universal Time Coordinated

UTC

UT1 Universal Time UT1

WGS[84] World Geodetic System 1984

2.2 Nomenclature

CFIA group of CFI functions, and related software and documentation that will be distributed

by ESA to the users as an independent unit

CFI function A single function within a CFI that can be called by the user

Library A software library containing all the CFI functions included within a CFI plus the

supporting functions used by those CFI functions (transparently to the user)





2.3 Note on Terminology

In order to keep compatibility with legacy CFI libraries, the Earth Observation Mission CFI Software makes use of terms that are linked with missions already or soon in the operational phase like the Earth Explorers.

This may be reflected in the rest of the document when examples of Mission CFI Software usage are proposed or description of Mission Files is given.





3 APPLICABLE AND REFERENCE DOCUMENTS

3.1 Applicable Documents

[GEN_SUM] Earth Observation Mission CFI Software. General Software User Manual. EO-

MA- DMS-GS-0002. Issue 4.2 31/01/2011.

3.2 Reference Documents

Earth Observation Mission CFI Software. Conventions Document. EO-MA-[MCD] DMS-GS-0001. Issue 4.4 05/07/12 Earth Observation Mission CFI Software. Mission Specific Customizations [MSC] Document. EO-MA- DMS-GS-0018. Issue 4.4 05/07/12. Earth Observation Mission CFI Software. EO FILE HANDLING Software User [F H SUM] Manual. EO-MA-DMS-GS-0008. Issue 4.4 05/07/12. Earth Observation Mission CFI Software. EO DATA HANDLING Software [D H SUM] User Manual. EO-MA-DMS-GS-007. Issue 4.4 05/07/12. [LIB SUM] Earth Observation Mission CFI Software. EO LIB Software User Manual. EO-MA-DMS-GS-003. Issue 4.4 05/07/12. [ORBIT SUM] Earth Observation Mission CFI Software. EO ORBIT Software User Manual. EO-MA-DMS-GS-0004. Issue 4.4 05/07/12. Earth Observation Mission CFI Software. EO POINTING Software User [POINT SUM] Manual. EO-MA-DMS-GS-0005. Issue 4.4 05/07/12. [FORMATS] Earth Explorer File Format Guidelines. CS-TN-ESA-GS-0148.





4 INTRODUCTION

4.1 Functions Overview

This software library contains the CFI functions required to compute time segments at which an Earth Observation satellite, or one of its instruments is in view of various targets:

- zones (defined as polygons or circles, on the earth ellipsoid or at a given altitude)
- · ground stations
- data relay satellites
- stars

This library is to be used for planning of Earth Observation operations. It includes, the following CFI functions:

- xv_station_vis_time and xv_station_vis_time_no_file: compute visibility time segments for a ground station
- xv sc vis time: computes visibility time segments for a target satellite
- xv_zone_vis_time and xv_zone_vis_time_no_file: compute visibility time segments for an instrument swath in visibility of a zone.
- **xv_swath_pos**: computes location of a swath at a given time (additional routine to help refine the results of **xv_zone_vis_time**)
- xv_star_vis_time: computes visibility time segments for a star.
- xv_multizones_vis_time: computes the visibility segments of several zones and sort them to different criteria.
- **xv_multistations_vis_time**: computes the visibility segments of several ground stations and sort them according to different criteria.
- xv gps vis time: computes visibility time segments for a gps constellation.
- xv_gen_swath and xv_gen_swath_no_file generate the instrument swath template file for a given satellite, instrument mode and orbit.
- **xv_gen_scf** generates a swath control file for the ESOV tool.
- Time Segments Manipulation Routines:
 - xv time segments not: returns the complement of 1 vector of time segments.
 - xv time segments and: returns the intersection segments from 2 vectors of time segments.
 - xv time segments or: returns the joined segments from 2 vectors of time segments
 - xv_time_segments_delta: add or subtract time durations at the beginning and end of each time segment in a vector.
 - xv_time_segments_sort: returns the vector of time segments sorted according to absolute or relative orbits.
 - xv time segments merge: merges all the overlapped segments in a list.
 - **xv_time_segments_mapping:** returns a subset of the time segments vector, such that this subset covers entirely a zone or line swath.

Several files are required to operate properly the above functions:

- Orbit Scenario File (all functions)
- Swath Template Files (xv_station_vis_time, xv_zone_vis_time, xv_swath_pos)
- Ground Stations Database File (xv_station_vis_time)
- (optionally) Zones Database File (xv_zone_vis_time)
- (optionally) Star Database File (xv_star_vis_time)





Note that all the above routines use orbit-relative time parameters (i.e. the time parameters are represented as orbit number + time since ascending node). Two functions from EO_ORBIT will be very useful to process the input/outputs:

- **xo_time_to_orbit**: converts from TAI/UTC/UT1 time to orbit-relative time
- **xo_orbit_to_time**: converts from orbit-relative time to TAI/UTC/UT1 time





Page: 20

4.2 Calling Sequence

An overview of the data flow is presented in Figure 1,

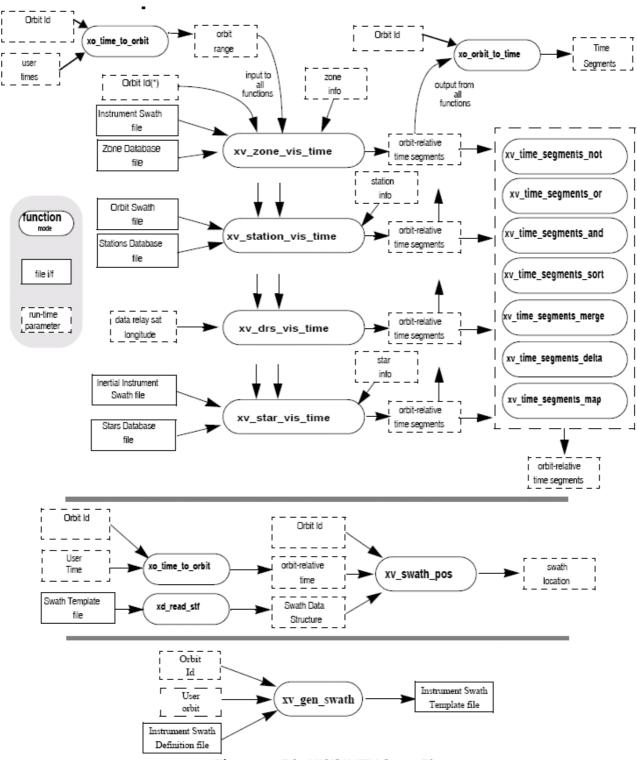


Figure 1: EO_VISIBILITY Data Flow

^{*}orbit_id initialised with TLE or precise modes are not supported.





5 LIBRARY INSTALLATION

For a detailed description of the installation of any CFI library, please refer to [GEN_SUM]. Note that example data files are provided with this CFI.





6 LIBRARY USAGE

Note that to use the EO_VISIBILITY software library, the following other CFI software libraries are required:

- EO FILE HANDLING (See [F H SUM]).
- EO DATA HANDLING (See [D_H_SUM]).
- EO LIB (See [LIB SUM]).
- EO ORBIT (See [ORBIT SUM]).
- EO POINTING (See [POINT SUM])

It is needed to have properly installed in the system the following external libraries:

• POSIX thread library: libpthread.so (pthread.lib for WINDOWS, with license LGPL)

To use the EO_VISIBILITY software library in a user application, that application must include in his source code :

• explorer visibility.h (for a C application)

To link correctly his application, the user must include in his linking command flags like (assuming *cfi_libs_dir* and *cfi_include_dir* are the directories where respectively all CFI libraries and include files have been installed, see [GEN SUM] for installation procedures):

• LINUX:

```
-Icfi_include_dir -Lcfi_lib_dir -lexplorer_visibility -lexplorer_pointing -lexplorer_orbit -lexplorer_lib -lexplorer_data_handling -lexplorer_file_handling -lpthread
```

· Windows users:

```
/I "cfi_include_dir" /libpath: "cfi_lib_dir"

libexplorer_visibility.lib

libexplorer_pointing.lib

libexplorer_orbit.lib

libexplorer_lib.lib

libexplorer_data_handling.lib

libexplorer_file_handling.lib

pthread.lib
```

MacOS:

```
-Icfi_include_dir -Lcfi_lib_dir -lexplorer_visibility -lexplorer_pointing -lexplorer_orbit -lexplorer_lib -lexplorer_data_handling -lexplorer_file_handling -lpthread
```





All functions described in this document have a name starting with the prefix xv_.

To avoid problems in linking a user application with the EO_VISIBILITY software library due to the existence of names multiple defined, the user application should avoid naming any global software item beginning with either the prefix XV_ or xv_.

This is summarized in Table 1.

Table 1: CFI functions included within EO_VISIBILITY library

Function Name	Enumeration value	long		
Main CFI Functions				
xv_zone_vis_time	XV_ZONE_VIS_TIME_ID	0		
xv_zone_vis_time_no_file				
xv_station_vis_time	XV_STATION_VIS_TIME_ID	1		
xv_station_vis_time_no_file				
xv_sc_vis_time	XV_SC_VIS_TIME_ID	2		
xv_swath_pos_id	XV_SWATH_POS_ID	3		
xv_star_vis_time	XV_STAR_VIS_TIME_ID	4		
xv_multizones_vis_time	XV_MULTIZONES_VIS_TIME_ID	5		
xv_multistations_vis_time	XV_MULTISTATIONS_VIS_TIME_ID	6		
xv_time_segments_not	XV_TIME_SEGMENTS_NOT_ID	7		
xv_time_segments_or	XV_TIME_SEGMENTS_OR_ID	8		
xv_time_segments_and	XV_TIME_SEGMENTS_AND_ID	9		
xv_time_segments_sort	XV_TIME_SEGMENTS_SORT_ID	10		
xv_time_segments_merge	XV_TIME_SEGMENTS_MERGE_ID	11		
xv_time_segments_delta	XV_TIME_SEGMENTS_DELTA_ID	12		
xv_time_segments_mapping	XV_TIME_SEGMENTS_MAPPING_ID	13		
xv_orbit_extra	XV_ORBIT_EXTRA_ID	14		
xv_gen_swath	XV_GEN_SWATH_ID	15		
xv_gen_swath_no_file				
xv_gen_scf	XV_GEN_SCF_ID	16		
	Error Handling Functions			
xv_verbose	not applicable			
xv_silent				
xv_get_code				
xv_get_msg				
xv_print_msg				





Notes about the table:

- To transform the status vector returned by a CFI function to either a list of error codes or list of error messages, the enumeration value (or the corresponding integer value) described in the table must be used.
- The error handling functions have no enumerated value.

6.1 Usage hints

Every CFI function has a different length of the Error Vector, used in the calling I/F examples of this SUM and defined at the beginning of the library header file. In order to provide the user with a single value that could be used as Error Vector length for every function, a generic value has been defined (XV_ERR_VECTOR_MAX_LENGTH) as the maximum of all the Error Vector lengths. This value can therefore be safely used for every call of functions of this library.

6.2 General enumerations

The aim of the current section is to present the enumeration values that can be used rather than integer parameters for some of the input parameters of the EO_VISIBILITY routines, as shown in the table below. The enumerations presented in [GEN_SUM] are also applicable.

Table 2: Some enumerations within EO_VISIBILITY library

Input	Description	Enumeration value	Long
Orbit type /	Absolute Orbit	XV_ORBIT_ABS	0
Order Criteria			
	Relative Orbit	XV_ORBIT_REL	1
zone_vis_time cover age outputs	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transition found by ZONE_VIS_TIME	XV_LEFT	1
	Right extreme transition found by ZONE_VIS_TIME	XV_RIGHT	2
	Both extreme transition found by ZONE_VIS_TIME	XV_BOTH	3
stat_vis_time mask inputs	AOS, LOS and physical masks	XV_COMBINE	0
	AOS, LOS masks	XV_AOS_LOS	1
	Physical mask only	XV_PHYSICAL	2
	Mask as from Station file	XV_FROM_FILE	3
star_vis_time cover age outputs	Visibility stars/ends at the first/last FOV in star_vis_time	XV_STAR_UNDEFINED	0
	Visibility stars/ends at the	XV_STAR_UPPER	1





1			
	upper FOV in star_vis_time		
	Visibility stars/ends at the lower FOV in star_vis_time	XV_STAR_LOWER	2
	Visibility stars/ends at the left FOV in star_vis_time	XV_STAR_LEFT	3
	Visibility stars/ends at the right FOV in star_vis_time	XV_STAR_RIGHT	4
Order enumeration	Input Segments ordered by start time	XV_TIME_ORDER	0
	Input Segments not ordered by start time	XV_NO_TIME_ORDER	1
Segments direction	Ascending segment	XV_ASCENDING	0
	Descending segment	XV_DESCENDING	1
Swath flag	Swath Template File	XV_STF	0
	Swath Definition File	XV_SDF	1

The use of the previous enumeration values could be restricted by the particular usage within the different CFI functions. The actual range to be used is indicated within a dedicated reference named **allowed range**. When there are not restrictions to be mentioned, the allowed range column is populated with the label **complete**.

6.3 Data Structures

The aim of the current section is to present the data structures that are used in the EO_LIB library. The structures are currently used for the CFI Identifiers accessor functions. The following table show the structures with their names and the data that contain:

Table 3: EO_VISIBILITY structures

Standana nama	Data				
Structure name	Variable Name	C type	Description		
xv_az_el_mask	num_mask_pt	long	Number of azimuth and elevation pairs defining the antenna mask		
	azimuth	double [XD_VERTICES]	Azimuth defining the antenna mask		
	elevation	double [XD_VERTICES]	Elevation defining the antenna mask		
xv_link_mask	incl_mask	xv_az_el_mask	List of azimuth and elevation pairs in Instrument Frame defining an inclusive zone		
	excl_mask	xv_az_el_mask	List of azimuth and elevation pairs in Instrument Frame defining an exclusive zone		





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 26

C4	Data				
Structure name	Variable Name	C type	Description		
xv_az_el_mask	num_mask_pt	long	Number of azimuth and elevation pairs defining the antenna mask		
	azimuth	double [XD_VERTICES]	Azimuth defining the antenna mask		
	elevation	double [XD_VERTICES]	Elevation defining the antenna mask		
xv_link_data	mask_data	xv_link_mask	List of azimuth and elevation pairs in Instrument Frame		
	min_tg_height	double	Minimum tangent height		





7 CFI FUNCTIONS DESCRIPTION

The following sections describe each CFI function.

Input and output parameters of each CFI function are described in tables, where C programming language syntax is used to specify:

- Parameter types (e.g. long, double)
- Array sizes of N elements (e.g. param[N])
- Array element M (e.g. [M])





7.1 xv_zone_vis_time

7.1.1 Overview

The **xv_zone_vis_time** function computes all the orbital segments for which a given instrument swath intercepts a user-defined zone at the surface of the Earth ellipsoid.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds (and microseconds) elapsed since the ascending node crossing.

A user-defined zone can be:

- a polygon specified by a set of latitude and longitude points
- a circle specified by the centre latitude, longitude, and the diameter

Note that particular cases of the above can be used to define the zone as:

- a point
- a line

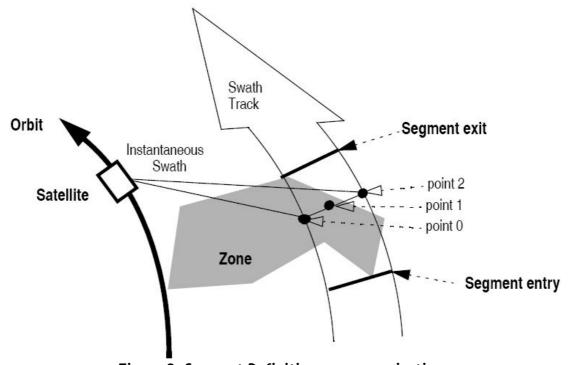


Figure 2: Segment Definition xv_zone_vis_time

xv_zone_vis_time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files, also with precise propagator initialization if applicable (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission).
 - Restituted orbit files





- DORIS Preliminary orbit files
- DORIS Navigator files
- TLE files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EO_VISIBILITY library (**xv_gen_swath** function).
 - A swath definition file, describing the swath geometry. In this case the **xv_zone_vis_time** generates the swath points for a number of orbits given by the user.
- optionally, a Zone Database File, containing the zone description. The user can either specify a zone identifier referring to a zone in the file, or provide the zone parameters directly to xv_zone_vis_time.

The time intervals used by **xv_zone_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Zone Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EO_ORBIT (xo_time_to_orbit and xo_orbit_to_time functions).

NOTE: If **xv_zone_vis_time** is used with a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length), the behaviour depends on the swath file introduced as input:

- •If a **swath template file** is used, **xv_zone_vis_time** automatically will ignore the orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits), since swath template file is generated from a reference orbit with a particular geometry, so it is not valid for a different geometry.
- •If a **swath definition file** is introduced, **xv_zone_vis_time** will perform the computations across orbital changes, and will return the visibility segments corresponding to the whole orbital range. Internally, swath template files valid for every orbital change are generated to perform the calculations.
- **NOTE 2**:If a swath template file with the variable header tags *Start_Validity_Range* and *Stop Validity Range* is used as input, only the segments belonging to that orbit range will be returned.
- **NOTE 3**: If a swath definition file is introduced, it can be also introduced every how many orbits the swath template file must be recomputed (swath_flag parameter, see section 44). If the orbit_id has been initialized with an OSF file with MLST non linear terms and the parameter swath_flag is greater than the linear approximation validity, the recomputation of swath template file will be done every linear approximation validity orbits.





7.1.2 Swath Definition

The swath file is generated using the xv_gen_swath function, within the EO_VISIBILITY library. There are 3 different types of swaths:

- earth-observing instruments ('nadir curve', 'nadir point' or "area swaths")
- limb-sounding instruments ('limb', narrow or wide)
- limb-sounding instruments observing inertial objects ('inertial')

The following sub-sections provide some details on the various swath definitions.

7.1.2.1 Earth-observing Instruments Swath Definition

The term swath must be clearly defined to understand the explanations in this document:

- instantaneous swath: the part of the earth surface observed by an instrument at a given time
- swath track: represents the track made on the earth surface by the instantaneous swath over a period of time

For instruments observing the surface of the earth, the instantaneous swath is constituted by the point/curve/area on the ground observed by the instrument at a given time. It is calculated taking the earth ellipsoid as a reference for the earth surface. The wider the field-of-view of the instrument, the wider the swath on the ground.

When the satellite moves over a period of time, this point/curve/area defines a band on the earth surface. This constitutes the swath track.

See next figure for an illustration of these definitions.

Note that the terms curve or point are an idealized view of the instrument FOV, which usually have a thickness.





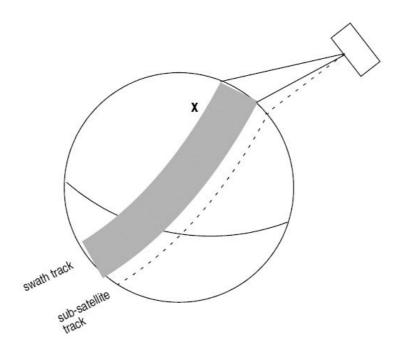


Figure 3: Earth-observing instrument: swath definition

7.1.2.2 Limb-sounding Instruments Swath Definition

For limb sounding instruments, the concept can be generalized to define a "thick swath". This is obtained by defining a minimum and a maximum altitude, and considering the tangent points to these altitudes as the edges of the swath. Two cases have to be considered:

- deterministic (narrow) azimuth field of view (e.g. MIPAS sideward-looking): the swath projection on the earth surface is similar to a regular sideward-looking swath, with the lower altitude defining the further swath edge and the higher altitude defining the closer swath edge. See Figure 4.
- non-deterministic (potentially wide) azimuth field of view (e.g. MIPAS rearward-looking): due to the potentially wide azimuth field of view, each altitude defines a swath projection on the earth surface. Depending on the altitude, these swaths are of different width across-track, and also at different distance from the satellite. See Figure 5.

For these, 2 Instrument Swath Files are provided:

- one at the highest altitude
- one at the lowest altitude

The user must handle both swath himself to determine his required visibility time segments





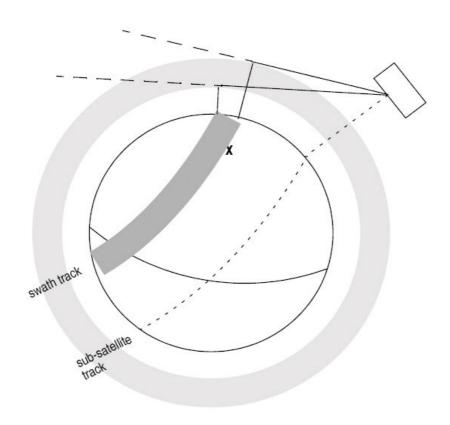


Figure 4: Limb-sounding instrument: swath definition (1)

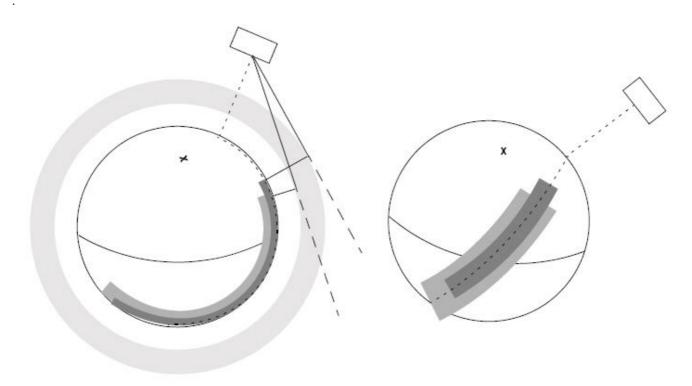


Figure 5: Limb-sounding instrument: swath definition (2)





7.1.2.3 Limb-sounding Instruments Inertial Swath Definition

This type corresponds to the observation of inertial targets (e.g. Gomos occultation mode and Mipas Line of Sight mode in Envisat). For the CFI function **xv_star_vis_time** the FOV direction in inertial coordinates must be available. Therefore for these instrument modes the direction in inertial space, for a given tangent altitude, is given in the swath template file.

7.1.2.4 Swath Definition for Envisat

Next table lists all instrument modes and the relevance of the swaths for Envisat. It shows also:

- the prefix to be used when generating the swath template file name
- the different types of algorithms to be used by xv_gen_swath (this is transparent to the user)

Table 4: Envisat Swaths

instrument	Mode	File Prefix = swath	Swath geometry (Table 56)	Swath Type	Remarks
RA		RA_2	POINTING (1 point)	Nadir point	Modeled as sub-satellite track
MERIS	Averaging / Direct & Averaging	MERIS_	POINTING (3 points)	Nadir line	
ASAR	Image Modes (IS1 IS7)	SARxIM (x=17)	ASAR	Nadir line	
	Alt. Polarization (IS1 IS7)				
	Wide Swath	SARWIM			
	Global Monitoring				
	Wave (IS1 IS7)	SARxWV (x=17)			Modeled as a continuous swath any where within the image swath
GOMOS	Occultation	GOMOIL GOMOIH	INERTIAL Inertial directio	Inertial direction	IFOV much smaller than swath. IFOV Very dependent on star avail ability.
					2 swaths defined:
					- 1 for high altitude (GOMOIH)
					- 1 for low altitude (GOMOIL)
		GOMO_H GOMO L	LIMB	Limb wide	Same mode as above, now swath defined as Earth-fixed location.
		J 5 5 _ L			IFOV much smaller than swath. IFOV Very dependent on star avail ability.





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 34

SCIAMACHV	Modin /	CCIANI	DOINTING (2	Nadirlina	2 swaths defined: - 1 for high altitude (GOMO_H) - 1 for low altitude (GOMO_L)
SCIAMACHY	Nadir of Nadir & Limb	SCIAN_	POINTING (3 points)	Nadir line	Continuous Nadir swath modeled
	Limb / Limb of Nadir & Limb	SCIALH SCIALL		Limb wide	2 swaths defined: - 1 for high altitude (SCIALH) - 1 for low altitude (SCIALL)
AATSR		ATSR_N ATSR_F	POINTING (3 points)	Nadir line	2 swaths defined: - 1 for nadir swath - 1 for forward swath
MWR		MWR	POINTING (1 points)	Nadir point	Modeled as sub-satellite track
MIPAS	Nominal	MIPN_H MIPN_L	LIMB	Limb narrow	2 swaths defined: - 1 for high altitude (MIPN_H) - 1 for low altitude (MIPN_L)
	Special Event Mode (across)	MIP_X_	LIMB	Limb narrow	Modeled as an across track swath, in the middle of the MIPAS SEM acquisition scan.
	Special Event Mode (rearward)	MIP_RH MIP_RL	LIMB	Limb wide	IFOV much smaller than swath. 2 swaths defined: - 1 for high altitude (MIP_RH) - 1 for low altitude (MIP_RL)
	Rearward	MIPIRH MIPIRL	INERTIAL	Inertial direction	2 swaths defined for rearward mode: - 1 for high altitude (MIPIRH)
	Sideward	MIPIXH MIPIXL			1 for low altitude (MIPIRL)3 swaths defined for sideward mode:1 for high altitude (MIPIXH)
					- 1 for high allitude (MIPIXB) - 1 for back mode (MIPIXB) - 1 for forward mode (MIPIXF)





7.1.3 Zone Borders and Projection

When defining a polygon zone, the user is assumed to wish polygon sides as straight lines. But on the earth surface, a straight line is, at best, a confusing concept.

The only way to define unambiguously straight lines is to work in a 2-dimensional projection of the earth surface. There are many possible projections, each having advantages and drawbacks.

xv_zone_vis_time can handle zone borders in 2 different projections:

- rectangular projection, using longitude and latitude as the X and Y axis; this is appropriate to express zones where (some of) the edges follow constant latitude lines, and provide a reasonable approximation for straight lines at low-medium latitudes
- <u>azimuthal gnomonic projection</u>, where great circles are always projected as straight lines; this is better for <u>high latitudes</u>, where the rectangular projection suffers from too much distortion and the singularity at the poles.

xv_zone_vis_time allows the user to specify which projection he wants to work in, i.e. in which projection the polygon sides will be represented by **xv_zone_vis_time** as straight lines. The user is assumed to be aware of how the polygon sides behave on the Earth surface.

7.1.4 Zone Definition

The user-defined zone can be either (see Table 5);

- a point
- a line
- a polygon
- a circle

A zone is defined by the area of the earth surface enclosed by the zone borders:

- in the case of a circular zone, the area inside the circle
- in the case of a polygonal zone, the area which is always to the right of any polygon side; if the polygon is defined as a sequence of N points, each polygon side is considered as a line <u>from</u> point i <u>to</u> point i+1; this unambiguously defines the right side of the polygon sides.

Table 5: Zone definition

Zone definition	Zone_num	Zone_long Zone_lat	Zone_diam	Description
Circular Zone	1	[0]: centre point	yes zone_diam > 0.0	The zone is represented as a circle, around the centre point
Point Zone	1	[0]: Point	yes zone_diam = 0.0	The zone is defined by the point. Resulting segments will have a zero duration. The zone will always be completely covered by the swath.
Line Zone	2	[0], [1]: Line	no	The zone is defined by the line from point [0] to point [1].
Polygon Zone	>2	[i]	no	The zone is defined by the area right of the line from point [i] to point [i+1].





For the gnomonic projection, a side of a zone is always smaller than a half great circle, because two polygon points are considered to be joined by the shortest line.

For the rectangular projection, two consecutive points of the zone are also joined by the shortest line; so the difference in longitude must be less than 180 degrees.

The polygon zone can be closed (i.e. the first and last points are the same) or not. If the zone is not closed, **xv_zone_vis_time** closes it by joining the last point with the first one in its internal computations.

See Figure 6 for examples of zone definitions.

xv_zone_vis_time will issue an error on the zone definition if the polygon has intersecting sides ("butterfly" zone).

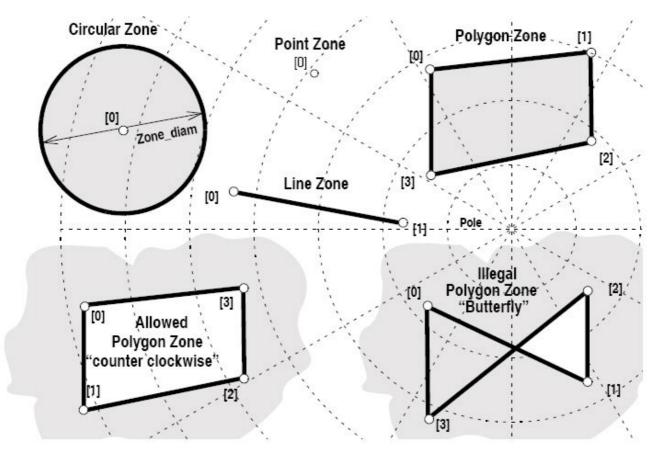


Figure 6: Zone examples





7.1.5 Intersection Definition

The xv_zone_vis_time intersection times between the instrument swath and the user-defined zone are defined as the first and last occurrence, in chronological order with respect to the satellite direction, of the geometrical super-position of any point belonging to the instrument swath with any single point belonging to the zone (including the zone border).

The entry and exit times for each intersection are given as elapsed seconds (and microseconds) since the ascending node crossing.

Next figure shows some typical intersections.

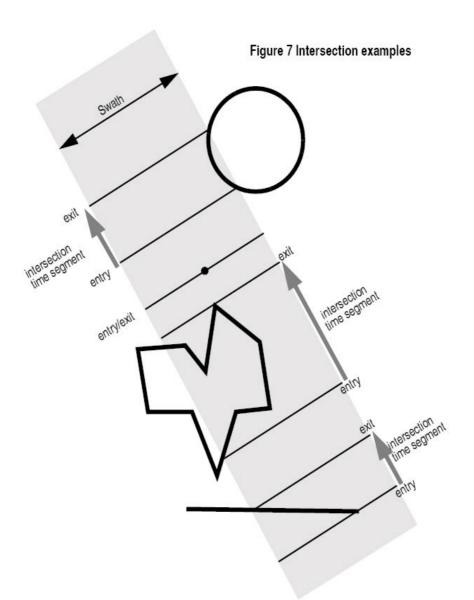


Figure 7: Intersection examples





7.1.6 Intersection Algorithm

The intersection of a swath and a user-defined zone is to be performed on the Earth projected to a map plane in one of the following projections:

- Rectangular projection
- Gnomonic projection

Although the projections are quite different, the intersection rules are identical. The algorithm can however be different, in order to take advantage of a particular feature of a projection.

The purpose of the CFI function ZONEVISTIME is to obtain quickly, accurate intersection segments with a low precision (1 second).

The algorithms assume that the polygon zones are closed and expects a wrap around between the first and the last point. Thus ZONEVISTIME must first close the polygon if necessary.

For ZONEVISTIME the following swath types are defined:

- point swath: instantaneous swath is a point.
- segment swath: instantaneous swath is a segment.
- multi-segment swath: it can be open or closed.
- inertial swath: not used by ZONEVISTIME

The main concept in the algorithm is the transition, defined as the change in coverage of (part of) the swath and the zone (e.g. edge of the swath crosses one polygon side).

7.1.6.1 Intersection with a point swath

The vertices of the polygon defining the area are connected by straight lines in the chosen projection, along track swath points are also connected by straight lines in the same projection.

Transitions are located by linear intersection of the zone sides and the swath along track lines. A transition is only valid if the intersection occurs inside both line segments. The polygon side from <i> to <j> is defined in a clockwise manner inclusive point <i> but exclusive point <j>. The swath line from time <k> to <l> is defined inclusive the template point at <k> but exclusive the template point at <l>.

The fraction of the swath along track line determines the precise timing since time <k> of the intersection. Also the determination if the transition is a on- or off-transition is quite trivial. First a vector is defined, perpendicular to the along track swath line, such that the vector points left. Then, the dot product of the polygon side and this vector is calculated. If the dot product is positive, the transition is on, i.e. the swath enters the zone. If the result is negative, then the swath leaves the zone. If the result equals zero then the transition can be ignored (polygon side and swath overlay, a proper transition will be found with another pair of polygon side - swath line.).

7.1.6.2 Intersection with a segment swath





The left and right side of the swath, are located using the same algorithm as for the point swath. Even left and right time segments can be made based on the left and right hand transitions.

The polygon vertices (and not the sides) are intersected with the along track moving line swath, in order to catch zones smaller than the swath, etc. Swaths for intermediate times between two consecutive times in Swath Template File are considered straight segments, joining an intermediate point of the Left swath line from time <k> to time <l>, with an intermediate point in Right swath line.

7.1.6.3 Intersection with a multi-segment swath

The algorithm used for segment swath is repeated for every segment of the swath, and the visibility segments obtained in each case are merged with the ones of the other swath segments.

For a closed swath further calculations are done: it is checked if the zone is completely inside the swath area in the interval between contiguous visibility segments, or between the beginning of the first orbit and the first visibility segment, or between the last visibility segment and the end of the last orbit computed. If it is inside, segments must be merged because the zone was visible in the interval.

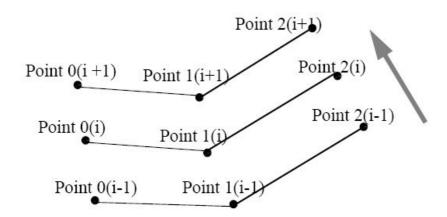


Figure 8: Swath points





7.1.7 Usage Hints

7.1.7.1 Limb-sounding Instruments Intersection

In the case of limb-sounding instrument with a potentially wide azimuth field of view, 2 swaths have to be considered (1 for minimum altitude, 1 for maximum altitude). Furthermore, these 2 swaths are offset in time (i.e. their projection on the earth intersect with a given point at different times). To cope with this, the user must do the following:

- call xv_zone_vis_time twice (once for each extreme altitude swath)
- merge/filter the 2 sets of time segments, depending on what he wants to achieve

7.1.7.2 Zone Coverage

xv_zone_vis_time computes purely geometrical intersections. The resulting zone visibility segments might need some additional filtering by the user. In particular, instrument constraints (e.g. only working outside of sun eclipse) have to be considered by the user.

Furthermore, to help users to deal with zones wider than the swath (i.e. requiring several orbits to cover the whole zone), **xv_zone_vis_time** produces for each zone visibility segment an indication of the coverage type (see Figure 9);

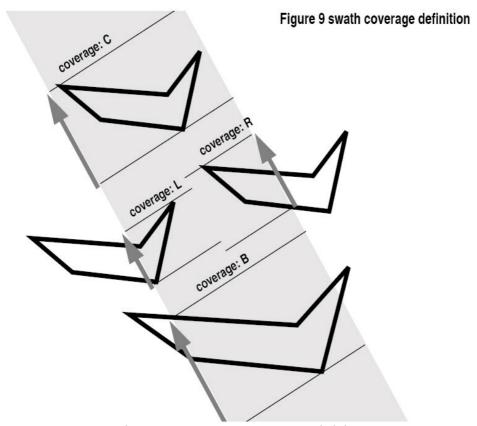


Figure 9: Swath coverage definition





- coverage = C: zone completely covered by the swath
- coverage = R: zone partially covered by the swath, extending over the right edge of the swath
- coverage = L: zone partially covered by the swath, extending over the left edge of the swath
- coverage = B: zone partially covered by the swath, extending over both edges of the swath

7.1.7.3 <u>Combined use of xv_swath_pos and the coverage flag</u>

The EO_VISIBILITY function xv_swath_pos can be used to refine the work performed with xv_zone_vis_time.





7.1.8 Calling sequence

For C programs, the call to **xv zone vis time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               zone num, projection,
               number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *coverage, ierr[XV NUM ERR ZONE VIS TIME],
               status;
      double
               *zone long, *zone lat,
               zone diam, min duration;
      char
               *swath file;
               *zone id, *zone db file;
      char
      status = xv zone vis time(&orbit id,
                            &orbit type,
                            &start orbit, &start cycle,
                            &stop orbit, &stop cycle,
                            &swath flag, swath file,
                            zone id, zone db file,
                            &projection, &zone num,
                            zone long, zone lat, &zone diam,
                            &min duration,
                            &number segments,
                            &bgn orbit, &bgn second,
                            &bgn microsec, &bgn_cycle,
                            &end orbit, &end second,
                            &end microsec, &end cycle,
                            &coverage, ierr);
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 43

/* Or, using the run id */long run id; status = xv zone vis time run(&run id, &orbit type, &start orbit, &start cycle, &stop orbit, &stop cycle, &swath flag, swath_file, zone id, zone db file, &projection, &zone_num, zone long, zone lat, &zone diam, &min duration, &number_segments, &bgn orbit, &bgn second, &bgn microsec, &bgn cycle, &end orbit, &end second, &end microsec, &end cycle, &coverage, ierr);





7.1.9 Input parameters

The xv_zone_vis_time CFI function has the following input parameters:

Table 6: Input parameters of xv_zone_vis_time function

C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xo_orbit _id*	-	Structure that contains the orbit data	-	-
long*	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters. Relative orbits only can be used when the orbit_id was initialized with orbital changes (with xo_orbit_init_def or with	-	Complete.
		xo_orbit_init_file plus an OSF file). In other cases, only the value XV_ORBIT_ABS can be used.		
long	-	First orbit, segment filter. Segments will be filtered as from the beginning of first orbit. First Orbit for the orbit initialization will be used when: Absolute orbit is set to zero. Relative orbit and cycle	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
long	-	Cycle number corresponding to the start_orbit. Dummy when using absolute orbits	cycle number	= 0 or ≥ first cycle in osf
long	-	Last orbit, segment filter. For orbit_id initialized with orbital changes, when: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) or • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between:	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
	xo_orbit _id* long* long long	xo_orbitid* - long* - long -	Structure that contains the orbit data	Structure that contains the orbit data





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 45

			change of the start_orbit.		
			start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)		
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using absolute orbits	cycle number	= 0 or ≥ first cycle in osf
swath_flag	long*	-	Define the use of the swath file:	-	XV_STF = 0
			• 0 = (XV_STF) if the swath file is a swath template file.		XV_SDF = 1 > 0
			 > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits 		
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
zone_id	char*		Identification of the zone, as defined in zone_db_file.		
			This parameter is used ONLY IF zone_num = 0		
zone_db_file	char *		File name of the zone-database-file.		
			This file is used ONLY IF zone_num = 0		
projection	long		projection used to define polygon sides as straight lines:		
			= 0 Read projection from Zones DB		
			= 1 Azimuthal gnomonic		
			= 2 Rectangular lat/long		
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat:		≥ 0
			= 0 no vertices provided, use zone_id / zone_db_file		
			= 1 Point / Circular zone,		
			= 2 Line zone		
			> 2 Polygon zone		
zone_long	double*	all	zone_long[i-1]		
			Geocentric longitude of		
			- circle centre, for circ. zone, i =1		
			- point, for point zone, i = 1		
			- line-end, for line zone, i = 1 or 2		





			- vertices, for polygon zone,		
			i = 1 zone_num		
zone_lat	double*	all	zone_lat[i-1]		
			Geodetic latitude of		
			- circle centre, for circ. zone, i =1		
			- point, for point zone, i = 1		
			- line-end, for line zone, i = 1 or 2		
			- vertices, for polygon zone,		
			i = 1 zone_num		
zone_diam	double		Zone diameter for circular zones,	m	≥ 0.0
			dummy for other zones		
			If diameter equals 0.0 then zone is Point Zone		
min_duration	double		Minimum duration for segments.	s	≥ 0
			Only segments with a duration longer than min_duration will be given on output.		

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
projection	Read projection from the zones DB file	XD_READ_DB	0
(defined in	Azimuthal Gnomonic	XD_GNOMONIC	1
[D_H_SUM])	Rectangular long/lat	XD_RECTANGULAR	2





7.1.10 Output parameters

The output parameters of the xv_zone_vis_time CFI function are:

Table 7: Output parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xv_zone_vis_time	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user.		≥ 0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥ 0
			begin of visibility segment i		< orbital period
			bgn_second[i-1],		
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	μs	≥0
			begin of visibility segment i		999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	Cycle number,		>0
			begin of visibility segment i		NULL when using
			bgn_orbit[i-1],		absolute orbits
			i = 1, number_segments		
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		< orbital period
			end_second[i-1],		
			i = 1, number_segments		





end_microsec	long*	all	Micro seconds within second	μs	≥0
			end of visibility segment i		999999
			end_microsec[i-1],		
			i = 1, number_segments		
end_cycle	long*	all	Cycle number,		>0
			end of visibility segment i		NULL when using
			end_orbit[i-1],		absolute orbits
			i = 1, number_segments		
coverage	long*	all	Zone coverage flag for segment		
			= 0 Zone completely covered by swath		
			= 1 Zone not completely covered by swath, extending over the left edge of the swath.		
			= 2 Zone not completely covered by swath, extending over the right edge of the swath.		
			= 3 Zone not completely covered by swath, extending over both edges of the swath		
			coverage[i], i = 0,		
			(number_segments-1)		
ierr[XV_NUM_ERR_Z ONE_VIS_TIME]	long		Error status flags		

It is also possible to use enumeration values rather than integer values for some of the output arguments, as shown in the table below:

Input	Description	Enumeration value	long
coverage	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transitions found	XV_LEFT	1
	Right extreme transitions found	XV_RIGHT	2
	Both extreme transitions found	XV_BOTH	3

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_zone_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.1.11 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_zone_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_zone_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 8: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Input parameter "Number of ZONE points" is wrong.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_NUM _ZONE_ERR	0
ERR	Input parameter "Orbit Id" is wrong.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_STATUS_ ERR	1
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_TYPE_ER R	2
ERR	Input parameter "Minimum duration" cannot be negative.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_MIN_ DURATION_ERR	3
ERR	Input parameter "Projection" out of range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_PROJECTION_OU T_OF_RANGE_ERR	4
ERR	Wrong swath_flag value	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SWATH_FLAG_E RR	5
ERR	Swath file is not compatible with the orbit file	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_SWATH _ERR	6
ERR	Could not generate the swath template file	Computation not performed	XV_CFI_ZONE_VIS_TI ME_GENSWATH_ERR	7
ERR	Error generating visibility segments for orbit "%d"		XV_ZONE_VIS_TIME_ IN_ORBIT_ERR	8
ERR	Error reading Swath Template File.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_SWATH_FI LE_ERR	9
ERR	Swath type not allowed	Computation not performed	XV_CFI_ZONE_VIS_TI ME_INCORRECT_SW ATH_TYPE_ERR	10
ERR	Cannot allocate memory for	Computation not performed	XV_CFI_ZONE_VIS_TI	11





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 50

	the Swath Template File		ME_ALLOCATE_SWA TH_MEMORY_ERR	
ERR	Input parameter "start_orbit" cannot be negative.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_STAR T_ORBIT_ERR	12
ERR	Error reading OEF/OSF file.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_OSF_ERR	13
WAR N	"start_orbit" is before the first orbit in "orbit_event_file".	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_EARLIER_START _ORBIT_WARN	14
WAR N	"stop_orbit" is after the last orbit in "orbit_event_file".	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_LATER_STOP_OR BIT_WARN	15
ERR	Input parameter "start_orbit" cannot be greater than "stop_orbit".	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_ORBIT_ RANGE_ERR	16
ERR	Error calling "xv_orbitinfo".	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBITINFO_CAL L_ERR	17
ERR	"cycle_length" read from the input "Swath Template File" is not equal to that of any orbits within the orbit range	Computation not performed	XV_CFI_ZONE_VIS_TI ME_INCONSISTENT_S WATH_ERR	18
WAR N	There is at least one orbital change within the requested orbit range.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_ORBITAL_CHAN GE_WARN	19
ERR	Input parameter "zone_id" is an empty string.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ZONE_ID_EMPTY _ERR	20
ERR	Number of characters in input string "zone_id" is different from %li.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_ZONE_I D_LENGTH_ERR	21
ERR	Error reading the ZONE Database file.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_ZONE_DB_ FILE_ERR	22
WAR N	"Projection" parameter set to default.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_DEFAULT_PROJE CTION_WARN	23
ERR	Cannot allocate memory for the ZONE records."	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ALLOCATE_ZON E_MEMORY_ERR	24
ERR	Latitude must be in the range [-90.0, 90.0].	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_LATITU	25





Page: 51

			DE_RANGE_ERR	
WAR N	Two consecutive points are equal, only one is used.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_TWO_EQUAL_POI NTS_WARN	26
ERR	Difference in longitude for 2 consecutive ZONE points is equal to 180.0 degrees (RECTANGULAR projection). Zone definition is ambiguous.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_DIFF_LONG_180_ ERR	27
ERR	Two consecutive ZONE points are antipodal (GNOMONIC projection). Zone definition is ambiguous.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ANTIPODAL_POI NTS_ERR	28
ERR	Error precomputing intersection of two segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENT_INTER SECT_PREC_ERR	32
ERR	Error computing intersection of two segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENT_INTER SECT_COMP_ERR	33
ERR	Error computing gnomonic coordinates.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_GNOMONIC_COO RD_ERR	34
ERR	Two ZONE segments intersect.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_TWO_SEGMENTS _INTERSECT_ERR	35
ERR	Two consecutive ZONE segments are aligned in the same direction.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ALLIGNED_SEG MENTS_ERR	36
ERR	Input parameter "ZONE diameter" cannot be negative (POINT or CIRCLE zone).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ZONE_DIAM_NE GATIVE_ERR	37
ERR	SWATH contains the POLE (RECTANGULAR projection).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POLE_IN_SWATH _ERR	38
ERR	Not convex SWATH quadrilateral for the specified latitude range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CUADRILATERA L_NOT_CONVEX_ERR	39
ERR	Error checking if a point is inside a quadrilateral.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POINT_IN_CUAD RILATERAL_ERR	40
ERR	Error sorting intersections.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SORT_INTERSEC TIONS_ERR	41





Page: 52

ERR	Error calling "swath_pos"	Computation not performed	XV_CFI_ZONE_VIS_TI	57
ERR	Error trying to allocate memory	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MEMORY_ALLO CATION_ERR	56
ERR	Error merging visibility segments	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MERGE_SWATH_ SEGMENTS_VISIBILIT IES_ERR	55
ERR	Error checking visibility segments	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ON_OFF_CHECKI NG_ERR	54
ERR	Error computing Point swath visibilities	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POINT_SWATH_I NTERS_ERR	53
ERR	Error computing Multi- Point swath visibilities	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MULTI_POINT_S WATH_INTERS_ERR	52
ERR	Error calling "orbit info"	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_INFO_ERR	51
ERR	Error computing the ANX longitude	Computation not performed	XV_CFI_ZONE_VIS_TI ME_COMPUTE_ANX_ ERR	50
WAR N	"stop_orbit" is after the last orbit in the orbit file.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_STOP_ORBIT_WA RN	49
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_MODEL_E RR	48
ERR	Error computing final segments for the POINT swath and POINT zone.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_TO_TIME_ CALL_ERR	47
ERR	Error checking the visibility segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CHECK_SEGMEN TS_ERR	46
WAR N	Warning checking the visibility segments.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_CHECK_SEGMEN TS_WARN	45
ERR	Cannot allocate memory for the coverage.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_COVERAGE_ME MORY_ERR	44
ERR	Too many time segments (more than MAX_ORBITS).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MAX_ORBITS_ER R	43
ERR	Cannot (re)allocate memory for the segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENTS_MEM ORY_ERR	42





			ME_SWATH_POS_ER R	
ERR	Error calling "Polygon_inner_point"	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POLYGON_INNE R_POINT_ERR	58
ERR	Error comparing orbits orbital changes	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CHECK_ORBITAL_CH ANGE_ERR	59
ERR	Error converting zone point arrays to zone record	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CONVERT_ZONE_ER R	64
ERR	No suitable zone found for orbit interval	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ZONE_ORBIT_ERR	65
ERR	Error cloning zone	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CLONE_ZONE_ERR	66
ERR	Input orbit interval is completely outside STF validity interval	Computation not performed	XV_CFI_ZONE_VIS_TIME_ ORBIT_INTERVAL_STF_E RR	67
WARN	Input orbit interval is partially outside STF validity interval	Computation performed	XV_CFI_ZONE_VIS_TIME_ ORBIT_INTERVAL_STF_W ARN	68
ERR	Input OSF has non-trivial MLST non linear terms but STF was generated without them	Computation not performed	XV_CFI_ZONE_VIS_TIME_ OSF_NON_LIN_STF_OLD_ WARN	69
WARN	Swath flag larger than MLST linear approximation validity. MLST linear approximation validity used.	Computation performed	XV_CFI_ZONE_VIS_TIME_ SWATH_FLAG_LARGER_T HAN_LIN_APPROX_VAL_ WARN	70
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_ZONE_VIS_TIME_ GEO_SAT_ERR	71

Note that error codes and messages have been completely modified since the last issue due to a completely new implementation of the CFI function.





7.2 xv_zone_vis_time_no_file

7.2.1 Overview

The xv_zone_vis_time_no_file function computes all the orbital segments for which a given instrument swath intercepts a user-defined zone at the surface of the Earth ellipsoid.

The aim of this function is to provide another interface for the function **xv_zone_vis_time** in which the zone and the swath are not provided with files but with the data structures (see section 7.2.2).

Information about zones, swaths and intersection algorithms can be found in section 7.1.

7.2.2 Calling sequence

For C programs, the call to **xv_zone_vis_time_no_file** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo_orbit_id orbit_id = {NULL};
               orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               zone num, projection,
               number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *coverage, ierr[XV NUM ERR ZONE VIS TIME],
               status;
               *zone long, *zone lat,
      double
               zone diam, min duration;
      xd stf file stf data;
      xd zone rec zone data;
      status = xv zone vis time no file(&orbit id,
                            &orbit type,
                            &start orbit, &start cycle,
                            &stop orbit, &stop cycle,
                            &stf data,
                            &zone data,
                            &projection, &zone num,
                            zone long, zone lat, &zone diam,
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 55

&min_duration,
&number_segments,
&bgn_orbit, &bgn_second,
&bgn_microsec, &bgn_cycle,
&end_orbit, &end_second,
&end_microsec, &end_cycle,
&coverage, ierr);

/* Or, using the run id */long run id; status = xv zone vis time no file run(&run id, &orbit type, &start orbit, &start cycle, &stop orbit, &stop cycle, &stf data, &zone data, &projection, &zone num, zone long, zone lat, &zone diam, &min duration, &number segments, &bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle, &end orbit, &end second, &end microsec, &end cycle, &coverage, ierr);





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 56

7.2.3 Input parameters

The $xv_zone_vis_time_no_file$ CFI function has the following input parameters:

Table 9: Input parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long*	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters. Relative orbits only can be used when the orbit_id was initialized with orbital changes (with xo_orbit_init_def or with xo_orbit_init_file plus an OSF file). In other cases, only the value XV_ORBIT_ABS can be used.	-	Complete.
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beginning of first orbit. First Orbit for the orbit initialization will be used when: Absolute orbit is set to zero. Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using absolute orbits	cycle number	= 0 or ≥first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. For orbit_id initialized with orbital changes, when: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) or • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 57

			change of the start_orbit.		
			 start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle) 		
			If it is not initialized with orbital changes, stop orbit will be set to the last orbit in orbit_id initialization.		
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using absolute orbits	cycle number	= 0 or ≥ first cycle in osf
stf_data	xd_stf_f ile	-	Swath template data (structure described in [D_H_SUM]).	-	-
			The swath structure can be got by:		
			 Reading a swath template file with the CFI function xd_read_stf. 		
			• Generating the swath data with the CFI function xv_gen_swath_no_file		
zone_data	xd_zone _read	-	Zone data (structure described in [D_H_SUM]) that can be got by reading a zone from a zone database file with the CFI function xd_read_zone.	-	-
projection	long		projection used to define polygon sides as straight lines:	-	-
			= 0 Read projection from Zones DB		
			= 1 Azimuthal gnomonic		
			= 2 Rectangular lat/long		
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat:		≥ 0
			= 0 no vertices provided, use zone_id / zone_db_file		
			= 1 Point / Circular zone,		
			= 2 Line zone		
			> 2 Polygon zone		
zone_long	double*	all	zone_long[i-1]		
			Geocentric longitude of		
			- circle centre, for circ. zone, i =1		
			- point, for point zone, i = 1		





			line-end, for line zone, i = 1 or 2vertices, for polygon zone,i = 1 zone_num		
zone_lat	double*	all	zone_lat[i-1] Geodetic latitude of - circle centre, for circ. zone, i =1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		
zone_diam	double		Zone diameter for circular zones, dummy for other zones If diameter equals 0.0 then zone is Point Zone	m	≥ 0.0
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥ 0

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
projection	Read projection from the zones DB file	XD_READ_DB	0
(defined in	Azimuthal Gnomonic	XD_GNOMONIC	1
[D_H_SUM])	Rectangular long/lat	XD_RECTANGULAR	2





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 59

7.2.4 Output parameters

The output parameters of the xv_zone_vis_time_no_file CFI function are:

Table 10: Output parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xv_zone_vis_time_no_fil	long		Function status flag,		
е			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user.		≥ 0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥ 0
			begin of visibility segment i		< orbital period
			bgn_second[i-1],		
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	μs	≥0
			begin of visibility segment i		999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	Cycle number,		>0
			begin of visibility segment i		NULL when using
			bgn_orbit[i-1],		absolute orbits
			i = 1, number_segments		
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		< orbital period
			end_second[i-1],		
			i = 1, number_segments		





					_
end_microsec	long*	all	Micro seconds within second	μs	≥ 0
			end of visibility segment i		999999
			end_microsec[i-1],		
			i = 1, number_segments		
end_cycle	long*	all	Cycle number,		>0
			end of visibility segment i		NULL when using
			end_orbit[i-1],		absolute orbits
			i = 1, number_segments		
coverage	long*	all	Zone coverage flag for segment		
			= 0 Zone completely covered by swath		
			= 1 Zone not completely covered by swath, extending over the left edge of the swath.		
			= 2 Zone not completely covered by swath, extending over the right edge of the swath.		
			= 3 Zone not completely covered by swath, extending over both edges of the swath		
			coverage[i], i = 0,		
			(number_segments-1)		
ierr[XV_NUM_ERR_Z ONE_VIS_TIME]	long		Error status flags		

It is also possible to use enumeration values rather than integer values for some of the output arguments, as shown in the table below:

Input	Description	Enumeration value	long
coverage	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transitions found	XV_LEFT	1
	Right extreme transitions found	XV_RIGHT	2
	Both extreme transitions found	XV_BOTH	3

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_zone_vis_time_no_file** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.2.5 Warnings and errors

The error and warning messages and codes for **xv_zone_vis_time_no_file** are the same than for **xv_zone_vis_time** (see Table 8).

The error messages/codes can be returned by the CFI function xv_get_msg/xv_get_code after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV ZONE VIS TIME ID (from Table 1).





7.3 xv_station_vis_time

7.3.1 Overview

The **xv_station_vis_time** function computes ground station visibility segments, the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

In addition, **xv_station_vis_time** calculates for every visibility segment the time of zero-doppler (i.e. the time at which the range-rate to the station is zero).

xv station vis time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data and files, also for precise propagation if applicable (see [ORBIT SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission).
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
 - TLE files
- the Instrument Swath File, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EO_VISIBILITY library (**xv_gen_swath** function).
 - A swath definition file, describing the swath geometry. In this case the **xv_station_vis_time** generates the swath points for a number of orbits given by the user.
- The Station Database File, describing the location and the physical mask of each ground station, and the mask parameters for a list of spacecrafts from each station (considered only when mask 'from file' option is selected).

The time intervals used by **xv_station_vis_time** are expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Station Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EO_ORBIT (xo_time_to_orbit and xo_orbit_to_time functions).





NOTE: If **xv_station_vis_time** is used with a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length), the behaviour depends on the swath file introduced as input:

- •If a **swath template file** is used, **xv_station_vis_time** automatically will ignore the orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits), since swath template file is generated from a reference orbit with a particular geometry, so it is not valid for a different geometry.
- •If a **swath definition file** is introduced, **xv_station_vis_time** will perform the computations across orbital changes, and will return the visibility segments corresponding to the whole orbital range. Internally, swath template files valid for every orbital change are generated to perform the calculations.
- **NOTE 2**:If a swath template file with the variable header tags *Start_Validity_Range* and *Stop_Validity_Range* is used as input, only the segments belonging to that orbit range will be returned.
- **NOTE 3**: If a swath definition file is introduced, it can be also introduced every how many orbits the swath template file must be recomputed (swath_flag parameter, see section 66). If the orbit_id has been initialized with an OSF file with MLST non linear terms and the parameter swath_flag is greater than the linear approximation validity, the recomputation of swath template file will be done every linear approximation validity orbits.





7.3.2 Calling interface

For C programs, the call to **xv** station **vis** time is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               mask, number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *zdop orbit, *zdop second,
               *zdop microsec, *zdop cycle,
               ierr[XV NUM ERR STATION VIS TIME],
               aos elevation, los elevation, min duration;
      double
               *swath file;
      char
      char
               *sta id, *sta db file;
      status = xv station vis time(
                        &orbit id, &orbit type,
                        &start orbit, &start cycle,
                        &stop orbit, &stop cycle,
                        &swath flag, &swath file, sta id, sta db file,
                        &mask, &aos elevation, &los elevation,
                        &min duration,
                        &number segments,
                        &bgn orbit, &bgn second,
                        &bgn microsec, &bgn cycle,
                        &end orbit, &end second,
                        &end microsec, &end cycle,
                        &zdop orbit, &zdop second,
                        &zdop microsec, &zdop cycle,
                        ierr);
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 65

```
/* Or, using the run id */
long run id;
status = xv_station_vis_time_run(
                 &run id, &orbit type,
                 &start orbit, &start cycle,
                 &stop orbit, &stop cycle,
                 &swath flag, &swath file, sta id, sta db file,
                 &mask, &aos elevation, &los elevation,
                 &min duration,
                 &number segments,
                 &bgn orbit, &bgn second,
                 &bgn microsec, &bgn cycle,
                 &end orbit, &end second,
                 &end microsec, &end cycle,
                 &zdop_orbit, &zdop_second,
                 &zdop microsec, &zdop cycle,
                 ierr);
```





7.3.3 Input parameters

Table 11: Input parameters of xv_station_vis_time

C name	C type	Array Elemen t	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orb it_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	1	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter.	absolute or	= 0
			Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file)	relative orbit number	or: • absolute orbits ≥start_osf
			First Orbit in the orbit_scenario_file will be used when:		 relative orbits ≤repeat cyc
			Absolute orbit is set to zero.		i spesit sys
			 Relative orbit and cycle number set to zero. 		
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	_	Last orbit, segment filter.	absolute or	= 0
			When:	relative orbit	or:
			stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS)	number	absolute orbits ≥start_osf
			stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL)		 relative orbits ≤repeat cycle
			the stop_orbit will be set to the minimum value between:		
			 the last orbit within the orbital change of the start_orbit. 		
			 start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle) 		
			If it is not initialized with orbital changes, stop orbit will be set to the last orbit in orbit_id initialization.		
stop_cycle	long	-	Cycle number corresponding to the	cycle	= 0 or
			stop_orbit. Dummy when using relative orbits	number	≥first cycle in osf





swath_flag	long*	-	Define the use of the swath file:	-	XV_STF = 0
			0 = (XV_STF) if the swath file is a swath template file.		XV_SDF = 1 > 0
			> 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits		
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
sta_id	char*		identification name of the station		
station_db_file	char *		File name of the station database file		
			This file is read each time the function is called		
mask	long		mask used to define visibility		all
			= XV_COMBINE combine AOS/LOS elevations and physical mask (nominal mode)		
			= XV_AOS_LOS consider only AOS/LOS elevations		
			= XV_PHYSICAL consider only physical mask		
			= XV_FROM_FILE consider mask given in the Station Database File		
aos_elevation	double		Minimum elevation to consider at AOS (i.e. before considering start of visibility).	deg	≥ 0.0
			Not used if mask=XV_FROM_FILE		
los_elevation	double		Maximum elevation to consider at LOS (i.e. before considering end of visibility).	deg	≥ 0.0 aos_elevation
			Not used if mask=XV_FROM_FILE		
min_duration	double		Minimum duration for segments.	s	≥ 0.0
			Only segments with a duration longer than min_duration will be given on output.		

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
mask	Combine AOS/LOS and physical mask	XV_COMBINE	0





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 68

	Use only AOS/LOS	XV_AOS_LOS	1	
	Use only physical mask	XV_PHYSICAL	2	
	Use mask from file	XV_FROM_FILE	3	





7.3.4 Output parameters

Table 12: Output parameters of xv_station_vis_time function

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_station_vis_time	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥0
			begin of visibility segment i		< orbital
			bgn_second[i-1],		period
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	μs	≥0
			begin of visibility segment i		≤ 999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	Cycle number,		>0
			begin of visibility segment i		NULL when
			bgn_cycle[i-1],		using absolute
			i = 1, number_segments		orbits
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		< orbital
			end_second[i-1],		period
			i = 1, number_segments		
end_microsec	long*	all	Micro seconds within second	μs	≥0





			end of visibility segment i		≤ 999999
			end_microsec[i-1],		
			i = 1, number_segments		
end_cycle	long*	all	Cycle number,		>0
			end of visibility segment i		NULL when
			end_cycle[i-1],		using absolute
			i = 1, number_segments		orbits
zdop_orbit	long*	all	Orbit number,		> 0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		
			zdop_orbit[i-1],		
			i = 1, number_segments		
zdop_second	long*	all	Seconds since ascending node,	s	>= 0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		< orbital period
			zdop_second[i-1],		
			i = 1, number_segments		
zdop_microsec	long*	all	Micro seconds within second	μs	0 =<
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		=< 999999
			zdop_microsec[i-1],		
			i = 1, number_segments		
zdop_cycle	long*	all	Cycle number,		>0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		NULL when using absolute
			zdop_second[i-1],		orbits
			i = 1, number_segments		
ierr[XV_NUM_ER	long		Error status flags		1

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_station_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.3.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_station_vis_time CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_station_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 13: Error messages and codes for xv_station_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error in input parameter Orbit Id.	Computation not performed	XV_CFI_STATION_VI S_TIME_ORBIT_STAT US_ERR	0
ERR	Error in input parameter to stavistime.	Computation not performed	XV_CFI_STATION_VI S_TIME_INPUTS_CHE CK_ERR	1
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_STATION_VI S_TIME_ORBIT_TYPE _ERR	2
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_STATION_VI S_TIME_ORBIT_MOD EL_ERR	3
ERR	Error transforming start orbit from relative to absolute orbits.	Computation not performed	XV_CFI_STATION_VI S_TIME_REL_TO_ABS _START_ERR	4
ERR	Error transforming stop orbit from relative to absolute orbits	Computation not performed	XV_CFI_STATION_VI S_TIME_REL_TO_ABS _STOP_ERR	5
ERR	Error reading the Orbit scenario file.	Computation not performed	XV_CFI_STATION_VI S_TIME_OSF_READ_E RR	6
ERR	Error reading the swath template file.	Computation not performed	XV_CFI_STATION_VI S_TIME_SWATH_FLA G_ERR	7
ERR	Error reading the swath template file.	Computation not performed	XV_CFI_STATION_VI S_TIME_SWATH_REA D_ERR	8
ERR	Error wrong swath type selected.	Computation not performed	XV_CFI_STATION_VI S_TIME_SWATH_TYP E_ERR	9





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 72

ERR	Swath file is not compatible with the orbit file	Computation not performed	XV_CFI_STATION_VI S_TIME_WRONG_SW ATH_ERR	10
WAR N	Warning, start orbit is	Computation performed.	XV_CFI_STATION_VI	11
	outside range of OSF.	Message to inform the user.	S_TIME_FIRST_ORBIT _WARN	
WAR N	Warning, stop orbit is	Computation performed.	XV_CFI_STATION_VI	12
	outside range of OSF.	Message to inform the user.	S_TIME_LAST_ORBIT _WARN	
ERR	Actual stop orbit is earlier than actual start orbit.	Computation not performed	XV_CFI_STATION_VI S_TIME_WRONG_INT ERVAL_ERR	13
ERR	Error obtaining orbital information in orbit info.	Computation not performed	XV_CFI_STATION_VI S_TIME_ORBIT_INFO _ERR	14
WAR N	Warning, there is an orbital change within the requested orbits.	Computation performed.	XV_CFI_STATION_VI	15
		Message to inform the user.	S_TIME_ORBIT_CHA NGE_WARN	
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_STATION_VI S_TIME_INTERNAL_ MEMORY_ERR	16
ERR	There is a potential memory overload, try with a smaller orbital interval.	Computation not performed	XV_CFI_STATION_VI S_TIME_POTENTIAL_ MEMORY_ERR	17
ERR	Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_STATION_VI S_TIME_INCONSISTE NT_SWATH_ERR	18
ERR	Error read info the ground station's mask data file.	Computation not performed	XV_CFI_STATION_VI S_TIME_READ_STA_E RR	19
ERR	Error transforming the station's mask into an equivalent zone.	Computation not performed	XV_CFI_STATION_VI S_TIME_AZEL2LONL AT_ERR	20
ERR	Error calling ZONEVISTIME to calculate transitions.	Computation not performed	XV_CFI_STATION_VI S_TIME_ZONE_VIS_TI ME_CALL_ERR	21
ERR	Error refining intersection time.	Computation not performed	XV_CFI_STATION_VI S_TIME_CALL_STAVI S_ERR	22
WAR N	Accuracy of 0.001 deg in	Computation performed.	XV_CFI_STATION_VI S_TIME_CALL_STAVI S_WARN	23
	elevation not reached in orbit %li. Orbit too close to the mask limit.	Message to inform the user.		
ERR	Error allocating memory for the time segments.	Computation not performed.	XV_CFI_STATION_VI S_TIME_SEGMENTS_ MEMORY_ERR	24
ERR	Error calculating zero	Computation not performed	XV_CFI_STATION_VI	25
		1	<u> </u>	1





	doppler interval.		S_TIME_ZERO_DOPPL ER_ERR	
WARN	Segment longer than half nodal period deleted.	Computation performed. Message to inform the user.	XV_CFI_STATION_VI S_TIME_LONG_SEGM _SKIPPED_WARN	26
ERR	Error transforming from absolute to relative.	Computation not performed	XV_CFI_STATION_VI S_TIME_ABS_TO_REL _ERR	27
ERR	Error in the mask type read from the mask data given in the file	Computation not perfored	XV_CFI_STATION_VIS_TI ME_MASK_FROM_FILE_M ASK_TYPE_ERR	32
ERR	Error finding the spacecraft for the station when mask data given from file	Computation not performed	XV_CFI_STATION_VIS_TI ME_MASK_FROM_FILE_N O_SC_ERR	33
ERR	Error converting zone point array to zone record	Computation not perfored	XV_CFI_STATION_VIS_TI ME_CONVERT_ZONE_ER R	34
ERR	Input orbit interval is completely outside STF validity interval	Computation not perfored	XV_CFI_STATION_VIS_TI ME_ORBIT_INTERVAL_ST F_ERR	35
WARN	Input orbit interval is partially outside STF validity interval	Computation perfored	XV_CFI_STATION_VIS_TI ME_ORBIT_INTERVAL_ST F_WARN	36
ERR	Input OSF has non-trivial MLST non linear terms but STF was generated without them	Computation not perfored	XV_CFI_STATION_VIS_TI ME_OSF_NON_LIN_STF_O LD_WARN	37
WARN	Swath flag larger than MLST linear approximation validity. MLST linear approximation validity used.	Computation perfomed	XV_CFI_STATION_VIS_TI ME_SWATH_FLAG_LARGE R_THAN_LIN_APPROX_VA L_WARN	
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_STATION_VIS_TI ME_GEO_SAT_ERR	39





7.4 xv_station_vis_time_no_file

7.4.1 Overview

The **xv_station_vis_time_no_file** function computes ground station visibility segments, the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

The aim of this function is to provide another interface for the function **xv_station_vis_time** in which the station and the swath are not provided with files but with data structures (see section 7.2.2).

7.4.2 Calling interface

For C programs, the call to xv station vis time no file is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start_orbit, start_cycle,
               stop orbit, stop cycle,
               mask, number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn_cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *zdop orbit, *zdop second,
               *zdop microsec, *zdop cycle,
               ierr[XV NUM ERR STATION VIS TIME],
               status;
      double
               aos elevation, los elevation, min duration;
      xd stf file stf data;
      xd station rec station data;
      status = xv station vis time no file(
                        &orbit id, &orbit type,
                        &start orbit, &start cycle,
                        &stop orbit, &stop cycle,
                        &stf data, &station_data,
                        &mask, &aos elevation, &los elevation,
                        &min duration,
                        &number segments,
                        &bgn orbit, &bgn second,
                        &bgn microsec, &bgn cycle,
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 75

&end_orbit, &end_second,
&end_microsec, &end_cycle,
&zdop_orbit, &zdop_second,
&zdop_microsec, &zdop_cycle,
ierr);

```
/* Or, using the run id */
long run id;
status = xv_station_vis_time_no_file_run(
                 &run id, &orbit type,
                 &start orbit, &start cycle,
                 &stop orbit, &stop cycle,
                 &stf data, &station data,
                 &mask, &aos elevation, &los elevation,
                 &min duration,
                 &number segments,
                 &bgn orbit, &bgn second,
                 &bgn microsec, &bgn cycle,
                 &end orbit, &end second,
                 &end microsec, &end cycle,
                 &zdop orbit, &zdop second,
                 &zdop microsec, &zdop cycle,
                 ierr);
```





7.4.3 Input parameters

Table 14: Input parameters of xv_station_vis_time_no_file

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orb it_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	_	First orbit, segment filter.	absolute or	= 0
			Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file)	relative orbit number	or: • absolute orbits ≥start_osf
			First Orbit in the orbit_scenario_file will be used when:		relative orbits ≤ repeat cycle
			Absolute orbit is set to zero.		
			Relative orbit and cycle number set to zero.		
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When:	absolute or relative orbit	= 0 or:
			stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS)	number	 absolute orbits ≥start_osf
			• stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL)		 relative orbits ≤ repeat cycle
			the stop_orbit will be set to the minimum value between:		
			the last orbit within the orbital change of the start_orbit.		
			start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)		
			If it is not initialized with orbital changes, stop orbit will be set to the last orbit in orbit_id initialization.		
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative	cycle number	= 0 or
			orbits		≥ first cycle in osf
stf_data	xd_stf		Swath template data (structure		





	_file	described in [D_H_SUM]).		
		The swath structure can be got by:		
		 Reading a swath template file with the CFI function xd_read_stf. 		
		 Generating the swath data with the CFI function xv_gen_swath_no_file 		
station_data	xd_statio - n_rec	Station data (structure described in [D_H_SUM]) that can be got by reading a station from a station database file with the CFI function xd_read_station.	-	-
mask	long	mask used to define visibility		all
		= XV_COMBINE combine AOS/LOS elevations and physical mask (nominal mode)		
		= XV_AOS_LOS consider only AOS/LOS elevations		
		= XV_PHYSICAL consider only physical mask		
		= XV_FROM_FILE consider mask given in the Station Database File		
aos_elevation	double	Minimum elevation to consider at AOS (i.e. before considering start of visibility).	deg	≥ 0.0
		Not used if mask=XV_FROM_FILE		
los_elevation	double	Maximum elevation to consider at LOS	deg	≥0.0
		(i.e. before considering end of visibility).		≤ aos_elevation
		Not used if mask=XV_FROM_FILE		
min_duration	double	Minimum duration for segments.	s	≥ 0.0
		Only segments with a duration longer than min_duration will be given on output.		

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
mask	Combine AOS/LOS and physical mask	XV_COMBINE	0
	Use only AOS/LOS	XV_AOS_LOS	1
	Use only physical mask	XV_PHYSICAL	2





78

Page:

Use mask from file	XV_FROM_FILE	3





Page:

7.4.4 Output parameters

Table 15: Output parameters of xv_station_vis_time_no_file function

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_station_vis_time	long		Function status flag,		
_no_file			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥0
			begin of visibility segment i		< orbital
			bgn_second[i-1],		period
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	μs	≥0
			begin of visibility segment i		≤999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	Cycle number,		>0
			begin of visibility segment i		NULL when
			bgn_cycle[i-1],		using absolute orbits
			i = 1, number_segments		or site
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		< orbital
			end_second[i-1],		period
			i = 1, number_segments		
end_microsec	long*	all	Micro seconds within second	μs	≥0





			end of visibility segment i		≤ 999999
			end_microsec[i-1],		
			i = 1, number_segments		
end_cycle	long*	all	Cycle number,		>0
			end of visibility segment i		NULL when
			end_cycle[i-1],		using absolute orbits
			i = 1, number_segments		Orbits
zdop_orbit	long*	all	Orbit number,		> 0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		
			zdop_orbit[i-1],		
			i = 1, number_segments		
zdop_second	long*	all	Seconds since ascending node,	s	>= 0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		< orbital period
			zdop_second[i-1],		
			i = 1, number_segments		
zdop_microsec	long*	all	Micro seconds within second	μs	0 =<
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		=< 999999
			zdop_microsec[i-1],		
			i = 1, number_segments		
zdop_cycle	long*	all	Cycle number,		>0
			time of zero doppler (-1 if no zero doppler within corresponding visibility segment)		NULL when using absolute orbits
			zdop_second[i-1],		
			i = 1, number_segments		
ierr[XV_NUM_ER R_STATION_VIS_ TIME]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_station_vis_time_no_file** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.4.5 Warnings and errors

The error and warning messages and codes for **xv_station_vis_time_no_file** are the same than for **xv_station_vis_time** (see Table 13).

The error messages/codes can be returned by the CFI function xv_get_msg/xv_get_code after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV STATION VIS TIME ID (from Table 1).





7.5 xv_sc_vis_time

7.5.1 Overview

The **xv_sc_vis_time** function computes all the orbital segments for which Communication Terminal of a target satellite (LEO or GEO) is visible from Communication Terminal of a source satellite (LEO).

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

xv_sc_vis_time requires access to the orbit_id (xo_orbit_id) data structure of both satellites. For orbit id initialization please refer to [ORBIT_SUM].

The time intervals used by **xv_sc_vis_time** are expressed in absolute or relative orbit numbers (with respect to source satellite). This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Target Satellite Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in [ORBIT_SUM] (xo_time_to_orbit and xv_orbit_to_time functions).

The xv_sc_vis_time function considers the following sources of occultation, which can be configured through xv link data input struct:

- Earth plus a minimum tangent height.
- Satellite inclusive and exclusive masks, which are zones of azimuth and elevation where visibility is possible (inclusive mask) or not possible (exclusive mask). With this masks all the restrictions (mechanical or of any type) must be simulated.

Notes about definition of masks:

- The masks are defined as closed zones.
- These zones are defined in the input struct xv_link_data with arrays of azimuth and elevation points that define a polygon in the azimuth-elevation plane (last point in array is closed with first point in array internally).
- It must be distinguished between azimuth = 0. deg and azimuth = 360. deg, since they are considered different in the azimuth-elevation plane; this has been done to make the definition of masks easier.

7.5.2 Calling interface

For C programs, the call to **xv sc vis time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer_visibility.h"
{
```





```
xo orbit id orbit id1 = {NULL};
xo orbit id orbit id2 = {NULL};
xp sat nom trans id sat nom trans id1 = {NULL};
xp_sat_nom_trans_id sat_nom_trans_id2 = {NULL};
xp sat trans id
                   sat trans id1 = {NULL};
xp sat trans id
                   sat trans id2 = {NULL};
xp instr trans id instr trans id1 = {NULL};
xp_instr_trans_id instr_trans_id2 = {NULL};
long
             orbit type,
             start orbit, start_cycle,
             stop_orbit, stop_cycle,
             number segments,
             *bgn orbit, *bgn second,
             *bgn microsec, *bgn cycle,
             *end orbit, *end_second,
             *end microsec, *end cycle,
             ierr[XV NUM ERR SC VIS TIME],
             status;
            min duration;
double
xv link data link data;
status = xv sc vis time(
                 &orbit id1, &sat nom trans id1,
                 &sat trans id1, &instr trans id1, &orbit type,
                 &start orbit, &start cycle,
                 &stop orbit, &stop cycle,
                 &orbit id2, &sat nom trans id2,
                 &sat trans id2, &instr trans id2,
                 &link data, &min duration,
                 &number segments,
                 &bgn orbit, &bgn second,
                 &bgn microsec, &bgn cycle,
                 &end_orbit, &end_second,
                 &end microsec, &end cycle,
                 ierr);
/* Or, using the run id */
long run id1, run id2;
status = xv_sc_vis_time_run(
                 &run id1, &run id2, &orbit type,
                 &start orbit, &start cycle,
```





&stop_orbit, &stop_cycle, &link_data, &min_duration, &number_segments, &bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle, &end_orbit, &end_second, &end_microsec, &end_cycle, ierr);

}



7.5.3 Input parameters



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 85

Table 16: Input parameters of xv_sc_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id1	xo_orbit_id*	-	Structure that contains the orbit data of the source satellite	-	-
sat_nom_trans _id1	xp_sat_nom_ trans_id*	-	Structure that contains the Sat. Nom Trans. of the source satellite	-	-
sat_trans_id1	xp_sat_trans _id*	-	Structure that contains the Sat. Trans. of the source satellite	-	-
instr_trans_id1	xp_instr_tran s_id*	-	Structure that contains the Instr. Trans. of the source satellite	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter.	absolute or	= 0
			Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file)	relative orbit number	or: absolute orbits
			First Orbit in the orbit_scenario_file will be used when:		≥start_osf • relative
			Absolute orbit is set to zero.		orbits ≤
			Relative orbit and cycle number set to zero.		repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≤ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter.	absolute or	= 0
			When:	relative orbit	or:
			stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS)	number	• absolute orbits
			stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL)		≥start_osf • relative orbits ≤
			the stop_orbit will be set to the minimum value between:		repeat cycle
			the last orbit within the orbital change of the start_orbit.		
			start_orbit+cycle_length-1 (i.e. the input orbit range will be a		





			complete cycle)		
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≤first cycle in osf
orbit_id2	xo_orbit_id*	-	Structure that contains the orbit data of the target satellite	-	-
sat_nom_trans _id2	xp_sat_nom_ trans_id*	-	Structure that contains the Sat. Nom Trans. of the source satellite	-	-
sat_trans_id2	xp_sat_trans _id*	-	Structure that contains the Sat. Trans. of the target satellite	-	-
instr_trans_id2	xp_instr_tran s_id*	-	Structure that contains the Instr. Trans. of the target satellite	-	-
link_data	xv_link_data*	-	Link data (minimum tangent height and masks)	[m] for minimum height	Height �0. Azimuth range [0., 360.]
				[deg] for azimuth and	Elevation range:
				elevation	[-90., 90.]
min_duration	double	-	Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥0.0





7.5.4 Output parameters

Table 17: Output parameters of xv_sc_vis_time function

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_sc_vis_time	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥ 0
			begin of visibility segment i		< orbital
			bgn_second[i-1],		period
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	ms	≥ 0
			begin of visibility segment i		≤ 999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	Cycle number,		>0
			begin of visibility segment i		NULL when
			bgn_cycle[i-1],		using absolute orbits
			i = 1, number_segments		Orbito
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		<orbital period<="" td=""></orbital>
			end_second[i-1],		
			i = 1, number_segments		
end_microsec	long*	all	Micro seconds within second	ms	≥ 0





			end of visibility segment i end_microsec[i-1],	≤ 999999
			i = 1, number_segments	
end_cycle	long*	all	Cycle number,	>0
			begin of visibility segment i	NULL when
			bgn_cycle[i-1],	using absolute orbits
			i = 1, number_segments	
ierr[XV_NUM_E RR_SC_VIS_TI ME]	long		Error status flags	

Memory Management: Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_sc_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.5.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_sc_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library **xv get msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_sc_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 18: Error messages of xv_sc_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	XV_CFI_SC_VIS_TIME_INT ERNAL_MEMORY_ERR	No computation performed	Error allocating internal memory.	0
ERR	XV_CFI_SC_VIS_TIME_OR BIT_STATUS_ERR	No computation performed	Wrong input orbit Id.	1
ERR	XV_CFI_SC_VIS_TIME_XV _SC_INPUTS_CHECK_ER R	No computation performed	Error in input parameters.	2
ERR	XV_CFI_SC_VIS_TIME_OR BIT_TYPE_ERR	No computation performed	Input parameter \"orbit_type\" is out of range.	3
WARN	XV_CFI_SC_VIS_TIME_ST ART_ORBIT_WARN	Computation performed	Input \"start_orbit\" below first OSF orbit: take first OSF orbit for computations.	4
ERR	XV_CFI_SC_VIS_TIME_RE L_TO_ABS_START_ERR	No computation performed	Error in absolute start orbit computation.	5
ERR	XV_CFI_SC_VIS_TIME_RE L_TO_ABS_STOP_ERR	No computation performed	Error in absolute stop orbit computation.	6
ERR	XV_CFI_SC_VIS_TIME_WR ONG_ORBIT_RANGE_ERR	No computation performed	Wrong orbit range.	7
ERR	XV_CFI_SC_VIS_TIME_XV _ORBIT_INFO_ERR	No computation performed	Error in orbit parameters computation. Orbit no: (%ld).	8
ERR	XV_CFI_SC_VIS_TIME_TI ME_CHANGE_ERR	No computation performed	Error performing a time transformation.	9
ERR	XV_CFI_SC_VIS_TIME_VIS _CHECK_ERR	No computation performed	Error checking the visibility.	10
WARN	XV_CFI_SC_VIS_TIME_FIR ST_ORBIT_VIS_WARN	Computation performed	First orbit starts with visibility.	11





ERR	XV_CFI_SC_VIS_TIME_MA X_NUMBER_ITER_ERR	No computation performed	Maximum number of iterations. Orbit no: (%ld).	12
ERR	XV_CFI_SC_VIS_TIME_XV _TIME_SEC_ERR	No computation performed	Error in time computations. Orbit no: (%ld).	13
ERR	XV_CFI_SC_VIS_TIME_AB S_TO_REL_BGN_ERR	No computation performed	Error transforming absolute to relative begin segments.	14
ERR	XV_CFI_SC_VIS_TIME_AB S_TO_REL_END_ERR	No computation performed	Error transforming absolute to relative end segments.	15
WARN	XV_CFI_SC_VIS_TIME_LA ST_ORBIT_VIS_WARN	Computation performed	Last orbit ends with visibility	16
ERR	XV_CFI_SC_VIS_TIME_SA T_NOM_ATT_STATUS_ER R,	No computation performed	Wrong satellite nominal attitude ld.	17
ERR	XV_CFI_SC_VIS_TIME_SA T_ATT_STATUS_ERR	No computation performed	Wrong satellite attitude ld.	18
ERR	XV_CFI_SC_VIS_TIME_INS TR_ATT_STATUS_ERR	No computation performed	Wrong instrument attitude Id.	19





7.6 xv_swath_pos

7.6.1 Overview

The xv_swath_pos function computes the location of a swath at a given time.

Swath location is expressed as¹:

- longitude
- latitude
- altitude

for n points (with $n \ge 1$). In Figure 2 we can see an example.

xv swath pos requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data and files, also with precise propagation if applicable (see [ORBIT SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission)
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
 - TLE file
- the Instrument Swath data, describing the area seen by the relevant instrument all along the current orbit. The swath file is produced off-line by the EO_VISIBILITY library (xv_gen_swath function) and the data structure can be got by reading the file with xd_read_stf.

The input time used by xv swath pos is expressed in orbit-relative time.

Users who need to use processing time must make use of the conversion routine provided in EO_VISIBILITY (xv_time_to_orbit and xv_orbit_to_time functions).

NOTE: Since the swath template file is generated from a reference orbit, it is not allowed to use **xv_swath_pos** for an orbit in the orbit scenario file with different repeat cycle or cycle length. If this would happen, **xv swath pos** will return an error an no computation will be performed.

¹ For inertial swaths, right ascension and declination are used instead of longitude and latitude



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 92

7.6.2 Calling sequence of xv_swath_pos

For C programs, the call to **xv swath pos** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer_visibility.h"
      xo orbit id orbit id = {NULL};
      long
                   orbit_type,
                   orbit, second, microsec, cycle,
                   ierr[XV NUM ERR SWATH POS], status;
                   *longitude, *latitude, *altitude;
      double
      xd stf file stf data;
      status = xv_swath_pos(&orbit_id,
                           &stf data,
                           &orbit type,
                           &orbit, &second, &microsec, &cycle,
                           longitude, latitude, altitude,
                           ierr);
      /* Or, using the run_id */
      long run id;
      status = xv swath pos run(&run id,
                               &stf data,
                               &orbit type,
                               &orbit, &second, &microsec, &cycle,
                               longitude, latitude, altitude,
                               ierr);
```





Table 19: Input parameters of xv_swath_pos

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
stf_data	xd_stf_file		Swath Template data structure	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
orbit	long		Orbit number		> 0
second	long		Seconds since ascending node	S	>= 0 < orbital period
microsec	long		Micro seconds within second	ms	0 =< =< 999999
cycle	long		Cycle number		>0

7.6.4 Output parameters xv_swath_pos

7.6.3 Input parameters xv_swath_pos

Table 20: Output parameters of xv_swath_pos

C name	C type	Array Element	Description	Unit (Form at)	Allowed Range
xv_swath_pos	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
longitude	double*	all	longitude (right ascension for inertial swaths) of points of the swath.	deg	[-180, 180]
			The user must reserve as many array positions as the number of points of the instantaneous swath.		
latitude	double*	all	latitude (declination for inertial swaths) of points of the swath.	deg	[-90, 90]





			The user must reserve as many array positions as the number of points of the instantaneous swath.		
altitude	double*	all	altitude of point is of the swath. The user must reserve as many array positions as the number of points of the instantaneous swath.	m	
ierr[XV_NUM_ERR _SWATH_POS]	long		Error status flags		





7.6.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_swath_pos** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_swath_pos** CFI function by calling the function of the EO_VISIBILITY software library **xv get code**.

Table 21: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong orbit Id.	Computation not performed	XV_CFI_SWATH_POS _ORBIT_STATUS_ERR	0
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_SWATH_POS _ORBIT_MODEL_ERR	1
ERR	Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_SWATH_POS _INCONSISTENT_SW ATH_ERR	2
ERR	Orbit number must be positive.	Computation not performed	XV_CFI_SWATH_POS _ORB_NUM_LIM_ERR	3
ERR	Seconds since ascending node must be zero or positive.	Computation not performed	XV_CFI_SWATH_POS _SEC_LIM_ERR	4
ERR	MicroSeconds must be zero or positive	Computation not performed	XV_CFI_SWATH_POS _MICROSEC_1ST_ERR	5
ERR	MicroSeconds can not be bigger than 999999.	Computation not performed	XV_CFI_SWATH_POS _MICROSEC_2ND_ER R	6
ERR	Orbit type switch out of range.	Computation not performed	XV_CFI_SWATH_POS _ORBIT_TYPE_ERR	7
ERR	Cycle number must be positive.	Computation not performed	XV_CFI_SWATH_POS _CYCLE_ERR	8
ERR	Orbit number is not included in the Orbit Scenario File	Computation not performed	XV_CFI_SWATH_POS _ORB_NUM_OEF_ERR	9
ERR	Input time greater than orbital period.	Computation not performed	XV_CFI_SWATH_POS _TIME_ERR	10
ERR	Repeat Days Cycle of this orbit is not the same than the swath template.	Computation not performed	XV_CFI_SWATH_POS _REP_CYCLE_ERR	11





ERR	Orbits Cycle Length of this orbit is not the same than the swath template	Computation not performed	XV_CFI_SWATH_POS _CYCLE_LENGTH_ER R	12
ERR	MLST drift of this orbit is not the same than the swath template.	Computation not performed	XV_CFI_SWATH_POS _MLST_DRIFT_ERR	13
ERR	No spherical triangle.	Computation not performed	XV_CFI_SWATH_POS _SPHER_TRIANG_ER R	14
ERR	Error while transforming from relative to absolute orbit.	Computation not performed	XV_CFI_SWATH_POS _REL_TO_ABS_ERR	15
ERR	Error while computing information of the orbit.	Computation not performed	XV_CFI_SWATH_POS _XV_ORBIT_INFO_ER R	16
ERR	The swath template structure contains invalid data	Computation not performed	XV_CFI_SWATH_POS _SWATH_INIT_ERR	17
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_SWATH_POS _MEMORY_ERR	18
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_SWATH_POS_GE O_SAT_ERR	19









7.7 xv_star_vis_time

7.7.1 Overview

The **xv_star_vis_time** function computes stars visibility segments, the orbital segments for which a given star is visible with a given instrument from the satellite.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

In addition, **xv_star_vis_time** calculates for every start and end of the visibility segment a coverage flag, determining which side of the FOV the event took place.

xv star vis time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files, also with precise propagation if applicable (see [ORBIT SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission)
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
 - TLE files
- Two Inertial Reference Swath Files. The Swath data can be provided by:
 - A swath template file produced off-line by the EO_VISIBILITY library (xv_gen_swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_star_vis_time** generates the swath points for a number of orbits given by the user.
- (*Optional*) The Star's Database File, describing the location in right ascension and declination of a star, described by its corresponding identifier.

The time intervals used by **xv_star_vis_time** are expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter
- output parameter "Star Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microsecs}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EO_VISIBILITY (xv_time_to_orbit and xv_orbit_to_time functions).





7.7.2 Swath Definition

xv_star_vis_time calculates stars visibility segments for FOV corresponding to limb-sounding instruments observing inertial objects. The corresponding template files are generated off-line by the EO_VISIBILITY CFI software (**xv gen swath** function).

7.7.2.1 Inertial Swaths

The FOV for a Limb-sounding instrument observing inertial objects is calculated using two main parameters.

- The FOV projection on the celestial sphere is determined by two set of swaths, one corresponding to a higher (TOP) and a lower (BOTTOM) altitude over the ellipsoid, hence defining the elevation range of the FOV
- The azimuth range is defined as such, the extremes corresponding to the left and right sides. In addition **xv gen swath** generates coordinates for a middle point

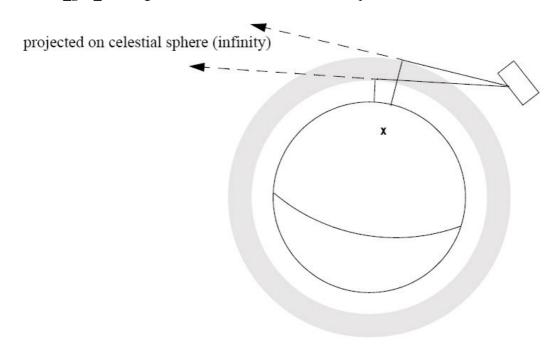


Figure 10: Two tangent altitudes over the ellipsoid

The instantaneous FOV projected on the celestial sphere can be represented as a series of points defined by their Right Ascension and Declination coordinates.

The top and bottom lines sweep the azimuth range at a constant tangent altitude, whilst the left and right side have a constant azimuth value with changing tangent altitude.

The shape of FOV should be similar to that shown in the diagram below with the dotted lines, whilst the algorithm implemented in xv_star_vis_time uses a simplified model joining the points with straight line.





As the satellite evolves around the orbit and the FOV sweeps the celestial sphere, a star can enter the FOV. **xv_star_vis_time** calculates that time and returns a flag indicating which part of the FOV (*LEFT*, *TOP*, *RIGHT* or *BOTTOM*) first detected the star. The same is done when the star exits the FOV.

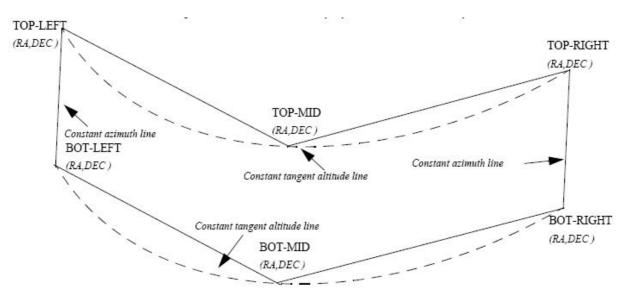


Figure 11: Instantaneous FOV projected on the celestial sphere

7.7.2.2 Splitting swaths

As it was shown in Figure 11, the accuracy and precision of **xv_star_vis_time** strongly depends on how close the projection used in the algorithm is to the real world. Higher accuracy can be obtained splitting the azimuth range in sub-swaths.

Furthermore, splitting the swath would be necessary if the FOV was to cover an azimuth range larger than 180 degrees.

Note: It is important to note that if the FOV covers the value of 90 or 270 degrees in azimuth, one of the extremes (*LEFT* or *RIGHT*) of the STF must correspond to that azimuth value.

7.7.2.3 Orbital Changes

If **xv_star_vis_time** is used with a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length), the behaviour depends on the swath files introduced as input:

- •If **swath template files** are used, **xv_star_vis_time** automatically will ignore the orbits that do not correspond with the template files (i.e. no visibility segments will be generated for those orbits), since swath template files are generated from a reference orbit with a particular geometry, so they are not valid for a different geometry.
- •If **swath definition files** are introduced, **xv_station_vis_time** will perform the computations across orbital changes, and will return the visibility segments corresponding to the whole orbital range. Internally, swath templates valid for every orbital change are generated to perform the calculations.





7.7.2.4 Format of Swath Template File

If a swath template file with the variable header tags *Start_Validity_Range* and *Stop_Validity_Range* is used as input, only the segments belonging to that orbit range will be returned.

7.7.2.5 MLST non linear drift

If a swath definition file is introduced, it can be also introduced every how many orbits the swath template file must be recomputed (swath_flag parameter, see section 104). If the orbit_id has been initialized with an OSF file with MLST non linear terms and the parameter swath_flag is greater than the linear approximation validity, the recomputation of swath template file will be done every linear approximation validity orbits.





7.7.3 Calling sequence xv_star_vis_time

For C programs, the call to xv_star_vis_time is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo_orbit_id orbit_id = {NULL};
      long
                    swath flag, orbit type,
                    start orbit, start cycle,
                    stop orbit, stop cycle,
                    number segments,
                    *bgn_orbit, *bgn_second, *bgn_microsec,
                    *bgn cycle, *bgn coverage,
                    *end orbit, *end second, *end microsec,
                    *end cycle, *end coverage,
                    ierr[XV NUM ERR STAR VIS TIME], status;
      double
                        star_ra, star_dec, star_ra_deg, star_dec_deg,
                   min duration;
      char
                    *orbit scenario file,
                    *swath file upper, *swath file lower;
                    star id[8], *star db file;
      char
      status = xv_star_vis_time(
                        &orbit id, &orbit_type,
                        &start orbit, &start cycle,
                        &stop orbit, &stop cycle,
                        &swath flag, swath file upper, swath file lower,
                        star id, star db file,
                        &star ra, &star dec,
                        &min duration,
                        &star ra deg, &star dec deg,
                        &number segments,
                        &bgn orbit, &bgn second, &bgn microsec,
                        &bgn cycle, &bgn coverage,
                        &end orbit, &end second, &end microsec,
                        &end cycle, &end coverage,
                        ierr);
```



}



Code: EO-MA-DMS-GS-0006 Date: 05/07/12 Issue: 4.4 Page: 103

```
/* Or, using the run id */
long run id;
status = xv_star_vis_time_run(
                 &run id, &orbit type,
                  &start orbit, &start cycle,
                  &stop orbit, &stop cycle,
                 &swath flag, swath file upper, swath file lower,
                 star id, star db file,
                  &star ra, &star dec,
                  &min duration,
                  &star_ra_deg, &star_dec_deg,
                  &number segments,
                  &bgn_orbit, &bgn_second, &bgn_microsec,
                  &bgn_cycle, &bgn_coverage,
                  &end orbit, &end second, &end microsec,
                  &end cycle, &end coverage,
                  ierr);
```





7.7.4 Input parameters xv_star_vis_time

Table 22: Input parameters of xv_star_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit_i d*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter.	absolute or	= 0
			Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file)	relative orbit number	or: absolute orbits ≥start osf
			If set to zero then first orbit of orbit_scenario_file is selected.		relative orbits ≤repeat cycle
start_cycle	long	-	Cycle number corresponding to the	cycle	= 0 or
			start_orbit. Dummy when using relative orbits	number	≥ start_osf
stop_orbit	long	-	Last orbit, segment filter.	absolute or	= 0
			When:	relative orbit	or:
			stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS)	number	absolute orbits ≥start_osf
			stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL)		relative orbits ≤ repeat cycle
			the stop_orbit will be set to the minimum value between:		
			the last orbit within the orbital change of the start_orbit.		
			start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)		
			If it is not initialized with orbital changes, stop orbit will be set to the last orbit in orbit_id initialization.		
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using	cycle number	=0 or ≥ start osf
			relative orbits		_
swath_flag	long*	-	Define the use of the swath file:	-	XV_STF = 0
			• 0 = (XV_STF) if the swath file is a		XV_SDF = 1





		swath template file.		> 0
		> 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits		
swath_file_uppe r	char *	File name of the inertial swath-file for the appropriate instrument mode, which defines the upper limit of the FOV.		
		This file is read each time the function is called		
swath_file_lowe r	char *	File name of the inertial swath-file for the appropriate instrument mode, which defines the lower limit of the FOV.		
		This file is read each time the function is called		
star_id[8]	char	identification of the star, as defined in the star_db_file. This parameter is used ONLY IF star_db_file is not equal empty string("")		EXACTLY 8 characters
star_db_file	char *	File name of the star database file		
star_ra	double*	Right Ascension of Star, in TOD.	deg	(-180.0, 180.0)
		This parameter is used ONLY IF star_db_file is equal empty string ("")		
star_dec	double*	Declination of Star, in TOD.	deg	(-90.0, 90.0)
		This parameter is used ONLY IF star_db_file is equal empty string ("")		
min_duration	double*	Minimum duration for segments.	s	≥ 0.0
		Only segments with a duration longer than min_duration will be given on output.		
	-			





7.7.5 Output parameters xv_star_vis_time

Table 23: Output Parameters of xv_star_vis_time

C name	C type	Array Element	Description	Unit (Form at)	Allowed Range
xv_star_vis_time	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
star_ra_deg	double		Right Ascension of the star, in TOD, for the UTC halfway start_orbit and stop_orbit.	deg	(-180.0, 180.0)
star_dec_deg	double		Declination of the star, in TOD, for the UTC halfway start_orbit and stop_orbit.	deg	(-90.0, 90.0)
number_segment	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number,		> 0
			begin of visibility segment i		
			bgn_orbit[i-1],		
			i = 1, number_segments		
bgn_second	long*	all	Seconds since ascending node,	s	≥ 0
			begin of visibility segment i		< orbital
			bgn_second[i-1],		period
			i = 1, number_segments		
bgn_microsec	long*	all	Micro seconds within second	μs	≥ 0
			begin of visibility segment i		≤ 999999
			bgn_microsec[i-1],		
			i = 1, number_segments		
bgn_cycle	long*	all	cycle number		> 0
			begin of visibility segment i		NULL when
			bgn_microsec[i-1],		using relative orbits
			i = 1, number_segments		
bgn_coverage	long*	all	Coverage flag for swath entry:		0,1,2,3,4
			XV_STAR_UNDEFINED = 0, XV_STAR_UPPER = 1, XV_STAR_LOWER = 2, XV_START_LEFT = 3,		





			XV_STAR_RIGHT=4		
end_orbit	long*	all	Orbit number,		> 0
			end of visibility segment i		
			end_orbit[i-1],		
			i = 1, number_segments		
end_second	long*	all	Seconds since ascending node,	s	≥ 0
			end of visibility segment i		<orbital< td=""></orbital<>
			end_second[i-1],		period
			i = 1, number_segments		
end_microsec	long*	all	Micro seconds within second	μs	0
			end of visibility segment i		≤ 999999
			end_microsec[i-1],		
			i = 1, number_segments		
end_cycle	long*	all	End cycle,		>0
			end of visibility segment i		NULL when
			end_orbit[i-1],		using relative orbits
			i = 1, number_segments		0.0.0
end_coverage	long*	all	Coverage flag for swath exit:		0,1,2,3,4
			XV_STAR_UNDEFINED = 0, XV_STAR_UPPER = 1, XV_STAR_LOWER = 2, XV_START_LEFT = 3, XV_STAR_RIGHT=4		
ierr[10]	long		Error status flags		

Memory Management: Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_star_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.7.6 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_star_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_star_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 24: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error, wrong orbit ld.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_STATUS_ERR	0
WAR N	Warning, start orbit is outside range of OEF/OSF.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_FIRST_ORBIT_WARN	1
WAR N	Warning, stop orbit is outside range of OEF/OSF.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_LAST_ORBIT_WARN	2
WAR N	Warning, there is an orbital change within the requested orbits.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_ORBIT_CHANGE_WA RN	3
ERR	Error, starvistime can only operate with an inertial swath.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INERTIAL_SWATH_E RR	4
ERR	Error, Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INCONSISTENT_SWA TH_ERR	5
ERR	Input parameter \"swath_flag\" is out of range	Computation not performed	XV_CFI_STAR_VIS_TIM E_SWATH_FLAG_ERR	6
ERR	Could not generate the swath template data	Computation not performed	XV_CFI_STAR_VIS_TIM E_GENSWATH_ERR	7
ERR	Low swath altitude is above the upper limit described by the higher swath altitude.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ALT_ERR	8
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INTERNAL_MEMORY _ERR	9
ERR	Error allocating memory for the	Computation not	XV_CFI_STAR_VIS_TIM	10





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 109

	visibility segments.	performed	E_SEGMENTS_MEMOR Y_ERR	
ERR	Error allocating memory for the coverage.	Computation not performed	XV_CFI_STAR_VIS_TIM E_COVERAGE_MEMOR Y_ERR	11
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_TYPE_ERR	12
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_MODEL_ERR	13
ERR	Error in input parameter to starvistime.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INPUTS_CHECK_ERR	14
ERR	Error while transforming into absolute orbit the start_orbit.	Computation not performed	XV_CFI_STAR_VIS_TIM E_REL_TO_ABS_START _ERR	15
ERR	Error while transforming into absolute orbit the stop_orbit.	Computation not performed	XV_CFI_STAR_VIS_TIM E_REL_TO_ABS_STOP_ ERR	16
ERR	Error updating star's position in from JD2000 to determined UTC.	Computation not performed	XV_CFI_STAR_VIS_TIM E_STAR_RADEC_ERR	17
ERR	Error obtaining orbital information.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_INFO_ERR	18
ERR	Error reading the upper swath template file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_SWATH_UPPER_REA D_ERR	19
ERR	Error reading the lower swath template file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_SWATH_LOWER_RE AD_ERR	20
ERR	Error reading the star data file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_READ_STAR_ERR	21
ERR	Error determining transitions.	Computation not performed	XV_CFI_STAR_VIS_TIM E_STAR_MAIN_ERR	22
ERR	Error while transforming into relative orbits the output segments.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ABS_TO_REL_ERR	23
ERR	Error transforming orbit to time.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_TO_TIME_ER R	24
ERR	Error reading the swath definition file: %s	Computation not performed	XV_CFI_STAR_VIS_TIM E_READ_SDF_ERR	25
ERR	Error checking orbital change	Computation not	XV_CFI_STAR_VIS_CHECK_	26





	in range	performed	ORBITAL_CHANGE_ERR	
ERR	Input orbit interval is completely outside STF validity interval	Computation not performed	XV_CFI_STAR_VIS_TIME_O RBIT_INTERVAL_STF_ERR	27
WARN	Input orbit interval is partially outside STF validity interval	Computation performed	XV_CFI_STAR_VIS_TIME_O RBIT_INTERVAL_STF_WARN	28
WARN	Input OSF has non-trivial MLST non linear terms but STF was generated without them	Computation performed	XV_CFI_STAR_VIS_TIME_OS F_NON_LIN_STF_OLD_WAR N	29
WARN	Swath flag larger than MLST linear approximation validity. MLST linear approximation validity used	Computation performed	XV_CFI_STAR_VIS_TIME_S WATH_FLAG_LARGER_THA N_LIN_APPROX_VAL_WARN	30





7.8 xv_multizones_vis_time

7.8.1 Overview

The **xv_multizones_vis_time** function computes all the orbital segments for which a given instrument swath intercepts several user-defined zones at the surface of the Earth ellipsoid.

The visibility segments are obtained by calling to **xv_zone_vis_time** (see section 7.1 for further details about swaths, zones and visibility segments definitions). Those segments are merged and ordered by start time. In addition to this, two tables are provided. The first one contains the zones where segment has visibility, and the second one contains the coverage of the segment for each zone (see Figure 12).

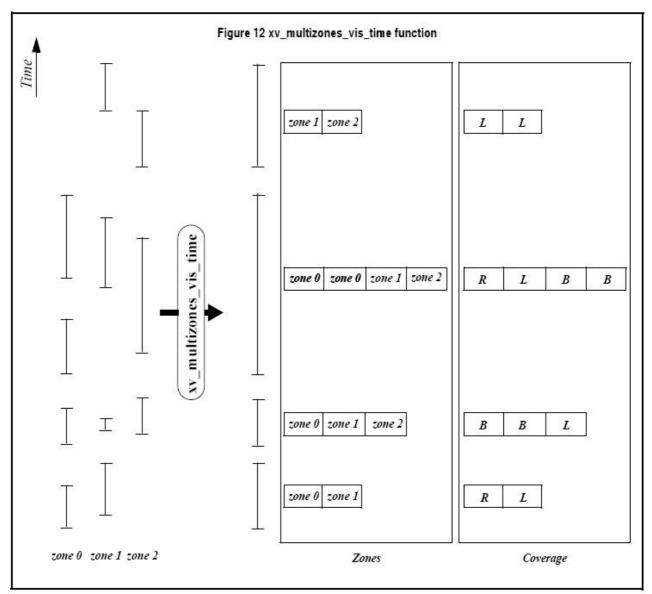


Figure 12: xv_multizones_vis_time function





The time intervals used by **xv_multizones_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Zone Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

xv multizones vis time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission)
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EO_VISIBILITY library (**xv_gen_swath** function).
 - A swath definition file, describing the swath geometry. In this case the **xv_multizones_vis_time** generates the swath points for a number of orbits given by the user.
- optionally, a Zone Database File, containing the zone description. The user can either specify a zone identifier referring to a zone in the file, or provide the zone parameters directly to **xv multizones vis time.**

Users who need to use processing times must make use of the conversion routines provided in EO_ORBIT (xo_time_to_orbit and xo_orbit_to_time functions).

NOTE: If **xv_multizones_vis_time** is used with a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length), the behaviour depends on the swath files introduced as input:

- •If a **swath template file** is used, **xv_multizones_vis_time** automatically will ignore the orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits), since swath template file is generated from a reference orbit with a particular geometry, so it is not valid for a different geometry.
- •If a **swath definition file** is introduced, **xv_multizones_vis_time** will perform the computations across orbital changes, and will return the visibility segments corresponding to the whole orbital range. Internally, swath templates valid for every orbital change are generated to perform the calculations.





7.8.2 Calling sequence xv_multizones_vis_time

For C programs, the call to **xv multizones vis time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               swath flag, orbit type,
               start_orbit, start_cycle, stop_orbit, stop_cycle,
               num zones, projection, *zone num,
               extra info flag,
               number segments,
               *bgn orbit, *bgn secs, *bgn microsecs, *bgn cycle,
               *end_orbit, *end_secs, *end_microsecs, *end_cycle,
               *nb_zon_in_segment, **zones_in_segment, **coverage,
               ierr[XV NUM ERR MULTIZONES VIS TIME], status;
               *zone long, *zone lat, *zone diam,
      double
               min duration;
      char
               *swath file, *zone db file,
               **zone id;
      status = xv_multizones_vis_time(
                    &orbit id, &orbit type,
                    &start orbit, &start cycle,
                    &stop orbit, &stop cycle,
                    &swath flag, swath file, &num zones,
                   zone id, zone db file,
                   projection, zone num,
                   zone long, zone lat, zone diam,
                   &min duration, &extra info flag,
                    &number segments,
                   &bgn orbit, &bgn second, &bgn microsec, &bgn cycle,
                   &end orbit, &end second, &end microsec, &end cycle,
                    &nb zon in segment, &zones in segment, &coverage,
                   ierr);
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 114

```
/* Or, using the run id */
long run id;
status = xv_multizones_vis_time_run(
             &run id, &orbit type,
             &start orbit, &start cycle,
             &stop orbit, &stop cycle,
             &swath flag, swath file, &num zones,
             zone_id, zone_db_file,
             projection, zone num,
             zone long, zone lat, zone diam,
             &min duration, &extra info flag,
             &number segments,
             &bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle,
             &end orbit, &end second, &end microsec, &end cycle,
             &nb zon in segment, &zones in segment, &coverage,
             ierr);
```





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 115

7.8.3 Input parameters xv_multizones_vis_time

Table 25: Input parameters of xv_multizones_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in
stop_orbit	long	-	Last orbit, segment filter. When: stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: the last orbit within the orbital change of the start_orbit. start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
swath_flag	long*	-	 Define the use of the swath file: 0 = (XV_STF) if the swath file is a swath template file. > 0 if the swath files is a swath 	-	XV_STF = 0 XV_SDF = 1 > 0





			definition file. In this case the swath points are generated for every "swath_flag" orbits		
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
num_zones	long	-	Number of zones		>0
zone_id	char**	all	Identification name for n-th zone (0 <n<num_zones). every="" exist="" for="" it="" must="" td="" zone.<=""><td></td><td></td></n<num_zones).>		
			zone_id[i] must belong to a zone from the zone_db_file when zone_num[i]=0.		
zone_db_file	char *	-	File name of the zone-database file. Dummy when no zones from		
			database are selected.		
projection	long*	all	projection for each zone used to		complete.
			define polygon sides as straight lines.		See Table 2 (Projections)
zone_num	long*	all	Number of vertices of the n-th zone (0 <n<num_zones) in="" provided="" td="" zone_lat:<="" zone_long,=""><td></td><td>≥ 0</td></n<num_zones)>		≥ 0
			= 0 no vertices provided, use zone_id / zone_db_file		
			= 1 Point / Circular zone,		
			= 2 Line zone		
			> 2 Polygon zone		
zone_long	double*	all	Geocentric longitude of	deg	
			- circle centre, for circ. zone		
			- point, for point zone		
			- line-end, for line zone		
			- vertices, for polygon zone.		
			The longitude of the vertices corresponding to all zones shall be arranged consecutively ² .		
zone_lat	double*	all	Geodetic latitude of	deg	
			- circle centre, for circ. zone.		
			- point, for point zone.		

² For example,

_

⁻ zone 0: points will be arranged from 0 to zone_num[0] (no points in case of using a database zone),

⁻ zone 1: points will be arranged from zone_num[0] to zone_num[0] + zone_num[1]





			- line-end, for line zone. - vertices, for polygon zone. The latitude of the vertices corresponding to all zones shall be arranged consecutivelySuperscriptparanum.		
zone_diam	double*	all	Array of diameters of circular zones in case this shape is selected for any zone ³ . zone_diam=0.0 for Point Zones.		≥ 0.0
min_duration	double	-	Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	s	≥ 0
extra_info_fla g	long	-	If value set to false (= 0), the zones_in_segment and coverage arrays are not computed. Saves computation time.		0 (false), 1 (true)

³ The values corresponding to all zones shall be arranged consecutively, so that the zone_diam[0] corresponds with the first point or circular zone, zone_diam[1] corresponds with the second point or circular zone, and so on.





7.8.4 Output parameters xv_multizones_vis_time

Table 26: Output parameters of xv_multizones_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_multizones_vis_ti me	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long	-	Number of segments in the output lists.	-	> 0
bgn_orbit	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_second	long*	all	Array of seconds elapsed since ANX	-	>0
			for the beginning of the segments		<nodal period<="" td=""></nodal>
bgn_microsec	long*	all	Array of microseconds within a second	-	>0
			for the beginning of the segments		<999999
bgn_cycle	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_second	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0
					<nodal period<="" td=""></nodal>
end_microsec	long*	all	Array of microseconds within a second for the end of the segments	_	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
nb_zon_in_segment	long*	all	Number of zones where the segment has visibility.	-	>0
			Dummy if extra_info_flag=0 (false).		
zones_in_segment	long**	all	Index of the zone_id input array where the segment has visibility.	-	≥0
			Dummy if extra_info_flag=0 (false).		
coverage	long**	all	Coverage of the segment in each of the zones.		complete See Table 2
			Dummy if extra_info_flag=0 (false).		233 13510 2
ierr	long*		Error status flags		





<u>Note 1:</u> The zones_in_segment and coverage arrays are returned as a two-dimensional table where the first index is related to the output visibility segment, and the second one goes all over the zones that compose that segment.

Note 2 (Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_multizones_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.8.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_multizones_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_multizones_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 27: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_MULTIZONE S_VIS_TIME_MEMOR Y_ERR	0
ERR	Error getting visibility segments for zone %ld	Computation not performed	XV_CFI_MULTIZONE S_VIS_TIME_COMPUT E_SEGMENTS_ERR	1
ERR	Error getting absolute orbit from relative orbit	Computation not performed	XV_CFI_MULTIZONE S_VIS_TIME_ABS_TO _REL_ORBIT_ERR	2
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_MULTIZONE S_VIS_TIME_ABS_TO _REL_VECTOR_ERR	3
ERR	Error while merging overlapped segments	Computation not performed	XV_CFI_MULTIZONE S_VIS_TIME_OVERLA P_ERR	4
ERR	Orbit id is not initialized.	Computation not performed	XV_CFI_MULTIZONES_VIS _TIME_ORBIT_STATUS_E RR	5
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_MULTIZONES_VIS _TIME_GEO_SAT_ERR	6

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual





7.9 xv_multistations_vis_time

7.9.1 Overview

The **xv_multistations_vis_time** function computes visibility segments of several ground stations, i.e. the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

The visibility segments are obtained by calling to **xv_station_vis_time**. Those segments are merged and ordered by start time. Moreover, **xv_multistations_vis_time** provides a table containing the stations from which the satellite is visible in each segment.

In addition, **xv_multistations_vis_time** computes the time of zero-doppler (i.e. the time at which the range-rate to the station is zero) per station.

The time intervals used by **xv_multistations_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Stations Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

xv multistations vis time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission)
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
- A swath template file produced off-line by the EO VISIBILITY library (xv gen swath function).
- A swath definition file, describing the swath geometry. In this case the **xv_multistations_vis_time** generates the swath points for a number of orbits given by the user.
 - the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. It is produced off-line by the EO_VISIBILITY library (xv_gen_swath function).
 - the Station Database File, describing the location and the physical mask of each ground station.

Users who need to use processing times must make use of the conversion routines provided in EO_ORBIT (xo time to orbit and xo orbit to time functions).





NOTE: If **xv_multistation_vis_time** is used with a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length), the behaviour depends on the swath files introduced as input:

- •If a **swath template file** is used, **xv_multistation_vis_time** automatically will ignore the orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits), since swath template file is generated from a reference orbit with a particular geometry, so it is not valid for a different geometry.
- •If a **swath definition file** is introduced, **xv_multistation_vis_time** will perform the computations across orbital changes, and will return the visibility segments corresponding to the whole orbital range. Internally, swath templates valid for every orbital change are generated to perform the calculations.





7.9.2 Calling sequence xv_multistations_vis_time

For C programs, the call to xv_multistations_vis_time is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               num stations, *mask,
               extra info flag,
               number segments,
               *bgn orbit, *bgn secs, *bgn microsecs, *bgn cycle,
               *end orbit, *end secs, *end microsecs, *end cycle,
               **zdop_orbit, **zdop_secs, **zdop_microsecs, **zdop_cycle,
               *nb stat in segment, **stat in segment,
               ierr[XV NUM ERR MULTISTATIONS VIS TIME], status;
               *aos elevation, *los elevation,
      double
               min duration;
               *swath file, *station db file,
      char
               **station id;
      status = xv multistations vis time(
                    &orbit id, &orbit type,
                    &start orbit, &start cycle,
                    &stop orbit, &stop cycle,
                    &swath flag, swath file, &num stations,
                   station db file, station id,
                   aos elevation, los elevation, mask,
                    &min duration,
                   &extra info flaq,
                    &number segments,
                    &bgn orbit, &bgn second, &bgn microsec, &bgn cycle,
                    &end orbit, &end second, &end microsec, &end cycle,
                    &zdop orbit, &zdop second, &zdop microsec, &zdop cycle,
                   &nb stat in segment, &stat in segment,
                   ierr);
```



}



Code: EO-MA-DMS-GS-0006 Date: 05/07/12 Issue: 4.4 Page: 124

```
/* Or, using the run id */
long run id;
status = xv_multistations_vis_time_run(
             &run id, &orbit type,
             &start orbit, &start cycle,
             &stop orbit, &stop cycle,
             &swath flag, swath file, &num stations,
             station db file, station id,
             aos elevation, los elevation, mask,
             &min duration,
             &extra info flag,
             &number segments,
             &bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle,
             &end orbit, &end second, &end microsec, &end cycle,
             &zdop orbit, &zdop second, &zdop microsec, &zdop cycle,
             &nb stat in segment, &stat in segment,
             ierr);
```





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 125

7.9.3 Input parameters xv_multistations_vis_time

Table 28: Input parameters of xv_multistations_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
start_orbit	long	-	First orbit, segment filter Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥first cycle in os
stop_orbit	long	-	Last orbit, segment filter. When: stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: the last orbit within the orbital change of the start_orbit. start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
swath_flag	long*	-	 Define the use of the swath file: 0 = (XV_STF) if the swath file is a swath template file. > 0 if the swath files is a swath 	-	XV_STF = 0 XV_SDF = 1 > 0





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 126

			definition file. In this case the		
			swath points are generated for every "swath_flag" orbits		
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
num_stations	long	-	Number of stations		>0
station_db_file	char *	-	File name of the station-database file.		
station_id	char**	-	Identification name for n-th station (0 <n<num_stations).< td=""><td></td><td></td></n<num_stations).<>		
aos_elevation	double*	all	Minimum elevation to consider at AOS for each station(i.e. before considering start of visibility).	deg	≥ 0.0
los_elevation	double*	all	Maximum elevation to consider at LOS for each station(i.e. before considering end of visibility).	deg	≥ 0.0 ≤ aos_elevation
mask	long*	all	mask used to define visibility		≥ 0
			= 0 combine AOS/LOS elevations and physical mask (nominal mode)		
			= 1 consider only AOS/LOS elevations		
			= 2 consider only physical mask		
min_duration	double	-	Minimum duration for segments.	s	≥ 0
			Only segments with a duration longer than min_duration will be given on output.		
extra_info_flag	long	-	If value set to false (= 0), the zero doppler arrays and stations arrays are not computed.		0(false), 1 (true)
			Saves computation time.		





7.9.4 Output parameters xv_multistations_vis_time

Table 29: Output parameters of xv_multistations_vis_time

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_multistations_vis_	long		Function status flag,		
time			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
number_segments	long	-	Number of segments in the output lists.	-	> 0
bgn_orbit	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_second	long*	all	Array of seconds elapsed since ANX	-	>0
			for the beginning of the segments		<nodal period<="" td=""></nodal>
bgn_microsec	long*	all	Array of micro seconds within a	-	>0
			second for the beginning of the segments		<999999
bgn_cycle	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_second	long*	all	Array of seconds elapsed since ANX	-	>0
			for the end of the segments		<nodal period<="" td=""></nodal>
end_microsec	long*	all	Array of micro seconds within a	-	>0
			second for the end of the segments		<999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
zdop_orbit	long**	all	Orbit number,		> 0
			time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment)		
			Dummy if extra_info_flag = false.		
zdop_second	long**	all	Seconds since ascending node,	s	>= 0
			time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment)		< orbital period
			Dummy if extra_info_flag = false.		





zdop_microsec	long**	all	Micro seconds within second	μs	0 =<
			time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment)		=< 999999
			Dummy if extra_info_flag = false.		
zdop_cycle	long**	all	Cycle number,		>0
			time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment)		NULL when using absolute orbits
			Dummy if extra_info_flag = false.		
nb_stat_in_segment	long*	all	nb_stat_in_segment [i] =Number of stations from which the satellite is visible during the i-th segment of time.	_	>0
			Dummy if extra_info_flag = false.		
stat_in_segment	long**	all	$\begin{array}{l} stat_in_segment \ [i] = array \ of \ indexes \\ of \ the \ stations \ from \ which \ the \\ satellite \ is \ visible \ during \ the \ i-th \\ segment. \end{array}$	-	≥0
			Dummy if extra_info_flag = false.		
ierr	long*		Error status flags		

<u>Note 1:</u> The stat_in_segment and zdop_xxx arrays are returned as a two-dimensional table where the first index is related to the output visibility segment , and the second one goes all over the zones that compose that segment.

Note 2 (Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_multistations_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.9.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_multistations_vis_time CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_multistations_vis_time** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 30: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_MEM ORY_ERR	0
ERR	Error getting visibility segments for station %ld	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_COM PUTE_SEGMENTS_ER R	1
ERR	Error getting absolute orbit from relative orbit	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_ABS_ TO_REL_ORBIT_ERR	2
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_ABS_ TO_REL_VECTOR_ER R	3
ERR	Error while merging overlapped segments.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_OVER LAP_ERR	4
ERR	Orbit id not initialized.	Computation not performed	XV_CFI_MULTISTATIONS_ VIS_TIME_ORBIT_STATUS _ERR	5
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_MULTISTATIONS_ VIS_TIME_GEO_SAT_ERR	6

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual





7.10 xv_orbit_extra

7.10.1 Overview

The xv orbit extra function computes for an input orbit, the times for:

- an input set of Sun zenit angles are reached (both up and down times are computed)
- Sun ocultations by the Earth.
- Sun ocultations by the Moon.

xv_orbit_extra needs as input the orbital parameters returned by xo_orbit_info (its output array result vector). So, the natural use to call to xv orbit extra will be:

- Initialise time references: calling to xl time ref init of xl time ref init file.
- Orbital initialisation by calling one of the functions: **xo_orbit_init_file**, **xo_orbit_init_def** or **xo_orbit_cart_init**.
- Call to **xo_orbit_info** to get the result_vector containing the orbital parameters of the orbit.
- Call to xv_orbit_extra with the same orbit than in the call to the orbit info function.

The input orbit must be an absolute orbit.

Users who need to use processing times must make use of the conversion routines provided in EO_ORBIT (xo time to orbit and xo orbit to time functions).





7.10.2 Calling sequence xv_orbit_extra

For C programs, the call to **xv orbit extra** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit,
               num sza,
               ierr[XV NUM ERR ORBIT EXTRA];
               orbit info vector[XO ORBIT INFO EXTRA NUM ELEMENTS], *sza,
      double
               *sza up, *sza down,
               eclipse entry, eclipse exit,
               sun moon entry, sun moon exit;
      status= xv orbit extra (&orbit id, &orbit, orbit info vector,
                             &<u>num sza</u>, <u>sza</u>,
                             &sza up, &sza down,
                             &eclipse entry, &eclipse exit,
                             &sun moon entry, &sun moon exit,
                             ierr);
      /* Or, using the run id */
      long run id;
      status= xv orbit extra run (&run id, &orbit, orbit info vector,
                             &num sza, sza,
                             &sza_up, &sza_down,
                             &eclipse entry, &eclipse exit,
                             &sun moon entry, &sun moon exit,
                             ierr);
}
```





Page: 132

7.10.3 Input parameters xv_orbit_extra

Table 31: Input parameters of xv_orbit_extra

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit	long	-	absolute orbit number		≥ start osf
orbit_info_vector	double	[0]	repeat_cycle	days	>0
[XO_ORBIT_IN FO EXTRA NU		[1]	cycle_length	orbits	>0
M_ELEMENTS]		[2]	MLST drift		s/day
		[3]	MLST	deg	> 0
					<360
		[4]	phasing	deg	> 0
					<360
		[5]	UTC time at ascending node	days (processing format)	
		[6-8]	position at ANX	m	
		[9-11]	velocity at ANX	m/s	
		[12-17]	mean keplerian elements at ANX		
		[18-23]	osculating keplerian elements at ANX		
		[24]	Nodal period	s	
num_sza	long	-	Number of Sun Zenit angles in the sza array	-	>0
sza	double*	all	list of Sun Zenit angles to compute	deg	≥ 0 ≤ 180





7.10.4 Output parameters xv_orbit_extra

Table 32: Output parameters of xv_orbi_extra

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_orbit_extra	long	_	Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
sza_up	double	all	Seconds since ANX of Sun Zenith Angles when SZA is increasing with time.	s	≥ 0 ≤ orb. period
sza_down	double	all	Seconds since ANX of Sun Zenith Angles when SZA is decreasing with time.	s	≥ 0 ≤orb. period
eclipse_entry	double	-	Seconds since ANX of eclipse entry. Note that the value is provided within the input orbit, so that the eclipse_exit will be less than the eclipse_entry if the ANX is in eclipse.	s	≥ 0 ≤ orbital period -1 if there is not eclipse
eclipse_exit	double	-	Seconds since ANX of eclipse exit. Note that the value is provided within the input orbit, so that the eclipse_exit will be less than the eclipse_entry if the ANX is in eclipse.	S	≥ 0 ≤ orbital period -1 if there is not eclipse
sun_moon_entry	double	-	Seconds since ANX of Sun Occultation by Moon entry.	s	<-1 if no occultation is found ≥ 0 ≤ orbital period
sun_moon_exit	double	-	Seconds since ANX of Sun Occultation by Moon exit	S	<-1 if no occultation is found ≥ 0 ≤ orbital period
ierr	long*		Error status flags		·





Note (Memory Management): Note that the sza_up and sza_down arrays are pointers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_orbit_extra** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.10.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_orbit_extra CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_orbit_extra** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 33: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong input orbit Id.	Computation not performed	XV_CFI_ORBIT_EXTR A_ORBIT_STATUS_ER R	0
ERR	Error allocating memory for SZA entry/exit times	Computation not performed	XV_CFI_ORBIT_EXTR A_MEM_ERR	1
ERR	Error computing SZA entry/exit times	Computation not performed	XV_CFI_ECLIPSE_XL_ EF_TO_QEF_ERR	2
ERR	Error computing eclipse entry/exit times	Computation not performed	XV_CFI_ORBIT_EXTR A_ECLIPSE_ERR	3
ERR	Error computing Sun occultation by Moon.	Computation not performed	XV_CFI_ORBIT_EXTR A_SUN_OCC_BY_MO ON_ERR	4





7.11 xv_gps_vis_time

TBW





7.12 xv_time_segments_not

7.12.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments not function computes the compliment of a list of orbital segments (see Figure 13)

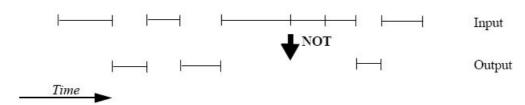


Figure 13: xv_time_segment_not_function

Note that the intervals from the first orbit to the first segment and from the last segment to the end of mission are not returned.

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_not** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of micro seconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv_time_segments_not requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





7.12.2 Calling sequence xv_time_segments_not

For C programs, the call to **xv** time segments not is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit type, order switch,
               num segments in,
               *bgn orbit_in, *bgn_secs_in,
               *bgn microsecs in, *bgn cycle in,
               *end orbit in, *end_secs_in,
               *end microsecs in, *end cycle in,
               num segments out,
               *bgn orbit out, *bgn secs out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR NOT], status;
      status = xv time segments not(
                        &orbit id,
                        &orbit type, &order switch,
                        &number segments in,
                        bgn orbit in, bgn secs in,
                        bgn microsecs in, bgn cycle in,
                        end orbit in, end secs in,
                        end microsecs in, end cycle in,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end_orbit_out, &end_secs_out,
                        &end microsecs out, &end cycle out,
                        ierr);
      /* Or, using the run id */
      long run id;
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 139

```
status = xv_time_segments_not_run(
    &run_id,
    &orbit_type, &order_switch,
    &number_segments_in,
    bgn_orbit_in, bgn_secs_in,
    bgn_microsecs_in, bgn_cycle_in,
    end_orbit_in, end_secs_in,
    end_microsecs_in, end_cycle_in,
    &num_segments_out,
    &bgn_orbit_out, &bgn_secs_out,
    &bgn_microsecs_out, &bgn_cycle_out,
    &end_orbit_out, &end_secs_out,
    &end_orbit_out, &end_secs_out,
    iern);
```





7.12.3 Input parameters xv_time_segments_not

Table 34: Input parameters of xv_time_segments_not

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see Table 2)
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit_in	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_in	long*	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_in	long*	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle_in	long*	all	Array of cycle numbers for the beginning of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_in	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_in	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_in	long*	all	Array of seconds within a second for the end of the segments	-	>0 <999999
end_cycle_in	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





7.12.4 Output parameters xv_time_segments_not

Table 35: Output parameters of xv_time_segments_not

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_time_segments_not	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the beginning of the segments		<nodal period<="" td=""></nodal>
bgn_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the beginning of the segments		< 999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all Array of seconds elapsed since ANX for -	-	>0	
			the end of the segments		<nodal period<="" td=""></nodal>
end_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the end of the segments		< 999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_not** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.12.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_not** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_not** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 36: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS _ NOT_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _NOT_REL_TO_ABS_ORBI T_ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _NOT_ABS_TO_REL_ORBI T_ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS _ NOT_SORTING_ERR	3
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _NOT_GEO_SAT_ERR	4

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual





7.13 xv_time_segments_or

7.13.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv_time_segments_or function computes the union of a list of orbital segments (see Figure 14)

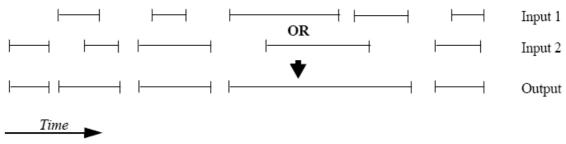


Figure 14: xv_time_segments_or_function

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_or** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv time segments or requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





7.13.2 Calling sequence xv_time_segments_or

For C programs, the call to xv time segments or is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit type, order switch,
               num segments 1,
               *bgn orbit 1, *bgn secs 1,
               *bgn microsecs_1, *bgn_cycle_1,
               *end orbit 1, *end_secs_1,
               *end microsecs 1, *end cycle 1,
               num_segments_2,
               *bgn orbit 2, *bgn secs 2,
               *bgn microsecs 2, *bgn cycle 2,
               *end orbit 2, *end secs 2,
               *end microsecs 2, *end cycle 2,
               num segments out,
               *bgn_orbit_out, *bgn_secs_out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR OR], status;
      status = xv time segments or (
                         &orbit id,
                         &orbit type, &order switch,
                         &number segments 1,
                         bgn orbit 1, bgn second 1,
                         bgn microsec 1, bgn cycle 1,
                         end orbit 1, end second 1,
                         end microsec 1, end cycle 1,
                         &number segments 2,
                         bgn orbit 2, bgn second 2,
                         bgn microsec 2, bgn cycle 2,
                         end orbit 2, end second 2,
                         end microsec 2, end cycle 2,
                         &num segments out,
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 145

&bgn_orbit_out, &bgn_secs_out,
&bgn_microsecs_out, &bgn_cycle_out,
&end_orbit_out, &end_secs_out,
&end_microsecs_out, &end_cycle_out,
ierr);

```
/* Or, using the run id */
long run_id;
status = xv time segments or run (
                  &run id,
                   &orbit type, &order switch,
                   &number segments 1,
                  bgn orbit 1, bgn second 1,
                   bgn microsec 1, bgn cycle 1,
                  end orbit 1, end second 1,
                   end microsec 1, end cycle 1,
                   &<u>number segments 2</u>,
                  bgn orbit 2, bgn second 2,
                   bgn microsec 2, bgn cycle 2,
                   end orbit 2, end second 2,
                   end microsec 2, end cycle 2,
                   &num segments out,
                   &bgn orbit out, &bgn secs out,
                  &bgn microsecs_out, &bgn_cycle_out,
                  &end orbit out, &end secs out,
                  &end microsecs out, &end cycle out,
                  ierr);
```





7.13.3 Input parameters xv_time_segments_or

Table 37: Input parameters of xv_time_segments_or

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	_	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see Table 2)
num_segments_1	long	-	Number of segments in the input list 1.	-	>0
bgn_orbit_1	long*	all	Array of orbit numbers for the beginning of the segments in list 1	-	>0
bgn_secs_1	long*	all	Array of seconds elapsed since ANX for the beginning of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_1	long*	all	Array of microseconds within a second for the beginning of the segments in list 1	-	>0 <999999
bgn_cycle_1	long*	all	Array of cycle numbers for the beginning of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_1	long*	all	Array of orbit numbers for the end of the segments in list 1	_	>0
end_secs_1	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_1	long*	all	Array of microseconds within a second for the end of the segments in list 1	-	>0 <999999
end_cycle_1	long*	all	Array of cycle numbers for the end of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
num_segments_2	long	-	Number of segments in the input list 2.	-	>0





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 147

bgn_orbit_2	long*	all	Array of orbit numbers for the beginning of the segments in list 2	-	>0
bgn_secs_2	long*	all	Array of seconds elapsed since ANX for the beginning of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_2	long*	all	Array of microseconds within a second for the beginning of the segments in list 2	-	>0 <999999
bgn_cycle_2	long*	all	Array of cycle numbers for the beginning of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_2	long*	all	Array of orbit numbers for the end of the segments in list 2	-	>0
end_secs_2	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_2	long*	all	Array of microseconds within a second for the end of the segments in list 2	-	>0 <999999
end_cycle_2	long*	all	Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





7.13.4 Output parameters xv_time_segments_or

Table 38: Output parameters of xv_time_segments_or

C name	C type	Array Element	Description	Unit (Format	Allowed Range
xv_time_segments_or	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the beginning of the segments		<nodal period<="" td=""></nodal>
bgn_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the beginning of the segments		<999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the end of the segments		<nodal period<="" td=""></nodal>
end_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the end of the segments		<999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_or** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.13.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_or** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_or** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 39: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS _OR_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _OR_REL_TO_ABS_ORBIT _ ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _OR_ABS_TO_REL_ORBIT _ ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS _OR_SORTING_ERR	3
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _OR_GEO_SAT_ERR	4

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual





7.14 xv_time_segments_and

7.14.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments and function computes the intersection of a list of orbital segments (see Figure 15)

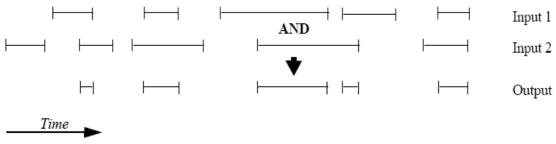


Figure 15: xv_time_segments_and_function

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_and** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv time segments and requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





7.14.2 Calling sequence xv_time_segments_and

For C programs, the call to xv time segments and is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit type, order switch,
               num segments 1,
               *bgn orbit 1, *bgn secs 1,
               *bgn microsecs_1, *bgn_cycle_1,
               *end orbit 1, *end_secs_1,
               *end microsecs 1, *end cycle 1,
               num_segments_2,
               *bgn orbit 2, *bgn secs 2,
               *bgn microsecs 2, *bgn cycle 2,
               *end orbit 2, *end secs 2,
               *end microsecs 2, *end cycle 2,
               num segments out,
               *bgn_orbit_out, *bgn_secs_out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR AND], status;
      status = xv time segments and (
                        &orbit id,
                         &orbit type, &order switch,
                         &number segments 1,
                         bgn orbit 1, bgn second 1,
                         bgn microsec 1, bgn cycle 1,
                         end orbit 1, end second 1,
                         end microsec 1, end cycle 1,
                         &number segments 2,
                         bgn orbit 2, bgn second 2,
                         bgn microsec 2, bgn cycle 2,
                         end orbit 2, end second 2,
                         end microsec 2, end cycle 2,
                         &num segments out,
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 152

```
&bgn_orbit_out, &bgn_secs_out,
&bgn_microsecs_out, &bgn_cycle_out,
&end_orbit_out, &end_secs_out,
&end_microsecs_out, &end_cycle_out,
ierr);
```

```
/* Or, using the run id */
long run id;
status = xv time segments and run (
                  & run id,
                   &orbit type, &order switch,
                   &<u>number segments 1</u>,
                  bgn orbit 1, bgn second 1,
                   bgn microsec 1, bgn cycle 1,
                   end orbit 1, end second 1,
                   end microsec 1, end cycle 1,
                   &number segments 2,
                  bgn orbit 2, bgn second 2,
                   bgn microsec 2, bgn cycle 2,
                   end orbit 2, end second 2,
                   end microsec 2, end cycle 2,
                   &num segments out,
                   &bgn_orbit_out, &bgn_secs_out,
                   &bgn microsecs out, &bgn cycle out,
                   &end orbit out, &end secs out,
                   &end microsecs out, &end cycle out,
                   ierr);
```





7.14.3 Input parameters xv_time_segments_and

Table 40: Input parameters of xv_time_segments_and

C name	C type	Array Elemen t	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see Table 2)
num_segments_1	long	-	Number of segments in the input list 1.	-	>0
bgn_orbit_1	long*	all	Array of orbit numbers for the beginning of the segments in list 1	-	>0
bgn_secs_1	long*	all	Array of seconds elapsed since ANX for the beginning of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_1	long*	all	Array of microseconds within a second for the beginning of the segments in list 1	-	>0 <999999
bgn_cycle_1	long*	all	Array of cycle numbers for the beginning of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_1	long*	all	Array of orbit numbers for the end of the segments in list 1	-	>0
end_secs_1	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_1	long*	all	Array of microseconds within a second for the end of the segments in list 1	-	>0 <999999
end_cycle_1	long*	all	Array of cycle numbers for the end of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
num_segments_2	long	-	Number of segments in the input list 2.	-	>0





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 154

long*	all	Array of orbit numbers for the beginning of the segments in list 2	_	>0
long*	all	Array of seconds elapsed since ANX for the beginning of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
long*	all	Array of microseconds within a second for the beginning of the segments in list 2	-	>0 <999999
long*	all	Array of cycle numbers for the beginning of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
long*	all	Array of orbit numbers for the end of the segments in list 2	-	>0
long*	all	Array of seconds elapsed since ANX for the end of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
long*	all	Array of microseconds within a second for the end of the segments in list 2	-	>0 <999999
long*	all	Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
	long* long* long* long* long*	long* all	beginning of the segments in list 2 long* all Array of seconds elapsed since ANX for the beginning of the segments in list 2 long* all Array of microseconds within a second for the beginning of the segments in list 2 long* all Array of cycle numbers for the beginning of the segments in list 2. When using absolute orbits, a NULL pointer can be used. long* all Array of orbit numbers for the end of the segments in list 2 long* all Array of seconds elapsed since ANX for the end of the segments in list 2 long* all Array of microseconds within a second for the end of the segments in list 2 long* all Array of cycle numbers for the end of the segments in list 2 long* all Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can	beginning of the segments in list 2 long* all Array of seconds elapsed since ANX for the beginning of the segments in list 2 long* all Array of microseconds within a second for the beginning of the segments in list 2 long* all Array of cycle numbers for the beginning of the segments in list 2. When using absolute orbits, a NULL pointer can be used. long* all Array of orbit numbers for the end of the segments in list 2 long* all Array of seconds elapsed since ANX for the end of the segments in list 2 long* all Array of microseconds within a second for the end of the segments in list 2 long* all Array of cycle numbers for the end of the segments in list 2 long* all Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can





Page: 155

7.14.4 Output parameters xv_time_segments_and

Table 41: Output parameters of xv_time_segments_and

C name	C type	Array Element	Description	Unit (Format	Allowed Range
xv_time_segments_and	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	_	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the beginning of the segments		<nodal period<="" td=""></nodal>
bgn_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the beginning of the segments		<999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the end of the segments		<nodal period<="" td=""></nodal>
end_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the end of the segments		<999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_and** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.14.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_and** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_and** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 42: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS _ AND_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _AND_REL_TO_ABS_ORBI T_ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _AND_ABS_TO_REL_ORBI T_ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS _ AND_SORTING_ERR	3
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _AND_GEO_SAT_ERR	4





7.15 xv_time_segments_sort

7.15.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments sort function sorts a list of orbital segments following two different criteria:

- Absolute orbits: the segments are sorted by their start time
- Relative orbits

The time intervals used by **xv_time_segments_sort** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Note that the sort criteria does not have any relation with the chosen orbit representation. The following example clarifies this:

Input orbits: 6, 8, 4, 5, 9, 3 (absolute)

Let's suppose that the cycle length is 4 orbits. Then the relative orbits are:

input orbits: 2, 4, 4, 1, 1, 3 (relative)

When ordering this array, we have the following possibilities (Table 43) depending on the orbit representation and the sort criteria chosen:

Input **Sort Criteria** Output absolute orbits absolute orbits 3, 4, 5, 6, 8, 9 absolute orbits 6, 8, 4, 5, 9, 3 relative orbits absolute orbits 5, 9, 6, 3, 4, 8 absolute orbits relative orbits relative orbits 3, 4, 1, 2, 4, 1 2, 4, 4, 1, 1, 3 relative orbits relative orbits 1, 1, 2, 3, 4, 4

Table 43: xv_time_segments_sort function

The xv_time_segments_sort requires access the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.

7.15.2 Calling sequence xv_time_segments_sort

For C programs, the call to **xv** time **segments sort** is (input parameters are underlined):





```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit_type, sort_criteria,
               num segments,
               *bgn orbit, *bgn secs,
               *bgn microsecs, *bgn cycle,
               *end orbit, *end secs,
               *end microsecs, *end cycle,
               ierr, status;
      status = xv time segments sort (
                         &orbit id,
                         &orbit type, &sort criteria,
                         &number segments,
                         bgn orbit, bgn second,
                         bgn microsec, bgn cycle,
                         end orbit, end second,
                         end microsec, end cycle,
                        ierr);
      /* Or, using the run_id */
      long run id;
      status = xv_time_segments_sort_run (
                         & run id,
                         &orbit type, &sort_criteria,
                         &number segments,
                          bgn orbit, bgn second,
                         bgn microsec, bgn cycle,
                          end orbit, end second,
                         end microsec, end cycle,
                         ierr);
```

}





7.15.3 Input parameters xv_time_segments_sort

Table 44: Input parameters of xv_time_segments_sort

C name	C type	Array Elemen t	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
sort_criteria	long	-	sorting criteria to be used: absolute or relative orbits	-	Complete (see Table 2)
num_segments	long	-	Number of segments in the input.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beginning of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments.	-	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





7.15.4 Output parameters xv_time_segments_sort

Table 45: Output parameters of xv_time_segments_sort

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_time_segments_and	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
ierr[10]	long		Error status flags		





7.15.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_sort** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_sort** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 46: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS _ SORT_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _SORT_CHANGING_ORBI T_ ERR	1
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _SORT_GEO_SAT_ERR	2





7.16 xv_time_segments_merge

7.16.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments merge function merges all the overlapped segments within a list (see Figure 16)

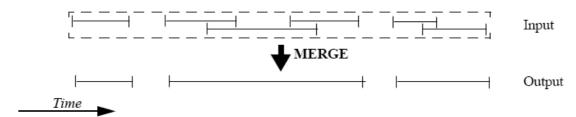


Figure 16: xv_time_segments_merge function

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_merge** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv time segments merge requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





7.16.2 Calling sequence xv_time_segments_merge

For C programs, the call to xv time segments merge is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit type, order switch,
               num segments,
               *bgn orbit, *bgn secs,
               *bgn microsecs, *bgn cycle,
               *end orbit, *end secs,
               *end microsecs, *end cycle,
               num segments_out,
               *bgn orbit out, *bgn secs out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR MERGE], status;
      status = xv time segments merge(
                        &orbit id,
                        &orbit type, &order switch,
                        &number segments,
                        bgn orbit, bgn secs,
                        bgn microsecs, bgn cycle,
                        end orbit, end secs,
                        end microsecs, end cycle,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end_orbit_out, &end_secs_out,
                        &end microsecs out, &end cycle out,
                        ierr);
      /* Or, using the run id */
      long run id;
      status = xv time segments merge run(
```





&run_id,
&orbit_type, &order_switch,
&number_segments,
bgn_orbit, bgn_secs,
bgn_microsecs, bgn_cycle,
end_orbit, end_secs,
end_microsecs, end_cycle,
&num_segments_out,
&bgn_orbit_out, &bgn_secs_out,
&bgn_microsecs_out, &bgn_cycle_out,
&end_orbit_out, &end_secs_out,
&end_orbit_out, &end_secs_out,
ierr);

}





7.16.3 Input parameters xv_time_segments_merge

Table 47: Input parameters of xv_time_segments_merge

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see Table 2)
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beginning of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





7.16.4 Output parameters xv_time_segments_merge

Table 48: Output parameters of xv_time_segments_merge

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_time_segments_merge	long		Function status flag,		
			= 0 No error		
			> 0Warnings, results generated		
			< 0Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

Memory Management: Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_merge** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.16.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_merge** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library **xv get msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_merge** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 49: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS _ MERGE_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _MERGE_REL_TO_ABS_O R BIT_ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _MERGE_ABS_TO_REL_O R BIT_ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS _ MERGE_SORTING_ERR	3
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _MERGE_GEO_SAT_ERR	4

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual





7.17 xv_time_segments_delta

7.17.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv_time_segments_delta function makes all the segments within a list, longer or shorter. After increasing/decreasing the longitude of the segments, these are sorted and merged to avoid possible overlapping. Therefore, at the end the list is sorted and without overlapped segments.

The time intervals used by **xv_time_segments_delta** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

The xv time segments delta requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





7.17.2 Calling sequence xv_time_segments_delta

For C programs, the call to xv time segments delta is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               orbit_type,
               num segments,
               *bgn orbit, *bgn secs,
               *bgn microsecs, *bgn_cycle,
               *end orbit, *end secs,
               *end microsecs, *end cycle,
               num segments out,
               *bgn_orbit_out, *bgn_secs_out,
               *bgn_microsecs_out, *bgn_cycle_out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR DELTA], status;
       double entry offset, exit offset;
      status = xv time segments delta(
                        &orbit id,
                        &orbit type,
                        &entry offset, &exit offset,
                        &number segments,
                        bgn orbit, bgn secs,
                        bgn microsecs, bgn cycle,
                        end orbit, end secs,
                        end microsecs, end cycle,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end orbit out, &end secs out,
                        &end microsecs out, &end cycle out,
                        ierr);
      /* Or, using the run id */
      long run id;
```



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 170

```
status = xv_time_segments_delta_run(
    &run_id,
    &orbit_type,
    &entry_offset, &exit_offset,
    &number_segments,
    bgn_orbit, bgn_secs,
    bgn_microsecs, bgn_cycle,
    end_orbit, end_secs,
    end_microsecs, end_cycle,
    &num_segments_out,
    &bgn_orbit_out, &bgn_secs_out,
    &bgn_microsecs_out, &bgn_cycle_out,
    &end_orbit_out, &end_secs_out,
    &end_orbit_out, &end_secs_out,
    ierr);
```





7.17.3 Input parameters xv_time_segments_delta

Table 50: Input parameters of xv_time_segments_delta

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see Table 2)
entry_offset	double		Number of seconds to add/ subtract at the beginning of every segments.	seconds	-
			If entry_offset > 0, the entry_offset is added at the beginning of the segments making them shorter.		
exit_offset	double		Number of seconds to add/ subtract at the end of every segments.	seconds	-
			If exit_offset > 0 the exit_offset is added at the end of the segments making them longer.		
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beginning of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





7.17.4 Output parameters xv_time_segments_delta

Table 51: Output parameters of xv_time_segments_delta

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_time_segments_del ta	long		Function status flag,		
			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
	the beginning of the segments			<nodal period<="" td=""></nodal>	
bgn_microsecs_out	long*	all	Array of microseconds within a second	-	>0
			for the beginning of the segments		<999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for	-	>0
			the end of the segments		<nodal period<="" td=""></nodal>
end_microsecs_out	long*	all	Array of microseconds within a second	-	>0
	for the end of the segments			<999999	
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_delta** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.17.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_delta CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_delta** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 52: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory	Computation not performed	XV_CFI_TIME_SEGMENTS _ DELTA_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_REL_TO_ABS_ER R	
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_ABS_TO_REL_ER R	2
ERR	Error transforming from orbits to processing times.	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_ORBIT_TO_TIME _E RR	3
ERR	Error transforming from processing times to orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_TIME_TO_ORBIT _E RR	4
ERR	Error modifying time segment duration	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_TIME_ADD_ERR	5
ERR	Error sorting input list	Computation not performed	XV_CFI_TIME_SEGMENTS _ DELTA_SORT_ERR	6
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _DELTA_GEO_SAT_ERR	7

Earth Observation Mission CFI Software. EO_VISIBILITY Software User Manual









7.18 xv_time_segments_mapping

7.18.1 Overview

The function **xv_time_segments_mapping** returns groups of visibility segments of a zone within an orbit range introduced by the user. These groups, or mappings, contain a minimum number of time segments needed to cover the zone completely, and fulfil the following conditions:

- Each mapping only contains ascending or descending segments.
- The segments are ordered by the track number.
- Mappings with one segment will be returned if it covers completely the zone.
- A mapping is searched for each track with segments that only contains left/right coverage in the case of ascending/descending segments, and finishes with a track that only contains right/left coverage.
- Incomplete mappings are not returned. This could happen if the number of orbits is insufficient to cover the zone.

Note that different mappings could contain a subset of segments in common. For example in Figure 17 there are two possible different mappings:

- mapping 1: orbits 1, 2, 3, 4.
- mapping 2: orbits 502, 2, 3, 4.

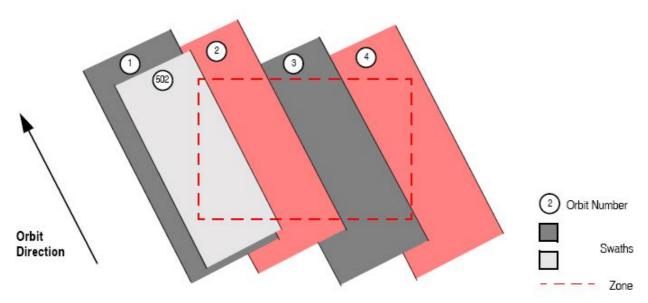


Figure 17: Different mappings with common segments

The time intervals used by **xv_time_segments_mapping** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the
 corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy
 parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}





The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

The xv time segments mapping requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files (Note: Orbit Event File is deprecated, only supported for CRYOSAT mission)
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EO_VISIBILITY library (**xv_gen_swath** function).
 - A swath definition file, describing the swath geometry. In this case the xv_time_segments_mapping generates the swath points for a number of orbits given by the user.
- Zone Database File: just in case of using a zone from the data base.





7.18.2 Calling sequence xv_time_segments_mapping

For C programs, the call to xv time segments mapping is (input parameters are underlined):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit_type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               zone num, projection;
               num mappings, *num segments,
               *orbit direction,
               **bgn orbit, **bgn secs,
               **bgn microsec, **bgn cycle,
               **end orbit, **end secs,
               **end microsec, **end cycle,
               **coverage,
               ierr[XV NUM ERR MAPPING], status;
      double
              zone_diam, *zone_long, *zone_lat;
      char
               *swath file,
               zone id[9], *zone db file;
      status = xv time segments mapping(
                   &orbit id, &orbit type,
                   &start orbit, &start cycle,
                   &stop orbit, &stop cycle,
                   &swath flag, swath file,
                   &zone num, zone id, zone db file,
                   &projection, &zone diam, zone long, zone lat,
                   &num mappings, &num segments,
                   &orbit direction,
                   &bgn orbit, &bgn secs, &bgn microsec, &bgn cycle,
                   &end orbit, &end secs, &end microsec, &end cycle,
                   &coverage, ierr);
      /* Or, using the run id */
      long run id;
```





```
status = xv_time_segments_mapping_run(
    &run_id, &orbit_type,
    &start_orbit, &start_cycle,
    &stop_orbit, &stop_cycle,
    &swath_flag, swath_file,
    &zone_num, zone_id, zone_db_file,
    &projection, &zone_diam, zone_long, zone_lat,
    &num_mappings, &num_segments,
    &orbit_direction,
    &bgn_orbit, &bgn_secs, &bgn_microsec, &bgn_cycle,
    &end_orbit, &end_secs, &end_microsec, &end_cycle,
    &coverage, ierr);
}
```





7.18.3 Input parameters xv_time_segments_mapping

Table 53: Input parameters of xv_time_segments_mapping

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	_	Complete (see Table 2)
start_orbit	long	-	First orbit, segment filter Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. The final orbit range defined by the start_orbit (start_cycle) and the stop_orbit (stop_cycle) should not exceed one cycle. Otherwise within one mapping there will appear all the orbits that are equal but that belong to different cycles. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start orbit.	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
			change of the start_orbit.start_orbit+cycle_length-1 (i.e.		





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 180

			the input orbit range will be a complete cycle)		
stop_cycle	long	-	Cycle number corresponding to the	cycle	= 0 or
			stop_orbit. Dummy when using relative orbits	number	≥ first cycle in osf
swath_flag	long*	-	Define the use of the swath file:	-	XV_STF = 0
			• 0 = (XV_STF) if the swath file is a swath template file.		XV_SDF = 1 > 0
			> 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits		
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat:		≥ 0
			= 0 no vertices provided, use zone_id / zone_db_file		
			= 1 Point / Circular zone,		
			= 2 Line zone		
			> 2 Polygon zone		
zone_id[9]	char		Identification of the zone, as defined in zone_db_file.		EXACTLY 8 characters
			This parameter is used ONLY IF zone_num = 0		
zone_db_file	char *		File name of the zone-database- file.		
			This file is used ONLY IF zone_num = 0		
projection	long		projection used to define polygon sides as straight lines:		
			= 0 Read projection from Zones DB (rectangular projection is used by default if the DB does not contain a projection)		
			= 1 Azimuthal gnomonic		
			= 2 Rectangular lat/long		
zone_diam	double		Zone diameter for circular zones,	m	≥ 0.0
			dummy for other zones		
			If diameter equals 0.0 then zone is Point Zone		
zone_long	double*	all	zone_long[i-1]		
			Geocentric longitude of		





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 181

			- circle centre, for circ. zone, i =1	
			- point, for point zone, i = 1	
			- line-end, for line zone, i = 1 or 2	
			- vertices, for polygon zone,	
			i = 1 zone_num	
zone_lat	double*	all	zone_lat[i-1]	
			Geodetic latitude of	
			- circle centre, for circ. zone, i =1	
			- point, for point zone, i = 1	
			- line-end, for line zone, i = 1 or 2	
			- vertices, for polygon zone,	
			i = 1 zone_num	





7.18.4 Output parameters xv_time_segments_mapping

Table 54: Output parameters of xv_time_segments_mapping

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
xv_time_segments_m	long		Function status flag,		
apping			= 0 No error		
			> 0 Warnings, results generated		
			< 0 Error, no results generated		
num_mappings	long		Number of output mappings		≥ 0
num_segments	long*	all	num_segments[n] = number of segments for the n-th mapping.	-	> 0
			n=0 (num_mappings-1)		
orbit_direction	long*	all	Direction of the segments of a mapping.	-	Complete (see Table 2: segment direction)
bgn_orbit	long**	all	Array of orbit numbers for the beginning of the segments	-	>0
bgn_secs	long**	all	Array of seconds elapsed since ANX for the beginning of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long**	all	Array of microseconds within a second for the beginning of the segments	-	>0 <999999
bgn_cycle	long**	all	Array of cycle numbers for the beginning of the segments.	-	>0
end_orbit	long**	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long**	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long**	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle	long**	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
coverage	long **	all	coverage of the output segments.	_	complete
					see Table 2
ierr	long*		Error status flags		





<u>Note 1:</u> The output visibility segments and the coverage are returned as a two-dimensional table where the first index indicates the number of the mapping, and the second one is the number of the segment within the mapping.

Note 2(Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_mapping** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





7.18.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_time_segments_mapping** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_mapping** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code**.

Table 55: Error messages and codes

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error, wrong orbit ld.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ORB IT_STATUS_ERR	0
ERR	Error getting absolute orbit from relative orbit.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_REL _TO_ABS_ERR	1
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_REF _LATITUDE_ERR	2
ERR	Error computing swath width.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_SWA TH_WIDTH_ERR	3
ERR	Error calling zone_vis_time function	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ZON EVISTIME_ERR	4
ERR	Error loading orbit scenario file.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_LOA D_OSF_ERR	5
ERR	Start orbit is less than first orbit in OSF	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_WR ONG_START_ORB_ER R	6
ERR	Error, orbits changes found within the input orbit range	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_WR ONG_STOP_ORB_ERR	7
ERR	Error allocating memory.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ME M_ERR	8
ERR	Error sorting segments.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_SOR T_ERR	9





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 185

ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ABS _TO_REL_ERR	10
ERR	Error checking extremes of the orbit range.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_CHE CK_EXTREMES_ERR	11
ERR	Error calling xv_swath_pos function.	Computation not performed	XV_CFI_TIME_SEGMENTS _MAPPING_SWATH_POS_ ERR	12
ERR	Error loading swath template file: %s	Computation not performed	XV_CFI_TIME_SEGMENTS _MAPPING_SWATH_READ _ERR	13
ERR	Swath file is not a line swath.	Computation not performed	XV_CFI_TIME_SEGMENTS _MAPPING_INCORRECT_ SWATH_ERR	14
WARN	Cannot check segments for start and stop orbits. Incomplete mappings could be generated.	Previous orbit to input start orbit and/or next orbit to the input stop orbit are not in the same orbital change that the input orbit range. It can not be checked whether there are segments missing at the extremes of the orbit range.	<u> </u>	15
		Computation performed.		
WARN	Incomplete ascending mapping. %Id more track(s) needed to complete the mapping.	Computation performed.	XV_CFI_TIME_SEGMENTS _MAPPING_ASC_INCOMP LETE_MAPPING_WARN	16
WARN	Incomplete descending mapping. %Id more track(s) needed to complete the mapping.	Computation performed.	XV_CFI_TIME_SEGMENTS _MAPPING_DESC_INCOM PLETE_MAPPING_WARN	17
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_TIME_SEGMENTS _MAPPING_GEO_SAT_ER R	18





7.19 xv_gen_swath

7.19.1 Overview

The xv_gen_swath function generates for the different instrument modes the corresponding instrument swath template file. These template files define the swaths to be used in the segment calculation routines of EO VISIBILITY.

The selection of the algorithm to compute the swath points depends on the parameters of the corresponding swath definition found in the instrument swath definition file. The swath point type (geodetic or inertial) and the algorithm to be used is deduced from the geometry and other instrument dependent parameters (see Table 56). There is an example of a swath definition file in the Appendix A.

The instrument swath template file, consists of a header which contains the altitude range of the swath. The data block contains n locations of the swath (between 50 and 6000, typically 1200) equally spread in time along one orbit. Every swath location contains a list of m points of the instantaneous swath ($m \ge 1$). For a description of the swath configuration see section 7.1.2 and Figure 8.

For Earth-fixed swaths, the location is given in longitude and latitude, in degrees, for the orbit with a longitude of ascending node of 0.0 degrees. For Inertial swaths, the location is the direction in inertial space (True of Date) in Right Ascension and Declination, in degrees, for the orbit with a Right Ascension of Ascending Node of 0.0 degrees.

The instrument swath template files are only dependent on:

- The instrument swath definition file
- The requested orbit number
- The orbit definition (orbit id).

Table 56: Swath geometry definition (algorithm)

Geometry (XD_Swath_geom_enum)	Algorithm description	Swath point type (XD_Swath_point_ type_enum)
Pointing_Geometry (azimuth, elevation, altitude)	Swath point computed with xp_target_inter with that azimuth, elevation and altitude	Geodetic
Distance_Geometry (azimuth, elevation, altitude, distance)	Swath point computed with xp_target_ground_range with that azimuth, elevation, altitude and distance	Geodetic
Limb_Geometry (azimuth and altitude)	Swath point computed with xp_target_altitude with that azimuth and altitude	Geodetic
Inertial_Geometry (azimuth and altitude)	Swath point computed with xp_target_altitude with that azimuth and altitude. The swath point is the RA and Declination of the target.	Inertial
Sub_Satellite_Geometry (no parameters)	Computation of the sub-satellite point	Geodetic
ASAR_Geometry (azimuth, elevation, altitude)	Specific algorithm for the three swath points for ASAR instrument in Envisat.	Geodetic



}



Code: EO-MA-DMS-GS-0006
Date: 05/07/12
Issue: 4.4
Page: 187

7.19.2 Calling interface

The calling interface of the **xv_gen_swath** CFI function is the following (input parameters are <u>underlined</u>):

```
#include <explorer visibility.h>
      xo_orbit_id orbit_id = {NULL};
      xp atmos id atmos id = {NULL};
      long requested orbit,
           version number;
      char *swath definition file;
      char swath_file[XD_MAX_STR], *dir_name, *file_class,
           *fh system;
      long status, ierr[XV_ERR_VECTOR_MAX_LENGTH];
      status = xv gen swath (&orbit id, &atmos id,
                              & requested orbit, swath definition file,
                              dir name, swath file,
                              file class, &version number, fh_system,
                              ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen swath run (&run id,
                               & requested orbit, swath definition file,
                              dir name, swath file,
                              file class, &version number, fh system,
                              ierr);
```





7.19.3 Input parameters

The xv_gen_swath CFI function has the following input parameters:

Table 57: Input parameters of xv_gen_swath function

C name	C type	Array Element	Description	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
atmos_id	xp_atmos_id*	-	Structure that contains the atmosphere initialisation.	_	-
			This parameter determines the atmospheric and raytracing model used for the STF generation. The refraction model in the SDF is not used.		
requested_orbit	long*	-	Orbit for which the instrument swath template file will be calculated.	absolute orbit number	> 0
swath_definition_file	char*	-	File name of the instrument swath definition file	-	-
dir_name	char*	-	Directory where the resulting STF is written (if empty (i.e. ""), the current directory is used)	-	-
swath_file	char*	-	Name for output swath file. If empty (i.e. ""), the software will generate the name according to file name specification presented in [FORMATS], in this case the generated name is returned in this variable	-	-
file_class	char*	-	File class for output swath file	-	-
version_number	long*	-	Version number of output swath file	-	>= 1
fh_system	char*	-	System field of the output swath file fixed header	_	-





 Code:
 EO-MA-DMS-GS-0006

 Date:
 05/07/12

 Issue:
 4.4

 Page:
 189

7.19.4 Output parameters

The output parameters of the xv_gen_swath CFI function are:

Table 58: Output parameters of xv_gen_swath function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
swath_file	char*	-	Name for output swath file. This is only an output parameter when it is empty (i.e. ""; see description of this parameter in Table 57)	-	-
ierr[XV_ERR_VECTOR_ MAX_LENGTH]	long	all	Status vector	-	-





7.19.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_gen_swath** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg** (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_gen_swath** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code** (see [GEN_SUM]).

Table 59: Error messages of xv_gen_swath function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error, wrong orbit ld.	Computation not performed	XV_CFI_GEN_SWATH_OR BIT_INIT_ERR	0
ERR	Wrong requested orbit	Computation not performed	XV_CFI_GEN_SWATH_RE QUESTED_ORBIT_ERR	1
ERR	Could not get the creation date	Computation not performed	XV_CFI_GEN_SWATH_CU RRENT_TIME_ERR	2
ERR	Error transforming time formats	Computation not performed	XV_CFI_GEN_SWATH_TIM E_CONVERSION_ERR	3
ERR	Could not create the filename	Computation not performed	XV_CFI_GEN_SWATH_CR EATE_FILENAME_ERR	4
ERR	Error reading swath definition file: %s	Computation not performed	XV_CFI_GEN_SWATH_SD F_READ_ERR	5
ERR	Error computing the swath points	Computation not performed	XV_CFI_GEN_SWATH_XV _ ALGOR_ERR	6
ERR	Could not write the swath template file to disk	Computation not performed	XV_CFI_GEN_SWATH_WR ITE_ERR	7
ERR	Wrong input file name. The file cannot be created	Computation not performed	XV_CFI_GEN_SWATH_WR ONG_FILENAME_ERR	8
WARN	Could not find the input directory \"%s\". The current directory will be used instead	Computation performed	XV_CFI_GEN_SWATH_NO _DIR_WARN	9
ERR	Error allocating memory	Computation not performed	XV_CFI_GENSWATH_MEM ORY_ERR	10
ERR	Geostationary satellite not allowed for this function.	Computation not performed	XV_CFI_GENSWATH_GEO _SAT_ERR	11









7.19.6 Executable Program

The **gen** swath executable program can be called from a Unix shell as:

```
gen swath
                -sat satellite name
                -sdf swath definition file name
                -file orbit file name -orbit orbit number
               [-tle]
                [-dir dir name] (current directory by default)
                [-stf swath template filename] (empty string by default)
               [-precfile precise configuration file] (empty string by default)
                [-flcl file class] (empty string by default)
                [-vers version] (version = 1 by default)
                [-fhsys fh system] (empty string by default)
                [-v]
                [-xl \ v]
                \begin{bmatrix} -xo & v \end{bmatrix}
                [-xp_v]
                [-xv_v]
                [-help]
                [-show]
                {(-tai TAI time -gps GPS time -utc UTC time -ut1 UT1 time) |
                (-tmod time model -tfile time reference data file -trid time reference
                {(-tm0 time 0 -tm1 time 1) | (-orb0 orbit 0 -orb1 orbit 1) } )}
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory (For example, if **-stf** argument is not provided, instrument swath file name suffix is considered to be an empty string).
- Options between curly brackets and separated by a vertical bar are mutually exclusive (For example, that lines 3 and 4 are mutually exclusive).
- [-tle] this options must be provided if input file is a Two Line Elements file.
- [-xl_v] option for EO LIB Verbose mode.
- [-xo v] option for EO ORBIT Verbose mode.
- [-xp v] option for EO POINTING Verbose mode.
- [-xv v] option for EO VISIBILITY Verbose mode.
- [-v] option for Verbose mode for all libraries (default is Silent).
- [-show] displays the inputs of the function and the results.
- Possible values for satellite_name: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM_A, SWARM_B,





SWARM_C, SENTINEL_1A, SENTINEL_1B, SENTINEL_1C, SENTINEL_2A, SENTINEL_2B, SENTINEL_2C, SENTINEL_3A, SENTINEL_3B, SENTINEL_3C, SEOSAT, GENERIC.

- Precise propagation is used if precfile is provided.
- Important: The atmospheric model used for the STF generation is taken from the "Refraction" parameters in the SDF. The allowed values for the Refraction model in the input SDFare NO_REF, STD REF or PRED REF. Note the user defined models are not allowed.

Example:





7.20 xv_gen_swath_no_file

7.20.1 Overview

The xv_gen_swath_no_file function generates for the different instrument modes the corresponding instrument swath template data.

The aim of this function is to provide another interface for the function **xv_gen_swath** in which the swath data is returned in a swath structure instead to be save to a file.

7.20.2 Calling interface

The calling interface of the xv_gen_swath_no_file CFI function is the following (input parameters are underlined):

```
#include <explorer visibility.h>
      xo orbit id orbit id = {NULL};
      xp atmos id atmos id = {NULL};
      long requested orbit;
      xd sdf file *sdf;
      xd stf file *stf;
      long status, ierr[XV_ERR_VECTOR_MAX_LENGTH];
      status = xv gen swath no file (&orbit id, &atmos id,
                                       & requested orbit,
                                       &sdf, &stf,
                                       ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen swath no file run (& run id,
                                            & requested orbit,
                                            &sdf, &stf,
                                            ierr);
}
```





7.20.3 Input parameters

The xv_gen_swath_no_file CFI function has the following input parameters:

Table 60: Input parameters of xv_gen_swath_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
atmos_id	xp_atmos_id*	-	Structure that contains the atmosphere initialisation. This parameters is needed only if the swath definition file requires atmosphere initialisation. This happens when the refraction model in the SDF is USER_REF or PRED_REF.	_	-
requested_orbit	long*	-	Orbit for which the instrument swath template file will be calculated.	absolute orbit number	> 0
sdf	xd_sdf_file	-	Swath definition file structure data. This structure is defined in [D_H_SUM] and can be got by reading a swath definition file with the CFI function xd_read_sdf.	-	-
file_class	char*	-	File class for output swath data	-	-
version_number	long*	-	Version number of output swath data	-	>= 1
fh_system	char*	-	System field of the output swath file fixed header data	-	-

7.20.4 Output parameters

The output parameters of the xv_gen_swath_no_file CFI function are:

Table 61: Output parameters of xv_gen_swath_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
stf	xd_stf_ file	-	Swath Template structure defined in [D_H_SUM]	_	-





ierr[XV_ERR_VECTOR_	long	all	Status vector	-	-
MAX_LENGTH]					

7.20.5 Warnings and errors

The error and warning messages and codes for **xv_gen_swath_no_file** are the same than for **xv_gen_swath** (see Table 59).

The error messages/codes can be returned by the CFI function xv_get_msg/xv_get_code after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV_GEN_SWATH_ID (from Table 1).





7.21 xv_gen_scf

7.21.1 Overview

The **xv_gen_scf** function generates a Swath Control file. This file contains a list of visibility segments together with some features linked to the segment that are used for the visualisation of the segment in the ESOV tool.

In order to generate the file, the same xo_orbit_id variable that was used for the generation of the visibility segments has to be provided. Moreover, this xo_orbit_id has to be implemented with one of the following functions:

- xo orbit init def
- xo_orbit_init_file with an orbit scenario file (or an orbit event file used as an orbit scenario. Note: Orbit Event File is deprecated, only supported for CRYOSAT mission).

7.21.2 Calling interface

The calling interface of the xv gen scf CFI function is the following (input parameters are <u>underlined</u>):

```
#include <explorer visibility.h>
      xo orbit id orbit id = {NULL};
      char instrument[XD MAX STR];
      long version number;
      char *file class, *fh_system;
      char dir name[XD MAX STR], scf filename[XD MAX STR];
      long status, ierr[XV NUM ERR GEN SCF];
      long number segments;
      long *bgn orbit, *bgn second, *bgn microsec;
      long *end orbit, *end second, *end microsec;
      xd scf appear * appearance;
      status = xv gen scf (&orbit_id, instrument, &number_segments,
                            ban orbit, ban second, ban microsec,
                            end orbit, end second, end microsec,
                            appearance,
                            dir name, scf filename,
                            file class, &version number, fh system,
                            ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen scf run (&run id, instrument, &number segments,
                                ban orbit, ban second, ban microsec,
```





end_orbit, end_second, end_microsec,
appearance,
dir_name, scf_filename,
file_class, &version_number, fh_system,
ierr);

}

7.21.3 Input parameters

The xv_gen_scf CFI function has the following input parameters:

Table 62: Input parameters of xv_gen_scf function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
instrument	char*	-	Instrument name	-	-
number_segments	long	-	Number of input segments	-	
bgn_orbit	long*	-	Array of absolute orbit numbers for the beginning of the segments	-	> 0
bgn_second	long*	-	Array of seconds elapsed since ANX for the beginning of the segments	-	> =0
bgn_microsec	long*	-	Array of microseconds within a second for the beginning of the segments	-	>=0
end_orbit	long*	-	Array of absolute orbit numbers for the end of the segments	-	> 0
end_second	long*	-	Array of seconds elapsed since ANX for the end of the segments	-	>=0
end_microsec	long*	-	Array of microseconds within a second for the end of the segments	-	>=0
appearance	xd_scf_appe ar	-	Array with the structures contain ing the appearance for every segment (see [D_H_SUM])	-	-
dir_name	char*	-	Directory where the resulting STF is written (if empty (i.e. ""), the current directory is used)	-	-
scf_filename	char*	-	Name for output swath file. If empty (i.e. ""), the software will generate the name according to file name specification presented	-	-





			in [FORMATS], in this case the generated name is returned in this variable		
file_class	char*	-	File class for output file	-	-
version_number	long*	-	Version number of output file	-	>= 0
fh_system	char*	-	System field of the output file fixed header	-	-

7.21.4 Output parameters

The output parameters of the **xv_gen_scf** CFI function are:

Table 63: Output parameters of xv_gen_scf function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
scf_filename	char*	-	Name for output SCF. This is only an output parameter when it is empty (i.e. ""; see description of this parameter in Table 62)	-	-
ierr[XV_NUM_ERR_GEN _SCF]	long	all	Status vector	-	-





7.21.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_gen_scf** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EO_VISIBILITY software library **xv_get_msg** (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_gen_scf** CFI function by calling the function of the EO_VISIBILITY software library **xv_get_code** (see [GEN_SUM]).

Table 64: Error messages of xv_gen_scf function

Error type	Error message	Cause and impact	Error Code	Error No
ERR	No segments to write	Computation not performed	XV_CFI_GENSCF_NO_SE GMENTS_ERR	0
ERR	The orbit has not been initialised	Computation not performed	XV_CFI_GENSCF_ORBIT_I NIT_ERR	1
ERR	Wrong orbit initialisation mode	Computation not performed	XV_CFI_GENSCF_ORBIT_I NIT_MODE_ERR	2
ERR	Could not get the creation date	Computation not performed	XV_CFI_GENSCF_CURRE NT_TIME_ERR	3
ERR	Could not get orbit number for the orbit = %ld	Computation not performed	XV_CFI_GENSCF_ORBIT_ TO_TIME_CONVERSION_ E RR	4
ERR	Error transforming time formats	Computation not performed	XV_CFI_GENSCF_TIME_C ONVERSION_ERR	5
ERR	Could not create the filename	Computation not performed	XV_CFI_GENSCF_CREAT E_FILENAME_ERR	6
ERR	Could not get orbital information for orbit %ld	Computation not performed	XV_CFI_GENSCF_GET_O RBIT_INFO_ERR	7
ERR	Wrong input file name. The file cannot be created	Computation not performed	XV_CFI_GENSCF_WRONG _FILENAME_ERR	8
ERR	Could not write the swath control file to disk	Computation not performed	XV_CFI_GENSCF_WRITE_ ERR	9
WARN	Could not find the input directory \"%s\". The current directory will be used instead	Computation performed	XV_CFI_GENSCF_NO_DIR _WARN	10





8 RUNTIME PERFORMANCES

The library performance has been measured by dedicated test procedures run in 5 different platforms under the below specified machines:

OS ID	Processor	os	RAM
LINUX64	Intel(R) Core(TM)2 Quad CPU Q8400 @ 2.66GHz	GNU LINUX 2.6.24-16-generic (Ubuntu 8.04)	4 GB
LINUX32_LEGACY	Intel(R) Core(TM)2 Quad CPU Q8400 @ 2.66GHz	GNU LINUX 2.6.24-16-generic (Ubuntu 8.04)	4 GB
LINUX64_LEGACY	Intel(R) Core(TM)2 Quad CPU Q8400 @ 2.66GHz	GNU LINUX 2.6.24-16-generic (Ubuntu 8.04)	4 GB
MACIN64	Intel(R) Core(TM)2 Duo @ 2.00GHz	MAC OS X V10.5.8	1 GB
WINDOWS	Intel(R) Core(TM)2 Duo CPU T8100 @ 2.10 GHz	Microsoft Windows XP Professional Version 2002 Service Pack 3	2.99 GB

The table below shows the time (in miliseconds - ms) each function takes to be run under each platform:

Function id	LINUX64	LINUX32 LEGACY	LINUX64 LEGACY	MACIN64	WINDOWS
xv_swath_pos	0.083000	0.062000	0.074000	0.056000	0.135900
xv_zone_vis_time * 50 orbits	53.599998	45.000000	46.000000	73.000000	302.350006
xv_zone_vis_time_no_file * 50 orbits	8.700000	4.700000	3.200000	4.500000	12.970000
xv_time_segments_not * 34 segments		0.002100	0.001900	0.003000	0.003750
xv_time_segments_or * 34 segments	0.006100	0.005400	0.003900	0.007600	0.008600
xv_time_segments_and *	0.008900	0.008000	0.006200	0.011600	0.013430





Page: 202

34 segments					
xv_time_segments_sort *					
34 segments	0.010000	0.020000	0.020000	0.010000	0.016000
xv_time_segments_merge	0.001400	0.002000	0.001400	0.004900	0.005630
34 segments					
xv_time_segments_delta *	10.800000	11.540000	8.010000	12.360000	22.625999
34 segments					
xv_multizones_vis_time * 30 orbits		221.000000	243.000000	378.000000	3425.100098
xv_gen_scf *	2.790000	3.400000	2.870000	5.820000	36.673000
27 segments					
xv_multistations_vis_time	458.200012	411.000000	423.000000	626.000000	14163.000000
10 orbits					
xv_station_vis_time *	66.000000	58.000000	57.000000	88.000000	2928.100098
10 orbits					
xv_station_vis_time_no_fil e *	16.000000	14.000000	11.000000	11.000000	26.500000
10 orbits					
xv_drs_vis_time *		290.000000	188 000000	459 000000	536 000000
10 orbits	330.000000	290.000000	188.00000	439.000000	330.000000
xv_star_vis_time *	581 000000	586 000000	534 000000	836 000000	16528.400391
100 orbits	301.000000	300.000000	331.000000	030.000000	10320.100371
xv_time_segments_mappin g *	272.799988	258.000000	242.000000	397.000000	7953.200195
50 orbits					
xv_orbit_extra	27.100000	25.500000	22.600000	28.000000	50.160000





xv_gen_swath	419.399994	509.700012	392.299988	861.799988	3393.310059
xv_gen_swath_no_file	282.600006	364.299988	276.399994	657.099976	1077.800049
xv_sc_vis_time *					
10 orbits	262.000000	218.000000	246.000000	488.000000	568.700012

Note that when the value "0.000000" is defined for a function in a certain platform, it means that its running time is lower than 1 nano-second and so it can be considered as "0".LIBRARY PRECAUTIONS

The following precaution shall be taking into account when using EO VISIBILITY library:

• When a message like

<I IBRARY NAME> >>> ERROR in my function: Interpretation.

<LIBRARY NAME> >>> ERROR in xv_function: Internal computation error # n
or

<LIBRARY NAME> >>> WARNING in xv_function: Internal computation warning # n appears, run the program in verbose mode for a complete description of warnings and errors and call for maintenance if necessary.





9 KNOWN PROBLEMS

The following precautions shall be taken into account when using the CFI software libraries:

Table 65: Known problems

	CFI library	Problem	Work around solution
)	xv_gps_vis_time	Functions not available yet	-