



Earth Explorer Mission CFI Software

EXPLORER_VISIBILITY SOFTWARE USER MANUAL

Code: EE-MA-DMS-GS-0007

Issue: 3.7.6

Date: 24/05/19

Name Function Signature

Prepared by: Carlos Villanueva Project Engineer

Juan José Borrego Bote Project Manager

Checked by: Juan José Borrego Bote Project Manager

Approved José Antonio González Abeytua Division Head

by:

DEIMOS Space S.L.U. Ronda de Poniente, 19, Tres Cantos 28760 Madrid, SPAIN Tel.: +34 91 806 34 50 Fax: +34 91 806 34 51

E-mail: deimos@deimos-space.com

© DEIMOS Space S.L.U., 2019





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 2

Document Information

	Contract Data	Classification	
Contract Number:	15583/01/NL/GS	Internal	
		Public	
Contract Issuer:	ESA / ESTEC	Industry	Х
		Confidential	

External Distribution		
Name	Organisation	Copies

	Electronic handling
Word Processor:	Adobe Framemaker 7.0
Archive Code:	P/SUM/DMS/01/026-029
Electronic file name:	ee-ma-dms-gs-0006-21





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 3

Document Status Log

Issue	Change Description	Date	Approval
1.0	Unreleased	19/06/02	
2.0	Complete document	29/11/02	
2.1	Maintenance release with the following main changes:	13/05/03	
	 xv_multizones_vis_time added. xv_multistation_vis_time added. xv_time_segment_mapping added. xv_orbit_extra added. 		
	See change bars for complete document update.		
2.2	Maintenance release	30/09/03	
2.2.2	Small interface chance in xv_time_segments_delta and xv_orbit_extra	26/04/04	
3.0	New initialisation strategy and interfaces.	21/07/04	
3.1	New features for xv_zone_vis_time function: • Use of Predicted Orbit/Orbit event files. • Use of Swath Definition files.	13/10/04	
3.2	Maintenance release	15/11/04	
3.3	 New features: Use of Predicted Orbit/Orbit event files for all visibility functions. Use of Swath Definition files for all visibility functions. ENVISAT ASCII files are no longer supported 	11/07/05	
3.4	 Maintenance release. gen_swath executable moved to this library. Changes in the xv_swath_pos interface 	18/11/05	
3.5	Maintenance release.	26/05/06	
3.6	Maintenance release.	24/11/06	





Code: EE-Date: Issue: Page:

Issue	Change Description	Date	Approval
3.7	 Maintenance release. New features: xv_gen_scf expcfi_check_libs xv_zone_vis_time_no_file xv_station_vis_time_no_file xv_gen_swath_no_file library version for Mac OS X on Intel (32 and 64 bits) 	13/07/07	
3.7.2	 Maintenance release. New features: Curved and closed swaths for xv_zone_vis_time	31/07/08	
3.7.3	 Maintenance release. New features: AOS/LOS mask mode from GND_DB	07/05/10	
3.7.4	Maintenance release.	31/01/11	
3.7.5	Maintenance release.	19/11/13	
3.7.6	Maintenance release.	24/05/19	





EE-MA-DMS-GS-0006 24/05/19 3.7.6

Table of Contents

1. SCOPE	12
2. ACRONYMS AND NOMENCLATURE	13
2.1. Acronyms	13
2.2. Nomenclature	
3. APPLICABLE AND REFERENCE DOCUMENTS	14
3.1. Applicable documents	14
3.2. Reference documents	
4. INTRODUCTION	
4.1. Functions Overview	
4.2. Calling Sequence	
5. LIBRARY INSTALLATION	19
6. LIBRARY USAGE	20
6.1. Usage hints	22
6.2. General enumerations.	
7. CFI FUNCTIONS DESCRIPTION	
7.1. xv zone vis time	
7.1.1. Overview	
7.1.2. Swath Definition	
7.1.2.1. Earth-observing Instruments Swath Definition	
7.1.2.2. Limb-sounding Instruments Swath Definition	
7.1.2.3. Limb-sounding Instruments Inertial Swath Definition	
7.1.2.4 Swath Definition for Envisat	
7.1.3. Zone Borders and Projection	32
7.1.4. Zone Definition	32
7.1.5. Intersection Definition	34
7.1.6. Intersection Algorithm	35
7.1.6.1. Intersection with a point swath	35
7.1.6.2. Intersection with a segment swath	35
7.1.6.3. Intersection with a multi-segment swath	36
7.1.7. Usage Hints	37
7.1.7.1. Limb-sounding Instruments Intersection	37
7.1.7.2. Zone Coverage	37
7.1.7.3. Combined use of xv_swath_pos and the coverage flag	37
7.1.8. Calling sequence	38
7.1.9. Input parameters	40
7.1.10. Output parameters	44
7.1.11. Warnings and errors	46





Code:	
Date:	
Issue:	
Page:	

7.1.12. Runtime performances	52
7.2. xv_zone_vis_time_no_file	53
7.2.1. Overview	53
7.2.2. Calling sequence	53
7.2.3. Input parameters	55
7.2.4. Output parameters	58
7.2.5. Warnings and errors	60
7.2.6. Runtime performances	60
7.3. xv_station_vis_time	61
7.3.1. Overview	61
7.3.2. Calling interface	63
7.3.3. Input parameters	65
7.3.4. Output parameters	68
7.3.5. Warnings and errors	71
7.3.6. Runtime performances	74
7.4. xv_station_vis_time_no_file	75
7.4.1. Overview	75
7.4.2. Calling interface	75
7.4.3. Input parameters	77
7.4.4. Output parameters	80
7.4.5. Warnings and errors	82
7.4.6. Runtime performances	82
7.5. xv_drs_vis_time	83
7.5.1. Overview	83
7.5.2. Calling interface	86
7.5.3. Input parameters	88
7.5.4. Output parameters	90
7.5.5. Warnings and errors	92
7.5.6. Runtime performances	96
7.6. xv_swath_pos	97
7.6.1. Overview	97
7.6.2. Calling sequence xv_swath_pos	98
7.6.3. Input parameters xv_swath_pos	99
7.6.4. Output parameters xv_swath_pos	99
7.6.5. Warnings and errors	101
7.6.6. Runtime performances	103
7.7. xv_star_vis_time	104
7.7.1. Overview	104
7.7.2. Swath Definition	105
7.7.2.1. Inertial Swaths	105
7.7.2.2. Splitting swaths	106
7.7.2.3. Orbital Changes	106
7.7.3. Calling sequence xv_star_vis_time	
7.7.4. Input parameters xv_star_vis_time	
7.7.5. Output parameters xv_star_vis_time	111





Code:	
Date:	
Issue:	
Page:	

7.7.6. Warnings and errors	113
7.7.7. Runtime performances	116
7.8. xv multizones vis time	117
7.8.1. Overview	117
7.8.2. Calling sequence xv_multizones_vis_time	119
7.8.3. Input parameters xv_multizones_vis_time	121
7.8.4. Output parameters xv_multizones_vis_time	124
7.8.5. Warnings and errors	126
7.8.6. Runtime performances	127
7.9. xv_multistations_vis_time	128
7.9.1. Overview	128
7.9.2. Calling sequence xv_multistations_vis_time	130
7.9.3. Input parameters xv_multistations_vis_time	132
7.9.4. Output parameters xv_multistations_vis_time	134
7.9.5. Warnings and errors	137
7.9.6. Runtime performances	138
7.10. xv_orbit_extra	139
7.10.1. Overview	139
7.10.2. Calling sequence xv_orbit_extra	140
7.10.3. Input parameters xv_orbit_extra	141
7.10.4. Output parameters xv_orbit_extra	142
7.10.5. Warnings and errors	144
7.10.6. Runtime performances	144
7.11. xv_gps_vis_time	145
7.12. xv_time_segments_not	146
7.12.1. Overview	146
7.12.2. Calling sequence xv_time_segments_not	147
7.12.3. Input parameters xv_time_segments_not	149
7.12.4. Output parameters xv_time_segments_not	151
7.12.5. Warnings and errors	152
7.12.6. Runtime performances	153
7.13. xv_time_segments_or	154
7.13.1. Overview	154
7.13.2. Calling sequence xv_time_segments_or	155
7.13.3. Input parameters xv_time_segments_or	157
7.13.4. Output parameters xv_time_segments_or	159
7.13.5. Warnings and errors	161
7.13.6. Runtime performances	162
7.14. xv_time_segments_and	163
7.14.1. Overview	163
7.14.2. Calling sequence xv_time_segments_and	164
7.14.3. Input parameters xv_time_segments_and	166
7.14.4. Output parameters xv_time_segments_and	169
7.14.5. Warnings and errors	170
7.14.6. Runtime performances	171





Code:	
Date:	
Issue:	
Page:	

7.15. xv_time_segments_sort	172
7.15.1. Overview	172
7.15.2. Calling sequence xv_time_segments_sort	173
7.15.3. Input parameters xv_time_segments_sort	174
7.15.4. Output parameters xv_time_segments_sort	176
7.15.5. Warnings and errors	177
7.15.6. Runtime performances	178
7.16. xv_time_segments_merge	179
7.16.1. Overview	179
7.16.2. Calling sequence xv_time_segments_merge	180
7.16.3. Input parameters xv_time_segments_merge	182
7.16.4. Output parameters xv_time_segments_merge	184
7.16.5. Warnings and errors	185
7.16.6. Runtime performances	186
7.17. xv_time_segments_delta	187
7.17.1. Overview	187
7.17.2. Calling sequence xv_time_segments_delta	188
7.17.3. Input parameters xv_time_segments_delta	190
7.17.4. Output parameters xv_time_segments_delta	192
7.17.5. Warnings and errors	193
7.17.6. Runtime performances	194
7.18. xv_time_segments_mapping	195
7.18.1. Overview	195
7.18.2. Calling sequence xv_time_segments_mapping	197
7.18.3. Input parameters xv_time_segments_mapping	199
7.18.4. Output parameters xv_time_segments_mapping	
7.18.5. Warnings and errors	
7.18.6. Runtime performances	207
7.19. xv_gen_swath	208
7.19.1. Overview	208
7.19.2. Calling interface	
7.19.3. Input parameters	210
7.19.4. Output parameters	211
7.19.5. Warnings and errors	
7.19.6. Runtime performances	
7.19.7. Executable Program	
7.20. xv_gen_swath_no_file	
7.20.1. Overview	
7.20.2. Calling interface	
7.20.3. Input parameters	
7.20.4. Output parameters	
7.20.5. Warnings and errors	
7.20.6. Runtime performances	
7.21. xv_gen_scf	
7.21.1. Overview	218





Code:	EE-MA-DMS-GS-0006
Date:	24/05/19
Issue:	3.7.6
Page.	ç

. KNOWN PROBLEMS	224
LIBRARY PRECAUTIONS	223
7.21.6. Runtime performances	222
7.21.5. Warnings and errors	221
7.21.4. Output parameters	220
7.21.3. Input parameters	219
7.21.2. Calling interface	218





EE-MA-DMS-GS-0006 24/05/19 3.7.6

9

List of Tables

Table 1:	CFI functions included within EXPLORER_VISIBILITY library	21
Table 2:	Some enumerations within EXPLORER_VISIBILITY library	22
Table 3:	Envisat Swaths	30
Table 4:	Zone definition	32
Table 5:	Input parameters of xv_zone_vis_time function	40
Table 6:	Output parameters of xv_zone_vis_time function	44
Table 7:	Error messages and codes for xv_zone_vis_time	46
Table 8:	Runtime performances of xv_zone_vis_time function	52
Table 9:	Input parameters of xv_zone_vis_time_no_file function	55
Table 10:	Output parameters of xv_zone_vis_time_no_file function	58
Table 11:	Runtime performances of xv_zone_vis_time_no_file function	60
Table 12:	Input parameters of xv_station_vis_time	65
Table 13:	Output parameters of xv_station_vis_time function	68
Table 14:	Error messages and codes for xv_station_vis_time	71
Table 15:	Runtime performances of xv_station_vis_time function	74
Table 16:	Input parameters of xv_station_vis_time_no_file	77
Table 17:	Output parameters of xv_station_vis_time_no_file function	80
Table 18:	Runtime performances of xv_station_vis_time_no_file function	82
Table 19:	Assumptions for the start-up and stop trajectory computations	84
Table 20:	Input parameters of xv_drs_vis_time	88
Table 21:	Output parameters of xv_drs_vis_time function	90
Table 22:	Runtime performances of xv_drs_vis_time function	96
Table 23:	Input parameters of xv_swath_pos	99
Table 24:	Output parameters of xv_swath_pos	99
Table 25:	Runtime performances of xv_swath_pos function	103
Table 26:	Input parameters of xv_star_vis_time	109
Table 27:	Output Parameters of xv_star_vis_time	111
Table 28:	Runtime performances of xv_star_vis_time function	116
Table 29:	Input parameters of xv_multizones_vis_time	121
Table 30:	Output parameters of xv_multizones_vis_time	124
Table 31:	Runtime performances of xv_multizones_vis_time function	127
Table 32:	Input parameters of xv_multistations_vis_time	132
Table 33:	Output parameters of xv_multistations_vis_time	134
Table 34:	Runtime performances of xv_multistations_vis_time function	138
Table 35:	Input parameters of xv_orbit_extra	141
Table 36:	Output parameters of xv_orbi_extra	142
Table 37:	Runtime performances of xv_orbit_extra function	144





Table 38:	Input parameters of xv_time_segments_not	149
Table 39:	Output parameters of xv_time_segments_not	151
Table 40:	Runtime performances of xv_time_segments_not function	153
Table 41:	Input parameters of xv_time_segments_or	157
Table 42:	Output parameters of xv_time_segments_or	159
Table 43:	Runtime performances of xv_time_segments_or function	162
Table 44:	Input parameters of xv_time_segments_and	166
Table 45:	Output parameters of xv_time_segments_and	169
Table 46:	Runtime performances of xv_time_segments_and function	171
Table 47:	xv_time_segments_sort function	172
Table 48:	Input parameters of xv_time_segments_sort	174
Table 49:	Output parameters of xv_time_segments_sort	176
Table 50:	Input parameters of xv_time_segments_merge	182
Table 51:	Output parameters of xv_time_segments_merge	184
Table 52:	Runtime performances of xv_time_segments_merge function	186
Table 53:	Input parameters of xv_time_segments_delta	190
Table 54:	Output parameters of xv_time_segments_delta	192
Table 55:	Runtime performances of xv_time_segments_delta function	194
Table 56:	Input parameters of xv_time_segments_mapping	199
Table 57:	Output parameters of xv_time_segments_mapping	203
Table 58:	Runtime performances of xv_time_segments_mapping function	207
Table 59:	Swath geometry definition (algorithm)	208
Table 60:	Input parameters of xv_gen_swath function	210
Table 61:	Output parameters of xv_gen_swath function	211
Table 62:	Error messages of xv_gen_swath function	212
Table 63:	Runtime performances of xv_gen_swath function	212
Table 64:	Input parameters of xv_gen_swath_no_file function	216
Table 65:	Output parameters of xv_gen_swath_no_file function	
Table 66:	Runtime performances of xv_gen_swath_no_file function	217
Table 67:	Input parameters of xv_gen_scf function	219
Table 68:	Output parameters of xv_gen_scf function	220
Table 69:	Error messages of xv_gen_scf function	221
Table 70:	Runtime performances of xv_gen_scf function	222
Table 71:	Known problems	224





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 11

List of Figures

Figure 1:	EXPLORER_VISIBILITY Data Flow 18
Figure 2:	Segment Definition xv_zone_vis_time 25
Figure 3:	Earth-observing instrument: swath definition 27
Figure 4:	Limb-sounding instrument: swath definition (1) 28
Figure 5:	Limb-sounding instrument: swath definition (2) 29
Figure 6:	Zone examples 33
Figure 7:	Intersection examples 34
Figure 8:	Swath points 36
Figure 9:	swath coverage definition 37
Figure 10:	Two tangent altitudes over the ellipsoid 105
Figure 11:	Instantaneous FOV projected on the celestial sphere 106
Figure 12:	xv_multizones_vis_time function 117
Figure 13:	xv_time_segments_not function 146
Figure 14:	xv_time_segments_or function 154
Figure 15:	xv_time_segments_and function 163
Figure 16:	xv_time_segments_merge function 179
Figure 17:	Different mappings with common segments 195





Code: E Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 12

1 SCOPE

The EXPLORER_VISIBILITY Software User Manual provides a detailed description of usage of the CFI functions included within the EXPLORER_VISIBILITY CFI software library.





Code: EE-Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

2 ACRONYMS AND NOMENCLATURE

2.1 Acronyms

ANX Ascending Node Crossing

AOCS Attitude and Orbit Control Subsystem

CFI Customer Furnished Item
EF Earth Fixed reference frame
ESA European Space Agency

ESTEC European Space Technology and Research Centre

FOS Flight Operations Segment

GS Ground Station
OSF Orbit Scenario File
SCF Swath Control File
SDF Swath Definition File

SRAR Satellite Relative Actual Reference

SSP Sub-Satellite Point
STF Swath Template File
SUM Software User Manual

TOD True of Date reference frame UTC Universal Time Coordinated

UT1 Universal Time UT1

WGS[84] World Geodetic System 1984

2.2 Nomenclature

CFI A group of CFI functions, and related software and documentation. that will be dis-

tributed by ESA to the users as an independent unit

CFI function A single function within a CFI that can be called by the user

Library A software library containing all the CFI functions included within a CFI plus the

supporting functions used by those CFI functions (transparently to the user)





EE-MA-DMS-GS-0006 24/05/19 3.7.6 14

3 APPLICABLE AND REFERENCE DOCUMENTS

3.1 Applicable documents

Earth Explorer Mission CFI Software. General Software User Manual. EE-MA-DMS-GS-0002. Issue 3.7.6. 24/05/19 [GEN_SUM]

3.2 Reference documents

ı	[MCD]	Earth Explorer Mission CFI Software. Mission Conventions. EE-MA-DMS-GS-0001. Issue 3.7.6. 24/05/19.
I	[MSC]	Earth Explorer Mission CFI Software. Mission Specific Customizations. EE-MA-DMS-GS-0018. Issue 3.7.6. 24/05/19.
I	[F_H_SUM]	Earth Explorer Mission CFI Software. EXPLORER FILE HANDLING Software User Manual. EE-MA-DMS-GS-0008. Issue 3.7.6. 24/05/19
I	[LIB_SUM]	Earth Explorer Mission CFI Software. EXPLORER_LIB Software User Manual. EE-MA-DMS-GS-0003. Issue 3.7.6. 24/05/19
I	[ORBIT_SUM]	Earth Explorer Mission CFI Software. EXPLORER_ORBIT Software User Manual. EE-MA-DMS-GS-0004. Issue 3.7.6. 24/05/19
I	[POINT_SUM]	Earth Explorer Mission CFI Software. EXPLORER POINTING Software User Manual. EE-MA-DMS-GS-0005. Issue 3.7.6. 24/05/19
I	[DAT_SUM]	Earth Explorer Mission CFI Software. EXPLORER DATA HANDLING Software User Manual. EE-MA-DMS-GS-0007 Issue 3.7.6. 24/05/19
	[FORMATS]	Earth Explorer File Format Guidelines. CS-TN-ESA-GS-0148.





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

4 INTRODUCTION

4.1 Functions Overview

This software library contains the CFI functions required to compute time segments at which an Earth Explorer satellite, or one of its instruments is in view of various targets:

- zones (defined as polygons or circles, on the earth ellipsoid or at a given altitude)
- · ground stations
- · data relay satellites
- stars

This library is to be used for planning of Earth Explorer operations. It includes, the following CFI functions:

- xv_station_vis_time and xv_station_vis_time_no_file: compute visibility time segments for a ground station
- xv_drs_vis_time: computes visibility time segments for a data relay satellite
- xv_zone_vis_time and xv_zone_vis_time_no_file: compute visibility time segments for an instrument swath in visibility of a zone.
- xv_swath_pos: computes location of a swath at a given time (additional routine to help refine the results of xv zone vis time)
- xv star vis time: computes visibility time segments for a star.
- xv_multizones_vis_time: computes the visibility segments of several zones and sort them to different criteria.
- xv_multistations_vis_time: computes the visibility segments of several ground stations and sort them according to different criteria.
- xv gps vis time: computes visibility time segments for a gps constellation.
- xv_gen_swath and xv_gen_swath_no_file generate the instrument swath template file for a given satellite, instrument mode and orbit.
- xv gen scf generates a swatth control file for the ESOV tool.
- Time Segments Manipulation Routines:
 - xv time segments not: returns the complement of 1 vector of time segments.
 - xv_time_segments_and: returns the intersection segments from 2 vectors of time segments.
 - xv time segments or: returns the joined segments from 2 vectors of time segments
 - xv_time_segments_delta: add or subtract time durations at the beginning and end of each time segment in a vector.
 - **xv_time_segments_sort:** returns the vector of time segments sorted according to absolute or relative orbits.
 - xv_time_segments_merge: merges all the overlapped segments in a list.
 - xv_time_segments_mapping: returns a subset of the time segments vector, such that this subset covers entirely a zone or line swath.

Several files are required to operate properly the above functions:

• Orbit Scenario File (all functions)





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

- Swath Template Files (xv_station_vis_time, xv_zone_vis_time, xv_swath_pos)
- Ground Stations Database File (xv_station_vis_time)
- (optionally) Zones Database File (xv_zone_vis_time)
- (optionally) Star Database File (xv_star_vis_time)

Note that all the above routines use orbit-relative time parameters (i.e. the time parameters are represented as orbit number + time since ascending node). Two functions from EXPLORER ORBIT will be very useful to process the input/outputs:

- xo_time_to_orbit: converts from TAI/UTC/UT1 time to orbit-relative time
- xo_orbit_to_time: converts from orbit-relative time to TAI/UTC/UT1 time





EE-MA-DMS-GS-0006 24/05/19 3.7.6 17

4.2 Calling Sequence

An overview of the data flow is presented in Figure 1.






 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 18

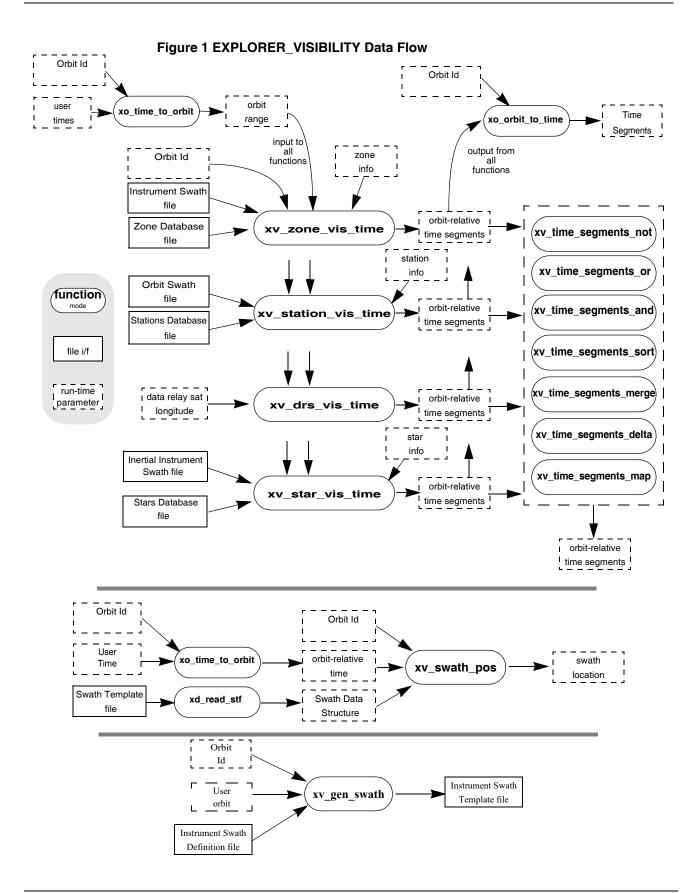





Code: EE-N Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 19

5 LIBRARY INSTALLATION

For a detailed description of the installation of any CFI library, please refer to [GEN_SUM]. Note that example data files are provided with this CFI.





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: 3.7.6 Page:

20

6 LIBRARY USAGE

Note that to use the EXPLORER VISIBILITY software library, the following other CFI software libraries are required:

- EXPLORER FILE HANDLING (See [F H SUM]).
- EXPLORER DATA HANDLING (See [DAT SUM]).
- EXPLORER LIB (See [F H SUM]).
- EXPLORER ORBIT (See [ORBIT SUM]).
- EXPLORER POINTING (See[POINT SUM])

It is also needed to have properly installed in the system the following external GPL libary:

• LIBXML2 (See [GEN SUM]).

and the POSIX thread library:

• libpthread.so (pthread.lib for WINDOWS)

To use the EXPLORER VISIBILITY software library in a user application, that application must include in his source code:

• explorer visibility.h (for a C application)

To link correctly his application, the user must include in his linking command flags like (assuming cfi_libs_dir and cfi_include_dir are the directories where respectively all CFI libraries and include files have been installed, see [GEN_SUM] for installation procedures):

SOLARIS/LINUX:

```
-Icfi include dir -Lcfi lib dir -lexplorer visibility
-lexplorer_pointing -lexplorer orbit -lexplorer lib
-lexplorer data handling -lexplorer file handling
-lxml2 -lpthread
```

• Windows users:

```
/I "cfi include dir" /libpath: "cfi lib dir"
                     libexplorer visibility.lib
                     libexplorer pointing.lib
                     libexplorer orbit.lib
                     libexplorer lib.lib
                     libexplorer data handling.lib
                     libexplorer file handling.lib
                     libxml2.lib pthread.lib
```

MacOS:

```
-Icfi include dir -Lcfi lib dir -lexplorer visibility
-lexplorer pointing -lexplorer orbit -lexplorer lib
-lexplorer data handling -lexplorer file handling
-framework libxml -framework libiconv -lpthread
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 21

All functions described in this document have a name starting with the prefix xv.

To avoid problems in linking a user application with the <code>EXPLORER_VISIBIBLITY</code> software library due to the existence of names multiple defined, the user application should avoid naming any global software item beginning with either the prefix XV_o or xv_o .

This is summarized in table 1.

Table 1: CFI functions included within EXPLORER_VISIBILITY library

Function Name	Enumeration value	long
Main CFI Functions		•
xv_zone_vis_time xv_zone_vis_time_no_file	XV_ZONE_VIS_TIME_ID	0
xv_station_vis_time xv_station_vis_time_no_file	XV_STATION_VIS_TIME_ID	1
xv_drs_vis_time	XV_DRS_VIS_TIME_ID	2
xv_swath_pos_id	XV_SWATH_POS_ID	3
xv_star_vis_time	XV_STAR_VIS_TIME_ID	4
xv_multizones_vis_time	XV_MULTIZONES_VIS_TIME_ID	5
xv_multistations_vis_time	XV_MULTISTATIONS_VIS_TIME_ID	6
xv_time_segments_not	XV_TIME_SEGMENTS_NOT_ID	7
xv_time_segments_or	XV_TIME_SEGMENTS_OR_ID	8
xv_time_segments_and	XV_TIME_SEGMENTS_AND_ID	9
xv_time_segments_sort	XV_TIME_SEGMENTS_SORT_ID	10
xv_time_segments_merge	XV_TIME_SEGMENTS_MERGE_ID	11
xv_time_segments_delta	XV_TIME_SEGMENTS_DELTA_ID	12
xv_time_segments_mapping	XV_TIME_SEGMENTS_MAPPING_ID	13
xv_orbit_extra	XV_ORBIT_EXTRA_ID	14
xv_gen_swath xv_gen_swath_no_file	XV_GEN_SWATH_ID	15
xv_gen_scf	XV_GEN_SCF_ID	16
Error Handling Functions	•	•





EE-MA-DMS-GS-0006 24/05/19 3.7.6 22

Table 1: CFI functions included within EXPLORER_VISIBILITY library

Function Name	Enumeration value	long
xv_verbose	not applicable	
xv_silent		
xv_get_code		
xv_get_msg		
xv_print_msg		

Notes about the table:

- To transform the status vector returned by a CFI function to either a list of error codes or list of error messages, the enumeration value (or the corresponding integer value) described in the table must be used.
- The error handling functions have no enumerated value.

6.1 Usage hints

Every CFI function has a different length of the Error Vector, used in the calling I/F examples of this SUM and defined at the beginning of the library header file. In order to provide the user with a single value that could be used as Error Vector length for every function, a generic value has been defined (XV_ERR_VECTOR_MAX_LENGTH) as the maximum of all the Error Vector lengths. This value can therefore be safely used for every call of functions of this library.

6.2 General enumerations

The aim of the current section is to present the enumeration values that can be used rather than integer parameters for some of the input parameters of the EXPLORER_VISIBILITY routines, as shown in the table below. The enumerations presented in [GEN_SUM] are also applicable.

Table 2: Some enumerations within EXPLORER_VISIBILITY library

Input	Description	Enumeration value	Long
Orbit type /	Absolute Orbit	XV_ORBIT_ABS	0
Order Criteria	Relative Orbit	XV_ORBIT_REL	1
zone_vis_time cover- age outputs	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transition found by ZONE_VIS_TIME	XV_LEFT	1
	Right extreme transition found by ZONE_VIS_TIME	XV_RIGHT	2
	Both extreme transition found by ZONE_VIS_TIME	XV_BOTH	3





Code: EE-MA-Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 23

Table 2: Some enumerations within EXPLORER_VISIBILITY library

Input	Description	Enumeration value		
stat_vis_time mask inputs	AOS, LOS and physical masks	XV_COMBINE	0	
	AOS, LOS masks	XV_AOS_LOS	1	
	Physical mask only	XV_PHYSICAL	2	
	Mask as from Station file	XV_FROM_FILE	3	
star_vis_time cover- age outputs	Visibility stars/ends at the first/last FOV in star_vis_time	XV_STAR_UNDEFINED	0	
	Visibility stars/ends at the upper FOV in star_vis_time	XV_STAR_UPPER	1	
	Visibility stars/ends at the lower FOV in star_vis_time	XV_STAR_LOWER	2	
	Visibility stars/ends at the left FOV in star_vis_time	XV_STAR_LEFT	3	
	Visibility stars/ends at the right FOV in star_vis_time	XV_STAR_RIGHT	4	
Order enumeration Input Segments ordered by start time		XV_TIME_ORDER	0	
	Input Segments not ordered by start time	XV_NO_TIME_ORDER	1	
Segments direction	Ascending segment	XV_ASCENDING	0	
Segments direction	Descending segment	XV_DESCENDING	1	
Swath flag	Swath Template File	XV_STF	0	
Owalli liay	Swath Definition File	XV_SDF	1	

The use of the previous enumeration values could be restricted by the particular usage within the different CFI functions. The actual range to be used is indicated within a dedicated reference named **allowed range**. When there are not restrictions to be mentioned, the allowed range column is populated with the label **complete**.





Code: EE-MA-l Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 24

7 CFI FUNCTIONS DESCRIPTION

The following sections describe each CFI function.

Input and output parameters of each CFI function are described in tables, where C programming language syntax is used to specify:

- Parameter types (e.g. long, double)
- Array sizes of N elements (e.g. param[N])
- Array element M (e.g. [M])





EE-MA-DMS-GS-0006 24/05/19 3.7.6 25

7.1 xv_zone_vis_time

7.1.1 Overview

The xv_zone_vis_time function computes all the orbital segments for which a given instrument swath intercepts a user-defined zone at the surface of the Earth ellipsoid.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds (and microseconds) elapsed since the ascending node crossing.

A user-defined zone can be:

- a polygon specified by a set of latitude and longitude points
- a circle specified by the centre latitude, longitude, and the diameter

Note that particular cases of the above can be used to define the zone as:

- a point
- a line

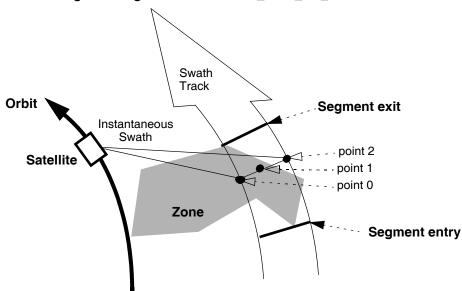


Figure 2 Segment Definition xv_zone_vis_time

xv_zone_vis_time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files





EE-MA-DMS-GS-0006 24/05/19 3.7.6 26

- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv_gen_swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_zone_vis_time** generates the swath points for a number of orbits given by the user.
- optionally, a Zone Database File, containing the zone description. The user can either specify a zone identifier referring to a zone in the file, or provide the zone parameters directly to xv zone vis time.

The time intervals used by **xv_zone_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Zone Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER ORBIT (xo time to orbit and xo orbit to time functions).

NOTE: Since the swath template file is generated from a reference orbit, it is not recommended to use **xv_zone_vis_time** for a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length). If this would happen, **xv_zone_vis_time** automatically will ignore those orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits).





EE-MA-DMS-GS-0006 24/05/19 3.7.6 27

7.1.2 Swath Definition

The swath file is generated using the xv_gen_swath function, within the EXPLORER_VISIBILITY library. There are 3 different types of swaths:

- earth-observing instruments ('nadir curve', 'nadir point' or "area swaths")
- limb-sounding instruments ('limb', narrow or wide)
- limb-sounding instruments observing inertial objects ('inertial')

The following sub-sections provide some details on the various swath definitions.

7.1.2.1 Earth-observing Instruments Swath Definition

The term swath must be clearly defined to understand the explanations in this document:

- instantaneous swath: the part of the earth surface observed by an instrument at a given time
- swath track: represents the track made on the earth surface by the instantaneous swath over a period of time

For instruments observing the surface of the earth, the instantaneous swath is constituted by the point/curve/area on the ground observed by the instrument at a given time. It is calculated taking the earth ellipsoid as a reference for the earth surface. The wider the field-of-view of the instrument, the wider the swath on the ground.

When the satellite moves over a period of time, this point/curve/area defines a band on the earth surface. This constitutes the swath track.

See Figure 3 for an illustration of these definitions.

Note that the terms curve or point are an idealized view of the instrument FOV, which usually have a thickness.

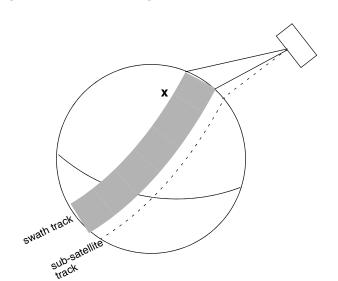


Figure 3 Earth-observing instrument: swath definition





EE-MA-DMS-GS-0006 24/05/19 3.7.6 28

7.1.2.2 Limb-sounding Instruments Swath Definition

For limb sounding instruments, the concept can be generalized to define a "thick swath". This is obtained by defining a minimum and a maximum altitude, and considering the tangent points to these altitudes as the edges of the swath. Two cases have to be considered:

- deterministic (narrow) azimuth field of view (e.g. MIPAS sideward-looking): the swath projection on the earth surface is similar to a regular sideward-looking swath, with the lower altitude defining the further swath edge and the higher altitude defining the closer swath edge. See Figure 4.
- non-deterministic (potentially wide) azimuth field of view (e.g. MIPAS rearward-looking): due to the potentially wide azimuth field of view, each altitude defines a swath projection on the earth surface. Depending on the altitude, these swaths are of different width across-track, and also at different distance from the satellite. See Figure 5.

For these, 2 Instrument Swath Files are provided:

- one at the highest altitude
- one at the lowest altitude

The user must handle both swath himself to determine his required visibility time segments.


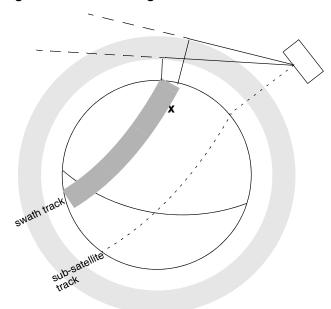


Figure 4 Limb-sounding instrument: swath definition (1)





EE-MA-DMS-GS-0006 24/05/19 3.7.6 29

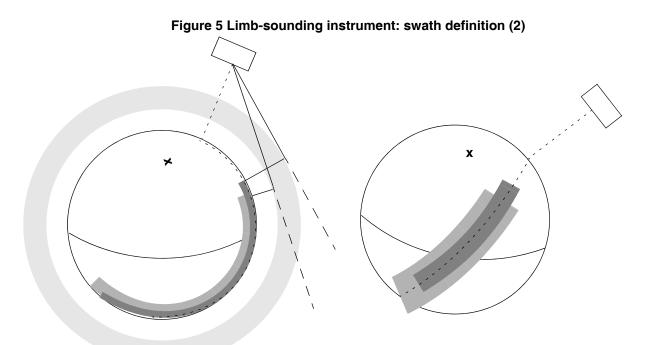

7.1.2.3 Limb-sounding Instruments Inertial Swath Definition

This type corresponds to the observation of inertial targets (e.g. Gomos occultation mode and Mipas Line of Sight mode in Envisat). For the CFI function **xv_star_vis_time** the FOV direction in inertial coordinates must be available. Therefore for these instrument modes the direction in inertial space, for a given tangent altitude, is given in the swath template file.

7.1.2.4 . Swath Definition for Envisat

table 3 lists all instrument modes and the relevance of the swaths for Envisat-1. It shows also:

- the prefix to be used when generating the swath template file name
- the different types of algorithms to be used by xv gen swath (this is transparent to the user)





EE-MA-DMS-GS-0006 24/05/19 3.7.6 30

Table 3: Envisat Swaths

Instrumen t	Mode	File Prefix = swath	Swath geometry (table 59)	Swath Type	Remarks
RA		RA_2	POINTING (1 point)	Nadir point	Modeled as sub-satellite track
MERIS	Averaging / Direct & Averaging	MERIS_	POINTING (3 points)	Nadir line	
ASAR	Image Modes (IS1 IS7)	SARXIM (x=17)	ASAR	Nadir line	
	Alt. Polarization (IS1 IS7)				
	Wide Swath	SARWIM			
	Global Monitoring				
	Wave (IS1 IS7)	SARxWV (x=17)			Modeled as a continuous swath anywhere within the image swath
GOMOS	Occultation	GOMOIL GOMOIH	INERTIAL	Inertial direction	IFOV much smaller than swath. IFOV Very dependent on star availability. 2 swaths defined: - 1 for high altitude (GOMOIH) - 1 for low altitude (GOMOIL)
	Occultation	GOMO_H GOMO_L	LIMB	Limb wide	Same mode as above, now swath defined as Earth-fixed location. IFOV much smaller than swath. IFOV Very dependent on star availability. 2 swaths defined: - 1 for high altitude (GOMO_H) - 1 for low altitude (GOMO_L)
SCIAMACHY	Nadir / Nadir of Nadir & Limb	SCIAN_	POINTING (3 points)	Nadir line	Continuous Nadir swath modeled
	Limb / Limb of Nadir & Limb	SCIALH SCIALL		Limb wide	2 swaths defined: - 1 for high altitude (SCIALH) - 1 for low altitude (SCIALL)





EE-MA-DMS-GS-0006 24/05/19 3.7.6 31

Table 3: Envisat Swaths

Instrumen t	Mode	File Prefix = swath	Swath geometry (table 59)	Swath Type	Remarks
AATSR		ATSR_N ATSR_F	POINTING (3 points)	Nadir line	2 swaths defined: - 1 for nadir swath - 1 for forward swath
MWR		MWR	POINTING (1 points)	Nadir point	Modeled as sub-satellite track
MIPAS	Nominal	MIPN_H MIPN_L	LIMB	Limb narrow	2 swaths defined: - 1 for high altitude (MIPN_H) - 1 for low altitude (MIPN_L)
	Special Event Mode (across)	MIP_X_	LIMB	Limb narrow	Modeled as an across track swath, in the middle of the MIPAS SEM acquisition scan.
	Special Event Mode (rearward)	MIP_RH MIP_RL	LIMB	Limb wide	IFOV much smaller than swath. 2 swaths defined: - 1 for high altitude (MIP_RH) - 1 for low altitude (MIP_RL)
	Rearward	MIPIRH MIPIRL	INERTIAL	Inertial direction	2 swaths defined for rearward mode: - 1 for high altitude (MIPIRH) - 1 for low altitude (MIPIRL)
	Sideward	MIPIXH MIPIXL			3 swaths defined for sideward mode: - 1 for high altitude (MIPIXH) - 1 for back mode (MIPIXB) - 1 for forward mode (MIPIXF)





Code: Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

7.1.3 Zone Borders and Projection

When defining a polygon zone, the user is assumed to wish polygon sides as straight lines. But on the earth surface, a straight line is, at best, a confusing concept.

The only way to define unambiguously straight lines is to work in a 2-dimensional projection of the earth surface. There are many possible projections, each having advantages and drawbacks.

xv_zone_vis_time can handle zone borders in 2 different projections:

- rectangular projection, using longitude and latitude as the X and Y axis; this is appropriate to express zones where (some of) the edges follow constant latitude lines, and provide a reasonable approximation for straight lines at low-medium latitudes
- <u>azimuthal gnomonic projection</u>, where great circles are always projected as straight lines; this is better for <u>high latitudes</u>, where the rectangular projection suffers from too much distortion and the singularity at the poles.

xv_zone_vis_time allows the user to specify which projection he wants to work in, i.e. in which projection the polygon sides will be represented by **xv_zone_vis_time** as straight lines. The user is assumed to be aware of how the polygon sides behave on the Earth surface.

7.1.4 Zone Definition

The user-defined zone can be either (see table 4);

- a point
- a line
- · a polygon
- a circle

A zone is defined by the area of the earth surface enclosed by the zone borders:

- in the case of a circular zone, the area inside the circle
- in the case of a polygonal zone, the area which is always to the right of any polygon side; if the polygon is defined as a sequence of N points, each polygon side is considered as a line from point i to point i+1; this unambiguously defines the right side of the polygon sides.

Table 4: Zone definition

Zone definition	Zone_nu m	Zone_long Zone_lat	Zone_diam	Description
Circular Zone	1	[0]: centre point	yes zone_diam > 0.0	The zone is represented as a circle, around the centre point
Point Zone	1	[0]: Point	yes zone_diam = 0.0	The zone is defined by the point. Resulting segments will have a zero duration. The zone will always be completely covered by the swath.
Line Zone	2	[0], [1]: Line	no	The zone is defined by the line from point [0] to point [1].
Polygon Zone	>2	[i]	no	The zone is defined by the area right of the line from point [i] to point [i+1].





EE-MA-DMS-GS-0006 24/05/19 3.7.6 33


For the gnomonic projection, a side of a zone is always smaller than a half great circle, because two polygon points are considered to be joined by the shortest line.

For the rectangular projection, two consecutive points of the zone are also joined by the shortest line; so the difference in longitude must be less than 180 degrees.

The polygon zone can be closed (i.e. the first and last points are the same) or not. If the zone is not closed, **xv zone vis time** closes it by joining the last point with the first one in its internal computations.

See Figure 6 for examples of zone definitions.

xv_zone_vis_time will issue an error on the zone definition if the polygon has intersecting sides ("butter-fly" zone)

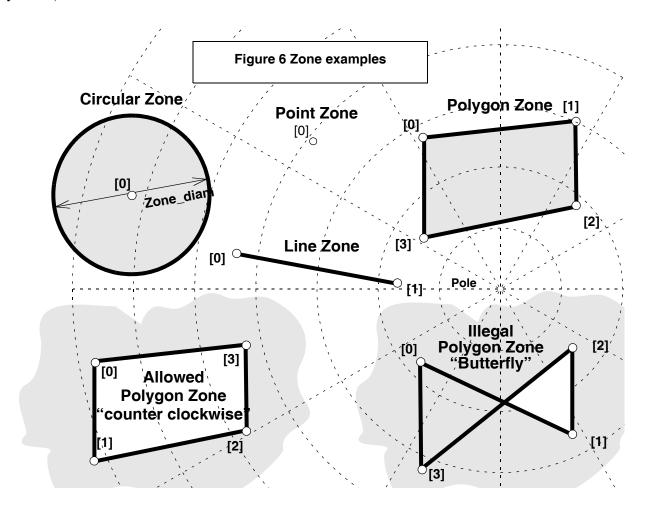






EE-MA-DMS-GS-0006 24/05/19 3.7.6 34

7.1.5 Intersection Definition

The xv_zone_vis_time intersection times between the instrument swath and the user-defined zone are defined as the first and last occurrence, in chronological order with respect to the satellite direction, of the geometrical super-position of any point belonging to the instrument swath with any single point belonging to the zone (including the zone border).

The entry and exit times for each intersection are given as elapsed seconds (and microseconds) since the ascending node crossing.

Figure 7 shows some typical intersections.

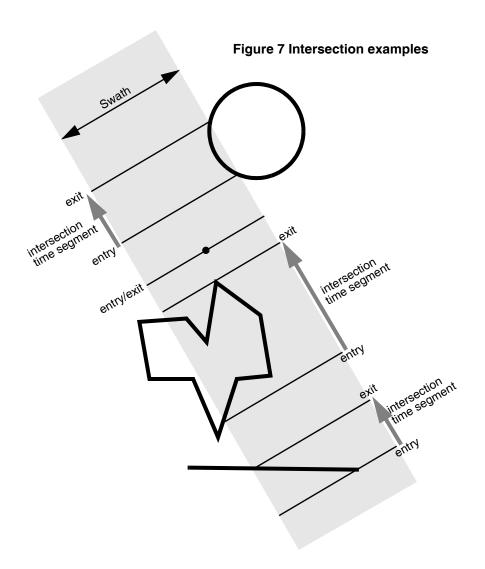





EE-MA-DMS-GS-0006 24/05/19 3.7.6 35

7.1.6 Intersection Algorithm

The intersection of a swath and a user-defined zone is to be performed on the Earth projected to a map plane in one of the following projections:

- Rectangular projection
- Gnomonic projection

Although the projections are quite different, the intersection rules are identical. The algorithm can however be different, in order to take advantage of a particular feature of a projection.

The purpose of the CFI function ZONEVISTIME is to obtain quickly, accurate intersection segments with a low precision (1 second).

The algorithms assume that the polygon zones are closed and expects a wrap around between the first and the last point. Thus ZONEVISTIME must first close the polygon if necessary.

For ZONEVISTIME the following swath types are defined:

- point swath: instantaneous swath is a point.
- segment swath: instantaneous swath is a segment.
- multi-segment swath: it can be open or closed.
- inertial swath: not used by ZONEVISTIME

The main concept in the algorithm is the transition, defined as the change in coverage of (part of) the swath and the zone (e.g. edge of the swath crosses one polygon side).

7.1.6.1 Intersection with a point swath.

The vertices of the polygon defining the area are connected by straight lines in the chosen projection, along track swath points are also connected by straight lines in the same projection.

Transitions are located by linear intersection of the zone sides and the swath along track lines. A transition is only valid if the intersection occurs inside both line segments. The polygon side from <i> to <j> is defined in a clockwise manner inclusive point <i> but exclusive point <j>. The swath line from time <k> to <l> is defined inclusive the template point at <k> but exclusive the template point at <l>.

The fraction of the swath along track line determines the precise timing since time <k> of the intersection. Also the determination if the transition is a on- or off-transition is quite trivial. First a vector is defined, perpendicular to the along track swath line, such that the vector points left. Then, the dot product of the polygon side and this vector is calculated. If the dot product is positive, the transition is on, i.e. the swath enters the zone. If the result is negative, then the swath leaves the zone. If the result equals zero then the transition can be ignored (polygon side and swath overlay, a proper transition will be found with another pair of polygon side - swath line.).

7.1.6.2 Intersection with a segment swath

The left and right side of the swath, are located using the same algorithm as for the point swath. Even left and right time segments can be made based on the left and right hand transitions.

The polygon vertices (and not the sides) are intersected with the along track moving line swath, in order to catch zones smaller than the swath, etc. Swaths for intermediate times between two consecutive times in Swath Template File are considered straight segments, joining an intermediate point of the Left swath line from time <k> to time <l>, with an intermediate point in Right swath line.






EE-MA-DMS-GS-0006 24/05/19 3.7.6 36

7.1.6.3 Intersection with a multi-segment swath

The algorithm used for segment swath is repeated for every segment of the swath, and the visibility segments obtained in each case are merged with the ones of the other swath segments.

For a closed swath further calculations are done: it is checked if the zone is completely inside the swath area in the interval between contiguous visibility segments, or between the begining of the first orbit and the first visibility segment, or between the last visibility segment and the end of the last orbit computed. If it is inside, segments must be merged because the zone was visible in the interval.

Figure 8 Swath points

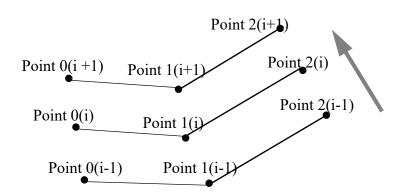





EE-MA-DMS-GS-0006 24/05/19 3.7.6

7.1.7 Usage Hints

7.1.7.1 Limb-sounding Instruments Intersection


In the case of limb-sounding instrument with a potentially wide azimuth field of view, 2 swaths have to be considered (1 for minimum altitude, 1 for maximum altitude). Furthermore, these 2 swaths are offset in time (i.e. their projection on the earth intersect with a given point at different times). To cope with this, the user must do the following:

- call xv_zone_vis_time twice (once for each extreme altitude swath)
- merge/filter the 2 sets of time segments, depending on what he wants to achieve

7.1.7.2 Zone Coverage

xv_zone_vis_time computes purely geometrical intersections. The resulting zone visibility segments might need some additional filtering by the user. In particular, instrument constraints (e.g. only working outside of sun eclipse) have to be considered by the user.

Furthermore, to help users to deal with zones wider than the swath (i.e. requiring several orbits to cover the whole zone), **xv_zone_vis_time** produces for each zone visibility segment an indication of the coverage type (see Figure 9);

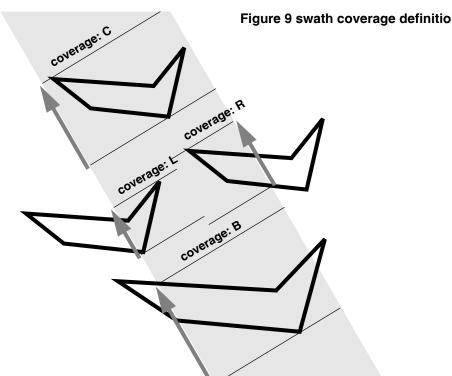

- coverage = C: zone completely covered by the swath
- coverage = R: zone partially covered by the swath, extending over the right edge of the swath
- coverage = L: zone partially covered by the swath, extending over the left edge of the swath
- coverage = B: zone partially covered by the swath, extending over both edges of the swath

7.1.7.3 Combined use of xv swath pos and the coverage flag

The EXPLORER_VISIBILITY function xv_swath_pos can be used to refine the work performed with xv zone vis time.





Code: EE-MA-DMS-GS-0006 Date: Issue:

3.7.6 Page: 38

24/05/19

7.1.8 Calling sequence

```
For C programs, the call to xv_zone_vis_time is (<u>input</u> parameters are <u>underlined</u>):
#include"explorer visibility.h"
{
      xo orbit id orbit id = {NULL};
      long
               swath flag, orbit type,
               start orbit, start cycle,
               stop orbit, stop cycle,
               zone num, projection,
               number segments,
               *bgn orbit, *bgn_second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *coverage, ierr[XV NUM ERR ZONE VIS TIME],
               status;
      double *zone long, *zone lat,
               zone diam, min duration;
               *swath file;
      char
      char
               zone id[8], *zone db file;
      status = xv zone vis time(&orbit id,
                             &orbit type,
                             &start orbit, &start cycle,
                             &stop orbit, &stop cycle,
                             &swath flag, swath file,
                             zone id, zone db file,
                             &projection, &zone num,
                             zone long, zone lat, &zone diam,
                             &min duration,
                             &number segments,
                             &bgn orbit, &bgn second,
                             &bgn microsec, &bgn cycle,
                             &end orbit, &end second,
                             &end microsec, &end cycle,
                             &coverage,ierr);
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 39

/* Or, using the run id */ long run id; status = xv zone vis time run(&run id, &orbit type, &start orbit, &start cycle, &stop orbit, &stop cycle, &swath flag, swath file, zone id, zone db file, &projection, &zone num, zone long, zone lat, &zone diam, &min duration, &number segments, &bgn_orbit, &bgn_second, &bgn microsec, &bgn cycle, &end orbit, &end second, &end microsec, &end cycle, &coverage,ierr);





EE-MA-DMS-GS-0006 24/05/19 3.7.6 40

7.1.9 Input parameters

The xv_zone_vis_time CFI function has the following input parameters:

Table 5: Input parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long*	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters. Relative orbits only can be used when the orbit_id was initialized with orbital changes (with xo_orbit_init_def or with xo_orbit_init_file plus an OSF file). In other cases, only the value XV_ORBIT_ABS can be used.	-	Complete.
start_orbit	long	-	Segments will be filtered as from the beggining of first orbit.	orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-		cycle number	= 0 or ≥ first cycle in osf





Code: EE-MA-DMS-GS-0006 Date: Issue: Page:

24/05/19 3.7.6

41

Table 5: Input parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
stop_orbit	long	-	Last orbit, segment filter. For orbit_id initialized with orbital changes, when: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) or • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)		= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	1 7	cycle number	= 0 or ≥ first cycle in osf
swath_flag	long*	-	 Define the use of the swath file: 0 = (XV_STF) if the swath file is a swath template file. > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits 	-	XV_STF = 0 XV_SDF = 1 > 0
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
zone_id[8]	char		Identification of the zone, as defined in zone_db_file. This parameter is used ONLY IF zone_num = 0		EXACTLY 8 characters
zone_db_file	char *		File name of the zone-database-file. This file is used ONLY IF zone_num = 0		





Code: EE-MA-DMS-GS-0006 Date: Issue: Page:

24/05/19 3.7.6 42

Table 5: Input parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
projection	long		projection used to define polygon sides as straight lines: = 0 Read projection from Zones DB = 1 Azimuthal gnomonic = 2 Rectangular lat/long		
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat: = 0 no vertices provided, use zone_id / zone_db_file = 1 Point / Circular zone, = 2 Line zone > 2 Polygon zone		≥ 0
zone_long	double*	all	zone_long[i-1] Geocentric longitude of - circle centre, for circ. zone, i =1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		
zone_lat	double*	all	zone_lat[i-1] Geodetic latitude of - circle centre, for circ. zone, i = 1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		
zone_diam	double		Zone diameter for circular zones, dummy for other zones If diameter equals 0.0 then zone is Point Zone	m	≥ 0.0
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	s	≥ 0

It is also possible to use enumeration values rather than integer values for some of the input arguments, as





Code: EE-MA-DMS-GS-0006 Date: Issue: Page:

24/05/19 3.7.6 43

shown in the table below:

Input	Description	Enumeration value	long
projection	Read projection from the zones DB file	XD_READ_DB	0
(defined in [DAT SUM])	Azimuthal Gnomonic	XD_GNOMONIC	1
	Rectangular long/lat	XD_RECTANGULAR	2





EE-MA-DMS-GS-0006 24/05/19 3.7.6 44

7.1.10 Output parameters

The output parameters of the xv_zone_vis_time CFI function are:

Table 6: Output parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xv_zone_vis_time	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user.		≥ 0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	s	≥ 0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	μs	≥0 ≤999999
bgn_cycle	long*	all	Cycle number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	μs	≥0 ≤ 999999





EE-MA-DMS-GS-0006 24/05/19 3.7.6 45

Table 6: Output parameters of xv_zone_vis_time function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
end_cycle	long*	all	Cycle number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
coverage	long*		Zone coverage flag for segment = 0 Zone completely covered by swath = 1 Zone not completely covered by swath, extending over the left edge of the swath. = 2 Zone not completely covered by swath, extending over the right edge of the swath. = 3 Zone not completely covered by swath, extending over both edges of the swath coverage[i], i = 0, (number_segments-1)		
ierr[XV_NUM_ERR_Z ONE_VIS_TIME]	long		Error status flags		

It is also possible to use enumeration values rather than integer values for some of the output arguments, as shown in the table below:

Input	Description	Enumeration value	long
coverage	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transitions found	XV_LEFT	1
	Right extreme transitions found	XV_RIGHT	2
	Both extreme transitions found	XV_BOTH	3

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_zone_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 46

7.1.11 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_zone_vis_time CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the xv_zone_vis_time CFI function by calling the function of the EXPLORER VISIBILITY software library xv get code.

Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Input parameter "Number of ZONE points" is wrong.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_NUM_ ZONE_ERR	0
ERR	Input parameter "Orbit Id" is wrong.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_STATUS_E RR	1
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_TYPE_ER R	2
ERR	Input parameter "Minimum duration" cannot be negative.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_MIN_ DURATION_ERR	3
ERR	Input parameter "Projection" out of range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_PROJECTION_OU T_OF_RANGE_ERR	4
ERR	Wrong swath_flag value	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SWATH_FLAG_ER R	5
ERR	Swath file is not compatible with the orbit file	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_SWATH_ ERR	6
ERR	Could not generate the swath template file	Computation not performed	XV_CFI_ZONE_VIS_TI ME_GENSWATH_ERR	7
ERR	Error generating visibility segments for orbit "%d"		XV_ZONE_VIS_TIME_ IN_ORBIT_ERR	8





Page:

Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error reading Swath Template File.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_SWATH_FI LE_ERR	9
ERR	Swath type not allowed	Computation not performed	XV_CFI_ZONE_VIS_TI ME_INCORRECT_SWA TH_TYPE_ERR	10
ERR	Cannot allocate memory for the Swath Template File	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ALLOCATE_SWAT H_MEMORY_ERR	11
ERR	Input parameter "start_orbit" cannot be negative.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_NEGATIVE_STAR T_ORBIT_ERR	12
ERR	Error reading OEF/OSF file.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_OSF_ERR	13
WAR N	"start_orbit" is before the first orbit in "orbit_event_file".	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_EARLIER_START_ ORBIT_WARN	14
WAR N	"stop_orbit" is after the last orbit in "orbit_event_file".	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_LATER_STOP_OR BIT_WARN	15
ERR	Input parameter "start_orbit" cannot be greater than "stop_orbit".	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_ORBIT_ RANGE_ERR	16
ERR	Error calling "xv_orbitinfo".	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBITINFO_CAL L_ERR	17
ERR	"cycle_length" read from the input "Swath Template File" is not equal to that of any orbits within the orbit range	Computation not performed	XV_CFI_ZONE_VIS_TI ME_INCONSISTENT_S WATH_ERR	18





Page:

Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
WAR N	There is at least one orbital change within the requested orbit range.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_ORBITAL_CHAN GE_WARN	19
ERR	Input parameter "zone_id" is an empty string.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ZONE_ID_EMPTY _ERR	20
ERR	Error reading the ZONE Database file.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_READ_ZONE_DB_ FILE_ERR	21
WAR N	"Projection" parameter set to default.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_DEFAULT_PROJE CTION_WARN	22
ERR	Cannot allocate memory for the ZONE records."	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ALLOCATE_ZON E_MEMORY_ERR	23
ERR	Latitude must be in the range [-90.0, 90.0].	Computation not performed	XV_CFI_ZONE_VIS_TI ME_WRONG_LATITU DE_RANGE_ERR	24
WAR N	Two consecutive points are equal, only one is used.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_TWO_EQUAL_POI NTS_WARN	25
ERR	Difference in longitude for 2 consecutive ZONE points is equal to 180.0 degrees (RECTANGULAR projection). Zone definition is ambiguous.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_DIFF_LONG_180_ ERR	26
ERR	Two consecutive ZONE points are antipodal (GNOMONIC projection). Zone definition is ambiguous.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ANTIPODAL_POI NTS_ERR	27





Page:

Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error precomputing intersection of two segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENT_INTER SECT_PREC_ERR	28
ERR	Error computing intersection of two segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENT_INTER SECT_COMP_ERR	29
ERR	Error computing gnomonic coordinates.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_GNOMONIC_COO RD_ERR	30
ERR	Two ZONE segments intersect.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_TWO_SEGMENTS _INTERSECT_ERR	31
ERR	Two consecutive ZONE segments are aligned in the same direction.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ALLIGNED_SEG MENTS_ERR	32
ERR	Input parameter "ZONE diameter" cannot be negative (POINT or CIRCLE zone).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ZONE_DIAM_NE GATIVE_ERR	33
ERR	SWATH contains the POLE (RECTANGULAR projection).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POLE_IN_SWATH _ERR	34
ERR	Not convex SWATH quadrilateral for the specified latitude range.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CUADRILATERAL _NOT_CONVEX_ERR	35
ERR	Error checking if a point is inside a quadrilateral.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POINT_IN_CUAD RILATERAL_ERR	36
ERR	Error sorting intersections.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SORT_INTERSEC TIONS_ERR	37
ERR	Cannot (re)allocate memory for the segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SEGMENTS_MEM ORY_ERR	38





Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Too many time segments (more than MAX_ORBITS).	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MAX_ORBITS_ER R	39
ERR	Cannot allocate memory for the coverage.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_COVERAGE_ME MORY_ERR	40
WAR N	Warning checking the visibility segments.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_CHECK_SEGMEN TS_WARN	41
ERR	Error checking the visibility segments.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_CHECK_SEGMEN TS_ERR	42
ERR	Error computing final segments for the POINT swath and POINT zone.	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_TO_TIME_ CALL_ERR	43
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_MODEL_E RR	44
WAR N	"stop_orbit" is after the last orbit in the orbit file.	Computation performed. Message to inform the user.	XV_CFI_ZONE_VIS_TI ME_STOP_ORBIT_WA RN	45
ERR	Error computing the ANX longitude	Computation not performed	XV_CFI_ZONE_VIS_TI ME_COMPUTE_ANX_ ERR	46
ERR	Error calling "orbit info"	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ORBIT_INFO_ERR	47
ERR	Error computing Multi- Point swath visibilities	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MULTI_POINT_S WATH_INTERS_ERR	48
ERR	Error computing Point swath visibilities	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POINT_SWATH_I NTERS_ERR	49





EE-MA-DMS-GS-0006 24/05/19 3.7.6 51

Table 7: Error messages and codes for xv_zone_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error checking visibility segments	Computation not performed	XV_CFI_ZONE_VIS_TI ME_ON_OFF_CHECKI NG_ERR	50
ERR	Error merging visibility segments	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MERGE_SWATH_ SEGMENTS_VISIBILIT IES_ERR	51
ERR	Error trying to allocate memory	Computation not performed	XV_CFI_ZONE_VIS_TI ME_MEMORY_ALLOC ATION_ERR	52
ERR	Error calling "swath_pos"	Computation not performed	XV_CFI_ZONE_VIS_TI ME_SWATH_POS_ERR	53
ERR	Error calling "Polygon_inner_point"	Computation not performed	XV_CFI_ZONE_VIS_TI ME_POLYGON_INNER _POINT_ERR	54

Note that error codes and messages have been completely modified since the last issue due to a completely new implementation of the CFI function.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 52

7.1.12 Runtime performances

The following runtime performance has been measured over an interval of 50 orbits.

Table 8: Runtime performances of xv_zone_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
581	253	253	39





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: 3.7.6 Page:

53

7.2 xv_zone_vis_time_no_file

7.2.1 Overview

The xv zone vis time no file function computes all the orbital segments for which a given instrument swath intercepts a user-defined zone at the surface of the Earth ellipsoid.

The aim of this function is to provide another interface for the function xv zone vis time in which the zone and the swath are not provided with files but with the data structures (see section 7.2.2).

Information about zones, swaths and intersection algorithms can be found in section 7.1.

7.2.2 Calling sequence

```
For C programs, the call to xv_zone_vis_time_no_file is (<u>input</u> parameters are <u>underlined</u>):
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               orbit type,
      long
                start orbit, start cycle,
                stop orbit, stop cycle,
                zone num, projection,
               number segments,
                *bgn orbit, *bgn second,
                *bqn microsec, *bqn cycle,
                *end orbit, *end second,
                *end microsec, *end cycle,
                *coverage, ierr[XV NUM ERR ZONE VIS TIME],
               status;
       double
               *zone long, *zone lat,
                zone diam, min duration;
      xd stf file stf data;
      xd zone rec zone data;
      status = xv zone vis time no file(&orbit id,
                             &orbit type,
                             &start orbit, &start cycle,
                             &stop orbit, &stop cycle,
                             &stf data,
                             &zone data,
                             &projection, &zone num,
                             zone long, zone lat, &zone diam,
                             &min duration,
                             &number segments,
                             &bgn orbit, &bgn second,
```



}



&bgn microsec, &bgn cycle,

Code: EE-MA-DMS-GS-0006 Date: Issue: Page:

24/05/19 3.7.6 54

```
&end orbit, &end second,
                     &end microsec, &end cycle,
                     &coverage,ierr);
/* Or, using the run id */
long run id;
status = xv zone vis time no file run(&run id,
                     &orbit type,
                     &start orbit, &start cycle,
                     &stop orbit, &stop cycle,
                     &stf data,
                     &zone data,
                     &projection, &zone num,
                     zone long, zone lat, &zone diam,
                     &min_duration,
                     &number segments,
                     &bgn orbit, &bgn second,
                     &bgn microsec, &bgn cycle,
                     &end orbit, &end second,
                     &end microsec, &end cycle,
                     &coverage,ierr);
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 55

7.2.3 Input parameters

The xv_zone_vis_time_no_file CFI function has the following input parameters:

Table 9: Input parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long*	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters. Relative orbits only can be used when the orbit_id was initialized with orbital changes (with xo_orbit_init_def or with xo_orbit_init_file plus an OSF file). In other cases, only the value XV_ORBIT_ABS can be used.	-	Complete.
start_orbit	long	-	Segments will be filtered as from the beggining of first orbit.	orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	1 5	cycle number	= 0 or ≥ first cycle in osf





Code: EE-MA Date: Issue: Page:

Table 9: Input parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
stop_orbit	long	-	For orbit_id initialized with	orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	1 0	cycle number	= 0 or ≥ first cycle in osf
stf_data	xd_stf_f ile	-	Swath template data (structure described in [DAT_SUM]). The swath structure can be got by: • Reading a swath template file with the CFI function xd_read_stf. • Generating the swath data with the CFI function xv_gen_swath_no_file		-
zone_data	xd_zone _read	-	Zone data (structure described in [DAT_SUM]) that can be got by reading a zone from a zone database file with the CFI function xd_read_zone .	-	-
projection	long		projection used to define polygon sides as straight lines: = 0 Read projection from Zones DB = 1 Azimuthal gnomonic = 2 Rectangular lat/long	-	-





EE-MA-DMS-GS-0006 24/05/19 3.7.6 57

Table 9: Input parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat: = 0 no vertices provided, use zone_id / zone_db_file = 1 Point / Circular zone, = 2 Line zone > 2 Polygon zone		≥ 0
zone_long	double*	all	zone_long[i-1] Geocentric longitude of - circle centre, for circ. zone, i =1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		
zone_lat	double*	all	zone_lat[i-1] Geodetic latitude of - circle centre, for circ. zone, i =1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		
zone_diam	double		Zone diameter for circular zones, dummy for other zones If diameter equals 0.0 then zone is Point Zone	m	≥ 0.0
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	s	≥ 0

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
projection	Read projection from the zones DB file	XD_READ_DB	0
(defined in [DAT SUM])	Azimuthal Gnomonic	XD_GNOMONIC	1
	Rectangular long/lat	XD_RECTANGULAR	2





EE-MA-DMS-GS-0006 24/05/19 3.7.6 58

7.2.4 Output parameters

The output parameters of the xv_zone_vis_time_no_file CFI function are:

Table 10: Output parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
xv_zone_vis_time_no_fi le	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user.		≥ 0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	s	≥ 0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	μs	≥0 ≤999999
bgn_cycle	long*	all	Cycle number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	μs	≥0 ≤ 999999





EE-MA-DMS-GS-0006 24/05/19 3.7.6 59

Table 10: Output parameters of xv_zone_vis_time_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
end_cycle	long*	all	Cycle number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
coverage	long*	all	Zone coverage flag for segment = 0 Zone completely covered by swath = 1 Zone not completely covered by swath, extending over the left edge of the swath. = 2 Zone not completely covered by swath, extending over the right edge of the swath. = 3 Zone not completely covered by swath, extending over both edges of the swath coverage[i], i = 0, (number_segments-1)		
ierr[XV_NUM_ERR_Z ONE_VIS_TIME]	long		Error status flags		

It is also possible to use enumeration values rather than integer values for some of the output arguments, as shown in the table below:

Input	Description	Enumeration value	long
coverage	Zone completely covered by swath	XV_COMPLETE	0
	Left extreme transitions found	XV_LEFT	1
	Right extreme transitions found	XV_RIGHT	2
	Both extreme transitions found	XV_BOTH	3

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_zone_vis_time_no_file** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 60

7.2.5 Warnings and errors

The error and warning messages and codes for xv_zone_vis_time_no_file are the same than for xv_zone_vis_time (see table 7).

The error messages/codes can be returned by the CFI function xv_get_msg/xv_get_code after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV_ZONE_VIS_TIME_ID (from table 1).

7.2.6 Runtime performances

The following runtime performance has been measured over an interval of 50 orbits.

Table 11: Runtime performances of xv_zone_vis_time_no_file function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.	
[ms]	[ms]	[ms]	[ms]	
79.6	28.6	27.6	5.2	





EE-MA-DMS-GS-0006 24/05/19 3.7.6

7.3 xv_station_vis_time

7.3.1 Overview

The **xv_station_vis_time** function computes ground station visibility segments, the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

In addition, **xv_station_vis_time** calculates for every visibility segment the time of zero-doppler (i.e. the time at which the range-rate to the station is zero).

xv station vis time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data and files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv_gen_swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_station_vis_time** generates the swath points for a number of orbits given by the user.
- The Station Database File, describing the location and the physical mask of each ground station, and the mask parameters for a list of spacecrafts from each station (considered only when mask 'from file' option is selected).

The time intervals used by **xv_station_vis_time** are expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Station Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER_ORBIT (xo_time_to_orbit and xo_orbit_to_time functions).

NOTE: Since the orbit swath template file is generated from a reference orbit, it is not recommended to use **xv_station_vis_time** for a range of orbits that includes an orbital change (e.g. change in the repeat cycle





EE-MA-DMS-GS-0006 Code: Date: 24/05/19 Issue: 3.7.6 Page:

62

or cycle length). If this would happen, **xv_station_vis_time** automatically will ignore those orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits).





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

63

7.3.2 Calling interface

For C programs, the call to **xv_station_vis_time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               mask, number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end_microsec, *end cycle,
               *zdop orbit, *zdop second,
               *zdop microsec, *zdop cycle,
               ierr[XV NUM ERR STATION VIS TIME],
               status;
      double
              aos elevation, los elevation, min duration;
      char
               *swath file;
      char
              sta id[8],*sta db file;
      status = xv station vis time(
                       &orbit id, &orbit type,
                       &start orbit, &start cycle,
                       &stop orbit, &stop cycle,
                       &swath flag, &swath file, sta id, sta db file,
                       &mask, &aos elevation, &los elevation,
                       &min duration,
                       &number segments,
                       &bgn orbit, &bgn second,
                       &bgn microsec, &bgn cycle,
                       &end orbit, &end second,
                       &end microsec, &end cycle,
                        &zdop orbit, &zdop second,
                        &zdop microsec, &zdop cycle,
                       ierr);
```



}



Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 64

```
/* Or, using the run id */
long run id;
status = xv station vis time run(
                 &run id, &orbit type,
                 &start orbit, &start cycle,
                 &stop orbit, &stop cycle,
                 &swath flag, &swath file, sta id, sta db file,
                 &mask, &aos elevation, &los elevation,
                 &min duration,
                 &number segments,
                 &bgn orbit, &bgn second,
                 &bgn microsec, &bgn cycle,
                &end_orbit, &end_second,
                 &end microsec, &end cycle,
                 &zdop orbit, &zdop second,
                 &zdop microsec, &zdop cycle,
                 ierr);
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 65

7.3.3 Input parameters

Table 12: Input parameters of xv_station_vis_time

		Arr			
c name	ctype	ay Ele- men t	Description	Units	Range
orbit_id	xo_orb it_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf





Table 12: Input parameters of xv_station_vis_time

c name	c type	Arr ay Ele- men t	Description	Units	Range
swath_flag	long*	-	Define the use of the swath file: • 0 = (XV_STF) if the swath file is a swath template file. • > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits	-	XV_STF = 0 XV_SDF = 1 > 0
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
sta_id[8]	char		identification name of the station		
station_db_file	char *		File name of the station database file This file is read each time the function is called		
mask	long		mask used to define visibility = XV_COMBINE combine AOS/ LOS elevations and physical mask (nominal mode) = XV_AOS_LOS consider only AOS/LOS elevations = XV_PHYSICAL consider only physical mask = XV_FROM_FILE consider mask given in the Station Database File		all
aos_elevation	double		Minimum elevation to consider at AOS (i.e. before considering start of visibility). Not used if mask=XV_FROM_FILE	deg	≥ 0.0
los_elevation	double		Maximum elevation to consider at LOS (i.e. before considering end of visibility). Not used if mask=XV_FROM_FILE	deg	≥ 0.0 ≤ aos_elevation





EE-MA-DMS-GS-0006 24/05/19 3.7.6 67

Table 12: Input parameters of xv_station_vis_time

c name	c type	Arr ay Ele- men t	Description	Units	Range
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	s	≥ 0.0

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
mask	Combine AOS/LOS and physical mask	XV_COMBINE	0
	Use only AOS/LOS	XV_AOS_LOS	1
	Use only physical mask	XV_PHYSICAL	2
	Use mask from file	XV_FROM_FILE	3





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 68

7.3.4 Output parameters

Table 13: Output parameters of xv_station_vis_time function

c name	c type	Array Ele- ment	Description	Uni t	Range
xv_station_vis_time	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	S	≥0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	μs	≥0 ≤ 999999
bgn_cycle	long*	all	Cycle number, begin of visibility segment i bgn_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	μs	≥0 ≤ 999999





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

Table 13: Output parameters of xv_station_vis_time function

c name	c type	Array Ele- ment	Description	Uni t	Range
end_cycle	long*	all	Cycle number, end of visibility segment i end_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
zdop_orbit	long*	all	Orbit number, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_orbit[i-1], i = 1, number_segments		> 0
zdop_second	long*	all	Seconds since ascending node, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_second[i-1], i = 1, number_segments	S	>= 0 < orbital period
zdop_microsec	long*	all	Micro seconds within second time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_microsec[i-1], i = 1, number_segments	μs	0 =< =< 9999999
zdop_cycle	long*	all	Cycle number, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_second[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
ierr[XV_NUM_ER R_STATION_VIS_ TIME]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_station_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: 3.7.6 Page:





EE-MA-DMS-GS-0006 24/05/19 3.7.6 71

7.3.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_station_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_station_vis_time** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Table 14: Error messages and codes for xv_station_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error in input parameter Orbit Id.	Computation not performed	XV_CFI_STATION_VIS _TIME_ORBIT_STATU S_ERR	0
ERR	Error in input parameter to stavistime.	Computation not performed	XV_CFI_STATION_VIS _TIME_INPUTS_CHEC K_ERR	1
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_STATION_VIS _TIME_ORBIT_TYPE_ ERR	2
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_STATION_VIS _TIME_ORBIT_MODE L_ERR	3
ERR	Error transforming start orbit from relative to absolute orbits.	Computation not performed	XV_CFI_STATION_VIS _TIME_REL_TO_ABS_ START_ERR	4
ERR	Error transforming stop orbit from relative to absolute orbits	Computation not performed	XV_CFI_STATION_VIS _TIME_REL_TO_ABS_ STOP_ERR	5
ERR	Error reading the Orbit scenario file.	Computation not performed	XV_CFI_STATION_VIS _TIME_OSF_READ_ER R	6
ERR	Input parameter "swath_flag" is out of range.	Computation not performed	XV_CFI_STATION_VIS _TIME_SWATH_FLAG _ERR	7





EE-MA-DMS-GS-0006 24/05/19 3.7.6 72

Table 14: Error messages and codes for xv_station_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error reading the swath template file.	Computation not performed	XV_CFI_STATION_VIS _TIME_SWATH_READ _ERR	8
ERR	Error wrong swath type selected.	Computation not performed	XV_CFI_STATION_VIS _TIME_SWATH_TYPE_ ERR	9
ERR	Swath file is not compatible with the orbit file	Computation not performed	XV_CFI_STATION_VIS _TIME_WRONG_SWA TH_ERR	10
WAR N	Warning, start orbit is outside range of OSF.	Computation performed. Message to inform the user.	XV_CFI_STATION_VIS _TIME_FIRST_ORBIT_ WARN	11
WAR N	Warning, stop orbit is outside range of OSF.	Computation performed. Message to inform the user.	XV_CFI_STATION_VIS _TIME_LAST_ORBIT_ WARN	12
ERR	Actual stop orbit is earlier than actual start orbit.	Computation not performed	XV_CFI_STATION_VIS _TIME_WRONG_INTE RVAL_ERR	13
ERR	Error obtaining orbital information in orbit info.	Computation not performed	XV_CFI_STATION_VIS _TIME_ORBIT_INFO_ ERR	14
WAR N	Warning, there is an orbital change within the requested orbits.	Computation performed. Message to inform the user.	XV_CFI_STATION_VIS _TIME_ORBIT_CHAN GE_WARN	15
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_STATION_VIS _TIME_INTERNAL_M EMORY_ERR	16
ERR	There is a potential memory overload, try with a smaller orbital interval.	Computation not performed	XV_CFI_STATION_VIS _TIME_POTENTIAL_ MEMORY_ERR	17
ERR	Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_STATION_VIS _TIME_INCONSISTEN T_SWATH_ERR	18





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 73

Table 14: Error messages and codes for xv_station_vis_time

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error read info the ground station's mask data file.	Computation not performed	XV_CFI_STATION_VIS _TIME_READ_STA_ER R	19
ERR	Error transforming the station's mask into an equivalent zone.	Computation not performed	XV_CFI_STATION_VIS _TIME_AZEL2LONLA T_ERR	20
ERR	Error calling ZONEVISTIME to calculate transitions.	Computation not performed	XV_CFI_STATION_VIS _TIME_ZONE_VIS_TI ME_CALL_ERR	21
ERR	Error refining intersection time.	Computation not performed	XV_CFI_STATION_VIS _TIME_CALL_STAVIS _ERR	22
WAR N	Accuracy of 0.001 deg in elevation not reached in orbit %li. Orbit too close to the mask limit.	Computation performed. Message to inform the user.	XV_CFI_STATION_VIS _TIME_CALL_STAVIS _WARN	23
ERR	Error allocating memory for the time segments.	Computation not performed.	XV_CFI_STATION_VIS _TIME_SEGMENTS_M EMORY_ERR	24
ERR	Error calculating zero doppler interval.	Computation not performed	XV_CFI_STATION_VIS _TIME_ZERO_DOPPL ER_ERR	25
WAR N	Segment longer than half nodal period deleted.	Computation performed. Message to inform the user.	XV_CFI_STATION_VIS _TIME_LONG_SEGM_ SKIPPED_WARN	26
ERR	Error transforming from absolute to relative.	Computation not performed	XV_CFI_STATION_VIS _TIME_ABS_TO_REL_ ERR	27
ERR	Error finding the spacecraft for the station when mask data given from file	Computation not performed	XV_CFI_STATION_VIS _TIME_MASK_FROM_ FILE_NO_SC_ERR	28
ERR	Error in the mask type read from the mask data given in the file	Computation not performed	XV_CFI_STATION_VIS _TIME_MASK_FROM_ FILE_MASK_TYPE_ER R	29





EE-MA-DMS-GS-0006 24/05/19 3.7.6 74

7.3.6 Runtime performances

The following runtime performance has been measured over an interval of 10 orbits.

Table 15: Runtime performances of xv_station_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.	
[ms]	[ms]	[ms]	[ms]	
830	352	358	58	





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

75

7.4 xv_station_vis_time_no_file

7.4.1 Overview

The xv station vis time no file function computes ground station visibility segments, the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

The aim of this function is to provide another interface for the function xv station vis time in which the station and the swath are not provided with files but with data structures (see section 7.2.2).

7.4.2 Calling interface

For C programs, the call to **xv_station_vis_time_no_file** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
      long
               swath flag, orbit type,
               start orbit, start cycle,
               stop orbit, stop cycle,
               mask, number segments,
               *bgn orbit, *bgn second,
               *bgn microsec, *bgn cycle,
               *end orbit, *end second,
               *end microsec, *end cycle,
               *zdop orbit, *zdop second,
               *zdop microsec, *zdop cycle,
               ierr[XV NUM ERR STATION VIS TIME],
               status;
      double
               aos elevation, los elevation, min duration;
      xd stf file stf data;
      xd station rec station data;
      status = xv station vis time no file(
                       &orbit id, &orbit type,
                       &start orbit, &start cycle,
                       &stop orbit, &stop cycle,
                       &stf data, &station data,
                       &mask, &aos elevation, &los elevation,
                       &min duration,
                       &number segments,
                       &bgn orbit, &bgn second,
                       &bgn microsec, &bgn cycle,
                       &end orbit, &end second,
```



}



Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: 3.7.6 Page:

76

```
&end microsec, &end cycle,
                 &zdop orbit, &zdop second,
                 &zdop microsec, &zdop cycle,
                 ierr);
/* Or, using the run id */
long run id;
status = xv station vis time no file run(
                 &run id, &orbit type,
                 &start orbit, &start cycle,
                 &stop orbit, &stop cycle,
                 &stf data, &station data,
                 &mask, &aos elevation, &los elevation,
                 &min duration,
                 &number segments,
                 &bgn orbit, &bgn second,
                 &bgn microsec, &bgn cycle,
                 &end orbit, &end second,
                 &end microsec, &end cycle,
                 &zdop orbit, &zdop second,
                 &zdop microsec, &zdop cycle,
                 ierr);
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 77

7.4.3 Input parameters

Table 16: Input parameters of xv_station_vis_time_no_file

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orb it_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf





EE-MA-DMS-GS-0006 24/05/19 3.7.6 78

Table 16: Input parameters of xv_station_vis_time_no_file

c name	ctype	Array Ele- ment	Description	Units	Range
stf_data	xd_stf _file	-	Swath template data (structure described in [DAT_SUM]). The swath structure can be got by: • Reading a swath template file with the CFI function xd_read_stf. • Generating the swath data with the CFI function xv_gen_swath_no_file	-	-
station_data	xd_sta tion_r ec	-	Station data (structure described in [DAT_SUM]) that can be got by reading a station from a station database file with the CFI function xd_read_station .	-	-
mask	long		mask used to define visibility = XV_COMBINE combine AOS/ LOS elevations and physical mask (nominal mode) = XV_AOS_LOS consider only AOS/LOS elevations = XV_PHYSICAL consider only physical mask = XV_FROM_FILE consider mask given in the Station Database File		all
aos_elevation	double		Minimum elevation to consider at AOS (i.e. before considering start of visibility). Not used if mask=XV_FROM_FILE	deg	≥ 0.0
los_elevation	double		Maximum elevation to consider at LOS (i.e. before considering end of visibility). Not used if mask=XV_FROM_FILE	deg	≥ 0.0 ≤ aos_elevation
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥ 0.0





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 79

It is also possible to use enumeration values rather than integer values for some of the input arguments, as shown in the table below:

Input	Description	Enumeration value	long
mask	Combine AOS/LOS and physical mask	XV_COMBINE	0
	Use only AOS/LOS	XV_AOS_LOS	1
	Use only physical mask	XV_PHYSICAL	2
	Use mask from file	XV_FROM_FILE	3





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 80

7.4.4 Output parameters

Table 17: Output parameters of xv_station_vis_time_no_file function

c name	c type	Array Ele- ment	Description	Uni t	Range
xv_station_vis_time _no_file	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	S	≥0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	μs	≥0 ≤ 999999
bgn_cycle	long*	all	Cycle number, begin of visibility segment i bgn_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	μs	≥0 ≤999999





EE-MA-DMS-GS-0006 24/05/19 3.7.6 81

Table 17: Output parameters of xv_station_vis_time_no_file function

c name	c type	Array Ele- ment	Description	Uni t	Range
end_cycle	long*	all	Cycle number, end of visibility segment i end_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
zdop_orbit	long*	all	Orbit number, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_orbit[i-1], i = 1, number_segments		> 0
zdop_second	long*	all	Seconds since ascending node, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_second[i-1], i = 1, number_segments	S	>= 0 < orbital period
zdop_microsec	long*	all	Micro seconds within second time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_microsec[i-1], i = 1, number_segments	μs	0 =< =< 9999999
zdop_cycle	long*	all	Cycle number, time of zero doppler (-1 if no zero doppler within corresponding visibility segment) zdop_second[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
ierr[XV_NUM_ER R_STATION_VIS_ TIME]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_station_vis_time_no_file** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 82

7.4.5 Warnings and errors

The error and warning messages and codes for **xv_station_vis_time_no_file** are the same than for **xv_station_vis_time** (see table 14).

The error messages/codes can be returned by the CFI function **xv_get_msg/xv_get_code** after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV_STATION_VIS_TIME_ID (from table 1).

7.4.6 Runtime performances

The following runtime performance has been measured over an interval of 10 orbits.

Table 18: Runtime performances of xv_station_vis_time_no_file function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
158.2	52.6	54.6	12.4





EE-MA-DMS-GS-0006 24/05/19 3.7.6 83

7.5 xv_drs_vis_time

7.5.1 Overview

The **xv_drs_vis_time** function computes all the orbital segments for which the satellite is visible from a data relay satellite located in a geostationary orbit.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

xv_drs_vis_time requires access to requires access to the orbit_id (xo_orbit_id) data structure. This structure can be initialized using one of the following set of data or files (see [ORBIT_SUM]):

- data for an orbital change
- Orbit scenario files
- Predicted orbit files
- Orbit Event Files
- Restituted orbit files
- DORIS Preliminary orbit files
- DORIS Navigator files

The time intervals used by **xv_drs_vis_time** are expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Data Relay Satellite Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER VISIBILITY (xo time to orbit and xv orbit to time functions).

It is assumed that the DRS orbit has zero inclination.

The xv drs vis time function considers the following sources of occultation:

- Earth plus 20 km of atmosphere
- Satellite dependant sources (Currently, only Envisat model is implemented):
 - Fixed appendages: 1 deg half cone around:
 - Service Module
 - Payload Module
 - Module Interface
 - ASAR antenna
 - AATSR Payload
 - ATSR Radiator





EE-MA-DMS-GS-0006 24/05/19 3.7.6 84

- Mipas Payload
- Mipas Electronics
- Sciamachy Radiators A, B and C
- UMI
- Star Trackers, enlarged to have a 16 deg halfcone to protect against radiation.
- S Band Antennas
- Rotating appendices (solar array and its structure): 1 deg half cone around solar array and supporting structure
- Azimuth Blockage (165 deg to 195 deg, MCD convenction for the azimuth and elevation angles)
- Elevation Blockage (-86 deg to -90 deg, MCD convenction for the azimuth and elevation angles)

Operations of the antenna are also limited to the values (APM definition):

- Elevation from -30.0 deg to +90.0 deg
- Azimuth from -165.0 deg to +165.0 deg

These operations limitations are imposed considering margins of 1.0 deg.

In addition to these occultation sources, the function **xv_drs_vis_time** checks that the initial movement of the antenna (start-up trajectory) does not violate any mechanical constraints in order to reach the corresponding pointing to the DRS at the beginning time of the visibility segment. Similar computations are performed to be able to stop the antenna at the end point of the visibility segment.

In case the mechanical constraints are violated for a visibility segment, it is reduced by 1 second and the condition is checked again. The process is repeated until both trajectories are within the limits. A warning message is raised if the visibility segment duration comes to be smaller than the minimum duration defined by the user (*min duration*).

The considerations assumed in the implementation of the start-up and stop trajectories are the following:

Concept	Start-up Trajectory	Stop Trajectory
Angular movements	Common time for azimuth and elevation movement	No common time for azimuth and elevation movement
Azimuth acceleration	$AZ_{acc} = 0.015 \text{ deg/sec}^2$	Low Velocity: $AZ_{acc} = 0.023$ deg/sec ²
		High Velocity: $AZ_{acc} = 0.043$ deg/sec ²
Elevation acceleration	$EL_{acc} = 0.004 \text{ deg/sec}^2$	Low Velocity: $EL_{acc} = 0.02$ deg/sec^2
		High Velocity: $EL_{acc} = 0.02$ deg/sec^2

Table 19: Assumptions for the start-up and stop trajectory computations





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 85

Concept	Start-up Trajectory	Stop Trajectory
Velocity limit	N/A	$vel_{limit} = 0.11459 deg/sec$

Table 19: Assumptions for the start-up and stop trajectory computations





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 86

7.5.2 Calling interface

For C programs, the call to **xv_drs_vis_time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                          orbit id = {NULL};
      xo orbit id
      xp sat nom trans id sat nom trans id = {NULL};
                         sat trans id = {NULL};
      xp sat trans id
                           instr_trans_id = {NULL};
      xp instr trans id
      long
                   orbit type,
                   start orbit, start cycle,
                   stop orbit, stop cycle,
                   number segments,
                   *bgn orbit, *bgn second,
                   *bgn microsec, *bgn cycle,
                   *end orbit, *end second,
                   *end microsec, *end cycle,
                   ierr[XV NUM ERR DRS VIS TIME],
                   status;
      double
                   min duration, longitude;
      status = xv drs vis time(
                       &orbit id, &sat nom trans id,
                       &sat trans id, &instr trans id, &orbit type,
                       &start orbit, &start cycle,
                       &stop orbit, &stop cycle,
                       &longitude, &min duration,
                       &number segments,
                       &bgn orbit, &bgn second,
                       &bgn microsec, &bgn cycle,
                       &end orbit, &end second,
                       &end microsec, &end_cycle,
                       ierr);
      /* Or, using the run_id */
      long run id;
      status = xv drs vis time run(
                       &run id, &orbit type,
                       &start orbit, &start cycle,
                       &stop orbit, &stop cycle,
```





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

87

&longitude, &min duration, &number_segments, &bgn orbit, &bgn second, &bgn microsec, &bgn cycle, &end_orbit, &end_second, &end_microsec, &end_cycle, ierr);

}





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 88

7.5.3 Input parameters

Table 20: Input parameters of xv_drs_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
sat_nom_trans _id	xp_sat_nom_ trans_id*	-	Structure that contains the Instr. Trans.	-	-
sat_trans_id	xp_sat_trans _id*	-	Structure that contains the Instr. Trans.	-	-
instr_trans_id	xp_instr_tran s_id*	-	Structure that contains the Instr. Trans.	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≤ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 89

Table 20: Input parameters of xv_drs_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≤ first cycle in osf
longitude	double		longitude of data relay satellite		[0, 360]
min_duration	double		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥0.0





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 90

7.5.4 Output parameters

Table 21: Output parameters of xv_drs_vis_time function

c name	c type	Array Ele- ment	Description	Unit	Range
xv_drs_vis_time	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long		Number of visibility segments returned to the user		≥0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	ms	≥ 0 ≤ 999999
bgn_cycle	long*	all	Cycle number, begin of visibility segment i bgn_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 <orbital period</orbital
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	ms	≥ 0 ≤999999





EE-MA-DMS-GS-0006 24/05/19 3.7.6 91

Table 21: Output parameters of xv_drs_vis_time function

c name	c type	Array Ele- ment	Description	Unit	Range
end_cycle	long*	all	Cycle number, begin of visibility segment i bgn_cycle[i-1], i = 1, number_segments		>0 NULL when using absolute orbits
ierr[XV_NUM_E RR_DRS_VIS_TI ME]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_drs_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 92

7.5.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_drs_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_drs_vis_time** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong input orbit Id.	Computation not performed	XV_CFI_DRS_VIS_TI ME_ORBIT_STATUS_E RR	0
ERR	Error in state vector computation. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XO_EXPLORER_P REDICT_ERR	1
ERR	Error in absolute start orbit computation.	Computation not performed	XV_CFI_DRS_VIS_TI ME_REL_TO_ABS_ST ART_ERR	2
ERR	Error in absolute stop orbit computation.	Computation not performed	XV_CFI_DRS_VIS_TI ME_REL_TO_ABS_ST OP_ERR	3
WARN	Input "start_orbit" below first OSF orbit: take first OSF orbit for computations.	Computation performed Message to inform the user	XV_CFI_DRS_VIS_TI ME_START_ORBIT_W ARN	4
ERR	Input "start_orbit" after last OSF orbit.	Computation not performed	XV_CFI_DRS_VIS_TI ME_START_ORBIT_O UT_OSF_ERR	5
WARN	Input "stop_orbit" after last OSF orbit: take last OSF orbit for computations.	Computation performed Message to inform the user	XV_CFI_DRS_VIS_TI ME_STOP_ORBIT_WA RN	6
ERR	Input "stop_orbit" below first OSF orbit.	Computation not performed	XV_CFI_DRS_VIS_TI ME_STOP_ORBIT_OU T_OSF_ERR	7





Code: EE-MA-DMS-GS-0006 Date: Issue: Page:

24/05/19 3.7.6 93

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error performing a time transformation.	Computation not performed	XV_CFI_DRS_VIS_TI ME_TIME_CHANGE_E RR	8
ERR	Error transforming from TAI to TDB time.	Computation not performed	XV_CFI_DRS_VIS_TI ME_TAI_TO_TDB_ER R	9
ERR	Error in XL_Sun computation.	Computation not performed	XV_CFI_DRS_VIS_TI ME_XL_SUN_ERR	10
ERR	Error in Sun direction computation. Orbit no: (%ld). [PL]	Computation not performed	XV_CFI_DRS_VIS_TI ME_DIR_SUN_ERR	11
WARN	Error allocating internal memory.	Computation performed Message to inform the user	XV_CFI_DRS_VIS_TI ME_INTERNAL_MEM ORY_ERR	12
ERR	Error allocating memory for the time segments.	Computation not performed	XV_CFI_DRS_VIS_TI ME_SEGMENTS_MEM ORY_ERR	13
ERR	Input parameter "orbit_type" is out of range.	Computation not performed	XV_CFI_DRS_VIS_TI ME_ORBIT_TYPE_ER R	14
ERR	Error transforming absolute to relative begin segments.	Computation not performed	XV_CFI_DRS_VIS_TI ME_ABS_TO_REL_BG N_ERR	15
ERR	Error transforming absolute to relative end segments.	Computation not performed	XV_CFI_DRS_VIS_TI ME_ABS_TO_REL_EN D_ERR	16
ERR	Error in rectifying Earth rotation. Orbit no: (%ld). [PG]	Computation not performed	XV_CFI_DRS_VIS_TI ME_XL_EF_TO_QEF_ ERR	17
ERR	Error in coordinates transformation. Orbit no: (%ld). [PL]	Computation not performed	XV_CFI_DRS_VIS_TI ME_XL_CHANGE_CS_ ERR	18
ERR	Error in azimuth- elevation computation. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_AZIM_EL EV_ERR	19





Code: EE-M Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 94

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error in XL_Pt_Dir_Range computation. Orbit no: (%ld). [XL]	Computation not performed	XV_CFI_DRS_VIS_TI ME_XL_PT_DIR_RAN GE_ERR	20
ERR	Error in physical mask checking. Orbit no: (%ld).	Computation performed Message to inform the user	XV_CFI_DRS_VIS_TI ME_XV_CFI_FIXED_C HECK_ERR	21
ERR	Error in Earth occultation checking. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_EARTH_ CHECK_ERR	22
ERR	Error in solar panel position computation. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_ROTATIN G_POS_ERR	23
ERR	Error in solar panel occultation checking. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_ROTATIN G_SOLAR_PANEL_CH ECK_ERR	24
ERR	Error in solar panel structure occultation checking. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_ROTATIN G_SOLAR_PANEL_ST R_CHECK_ERR	25
ERR	Error in OSF reading.	Computation not performed	XV_CFI_DRS_VIS_TI ME_XO_LOAD_GLOB AL_OSF_ERR	26
ERR	Error in input parameters.	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_DRSINPU TS_CHECK_ERR	27
ERR	Error in canonical position computation. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_CANON_ POS_ERR	28
ERR	Error in orbit parameters computation. Orbit no: (%ld).	Computation not performed	XV_CFI_DRS_VIS_TI ME_XV_CFI_ORBIT_I NFO_ERR	29
ERR	Error in ascending node parameters computation. Orbit no: (%ld). [PG]	Computation not performed	XV_CFI_DRS_VIS_TI ME_XO_GENSTATE_E RR	30





Code: EE-MA-DI Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 95

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Maximum number of iterations. Orbit no: (%ld).	Computation performed Message to inform the user	XV_CFI_DRS_VIS_TI ME_MAX_NUMBER_I TER_ERR	31
ERR	Error in time computations. Orbit no: (%ld).	Computation not performed	XV_DRS_VIS_TIME_X V_TIME_SEC_ERR	32
WARN	First orbit starts with visibility.	Computation performed Message to inform the user	XV_DRS_VIS_TIME_F IRST_ORBIT_VIS_WA RN	33
ERR	Last orbit ends with visibility.	Computation not performed	XV_DRS_VIS_TIME_L AST_ORBIT_VIS_WAR N	34
ERR	Error in antenna stop trajectory computations. Orbit no: %ld.	Computation not performed	XV_DRS_VIS_TIME_X V_CHECK_STOP_TRA JECTORY_ERR	35
WARN	No possible stop trajectory. Orbit no: %ld.	Computation performed Message to inform the user	XV_DRS_VIS_TIME_X V_CHECK_STOP_TRA JECTORY_WARN	36
ERR	Error in antenna start-up trajectory computations. Orbit no: %ld.	Computation not performed	XV_DRS_VIS_TIME_X V_CHECK_STARTUP_ TRAJECTORY_ERR	37
WARN	No possible start-up trajectory. Orbit no: %ld.	Computation performed Message to inform the user	XV_DRS_VIS_TIME_X V_CHECK_STARTUP_ TRAJECTORY_WARN	38
ERR	Error while computing OSV (propagation/interpolation error)	Computation not performed	XV_CFI_DRS_VIS_TI ME_OSV_COMP_ERR	39





EE-MA-DMS-GS-0006 24/05/19 3.7.6 96

7.5.6 Runtime performances

The following runtime performance has been measured over an interval of 10 orbits.

Table 22: Runtime performances of xv_drs_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
1469	448	578	127





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

7.6 xv_swath_pos

7.6.1 Overview

The xv_swath_pos function computes the location of a swath at a given time.

Swath location is expressed as 1:

- longitude
- latitude
- altitude

for n points (with $n \ge 1$). In Figure 2 we can see an example.

xv_swath_pos requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data and files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath data, describing the area seen by the relevant instrument all along the current orbit. The swath file is produced off-line by the EXPLORER_VISIBILITY library (xv_gen_swath function) and the data structure can be got by reading the file with xd_read_stf.

The input time used by xv swath pos is expressed in orbit-relative time.

Users who need to use processing time must make use of the conversion routine provided in EXPLOR-ER VISIBILITY (xv_time_to_orbit and xv_orbit_to_time functions).

NOTE: Since the swath template file is generated from a reference orbit, it is not allowed to use **xv_swath_pos** for an orbit in the orbit scenario file with different repeat cycle or cycle length. If this would happen, **xv swath pos** will return an error an no computation will be performed.

^{1.} For inertial swaths, right ascension and declination are used instead of longitude and latitude





EE-MA-DMS-GS-0006 Code: Date: 24/05/19 Issue: 3.7.6 Page:

98

7.6.2 Calling sequence xv_swath_pos

For C programs, the call to **xv_swath_pos** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
                    orbit type,
      long
                    orbit, second, microsec, cycle,
                    ierr[XV_NUM_ERR_SWATH_POS], status;
      double
                    *longitude, *latitude, *altitude;
      xd stf file stf data;
      status = xv_swath_pos(&orbit id,
                           &stf data,
                           &orbit type,
                           &orbit, &second, &microsec, &cycle,
                           longitude, latitude, altitude,
                           ierr);
      /* Or, using the run id */
      long run id;
      status = xv swath_pos_run(&run_id,
                               &stf_data,
                               &orbit type,
                               &orbit, &second, &microsec, &cycle,
                               longitude, latitude, altitude,
                               ierr);
}
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 99

7.6.3 Input parameters xv_swath_pos

Table 23: Input parameters of xv_swath_pos

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
stf_data	xd_stf_file		Swath Template data structure	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
orbit	long		Orbit number		> 0
second	long		Seconds since ascending node	S	>= 0 < orbital period
microsec	long		Micro seconds within second	ms	0 =< =< 999999
cycle	long		Cycle number.		>0

7.6.4 Output parameters xv_swath_pos

Table 24: Output parameters of xv_swath_pos

c name	c type	Arra y Ele- ment	Description	Uni t	Range
xv_swath_pos	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 100

Table 24: Output parameters of xv_swath_pos

c name	c type	Arra y Ele- ment	Description	Uni t	Range
longitude	double*	all	longitude (right ascension for inertial swaths) of points of the swath. The user must reserve as many array positions as the number of points of the instantaneous swath.	deg	[-180, 180]
latitude	double*	all	latitude (declination for inertial swaths) of points of the swath. The user must reserve as many array positions as the number of points of the instantaneous swath.	deg	[-90, 90]
altitude	double*	all	altitude of point is of the swath. The user must reserve as many array positions as the number of points of the instantaneous swath.	m	
ierr[XV_NUM_ERR _SWATH_POS]	long		Error status flags		





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 101

7.6.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_swath_pos** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_swath_pos** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong orbit Id.	Computation not performed	XV_CFI_SWATH_POS_ ORBIT_STATUS_ERR	0
ERR	Wrong input Orbit Id. Unknown orbit initialization mode	Computation not performed	XV_CFI_SWATH_POS_ ORBIT_MODEL_ERR	1
ERR	Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_SWATH_POS_ INCONSISTENT_SWAT H_ERR	2
ERR	Orbit number must be positive.	Computation not performed	XV_CFI_SWATH_POS_ ORB_NUM_LIM_ERR	3
ERR	Seconds since ascending node must be zero or positive.	Computation not performed	XV_CFI_SWATH_POS_ SEC_LIM_ERR	4
ERR	MicroSeconds must be zero or positive	Computation not performed	XV_CFI_SWATH_POS_ MICROSEC_1ST_ERR	5
ERR	MicroSeconds can not be bigger than 999999.	Computation not performed	XV_CFI_SWATH_POS_ MICROSEC_2ND_ERR	6
ERR	Orbit type switch out of range.	Computation not performed	XV_CFI_SWATH_POS_ ORBIT_TYPE_ERR	7
ERR	Cycle number must be positive.	Computation not performed	XV_CFI_SWATH_POS_ CYCLE_ERR	8
ERR	Orbit number is not included in the Orbit Scenario File	Computation not performed	XV_CFI_SWATH_POS_ ORB_NUM_OEF_ERR	9
ERR	Input time greater than orbital period.	Computation not performed	XV_CFI_SWATH_POS_ TIME_ERR	10





EE-MA-DMS-GS-0006 24/05/19 3.7.6 102

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Repeat Days Cycle of this orbit is not the same than the swath template.	Computation not performed	XV_CFI_SWATH_POS_ REP_CYCLE_ERR	11
ERR	Orbits Cycle Length of this orbit is not the same than the swath template	Computation not performed	XV_CFI_SWATH_POS_ CYCLE_LENGTH_ERR	12
ERR	MLST drift of this orbit is not the same than the swath template.	Computation not performed	XV_CFI_SWATH_POS_ MLST_DRIFT_ERR	13
ERR	No spherical triangle.	Computation not performed	XV_CFI_SWATH_POS_ SPHER_TRIANG_ERR	14
ERR	Error while transforming from relative to absolute orbit.	Computation not performed	XV_CFI_SWATH_POS_ REL_TO_ABS_ERR	15
ERR	Error while computing information of the orbit.	Computation not performed	XV_CFI_SWATH_POS_ XV_ORBIT_INFO_ERR	16
ERR	The swath template structure contains invalid data	Computation not performed	XV_CFI_SWATH_POS_ SWATH_INIT_ERR	17
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_SWATH_POS_ MEMORY_ERR	18





EE-MA-DMS-GS-0006 24/05/19 3.7.6 103

7.6.6 Runtime performances

The following runtime performance has been measured.

Table 25: Runtime performances of xv_swath_pos function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
0.98	0.25	0.31	0.11





EE-MA-DMS-GS-0006 24/05/19 3.7.6 104

7.7 xv_star_vis_time

7.7.1 Overview

The **xv_star_vis_time** function computes stars visibility segments, the orbital segments for which a given star is visible with a given instrument from the satellite.

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as seconds elapsed since the ascending node crossing.

In addition, **xv_star_vis_time** calculates for every start and end of the visibility segment a coverage flag, determining which side of the FOV the event took place.

xv_star_vis_time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- Two Inertial Reference Swath Files. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv gen swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_star_vis_time** generates the swath points for a number of orbits given by the user.
- (*Optional*) The Star's Database File, describing the location in right ascension and declination of a star, described by its corresponding identifier.

The time intervals used by **xv_star_vis_time** are expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Star Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER VISIBILITY (xv_time_to_orbit and xv_orbit_to_time functions).





EE-MA-DMS-GS-0006 24/05/19 3.7.6 105

7.7.2 Swath Definition

xv_star_vis_time calculates stars visibility segments for FOV corresponding to limb-sounding instruments observing inertial objects. The corresponding template files are generated off-line by the EXPLORER VISIBILITY CFI software (**xv_gen_swath** function).

7.7.2.1 Inertial Swaths

The FOV for a Limb-sounding instrument observing inertial objects is calculated using two main parameters.

- The FOV projection on the celestial sphere is determined by two set of swaths, one corresponding to a higher (TOP) and a lower (BOTTOM) altitude over the ellipsoid, hence defining the elevation range of the FOV
- The azimuth range is defined as such, the extremes corresponding to the left and right sides. In addition **xv gen swath** generates coordinates for a middle point

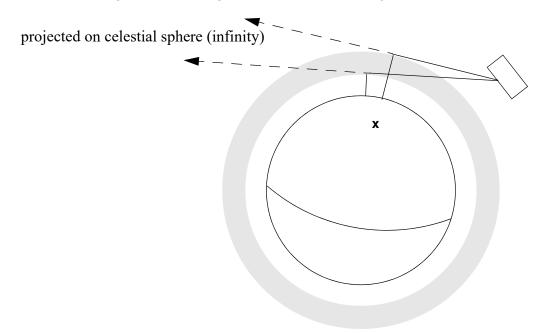


Figure 10 Two tangent altitudes over the ellipsoid

The instantaneous FOV projected on the celestial sphere can be represented as a series of points defined by their Right Ascension and Declination coordinates.

The top and bottom lines sweep the azimuth range at a constant tangent altitude, whilst the left and right side have a constant azimuth value with changing tangent altitude.


The shape of FOV should be similar to that shown in the diagram below with the dotted lines, whilst the algorithm implemented in xv_star_vis_time uses a simplified model joining the points with straight line.

As the satellite evolves around the orbit and the FOV sweeps the celestial sphere, a star can enter the FOV. **xv_star_vis_time** calculates that time and returns a flag indicating which part of the FOV (*LEFT*, *TOP*, *RIGHT* or *BOTTOM*) first detected the star. The same is done when the star exits the FOV.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 106

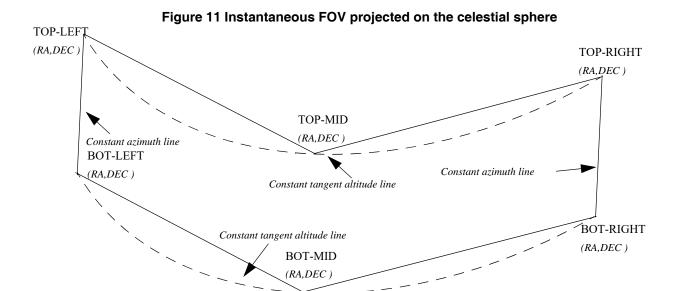

7.7.2.2 Splitting swaths

As it was shown in *figure 11*, the accuracy and precision of **xv_star_vis_time** strongly depends on how close the projection used in the algorithm is to the real world. Higher accuracy can be obtained splitting the azimuth range in sub-swaths.

Furthermore, splitting the swath would be necessary if the FOV was to cover an azimuth range larger than 180 degrees.

Note: It is important to note that if the FOV covers the value of 90 or 270 degrees in azimuth, one of the extremes (*LEFT* or *RIGHT*) of the STF must correspond to that azimuth value.

7.7.2.3 Orbital Changes

Since the reference swath template file is generated from a reference orbit, it is not recommended to use **xv_star_vis_time** for a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length). If this would happen, **xv_star_vis_time** will automatically ignore those orbits from the orbital change onwards, i.e. the actual stop orbit shall be the previous one to the first change in repeat cycle or cycle length.





Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 107

7.7.3 Calling sequence xv_star_vis_time

```
For C programs, the call to xv star vis time is (<u>input</u> parameters are <u>underlined</u>):
#include"explorer visibility.h"
      xo_orbit_id orbit_id = {NULL};
                    swath flag, orbit type,
       long
                    start_orbit, start_cycle,
                    stop orbit, stop cycle,
                    number segments,
                    *bgn orbit, *bgn second, *bgn microsec,
                    *bqn cycle, *bqn coverage,
                    *end orbit, *end second, *end microsec,
                    *end cycle, *end_coverage,
                    ierr[XV NUM ERR STAR VIS TIME], status;
                    star ra, star dec, star ra deg, star dec deg,
       double
                    min duration;
                    *orbit scenario file,
       char
                    *swath file upper, *swath file lower;
                    star id[8],*star db file;
       char
      status = xv_star_vis_time(
                         &orbit id, &orbit type,
                         &start orbit, &start cycle,
                         &stop_orbit, &stop_cycle,
                         &swath flag, swath file upper, swath file lower,
                         star id, star db file,
                         &star ra, &star dec,
                         &min duration,
                         &star ra deg, &star dec deg,
                         &number segments,
                         &bgn orbit, &bgn second, &bgn microsec,
                         &bgn cycle, &bgn coverage,
                         &end orbit, &end second, &end microsec,
                         &end cycle, &end coverage,
                         ierr);
       /* Or, using the run_id */
       long run id;
       status = xv star vis time run(
                         &run id, &orbit type,
                         &start orbit, &start cycle,
                         &stop_orbit, &stop_cycle,
                         &swath flag, swath file upper, swath file lower,
                         star id, star db file,
                         &star_ra, &star_dec,
                         &min duration,
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 108

```
&star_ra_deg, &star_dec_deg,
&number_segments,
&bgn_orbit, &bgn_second, &bgn_microsec,
&bgn_cycle, &bgn_coverage,
&end_orbit, &end_second, &end_microsec,
&end_cycle, &end_coverage,
ierr);
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 109

7.7.4 Input parameters xv_star_vis_time

Table 26: Input parameters of xv_star_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit_i d*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beginning of first orbit (within orbit range from orbit_scenario_file) If set to zero then first orbit of orbit_scenario_file is selected.	absolute or relative orbit number	= 0 or: absolute orbits ≥start_osf relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ start_osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: absolute orbits ≥start_osf relative orbits ≤ repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	=0 or ≥start_osf





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 110

Table 26: Input parameters of xv_star_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
swath_flag	long*	-	Define the use of the swath file: • 0 = (XV_STF) if the swath file is a swath template file. • 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits	1	XV_STF = 0 XV_SDF = 1 > 0
swath_file_uppe r	char *		File name of the inertial swath-file for the appropriate instrument mode, which defines the upper limit of the FOV. This file is read each time the function is called		
swath_file_lowe r	char *		File name of the inertial swath-file for the appropriate instrument mode, which defines the lower limit of the FOV. This file is read each time the function is called		
star_id[8]	char		identification of the star, as defined in the star_db_file. This parameter is used ONLY IF star_db_file is not equal empty string("")		EXACTLY 8 characters
star_db_file	char *		File name of the star database file		
star_ra	double*		Right Ascension of Star, in TOD. This parameter is used ONLY IF star_db_file is equal empty string ("")	deg	(-180.0, 180.0)
star_dec	double*		Declination of Star, in TOD. This parameter is used ONLY IF star_db_file is equal empty string ("")	deg	(-90.0, 90.0)
min_duration	double*		Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥ 0.0





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

111

7.7.5 Output parameters xv_star_vis_time

Table 27: Output Parameters of xv_star_vis_time

c name	c type	Array Ele- ment	Description	Uni t	Range
xv_star_vis_time	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
star_ra_deg	double		Right Ascension of the star, in TOD, for the UTC halfway start_orbit and stop_orbit.	deg	(-180.0, 180.0)
star_dec_deg	double		Declination of the star, in TOD, for the UTC halfway start_orbit and stop_orbit.	deg	(-90.0, 90.0)
number_segment	long		Number of visibility segments returned to the user		≥ 0
bgn_orbit	long*	all	Orbit number, begin of visibility segment i bgn_orbit[i-1], i = 1, number_segments		> 0
bgn_second	long*	all	Seconds since ascending node, begin of visibility segment i bgn_second[i-1], i = 1, number_segments	S	≥ 0 < orbital period
bgn_microsec	long*	all	Micro seconds within second begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments	μs	≥ 0 ≤ 999999
bgn_cycle	long*	all	cycle number begin of visibility segment i bgn_microsec[i-1], i = 1, number_segments		> 0 NULL when using relative orbits





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 112

Table 27: Output Parameters of xv_star_vis_time

c name	c type	Array Ele- ment	Description	Uni t	Range
bgn_coverage	long*	all	Coverage flag for swath entry: XV_STAR_UNDEFINED = 0, XV_STAR_UPPER = 1, XV_STAR_LOWER = 2, XV_START_LEFT = 3, XV_STAR_RIGHT=4		0,1,2,3,4
end_orbit	long*	all	Orbit number, end of visibility segment i end_orbit[i-1], i = 1, number_segments		> 0
end_second	long*	all	Seconds since ascending node, end of visibility segment i end_second[i-1], i = 1, number_segments	S	≥ 0 <orbital period</orbital
end_microsec	long*	all	Micro seconds within second end of visibility segment i end_microsec[i-1], i = 1, number_segments	μs	0 ≤999999
end_cycle	long*	all	End cycle, end of visibility segment i end_orbit[i-1], i = 1, number_segments		>0 NULL when using relative orbits
end_coverage	long*	all	Coverage flag for swath exit: XV_STAR_UNDEFINED = 0, XV_STAR_UPPER = 1, XV_STAR_LOWER = 2, XV_START_LEFT = 3, XV_STAR_RIGHT=4		0,1,2,3,4
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_star_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 113

7.7.6 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_star_vis_time** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library **xv_get_msg**.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_star_vis_time** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error, wrong orbit Id.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_STATUS_ERR	0
ERR	Error while transforming into absolute orbit the start_orbit.	Computation not performed	XV_CFI_STAR_VIS_TIM E_REL_TO_ABS_START _ERR	1
ERR	Error while transforming into absolute orbit the stop_orbit.	Computation not performed	XV_CFI_STAR_VIS_TIM E_REL_TO_ABS_STOP_ ERR	2
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INTERNAL_MEMORY _ERR	3
ERR	Error allocating memory for the visibility segments.	Computation not performed	XV_CFI_STAR_VIS_TIM E_SEGMENTS_MEMOR Y_ERR	4
ERR	Error allocating memory for the coverage.	Computation not performed	XV_CFI_STAR_VIS_TIM E_COVERAGE_MEMOR Y_ERR	5
ERR	Error while transforming into relative orbits the output segments.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ABS_TO_REL_ERR	6
ERR	Error in input parameter to starvistime.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INPUTS_CHECK_ERR	7
ERR	Error reading the Orbit event file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_OSF_READ_ERR	8





EE-MA-DMS-GS-0006 24/05/19 3.7.6 114

Error type	Error message	Cause and impact	Error Code	Error No
WAR N	Warning, start orbit is outside range of OEF/OSF.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_FIRST_ORBIT_WARN	9
WAR N	Warning, stop orbit is outside range of OEF/OSF.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_LAST_ORBIT_WARN	10
ERR	Error updating star's position in from JD2000 to determined UTC.	Computation not performed	XV_CFI_STAR_VIS_TIM E_STAR_RADEC_ERR	11
ERR	Error obtaining orbital information.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ORBIT_INFO_ERR	12
WAR N	Warning, there is an orbital change within the requested orbits.	Computation performed Message to inform the user	XV_CFI_STAR_VIS_TIM E_ORBIT_CHANGE_WA RN	13
ERR	Error reading the upper swath template file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_SWATH_UPPER_REA D_ERR	14
ERR	Error reading the lower swath template file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_SWATH_LOWER_REA D_ERR	15
ERR	Error, starvistime can only operate with an inertial swath.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INERTIAL_SWATH_E RR	16
ERR	Error, Orbital information does not coincide with reference swath.	Computation not performed	XV_CFI_STAR_VIS_TIM E_INCONSISTENT_SWA TH_ERR	17
ERR	Error reading the star data file.	Computation not performed	XV_CFI_STAR_VIS_TIM E_READ_STAR_ERR	18
ERR	Low swath altitude is above the upper limit described by the higher swath altitude.	Computation not performed	XV_CFI_STAR_VIS_TIM E_ALT_ERR	19





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 115

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error determining transitions.	Computation not performed	XV_CFI_STAR_VIS_TIM E_STAR_MAIN_ERR	20





EE-MA-DMS-GS-0006 24/05/19 3.7.6 116

7.7.7 Runtime performances

The following runtime performance has been measured over an interval of 100 orbits.

Table 28: Runtime performances of xv_star_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
3166	1140	1158	220






EE-MA-DMS-GS-0006 24/05/19 3.7.6 117

7.8 xv_multizones_vis_time

7.8.1 Overview

The xv_multizones_vis_time function computes all the orbital segments for which a given instrument swath intercepts several user-defined zones at the surface of the Earth ellipsoid.

The visibility segments are obtained by calling to **xv_zone_vis_time** (see section 7.1 for further details about swaths, zones and visibility segments definitions). Those segments are merged and ordered by start time. In addition to this, two tables are provided. The first one contains the zones where segment has visibility, and the second one contains the coverage of the segment for each zone (see figure 12).

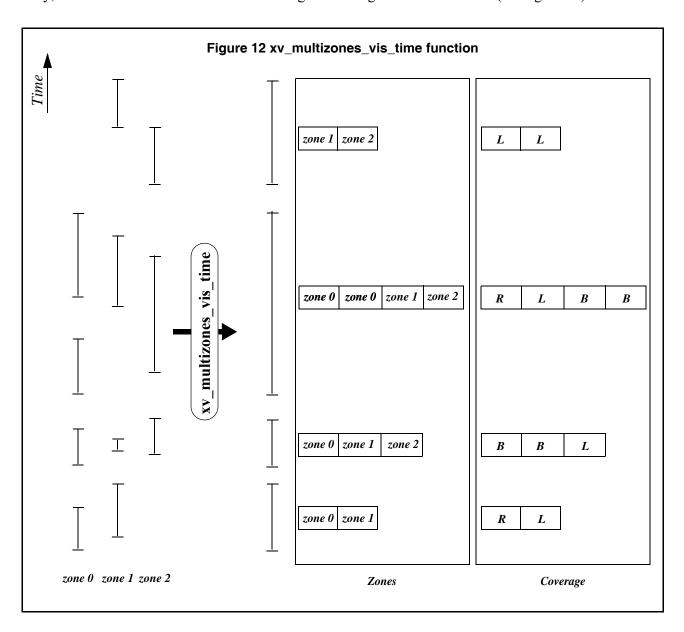

The time intervals used by **xv_multizones_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:





EE-MA-DMS-GS-0006 24/05/19 3.7.6 118

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Zone Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

xv_multizones_vis_time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv gen swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_multizones_vis_time** generates the swath points for a number of orbits given by the user.
- optionally, a Zone Database File, containing the zone description. The user can either specify a zone identifier referring to a zone in the file, or provide the zone parameters directly to xv multizones vis time.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER ORBIT (xo time to orbit and xo orbit to time functions).

NOTE: Since the swath template file is generated from a reference orbit, it is not recommended to use **xv_multizones_vis_time** for a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length). If this would happen, **xv_multizones_vis_time** automatically will ignore those orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those orbits).





Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 119

7.8.2 Calling sequence xv_multizones_vis_time

For C programs, the call to **xv_multizones_vis_time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                   orbit id = \{NULL\};
      xo orbit id
      long
               swath flag, orbit type,
               start orbit, start cycle, stop orbit, stop cycle,
               num zones, projection, *zone num,
               extra info flag,
               number segments,
               *bgn_orbit, *bgn_secs, *bgn_microsecs, *bgn_cycle,
               *end orbit, *end secs, *end microsecs, *end cycle,
               *nb_zon_in_segment, **zones_in_segment, **coverage,
               ierr[XV NUM ERR MULTIZONES VIS TIME], status;
      double
               *zone long, *zone lat, *zone diam,
               min duration;
      char
               *swath_file, *zone_db_file,
               **zone id;
      status = xv multizones vis time(
                    &orbit id, &orbit type,
                    &start orbit, &start cycle,
                    &stop orbit, &stop cycle,
                    &swath_flag, swath_file, &num_zones,
                    zone id, zone db file,
                    projection, zone num,
                    zone long, zone lat, zone diam,
                    &min duration, &extra info flag,
                    &number segments,
                    &bgn orbit, &bgn second, &bgn microsec, &bgn cycle,
                    &end orbit, &end second, &end microsec, &end cycle,
                    &nb zon in segment, &zones in segment, &coverage,
                    ierr);
      /* Or, using the run id */
      long run id;
      status = xv multizones vis time run(
                    &run id, &orbit type,
                    &start orbit, &start cycle,
                    &stop orbit, &stop cycle,
                    &swath_flag, swath_file, &num_zones,
                    zone id, zone db file,
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 120

projection, zone_num,
zone_long, zone_lat, zone_diam,
&min_duration, &extra_info_flag,
&number_segments,
&bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle,
&end_orbit, &end_second, &end_microsec, &end_cycle,
&nb_zon_in_segment, &zones_in_segment, &coverage,
ierr);

Earth Explorer Mission CFI Software. EXPLORER_VISIBILITY Software User Manual





EE-MA-DMS-GS-0006 24/05/19 3.7.6 121

7.8.3 Input parameters xv_multizones_vis_time

Table 29: Input parameters of xv_multizones_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
start_orbit	long	-	First orbit, segment filter. Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 122

Table 29: Input parameters of xv_multizones_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
swath_flag	long*	-	Define the use of the swath file: • 0 = (XV_STF) if the swath file is a swath template file. • > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits	1	XV_STF = 0 XV_SDF = 1 > 0
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
num_zones	long	-	Number of zones		>0
zone_id	char**	all	Identification name for n-th zone (0 <n<num_zones). a="" belong="" every="" exist="" for="" from="" it="" must="" the="" to="" when="" zone="" zone.="" zone_db_file="" zone_id[i]="" zone_num[i]="0.</td"><td></td><td>EXACTLY 8 characters for each zone</td></n<num_zones).>		EXACTLY 8 characters for each zone
zone_db_file	char *	-	File name of the zone-database file. Dummy when no zones from database are selected.		
projection	long*	all	projection for each zone used to define polygon sides as straight lines.		complete. See table 2 (Projections)
zone_num	long*	all	Number of vertices of the n-th zone (0 <n<num_zones) circular="" in="" line="" no="" point="" provided="" provided,="" use="" vertices="" zone="" zone,="2" zone_db_file="1" zone_id="" zone_lat:="0" zone_long,=""> 2 Polygon zone</n<num_zones)>		≥0
zone_long	double*	all	Geocentric longitude of - circle centre, for circ. zone - point, for point zone - line-end, for line zone - vertices, for polygon zone. The longitude of the vertices corresponding to all zones shall be arranged consecutively ^a .	deg	





EE-MA-DMS-GS-0006 24/05/19 3.7.6 123

Table 29: Input parameters of xv_multizones_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
zone_lat	double*	all	Geodetic latitude of - circle centre, for circ. zone point, for point zone line-end, for line zone vertices, for polygon zone. The latitude of the vertices corresponding to all zones shall be arranged consecutively ^{a.} .	deg	
zone_diam	double*	all	Array of diameters of circular zones in case this shape is selected for any zone ^b . zone_diam=0.0 for Point Zones.	m	≥ 0.0
min_duration	double	-	Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥ 0
extra_info_fla g	long	-	If value set to false (= 0), the zones_in_segment and coverage arrays are not computed. Saves computation time.		0 (false), 1 (true)

- a. For example,
- zone 0: points will be arranged from 0 to zone num[0] (no points in case of using a database zone),
- zone 1: points will be arranged from zone_num[0] to zone_num[0] + zone_num[1]

- ...

b. The values corresponding to all zones shall be arranged consecutively, so that the zone_diam[0] corresponds with the first point or circular zone, zone_diam[1] corresponds with the second point or circular zone, and so on.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 124

7.8.4 Output parameters xv_multizones_vis_time

Table 30: Output parameters of xv_multizones_vis_time

c name	c type	Arr ay Ele- men t	Description	Unit	Range
xv_multizones_vis_ti me	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long	-	Number of segments in the output lists.	-	> 0
bgn_orbit	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_second	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsec	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_second	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsec	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
nb_zon_in_segment	long*	all	Number of zones where the segment has visibility. Dummy if extra_info_flag=0 (false).	-	>0
zones_in_segment	long**	all	Index of the zone_id input array where the segment has visibility. Dummy if extra_info_flag=0 (false).	-	≥0





EE-MA-DMS-GS-0006 24/05/19 3.7.6 125

Table 30: Output parameters of xv_multizones_vis_time

c name	c type	Arr ay Ele- men t	Description	Unit	Range
coverage	long**	all	Coverage of the segment in each of the zones. Dummy if extra_info_flag=0 (false).		complete See table 2
ierr	long*		Error status flags		

Note 1: The zones_in_segment and coverage arrays are returned as a two-dimensional table where the first index is related to the output visibility segment, and the second one goes all over the zones that compose that segment.

Note 2 (Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_multizones_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 126

7.8.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_multizones_vis_time CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_multizones_vis_time** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_MULTIZONES _VIS_TIME_MEMORY _ERR	0
ERR	Error getting visibility segments for zone %ld	Computation not performed	XV_CFI_MULTIZONES _VIS_TIME_COMPUT E_SEGMENTS_ERR	1
ERR	Error getting absolute orbit from relative orbit	Computation not performed	XV_CFI_MULTIZONES _VIS_TIME_ABS_TO_ REL_ORBIT_ERR	2
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_MULTIZONES _VIS_TIME_ABS_TO_ REL_VECTOR_ERR	3
ERR	Error while merging overlapped segments	Computation not performed	XV_CFI_MULTIZONES _VIS_TIME_OVERLAP _ERR	4





EE-MA-DMS-GS-0006 24/05/19 3.7.6 127

7.8.6 Runtime performances

The following runtime performance has been measured over an interval of 10 orbits.

Table 31: Runtime performances of xv_multizones_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
2596	1180	1224	405





EE-MA-DMS-GS-0006 24/05/19 3.7.6 128

7.9 xv_multistations_vis_time

7.9.1 Overview

The xv_multistations_vis_time function computes visibility segments of several ground stations, i.e. the orbital segments for which the satellite is visible from a ground station located at the surface of the Earth.

The visibility segments are obtained by calling to **xv_station_vis_time**. Those segments are merged and ordered by start time. Moreover, **xv_multistations_vis_time** provides a table containing the stations from which the satellite is visible in each segment.

In addition, **xv_multistations_vis_time** computes the time of zero-doppler (i.e. the time at which the range-rate to the station is zero) per station.

The time intervals used by **xv_multistations_vis_time** are expressed in absolute orbit numbers or in relative orbit and cycle numbers. This is valid for both:

- input parameter "Orbit Range": first and last orbit to be considered. In case of using relative orbits, the corresponding cycle number should be used, otherwise, this the cycle number will be a dummy parameter.
- output parameter "Stations Visibility Segments": time segments with time expressed as {absolute orbit number (or relative orbit number and cycle number), number of seconds since ascending node, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

xv_multistations_vis_time requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv gen swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_multistations_vis_time** generates the swath points for a number of orbits given by the user.
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. It is produced off-line by the EXPLORER_VISIBILITY library (xv gen swath function).
- the Station Database File, describing the location and the physical mask of each ground station.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER ORBIT (xo time to orbit and xo orbit to time functions).





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

129

NOTE: Since the orbit swath template file is generated from a reference orbit, it is not recommended to use **xv_multistation_vis_time** for a range of orbits that includes an orbital change (e.g. change in the repeat cycle or cycle length). If this would happen, **xv_multistation_vis_time** automatically will ignore those orbits that do not correspond with the template file (i.e. no visibility segments will be generated for those or-





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

130

7.9.2 Calling sequence xv_multistations_vis_time

For C programs, the call to **xv_multistations_vis_time** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                   orbit id = \{NULL\};
      xo orbit id
      long
               swath flag, orbit type,
               start orbit, start cycle,
               stop_orbit, stop_cycle,
               num stations, *mask,
               extra info flag,
               number_segments,
               *bqn orbit, *bqn secs, *bqn microsecs, *bqn cycle,
               *end orbit, *end secs, *end microsecs, *end cycle,
               **zdop orbit, **zdop secs, **zdop microsecs, **zdop cycle,
               *nb_stat_in_segment, **stat in segment,
               ierr[XV NUM ERR MULTISTATIONS VIS TIME], status;
               *aos_elevation, *los elevation,
      double
               min duration;
      char
               *swath file, *station db file,
               **station id;
      status = xv multistations vis time(
                    &orbit id, &orbit type,
                    &start orbit, &start cycle,
                    &stop orbit, &stop cycle,
                    &swath flag, swath_file, &num_stations,
                    station db file, station id,
                    aos elevation, los elevation, mask,
                    &min duration,
                    &extra info flag,
                    &number segments,
                    &bgn orbit, &bgn second, &bgn microsec, &bgn cycle,
                    &end_orbit, &end_second, &end_microsec, &end_cycle,
                    &zdop orbit, &zdop second, &zdop microsec, &zdop cycle,
                    &nb stat in segment, &stat in segment,
                    ierr);
      /* Or, using the run id */
      long run id;
      status = xv multistations vis time run(
                    &run_id, &orbit_type,
                    &start orbit, &start cycle,
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 131

```
&stop_orbit, &stop_cycle, &swath flag, swath file, &num stations, station db file, station id, aos_elevation, los_elevation, mask, &min_duration, &extra_info_flag, &number_segments, &bgn_orbit, &bgn_second, &bgn_microsec, &bgn_cycle, &end_orbit, &end_second, &end_microsec, &end_cycle, &zdop_orbit, &zdop_second, &zdop_microsec, &zdop_cycle, &nb_stat_in_segment, &stat_in_segment, ierr);
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

3. / .6 132

7.9.3 Input parameters xv_multistations_vis_time

Table 32: Input parameters of xv_multistations_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
start_orbit	long	-	First orbit, segment filter Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
stop_orbit	long	-	Last orbit, segment filter. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf





EE-MA-DMS-GS-0006 24/05/19 3.7.6 133

Table 32: Input parameters of xv_multistations_vis_time

c name	c type	Array Ele- ment	Description	Units	Range
swath_flag	long*	-	Define the use of the swath file: • 0 = (XV_STF) if the swath file is a swath template file. • > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits	-	XV_STF = 0 XV_SDF = 1 > 0
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		
num_stations	long	-	Number of stations		>0
station_db_file	char *	-	File name of the station-database file.		
station_id	char**	-	Identification name for n-th station (0 <n<num_stations).< td=""><td></td><td>8 characters exactly</td></n<num_stations).<>		8 characters exactly
aos_elevation	double*	all	Minimum elevation to consider at AOS for each station(i.e. before considering start of visibility).	deg	≥ 0.0
los_elevation	double*	all	Maximum elevation to consider at LOS for each station(i.e. before considering end of visibility).	deg	≥ 0.0 ≤ aos_elevation
mask	long*	all	mask used to define visibility = 0 combine AOS/LOS elevations and physical mask (nominal mode) = 1 consider only AOS/LOS elevations = 2 consider only physical mask		≥ 0
min_duration	double	-	Minimum duration for segments. Only segments with a duration longer than min_duration will be given on output.	S	≥ 0
extra_info_flag	long	-	If value set to false (= 0), the zero doppler arrays and stations arrays are not computed. Saves computation time.		0(false), 1 (true)





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 134

7.9.4 Output parameters xv_multistations_vis_time

Table 33: Output parameters of xv_multistations_vis_time

c name	c type	Arr ay El.	Description	Un it	Range
xv_multistations_vis_ time	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
number_segments	long	-	Number of segments in the output lists.	-	> 0
bgn_orbit	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_second	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsec	long*	all	Array of micro seconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_second	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsec	long*	all	Array of micro seconds within a second for the end of the segments	-	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 135

Table 33: Output parameters of xv_multistations_vis_time

c name	c type	Arr ay El.	Description	Un it	Range
zdop_orbit	long**	all	Orbit number, time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment) Dummy if extra_info_flag = false.		> 0
zdop_second	long**	all	Seconds since ascending node, time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment) Dummy if extra_info_flag = false.	S	>= 0 < orbital period
zdop_microsec	long**	all	Micro seconds within second time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment) Dummy if extra_info_flag = false.	μs	0 =< =< 999999
zdop_cycle	long**	all	Cycle number, time of zero doppler for each segment and zone (-1 if no zero doppler within corresponding visibility segment) Dummy if extra_info_flag = false.		>0 NULL when using absolute orbits
nb_stat_in_segment	long*	all	nb_stat_in_segment [i] =Number of stations from which the satellite is visible during the i-th segment of time. Dummy if extra_info_flag = false.	-	>0
stat_in_segment	long**	all	stat_in_segment [i] = array of indexes of the stations from which the satellite is visible during the i-th segment. Dummy if extra_info_flag = false.	-	≥0
ierr	long*		Error status flags		

Note 1: The stat_in_segment and zdop_xxx arrays are returned as a two-dimensional table where the first index is related to the output visibility segment, and the second one goes all over the zones that compose that segment.





Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 136

Note 2 (Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_multistations_vis_time** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 137

7.9.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_multistations_vis_time CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_multistations_vis_time** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_MEM ORY_ERR	0
ERR	Error getting visibility segments for station %ld	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_COM PUTE_SEGMENTS_ER R	1
ERR	Error getting absolute orbit from relative orbit	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_ABS_ TO_REL_ORBIT_ERR	2
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_ABS_ TO_REL_VECTOR_ER R	3
ERR	Error while merging overlapped segments.	Computation not performed	XV_CFI_MULTISTATI ONS_VIS_TIME_OVER LAP_ERR	4





EE-MA-DMS-GS-0006 24/05/19 3.7.6 138

7.9.6 Runtime performances

The following runtime performance has been measured over an interval of 10 orbits.

Table 34: Runtime performances of xv_multistations_vis_time function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
5721	2439	2449	405





EE-MA-DMS-GS-0006 24/05/19 3.7.6 139

7.10 xv_orbit_extra

7.10.1 Overview

The xv_orbit_extra function computes for an input orbit, the times for:

- an input set of Sun zenit angles are reached (both up and down times are computed)
- Sun ocultations by the Earth.
- Sun ocultations by the Moon.

xv_orbit_extra needs as input the orbital parameters returned by xo_orbit_info (its output array result_vector). So, the natural use to call to xv_orbit_extra will be:

- Initialise time references: calling to xl time ref init of xl time ref init file.
- Orbital initialisation by calling one of the functions: **xo_orbit_init_file**, **xo_orbit_init_def** or **xo_orbit_cart_init**.
- Call to **xo_orbit_info** to get the result_vector containing the orbital parameters of the orbit.
- Call to xv_orbit_extra with the same orbit than in the call to the orbit_info function.

The input orbit must be an absolute orbit.

Users who need to use processing times must make use of the conversion routines provided in EXPLORER ORBIT (xo time to orbit and xo orbit to time functions).





Code: EE-M Date: Issue:

Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 140

7.10.2 Calling sequence xv_orbit_extra

For C programs, the call to **xv_orbit_extra** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                   orbit id = \{NULL\};
      xo orbit id
      long
               orbit,
               num sza,
               ierr[XV_NUM_ERR_ORBIT_EXTRA];
      double
               orbit info vector [XO ORBIT INFO EXTRA NUM ELEMENTS], *sza,
               *sza up, *sza down,
               eclipse_entry, eclipse_exit,
               sun moon entry, sun moon exit;
      status= xv_orbit_extra (&orbit_id, &orbit, orbit_info_vector,
                             &num sza, sza,
                             &sza up, &sza down,
                             &eclipse entry, &eclipse exit,
                             &sun moon entry, &sun moon exit,
                             ierr);
      /* Or, using the run id */
      long run id;
      status= xv_orbit_extra_run (&run id, &orbit, orbit info vector,
                             &num sza, sza,
                             &sza up, &sza down,
                             &eclipse entry, &eclipse exit,
                             &sun moon entry, &sun moon exit,
                             ierr);
}
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 141

7.10.3 Input parameters xv_orbit_extra

Table 35: Input parameters of xv_orbit_extra

c name	c type	Array Ele- ment	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit	long	-	absolute orbit number		≥ start osf
		[0]	repeat_cycle	days	>0
		[1]	cycle_length	orbits	>0
		[2]	MLST drift		s/day
		[3]	MLST	deg	> 0 <360
		[4]	phasing	deg	> 0 <360
orbit_info_vector [XO_ORBIT_IN FO_EXTRA_NU M_ELEMENTS]	double	[5]	UTC time at ascending node	days (processing format)	
W_BBEWEI(15]		[6-8]	position at ANX	m	
		[9-11]	velocity at ANX	m/s	
		[12-17]	mean keplerian elements at ANX		
		[18-23]	osculating keplerian elements at ANX		
		[24]	Nodal period	S	
num_sza	long	-	Number of Sun Zenit angles in the sza array	-	>0
sza	double*	all	list of Sun Zenit angles to compute	deg	≥ 0 ≤ 180





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 142

7.10.4 Output parameters xv_orbit_extra

Table 36: Output parameters of xv_orbi_extra

c name	c type	Arr ay Ele- men t	Description	Un it	Range
xv_orbit_extra	long	-	Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
sza_up	double	all	Seconds since ANX of Sun Zenith Angles when SZA is increasing with time.	S	≥ 0 \leq orb. period
sza_down	double	all	Seconds since ANX of Sun Zenith Angles when SZA is decreasing with time.	S	≥ 0 \leq orb. period
eclipse_entry	double	-	Seconds since ANX of eclipse entry. Note that the value is provided within the input orbit, so that the eclipse_exit will be less than the eclipse_entry if the ANX is in eclipse.	S	≥ 0 ≤ orbital period -1 if there is not eclipse
eclipse_exit	double	-	Seconds since ANX of eclipse exit. Note that the value is provided within the input orbit, so that the eclipse_exit will be less than the eclipse_entry if the ANX is in eclipse.	S	≥ 0 ≤ orbital period -1 if there is not eclipse
sun_moon_entry	double	-	Seconds since ANX of Sun Occultation by Moon entry.	S	<-1 if no occultation is found ≥ 0 ≤ orbital period
sun_moon_exit	double	-	Seconds since ANX of Sun Occultation by Moon exit	S	<-1 if no occultation is found ≥ 0 ≤ orbital period
ierr	long*		Error status flags		

Note (Memory Management): Note that the sza_up and sza_down arrays are pointers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_orbit_extra** function. So the user





Code: EE-M Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 143

will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 144

7.10.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_orbit_extra CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_orbit_extra** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Wrong input orbit Id.	Computation not performed	XV_CFI_ORBIT_EXTR A_ORBIT_STATUS_ER R	0
ERR	Error allocating memory for SZA entry/exit times	Computation not performed	XV_CFI_ORBIT_EXTR A_MEM_ERR	1
ERR	Error computing SZA entry/exit times	Computation not performed	XV_CFI_ECLIPSE_XL_ EF_TO_QEF_ERR	2
ERR	Error computing eclipse entry/exit times	Computation not performed	XV_CFI_ORBIT_EXTR A_ECLIPSE_ERR	3
ERR	Error computing Sun occultation by Moon.	Computation not performed	XV_CFI_ORBIT_EXTR A_SUN_OCC_BY_MO ON_ERR	4

7.10.6 Runtime performances

The following runtime performance has been measured.

Table 37: Runtime performances of xv_orbit_extra function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.	
[ms]	[ms]	[ms]	[ms]	
324	109	166	30	





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 145

7.11 xv_gps_vis_time

TBW






EE-MA-DMS-GS-0006 24/05/19 3.7.6 146

7.12 xv_time_segments_not

7.12.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments not function computes the compliment of a list of orbital segments (see Figure 13)

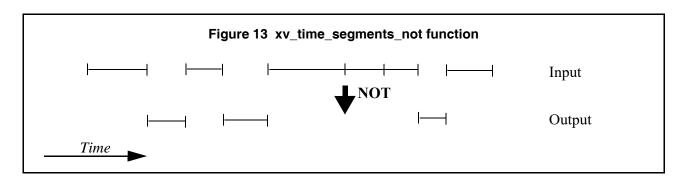

Note that the intervals from the first orbit to the first segment and from the last segment to the end of mission are not returned.

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_not** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of micro seconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv time segments not requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

147

7.12.2 Calling sequence xv_time_segments_not

For C programs, the call to **xv_time_segments_not** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                     orbit id = {NULL};
      xo orbit id
      long
               orbit type, order switch,
               num segments in,
               *bgn_orbit_in, *bgn_secs_in,
               *bgn microsecs in, *bgn cycle in,
               *end orbit in, *end secs in,
               *end_microsecs_in, *end_cycle_in,
               num segments out,
               *bgn orbit out, *bgn secs out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR NOT], status;
      status = xv_time_segments_not(
                        &orbit id,
                        &orbit type, &order switch,
                        &number segments in,
                        bgn_orbit_in, bgn_secs_in,
                        bgn microsecs in, bgn cycle in,
                        end orbit in, end secs in,
                        end microsecs in, end cycle in,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end orbit out, &end secs out,
                        &end microsecs out, &end cycle out,
                        ierr);
      /* Or, using the run_id */
      long run id;
      status = xv time segments not run(
                        &run id,
                        &orbit type, &order switch,
                        &number segments in,
                        bgn orbit in, bgn secs in,
                        bgn microsecs in, bgn cycle in,
                        end_orbit_in, end_secs_in,
                        end microsecs in, end cycle in,
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 148

```
&num_segments_out,
&bgn_orbit_out, &bgn_secs_out,
&bgn_microsecs_out, &bgn_cycle_out,
&end_orbit_out, &end_secs_out,
&end_microsecs_out, &end_cycle_out,
ierr);
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 149

7.12.3 Input parameters xv_time_segments_not

Table 38: Input parameters of xv_time_segments_not

c name	c type	Arr ay Ele- men t	Description	Unit s	Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see table 2)
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit_in	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_in	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_in	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle_in	long*	all	Array of cycle numbers for the beggining of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_in	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_in	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_in	long*	all	Array of seconds within a second for the end of the segments	-	>0 <999999





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 150

Table 38: Input parameters of xv_time_segments_not

c name	c type	Arr ay Ele- men t	Description	Unit s	Range
end_cycle_in	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 151

7.12.4 Output parameters xv_time_segments_not

Table 39: Output parameters of xv_time_segments_not

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_not	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 < 999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 < 999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_not** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 152

7.12.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_not CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_not** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS_ NOT_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ NOT_REL_TO_ABS_ORBIT _ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ NOT_ABS_TO_REL_ORBIT _ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS_ NOT_SORTING_ERR	3





EE-MA-DMS-GS-0006 24/05/19 3.7.6 153

7.12.6 Runtime performances

The following runtime performance has been measured over 34 time segments.

Table 40: Runtime performances of xv_time_segments_not function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
0.03	0.01	0.01	0.002






EE-MA-DMS-GS-0006 24/05/19 3.7.6 154

7.13 xv_time_segments_or

7.13.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv_time_segments_or function computes the union of a list of orbital segments (see Figure 14)

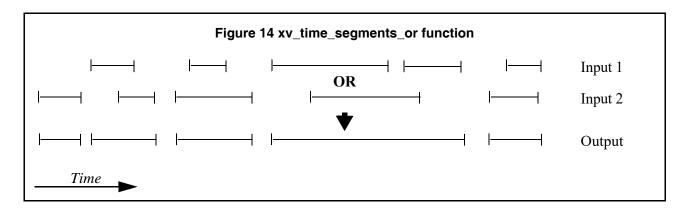

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_or** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv_time_segments_or requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 155

7.13.2 Calling sequence xv_time_segments_or

For C programs, the call to **xv_time_segments_or** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                     orbit_id = {NULL};
      xo orbit id
      long
               orbit type, order switch,
               num segments 1,
               *bgn_orbit_1, *bgn_secs_1,
               *bgn microsecs 1, *bgn cycle 1,
               *end orbit 1, *end secs 1,
               *end_microsecs_1, *end_cycle_1,
               num segments 2,
               *bgn orbit 2, *bgn secs 2,
               *bgn microsecs 2, *bgn cycle 2,
               *end orbit 2, *end secs 2,
               *end microsecs 2, *end cycle 2,
               num segments out,
               *bgn orbit out, *bgn_secs_out,
               *bgn_microsecs_out, *bgn_cycle_out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR OR], status;
      status = xv_time_segments_or (
                        &orbit id,
                         &orbit_type, &order_switch,
                         &number segments 1,
                         bgn orbit 1, bgn second 1,
                        bgn microsec 1, bgn cycle 1,
                         end orbit 1, end second 1,
                        end microsec 1, end cycle 1,
                         &number_segments_2,
                         bgn orbit 2, bgn second 2,
                        bgn microsec 2, bgn cycle 2,
                        end_orbit_2, end_second_2,
                        end microsec 2, end cycle 2,
                         &num segments out,
                         &bgn_orbit_out, &bgn_secs_out,
                        &bgn microsecs out, &bgn cycle out,
                         &end orbit out, &end secs out,
                        &end microsecs out, &end cycle out,
                        ierr);
```



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 156

```
/* Or, using the run id */
long run id;
status = xv time segments or run (
                 &run_id,
                  &orbit type, &order switch,
                  &number segments 1,
                  bgn_orbit_1, bgn_second_1,
                 bgn microsec 1, bgn cycle 1,
                  end orbit 1, end second 1,
                 end_microsec_1, end_cycle_1,
                  &number segments 2,
                  bgn orbit 2, bgn second 2,
                 bgn microsec 2, bgn cycle 2,
                 end orbit 2, end second 2,
                 end microsec 2, end cycle 2,
                  &num_segments_out,
                  &bgn orbit out, &bgn secs out,
                 &bgn microsecs out, &bgn cycle out,
                  &end_orbit_out, &end_secs_out,
                  &end microsecs out, &end cycle out,
                  ierr);
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 157

7.13.3 Input parameters xv_time_segments_or

Table 41: Input parameters of xv_time_segments_or

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see table 2)
num_segments_1	long	-	Number of segments in the input list 1.	-	>0
bgn_orbit_1	long*	all	Array of orbit numbers for the beggining of the segments in list 1	-	>0
bgn_secs_1	long*	all	Array of seconds elapsed since ANX for the beggining of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_1	long*	all	Array of microseconds within a second for the beggining of the segments in list 1	-	>0 <999999
bgn_cycle_1	long*	all	Array of cycle numbers for the beggining of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_1	long*	all	Array of orbit numbers for the end of the segments in list 1	-	>0
end_secs_1	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 158

Table 41: Input parameters of xv_time_segments_or

c name	c type	Arr ay Ele- men t	Description	Units	Range
end_microsecs_1	long*	all	Array of microseconds within a second for the end of the segments in list 1	-	>0 <999999
end_cycle_1	long*	all	Array of cycle numbers for the end of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
num_segments_2	long	-	Number of segments in the input list 2.	-	>0
bgn_orbit_2	long*	all	Array of orbit numbers for the beggining of the segments in list 2	-	>0
bgn_secs_2	long*	all	Array of seconds elapsed since ANX for the beggining of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_2	long*	all	Array of microseconds within a second for the beggining of the segments in list 2	-	>0 <999999
bgn_cycle_2	long*	all	Array of cycle numbers for the beggining of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_2	long*	all	Array of orbit numbers for the end of the segments in list 2	-	>0
end_secs_2	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_2	long*	all	Array of microseconds within a second for the end of the segments in list 2	-	>0 <999999
end_cycle_2	long*	all	Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 159

7.13.4 Output parameters xv_time_segments_or

Table 42: Output parameters of xv_time_segments_or

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_or	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_or** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

160





EE-MA-DMS-GS-0006 24/05/19 3.7.6 161

7.13.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_or CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER VISIBILITY software library xv get msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_or** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS_ OR_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ OR_REL_TO_ABS_ORBIT_ ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ OR_ABS_TO_REL_ORBIT_ ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS_ OR_SORTING_ERR	3





EE-MA-DMS-GS-0006 24/05/19 3.7.6 162

7.13.6 Runtime performances

The following runtime performance has been measured over 34 time segments.

Table 43: Runtime performances of xv_time_segments_or function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
0.067	0.024	0.027	0.0045






EE-MA-DMS-GS-0006 24/05/19 3.7.6 163

7.14 xv_time_segments_and

7.14.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The **xv_time_segments_and** function computes the intersection of a list of orbital segments (see Figure 15)

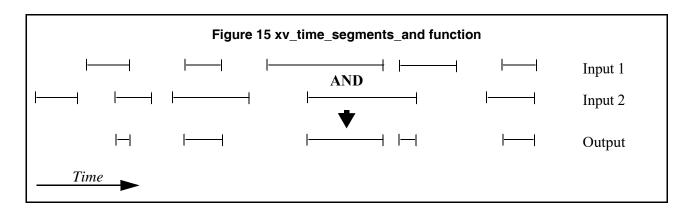

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_and** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv_time_segments_and requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

164

7.14.2 Calling sequence xv_time_segments_and

For C programs, the call to **xv_time_segments_and** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                     orbit_id = {NULL};
      xo orbit id
      long
               orbit type, order switch,
               num segments 1,
               *bgn_orbit_1, *bgn_secs_1,
               *bgn microsecs 1, *bgn cycle 1,
               *end orbit 1, *end secs 1,
               *end_microsecs_1, *end_cycle_1,
               num segments 2,
               *bgn orbit 2, *bgn secs 2,
               *bgn microsecs 2, *bgn cycle 2,
               *end orbit 2, *end secs 2,
               *end microsecs 2, *end cycle 2,
               num segments out,
               *bgn orbit out, *bgn_secs_out,
               *bgn_microsecs_out, *bgn_cycle_out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR AND], status;
      status = xv_time_segments_and (
                        &orbit id,
                         &orbit_type, &order_switch,
                         &number segments 1,
                         bgn orbit 1, bgn second 1,
                        bgn microsec 1, bgn cycle 1,
                         end orbit 1, end second 1,
                        end microsec 1, end cycle 1,
                         &number_segments_2,
                         bgn orbit 2, bgn second 2,
                        bgn microsec 2, bgn cycle 2,
                        end_orbit_2, end_second_2,
                        end_microsec_2, end cycle 2,
                         &num segments out,
                         &bgn_orbit_out, &bgn_secs_out,
                        &bgn microsecs out, &bgn cycle out,
                         &end orbit out, &end secs out,
                        &end microsecs out, &end cycle out,
                        ierr);
```



}



Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 165

```
/* Or, using the run id */
long run id;
status = xv time segments and run (
                 &run_id,
                  &orbit type, &order switch,
                  &number segments 1,
                  bgn_orbit_1, bgn_second_1,
                 bgn microsec 1, bgn cycle 1,
                  end orbit 1, end second 1,
                 end_microsec_1, end_cycle_1,
                  &number segments 2,
                  bgn orbit 2, bgn second 2,
                 bgn microsec 2, bgn cycle 2,
                 end orbit 2, end second 2,
                 end microsec 2, end cycle 2,
                  &num_segments_out,
                  &bgn orbit out, &bgn secs out,
                 &bgn microsecs out, &bgn cycle out,
                  &end_orbit_out, &end_secs_out,
                  &end microsecs out, &end cycle out,
                  ierr);
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 166

7.14.3 Input parameters xv_time_segments_and

Table 44: Input parameters of xv_time_segments_and

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see table 2)
num_segments_1	long	-	Number of segments in the input list 1.	-	>0
bgn_orbit_1	long*	all	Array of orbit numbers for the beggining of the segments in list 1	-	>0
bgn_secs_1	long*	all	Array of seconds elapsed since ANX for the beggining of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_1	long*	all	Array of microseconds within a second for the beggining of the segments in list 1	-	>0 <999999
bgn_cycle_1	long*	all	Array of cycle numbers for the beggining of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_1	long*	all	Array of orbit numbers for the end of the segments in list 1	-	>0
end_secs_1	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 1	-	>0 <nodal period<="" td=""></nodal>





EE-MA-DMS-GS-0006 24/05/19 3.7.6 167

Table 44: Input parameters of xv_time_segments_and

c name	c type	Arr ay Ele- men t	Description	Units	Range
end_microsecs_1	long*	all	Array of microseconds within a second for the end of the segments in list 1	-	>0 <999999
end_cycle_1	long*	all	Array of cycle numbers for the end of the segments in list 1. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
num_segments_2	long	-	Number of segments in the input list 2.	-	>0
bgn_orbit_2	long*	all	Array of orbit numbers for the beggining of the segments in list 2	-	>0
bgn_secs_2	long*	all	Array of seconds elapsed since ANX for the beggining of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs_2	long*	all	Array of microseconds within a second for the beggining of the segments in list 2	-	>0 <999999
bgn_cycle_2	long*	all	Array of cycle numbers for the beggining of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit_2	long*	all	Array of orbit numbers for the end of the segments in list 2	-	>0
end_secs_2	long*	all	Array of seconds elapsed since ANX for the end of the segments in list 2	-	>0 <nodal period<="" td=""></nodal>
end_microsecs_2	long*	all	Array of microseconds within a second for the end of the segments in list 2	-	>0 <999999
end_cycle_2	long*	all	Array of cycle numbers for the end of the segments in list 2. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





Code: EE-M Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 168





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 169

7.14.4 Output parameters xv_time_segments_and

Table 45: Output parameters of xv_time_segments_and

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_and	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_and** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 170

7.14.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_and CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_and** CFI function by calling the function of the EXPLORER_VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS_ AND_MEMORY_ERR	
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ AND_REL_TO_ABS_ORBIT _ERR	
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ AND_ABS_TO_REL_ORBIT _ERR	
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS_ AND_SORTING_ERR	





EE-MA-DMS-GS-0006 24/05/19 3.7.6 171

7.14.6 Runtime performances

The following runtime performance has been measured over 34 time segments.

Table 46: Runtime performances of xv_time_segments_and function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
0.11	0.041	0.043	0.0068





EE-MA-DMS-GS-0006 24/05/19 3.7.6 172

7.15 xv_time_segments_sort

7.15.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv time segments sort function sorts a list of orbital segments following two different criteria:

- Absolute orbits: the segments are sorted by their start time
- Relative orbits

The time intervals used by **xv_time_segments_sort** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Note that the sort criteria does not have any relation with the chosen orbit representation. The following example clarifies this:

Input orbits: 6, 8, 4, 5, 9, 3 (absolute)

Let's suppose that the cycle length is 4 orbits. Then the relative orbits are:

input orbits: 2, 4, 4, 1, 1, 3 (relative)

When ordering this array, we have the following possibilities(table 47) depending on the orbit representation and the sort criteria chosen:

Table 47: xv_time_segments_sort function

Input	Sort Criteria	Output
absolute orbits	absolute orbits	absolute orbits 3, 4, 5, 6, 8, 9
6, 8, 4, 5, 9, 3	relative orbits	absolute orbits 5, 9, 6, 3, 4, 8
relative orbits	absolute orbits	relative orbits 3, 4, 1, 2, 4, 1
2, 4, 4, 1, 1, 3	relative orbits	relative orbits 1, 1, 2, 3, 4, 4

The xv time segments sort requires access the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.



}



 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 173

7.15.2 Calling sequence xv_time_segments_sort

For C programs, the call to **xv_time_segments_sort** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id
                     orbit_id = {NULL};
      long
               orbit type, sort criteria,
               num segments,
               *bgn_orbit, *bgn_secs,
               *bgn microsecs, *bgn cycle,
               *end orbit, *end secs,
               *end_microsecs, *end_cycle,
               ierr, status;
      status = xv time segments sort (
                        &orbit id,
                         &orbit type, &sort criteria,
                         &number segments,
                         bgn orbit, bgn second,
                        bgn microsec, bgn cycle,
                         end orbit, end second,
                        end microsec, end cycle,
                        ierr);
      /* Or, using the run_id */
      long run id;
      status = xv time segments sort run (
                        &run id,
                         &orbit type, &sort criteria,
                         &number segments,
                         bgn orbit, bgn second,
                        bgn_microsec, bgn_cycle,
                         end_orbit, end_second,
                        end microsec, end cycle,
                        ierr);
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 174

7.15.3 Input parameters xv_time_segments_sort

Table 48: Input parameters of xv_time_segments_sort

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
sort_criteria	long	-	sorting criteria to be used: absolute or relative orbits	-	Complete (see table 2)
num_segments	long	-	Number of segments in the input.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beggining of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments.	-	>0 <999999





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: 3.7.6 Page:

175

Table 48: Input parameters of xv_time_segments_sort

c name	c type	Arr ay Ele- men t	Description	Units	Range
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





EE-MA-DMS-GS-0006 24/05/19 3.7.6 176

7.15.4 Output parameters xv_time_segments_sort

Table 49: Output parameters of xv_time_segments_sort

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_and	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
ierr[10]	long		Error status flags		





EE-MA-DMS-GS-0006 24/05/19 3.7.6 177

7.15.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_sort CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_sort** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS_ SORT_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ SORT_CHANGING_ORBIT_ ERR	1





EE-MA-DMS-GS-0006 24/05/19 3.7.6 178

7.15.6 Runtime performances

Runtime is smaller than CPU clock and it is not possible to perfom loops for measuring it.






EE-MA-DMS-GS-0006 24/05/19 3.7.6 179

7.16 xv_time_segments_merge

7.16.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv_time_segments_merge function merges all the overlapped segments within a list (see Figure 16)

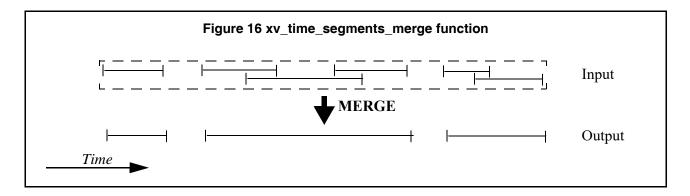

The input segments list need to be sorted according to the start time of the segments. If this list is not sorted, it should be indicated in the function interface with the corresponding parameter (see below). In this case the input list will be modified accordingly.

The time intervals used by **xv_time_segments_merge** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits. Moreover, the segments will be ordered chronologically.

The xv time segments merge requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

180

7.16.2 Calling sequence xv_time_segments_merge

For C programs, the call to **xv_time_segments_merge** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
                     orbit id = {NULL};
      xo orbit id
      long
               orbit type, order switch,
               num segments,
               *bgn_orbit, *bgn_secs,
               *bgn microsecs, *bgn cycle,
               *end orbit, *end secs,
               *end microsecs, *end cycle,
               num segments out,
               *bgn orbit out, *bgn secs out,
               *bgn microsecs out, *bgn cycle out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR MERGE], status;
      status = xv_time_segments_merge(
                        &orbit id,
                        &orbit type, &order switch,
                        &number_segments,
                        bgn_orbit, bgn_secs,
                        bgn microsecs, bgn cycle,
                        end orbit, end secs,
                        end microsecs, end_cycle,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end orbit out, &end secs out,
                        &end microsecs out, &end cycle out,
                        ierr);
      /* Or, using the run_id */
      long run id;
      status = xv time segments merge run(
                        &run id,
                        &orbit type, &order switch,
                        &number segments,
                        bgn_orbit, bgn_secs,
                        bgn microsecs, bgn cycle,
                        end orbit, end secs,
                        end_microsecs, end_cycle,
                        &num segments out,
```





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 181

&bgn_orbit_out, &bgn_secs_out,
&bgn_microsecs_out, &bgn_cycle_out,
&end_orbit_out, &end_secs_out,
&end_microsecs_out, &end_cycle_out,
ierr);

}





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 182

7.16.3 Input parameters xv_time_segments_merge

Table 50: Input parameters of xv_time_segments_merge

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
order_switch	long	-	Indicates if the input list is sorted by start times. If input segments are already sorted, the flag should be set to XV_TIME_ORDER to save computation time.	-	Complete (see table 2)
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beggining of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

183

Table 50: Input parameters of xv_time_segments_merge

c name	c type	Arr ay Ele- men t	Description	Units	Range
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 184

7.16.4 Output parameters xv_time_segments_merge

Table 51: Output parameters of xv_time_segments_merge

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_merge	long		Function status flag, = 0 No error > 0Warnings, results generated < 0Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_merge** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 185

7.16.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_merge CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_merge** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory.	Computation not performed	XV_CFI_TIME_SEGMENTS_ MERGE_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ MERGE_REL_TO_ABS_OR BIT_ERR	1
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ MERGE_ABS_TO_REL_OR BIT_ERR	2
ERR	Error sorting input list.	Computation not performed	XV_CFI_TIME_SEGMENTS_ MERGE_SORTING_ERR	3





EE-MA-DMS-GS-0006 24/05/19 3.7.6 186

7.16.6 Runtime performances

The following runtime performance has been measured over 34 time segments.

Table 52: Runtime performances of xv_time_segments_merge function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
0.054	0.026	0.017	0.006





EE-MA-DMS-GS-0006 24/05/19 3.7.6 187

7.17 xv_time_segments_delta

7.17.1 Overview

An orbital segment is a time interval along the orbit, defined by start and stop times expressed as an orbit number and the seconds elapsed since the ascending node crossing.

The xv_time_segments_delta function makes all the segments within a list, longer or shorter. After increasing/decreasing the longitude of the segments, these are sorted and merged to avoid possible overlapping. Therefore, at the end the list is sorted and without overlapped segments.

The time intervals used by **xv_time_segments_delta** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.

The xv time segments delta requires access to the following files to produce its results:

• the Orbit Scenario File: only if the orbits are expressed in relative numbers.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

188

7.17.2 Calling sequence xv_time_segments_delta

For C programs, the call to xv_time_segments_delta is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id
                   orbit id = \{NULL\};
      long
               orbit type,
               num segments,
               *bgn orbit, *bgn secs,
               *bgn_microsecs, *bgn_cycle,
               *end orbit, *end secs,
               *end microsecs, *end cycle,
               num_segments_out,
               *bqn orbit out, *bqn secs out,
               *bgn_microsecs_out, *bgn_cycle_out,
               *end orbit out, *end secs out,
               *end microsecs out, *end cycle out,
               ierr[XV NUM ERR DELTA], status;
       double entry offset, exit offset;
      status = xv time segments delta(
                        &orbit id,
                        &orbit type,
                        &entry_offset, &exit_offset,
                        &number segments,
                        bgn orbit, bgn secs,
                        bgn microsecs, bgn cycle,
                        end orbit, end secs,
                        end microsecs, end cycle,
                        &num segments out,
                        &bgn orbit out, &bgn secs out,
                        &bgn microsecs out, &bgn cycle out,
                        &end orbit out, &end secs out,
                        &end_microsecs_out, &end_cycle_out,
                        ierr);
      /* Or, using the run_id */
      long run id;
      status = xv time segments delta run(
                        &run id,
                        &orbit type,
                        &entry_offset, &exit_offset,
                        &number segments,
                        bgn orbit, bgn secs,
                        bgn_microsecs, bgn_cycle,
                        end orbit, end secs,
```





EE-MA-DMS-GS-0006 24/05/19 3.7.6 189

end microsecs, end cycle, &num_segments_out, &bgn_orbit_out, &bgn_secs_out, &bgn_microsecs_out, &bgn_cycle_out, &end_orbit_out, &end_secs_out, &end_microsecs_out, &end_cycle_out, ierr);

}





EE-MA-DMS-GS-0006 24/05/19 3.7.6 190

7.17.3 Input parameters xv_time_segments_delta

Table 53: Input parameters of xv_time_segments_delta

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	-	Structure that contains the orbit data	-	-
orbit_type	long	-	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
entry_offset	double		Number of seconds to add/ subtract at the beggining of every segments. If entry_offset > 0, the entry_offset is added at the beggining of the segments making them shorter.	seconds	-
exit_offset	double		Number of seconds to add/ subtract at the end of every segments. If exit_offset > 0 the exit_offset is added at the end of the segments making them longer.	seconds	-
num_segments_in	long	-	Number of segments in the input list.	-	>0
bgn_orbit	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period<="" td=""></nodal>
bgn_microsecs	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long*	all	Array of cycle numbers for the beggining of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





EE-MA-DMS-GS-0006 24/05/19 3.7.6 191

Table 53: Input parameters of xv_time_segments_delta

c name	c type	Arr ay Ele- men t	Description	Units	Range
end_orbit	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period<="" td=""></nodal>
end_microsecs	long*	all	Array of microseconds within a second for the end of the segments	1	>0 <999999
end_cycle	long*	all	Array of cycle numbers for the end of the segments. When using absolute orbits, a NULL pointer can be used.	-	>0 or NULL





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 192

7.17.4 Output parameters xv_time_segments_delta

Table 54: Output parameters of xv_time_segments_delta

c name	ctype	Array Ele- ment	Description	Unit	Range
xv_time_segments_del ta	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
num_segments_out	long	-	Number of segments in the output list.	-	>0
bgn_orbit_out	long*	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs_out	long*	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs_out	long*	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle_out	long*	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit_out	long*	all	Array of orbit numbers for the end of the segments	-	>0
end_secs_out	long*	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs_out	long*	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle_out	long*	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL
ierr[10]	long		Error status flags		

<u>Memory Management:</u> Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_delta** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 193

7.17.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_delta CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_delta** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error allocating internal memory	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_MEMORY_ERR	0
ERR	Error getting absolute orbit vector from relative orbits	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_REL_TO_ABS_ERR	1
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_ABS_TO_REL_ERR	2
ERR	Error transforming from orbits to processing times.	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_ORBIT_TO_TIME_E RR	3
ERR	Error transforming from processing times to orbits.	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_TIME_TO_ORBIT_E RR	4
ERR	Error modifying time seg- ment duration	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_TIME_ADD_ERR	5
ERR	Error sorting input list	Computation not performed	XV_CFI_TIME_SEGMENTS_ DELTA_SORT_ERR	6





EE-MA-DMS-GS-0006 24/05/19 3.7.6 194

7.17.6 Runtime performances

The following runtime performance has been measured over 34 time segments.

Table 55: Runtime performances of xv_time_segments_delta function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.	
[ms]	[ms]	[ms]	[ms]	
78.1	37.9	64.4	13.3	





EE-MA-DMS-GS-0006 24/05/19 3.7.6 195

7.18 xv_time_segments_mapping

7.18.1 Overview

The function **xv_time_segments_mapping** returns groups of visibility segments of a zone within an orbit range introduced by the user. These groups, or mappings, contain a minimum number of time segments needed to cover the zone completely, and fulfil the following conditions:

- Each mapping only contains ascending or descending segments.
- The segments are ordered by the track number.
- Mappings with one segment will be returned if it covers completely the zone.
- A mapping is searched for each track with segments that only contains left/right coverage in the
 case of ascending/descending segments, and finishes with a track that only contains right/left coverage.
- Incomplete mappings are not returned. This could happen if the number of orbits is insufficient to cover the zone.

Note that different mappings could contain a subset of segments in common. For example in figure 17 there are two possible different mappings:

- mapping 1: orbits 1, 2, 3, 4.
- mapping 2: orbits 502, 2, 3, 4.

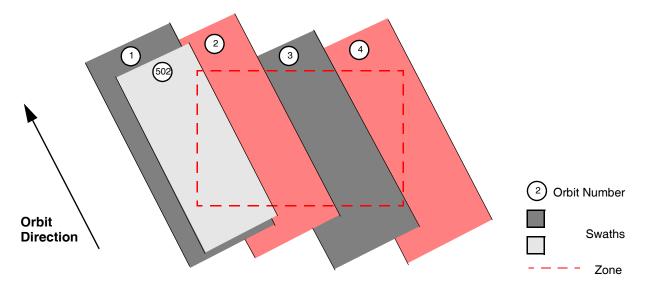


Figure 17 Different mappings with common segments

The time intervals used by **xv_time_segments_mapping** can be expressed in absolute or relative orbit numbers. This is valid for both:

- input parameter: first and last orbit to be considered. In case of using relative orbits, the corresponding cycle numbers should be used, otherwise, the cycle number will be a dummy parameter.
- output parameter: time segments with time expressed as {absolute orbit number (or relative orbit and cycle number), number of seconds since ANX, number of microseconds}

The orbit representation (absolute or relative) for the output segments will be the same as in the input orbits.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 196

The xv_time_segments_mapping requires access to several data structures and files to produce its results:

- the orbit_id (xo_orbit_id) providing the orbital data. The orbit_id can be initialized with the following data or files (see [ORBIT_SUM]):
 - data for an orbital change
 - Orbit scenario files
 - Predicted orbit files
 - Orbit Event Files
 - Restituted orbit files
 - DORIS Preliminary orbit files
 - DORIS Navigator files
- the Instrument Swath File, excluding inertial swath files, describing the area seen by the relevant instrument all along the current orbit. The Swath data can be provided by:
 - A swath template file produced off-line by the EXPLORER_VISIBILITY library (xv_gen_swath function).
 - A swath definition file, describing the swath geometry. In this case the **xv_time_segments_mapping** generates the swath points for a number of orbits given by the user.
- Zone Database File: just in case of using a zone from the data base.





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 197

7.18.2 Calling sequence xv_time_segments_mapping

For C programs, the call to **xv_time_segments_mapping** is (<u>input</u> parameters are <u>underlined</u>):

```
#include"explorer visibility.h"
      xo orbit id orbit id = {NULL};
               swath flag, orbit type,
      long
               start orbit, start cycle,
               stop orbit, stop cycle,
               zone num, projection;
               num mappings, *num segments,
               *orbit direction,
               **bqn orbit, **bqn secs,
               **bgn microsec, **bgn cycle,
               **end orbit, **end secs,
               **end microsec, **end_cycle,
               **coverage,
               ierr[XV NUM ERR MAPPING], status;
      double
              zone diam, *zone long, *zone lat;
      char
               *swath file,
               zone id[9], *zone db file;
      status = xv_time_segments_mapping(
                   &orbit id, &orbit type,
                   &start orbit, &start cycle,
                   &stop orbit, &stop cycle,
                   &swath flag, swath file,
                   &zone num, zone id, zone db file,
                   &projection, &zone diam, zone long, zone lat,
                   &num mappings, &num segments,
                   &orbit direction,
                   &bgn orbit, &bgn secs, &bgn microsec, &bgn cycle,
                   &end orbit, &end secs, &end microsec, &end cycle,
                   &coverage,ierr);
      /* Or, using the run id */
      long run id;
```



}



Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 198

status = xv_time_segments_mapping_run(
 &run id, &orbit type,
 &start orbit, &start cycle,
 &stop orbit, &stop cycle,
 &swath flag, swath file,
 &zone num, zone id, zone db file,
 &projection, &zone diam, zone long, zone lat,
 &num_mappings,&num_segments,
 &orbit_direction,
 &bgn_orbit, &bgn_secs,&bgn_microsec, &bgn_cycle,
 &end_orbit, &end_secs,&end_microsec, &end_cycle,
 &coverage,ierr);





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 199

7.18.3 Input parameters xv_time_segments_mapping

Table 56: Input parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Units	Range
orbit_id	xo_orbit _id*	1	Structure that contains the orbit data	-	-
orbit_type	long	1	Define the type of orbit representation, i.e. absolute or relative orbits in the input/output parameters	-	Complete (see table 2)
start_orbit	long	1	First orbit, segment filter Segments will be filtered as from the beggining of first orbit (within orbit range from orbit_scenario_file) First Orbit in the orbit_scenario_file will be used when: • Absolute orbit is set to zero. • Relative orbit and cycle number set to zero.	absolute or relative orbit number	= 0 or: • absolute orbits ≥start_osf • relative orbits ≤ repeat cycle
start_cycle	long	-	Cycle number corresponding to the start_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf





Code: EE-MA
Date:
Issue:
Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 200

Table 56: Input parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Units	Range
stop_orbit	long		Last orbit, segment filter. The final orbit range defined by the start_orbit (start_cycle) and the stop_orbit (stop_cycle) should not exceed one cycle. Otherwise within one mapping there will appear all the orbits that are equal but that belong to different cycles. When: • stop_orbit = 0 (for orbit_type = XV_ORBIT_ABS) • stop_orbit = 0 and stop_cycle = 0 (for orbit_type = XV_ORBIT_REL) the stop_orbit will be set to the minimum value between: • the last orbit within the orbital change of the start_orbit. • start_orbit+cycle_length-1 (i.e. the input orbit range will be a complete cycle)	absolute or relative orbit number	= 0 or: • absolute orbits ≥ start_osf • relative orbits ≤repeat cycle
stop_cycle	long	-	Cycle number corresponding to the stop_orbit. Dummy when using relative orbits	cycle number	= 0 or ≥ first cycle in osf
swath_flag	long*	-	Define the use of the swath file: • 0 = (XV_STF) if the swath file is a swath template file. • > 0 if the swath files is a swath definition file. In this case the swath points are generated for every "swath_flag" orbits	-	XV_STF = 0 XV_SDF = 1 > 0
swath_file	char *	-	File name of the swath-file for the appropriate instrument mode		





EE-MA-DMS-GS-0006 24/05/19 3.7.6 201

Table 56: Input parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Units	Range
zone_num	long		Number of vertices of the zone provided in zone_long, zone_lat: = 0 no vertices provided, use zone_id / zone_db_file = 1 Point / Circular zone, = 2 Line zone > 2 Polygon zone		≥ 0
zone_id[9]	char		Identification of the zone, as defined in zone_db_file. This parameter is used ONLY IF zone_num = 0		EXACTLY 8 characters
zone_db_file	char *		File name of the zone-database- file. This file is used ONLY IF zone_num = 0		
projection	long		projection used to define polygon sides as straight lines: = 0 Read projection from Zones DB (rectangular projection is used by default if the DB does not contain a projection) = 1 Azimuthal gnomonic = 2 Rectangular lat/long		
zone_diam	double		Zone diameter for circular zones, dummy for other zones If diameter equals 0.0 then zone is Point Zone	m	≥ 0.0
zone_long	double*	all	zone_long[i-1] Geocentric longitude of - circle centre, for circ. zone, i =1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		





Code: EE-MA Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 202

Table 56: Input parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Units	Range
zone_lat	double*	all	zone_lat[i-1] Geodetic latitude of - circle centre, for circ. zone, i = 1 - point, for point zone, i = 1 - line-end, for line zone, i = 1 or 2 - vertices, for polygon zone, i = 1 zone_num		





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 203

7.18.4 Output parameters xv_time_segments_mapping

Table 57: Output parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Unit	Range
xv_time_segments_m apping	long		Function status flag, = 0 No error > 0 Warnings, results generated < 0 Error, no results generated		
num_mappings	long		Number of output mappings		• ≥ 0
num_segments	long*	all	num_segments[n] = number of segments for the n-th mapping. n=0 (num_mappings-1)	-	> 0
orbit_direction	long*	all	Direction of the segments of a mapping.	-	Complete (see table 2: segment direction)
bgn_orbit	long**	all	Array of orbit numbers for the beggining of the segments	-	>0
bgn_secs	long**	all	Array of seconds elapsed since ANX for the beggining of the segments	-	>0 <nodal period</nodal
bgn_microsecs	long**	all	Array of microseconds within a second for the beggining of the segments	-	>0 <999999
bgn_cycle	long**	all	Array of cycle numbers for the beggining of the segments.	-	>0
end_orbit	long**	all	Array of orbit numbers for the end of the segments	-	>0
end_secs	long**	all	Array of seconds elapsed since ANX for the end of the segments	-	>0 <nodal period</nodal
end_microsecs	long**	all	Array of microseconds within a second for the end of the segments	-	>0 <999999
end_cycle	long**	all	Array of cycle numbers for the end of the segments.	-	>0 or NULL





EE-MA-DMS-GS-0006 24/05/19 3.7.6 204

Table 57: Output parameters of xv_time_segments_mapping

c name	c type	Arr ay Ele- men t	Description	Unit	Range
coverage	long **	all	coverage of the output segments.	-	complete see table 2
ierr	long*		Error status flags		

Note 1: The output visibility segments and the coverage are returned as a two-dimensional table where the first index indicates the number of the mapping, and the second one is the number of the segment within the mapping.

Note 2(Memory Management): Note that the output visibility segments arrays are pointers to integers instead of static arrays. The memory for these dynamic arrays is allocated within the **xv_time_segments_mapping** function. So the user will only have to declare those pointers but not to allocate memory for them. However, once the function has returned without error, the user will have the responsibility of freeing the memory for those pointers once they are not used.





EE-MA-DMS-GS-0006 24/05/19 3.7.6 205

7.18.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv_time_segments_mapping CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg.

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_time_segments_mapping** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv_get_code**.

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error, wrong orbit Id.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ORB IT_STATUS_ERR	0
ERR	Error getting absolute orbit from relative orbit.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_REL _TO_ABS_ERR	1
ERR	Error getting relative orbit vector from absolute orbits	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_REF _LATITUDE_ERR	2
ERR	Error computing swath width.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_SWA TH_WIDTH_ERR	3
ERR	Error calling zone_vis_time function	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ZON EVISTIME_ERR	4
ERR	Error loading orbit scenario file.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_LOA D_OSF_ERR	5
ERR	Start orbit is less than first orbit in OSF	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_WR ONG_START_ORB_ER R	6
ERR	Error, orbits changes found within the input orbit range	Computation not performed	XV CFI TIME_SEGM ENTS_MAPPING_WR ONG_STOP_ORB_ERR	7
ERR	Error allocating memory.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ME M_ERR	8
ERR	Error sorting segments.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_SOR T_ERR	9





Code: EE-MA-DMS-GS-0006 Date: Issue:

Page:

24/05/19

3.7.6

206

Error type	Error message	Cause and impact	Error Code	Error No
ERR	Error getting relative orbit vector from absolute orbits.	Computation not performed	XV_CFI_TIME_SEGM ENTS_MAPPING_ABS _TO_REL_ERR	10
WARN	Cannot check segments for start and stop orbits. Incomplete mappings could be generated.	Previous orbit to input start orbit and/or next orbit to the input stop orbit are not in the same orbital change that the input orbit range. It can not be checked whether there are segments missing at the extremes of the orbit range. Computation performed.	XV_CFI_TIME_SEGM ENTS_MAPPING_NO_ CHECK_PERFORMED _WARN	11
ERR	Error checking extremes of the orbit range.	Computation not performed	XV CFI TIME_SEGM ENTS MAPPING CHE CK_EXTREMES_ERR	12





EE-MA-DMS-GS-0006 24/05/19 3.7.6 207

7.18.6 Runtime performances

The following runtime performance has been measured over an interval of 50 orbits.

Table 58: Runtime performances of xv_time_segments_mapping function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
2289	1005	992	163





EE-MA-DMS-GS-0006 24/05/19 3.7.6 208

7.19 xv_gen_swath

7.19.1 Overview

The xv_gen_swath function generates for the different instrument modes the corresponding instrument swath template file. These template files define the swaths to be used in the segment calculation routines of explorer_visibility.

The selection of the algorithm to compute the swath points depends on the parameters of the corresponding swath definition found in the instrument swath definition file. The swath point type (geodetic or inertial) and the algorithm to be used is deduced from the geometry and other instrument dependent parameters (see table 59). There is an example of a swath definition file in the Appendix A.

The instrument swath template file, consists of a header which contains the altitude range of the swath. The data block contains n locations of the swath (between 50 and 6000, typically 1200) equally spread in time along one orbit. Every swath location contains a list of m points of the instantaneous swath ($m \ge 1$). For a description of the swath configuration see section 7.1.2 and figure 8.

For Earth-fixed swaths, the location is given in longitude and latitude, in degrees, for the orbit with a longitude of ascending node of 0.0 degrees. For Inertial swaths, the location is the direction in inertial space (True of Date) in Right Ascension and Declination, in degrees, for the orbit with a Right Ascension of Ascending Node of 0.0 degrees.

The instrument swath template files are only dependent on:

- The instrument swath definition file
- The requested orbit number
- The orbit definition (orbit id).

Table 59: Swath geometry definition (algorithm)

Geometry (XD_Swath_geom_enum)	Algorithm description	Swath point type (XD_Swath_point_type_enum)
Pointing_Geometry (azimuth, elevation, altitude)	Swath point computed with xp_target_inter with that azimuth, elevation and altitude	Geodetic
Distance_Geometry (azimuth, elevation, altitude, distance)	Swath point computed with xp_target_ground_range with that azimuth, elevation, altitude and distance	Geodetic
Limb_Geometry (azimuth and altitude)	Swath point computed with xp_target_altitude with that azimuth and altitude	Geodetic
Inertial_Geometry (azimuth and altitude)	Swath point computed with xp_target_altitude with that azimuth and altitude. The swath point is the RA and Declination of the target.	Inertial
Sub_Satellite_Geometry (no parameters)	Computation of the sub-satellite point	Geodetic
ASAR_Geometry (azimuth, elevation, altitude)	Specific algorithm for the three swath points for ASAR instrument in Envisat.	Geodetic



}



EE-MA-DMS-GS-0006 Code: Date: 24/05/19 Issue: Page:

3.7.6

209

7.19.2 Calling interface

The calling interface of the xv_gen_swath CFI function is the following (input parameters are <u>underlined</u>):

```
#include <explorer visibility.h>
      xo orbit id orbit id = {NULL};
      xp atmos id atmos id = {NULL};
      long requested orbit,
           version number;
      char *swath definition file;
      char swath file[XD MAX STR], *dir name, *file class,
           *fh system;
      long status, ierr[XV ERR VECTOR MAX LENGTH];
      status = xv gen swath (&orbit id, &atmos id,
                              &requested orbit, swath definition file,
                              dir name, swath file,
                              file class, &version number, fh system,
                              ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen swath run (&run id,
                              &requested orbit, swath definition file,
                              dir name, swath file,
                              file class, &version number, fh system,
                              ierr);
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 210

7.19.3 Input parameters

The xv_gen_swath CFI function has the following input parameters:

Table 60: Input parameters of xv_gen_swath function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
atmos_id	xp_atmos_id*		Structure that contains the atmosphere initialisation. This parameters is needed only if the swath definition file requires atmosphere initialisation. This happens when the refraction model in the SDF is USER_REF or PRED_REF.	-	-
requested_orbit	long*	-	Orbit for which the instrument swath template file will be calculated.	absolute orbit number	> 0
swath_definition_file	char*	-	File name of the instrument swath definition file	-	-
dir_name	char*	-	Directory where the resulting STF is written (if empty (i.e. ""), the current directory is used)	-	-
swath_file	char*	-	Name for output swath file. If empty (i.e. ""), the software will generate the name according to file name specification presented in [FORMATS], in this case the generated name is returned in this variable	-	-
file_class	char*	-	File class for output swath file	-	-
version_number	long*	-	Version number of output swath file	-	>= 1
fh_system	char*	-	System field of the output swath file fixed header	-	-





EE-MA-DMS-GS-0006 24/05/19 3.7.6 211

7.19.4 Output parameters

The output parameters of the xv_gen_swath CFI function are:

Table 61: Output parameters of xv_gen_swath function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
swath_file	char*	-	Name for output swath file. This is only an output parameter when it is empty (i.e. ""; see description of this parameter in table 60)	-	-
ierr[XV_ERR_VECTOR_ MAX_LENGTH]	long	all	Status vector	-	-





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6

212

7.19.5 Warnings and errors

Next table lists the possible error messages that can be returned by the **xv_gen_swath** CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library **xv_get_msg** (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the **xv_gen_swath** CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code** (see [GEN SUM]).

Table 62: Error messages of xv_gen_swath function

Error type	Error message	Cause and impact	Error code	Error No
ERR	Error, wrong orbit ld.	Computation not performed	XV_CFI_GEN_SWATH_OR BIT_INIT_ERR	0
ERR	Wrong requested orbit	Computation not performed	XV_CFI_GEN_SWATH_RE QUESTED_ORBIT_ERR	1
ERR	Could not get the creation date	Computation not performed	XV_CFI_GEN_SWATH_CU RRENT_TIME_ERR	2
ERR	Error transforming time formats	Computation not performed	XV_CFI_GEN_SWATH_TIM E_CONVERSION_ERR	3
ERR	Could not create the filename	Computation not performed	XV_CFI_GEN_SWATH_CR EATE_FILENAME_ERR	4
ERR	Error reading swath definition file: %s	Computation not performed	XV_CFI_GEN_SWATH_SD F_READ_ERR	5
ERR	Error computing the swath points	Computation not performed	XV_CFI_GEN_SWATH_XV_ ALGOR_ERR	6
ERR	Could not write the swath template file to disk	Computation not performed	XV_CFI_GEN_SWATH_WR ITE_ERR	7
ERR	Wrong input file name. The file cannot be created	Computation not performed	XV_CFI_GEN_SWATH_WR ONG_FILENAME_ERR	8
WARN	Could not find the input directory \"%s\". The current directory will be used instead	Computation performed	XV_CFI_GEN_SWATH_NO _DIR_WARN	9

7.19.6 Runtime performances

The following runtime performance has been measured.

Table 63: Runtime performances of xv_gen_swath function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
6517	1850	4797	590





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6 213

7.19.7 Executable Program

The **gen** swath executable program can be called from a Unix shell as:

```
gen swath -sat satellite name
            -sdf swath definition file name
            -file orbit file name -orbit orbit number
            [-dir dir name] (current directory by default)
            [-stf swath template filename] (empty string by default)
            [-flcl file class] (empty string by default)
            [-vers version] (version = 1 by default)
            [-fhsys fh system] (empty string by default)
            [ -v ]
            [-xl \ v]
            [-xo_v]
            [-xp_v]
            \begin{bmatrix} -xv & v \end{bmatrix}
            [-help]
            [-show]
            {(-tai TAI time -gps GPS time -utc UTC time -ut1 UT1 time) |
            (-tmod time model -tfile time reference data file -trid time reference
             {(-tm0 time 0 -tm1 time 1) | (-orb0 orbit 0 -orb1 orbit 1) } )}
```

Note that:

- Order of parameters does not matter.
- Bracketed parameters are not mandatory (For example, if -stf argument is not provided, instrument swath file name suffix is considered to be an empty string).
- Options between curly brackets and separated by a vertical bar are mutually exclusive (For example, that lines 3 and 4 are mutually exclusive).
- [-xl v] option for EXPLORER LIB Verbose mode.
- [-xo v] option for EXPLORER ORBIT Verbose mode.
- [-xp v] option for EXPLORER POINTING Verbose mode.
- [-xv v] option for EXPLORER VISIBILITY Verbose mode.
- [-v] option for Verbose mode for all libraries (default is Silent).
- [-show] displays the inputs of the function and the results.
- Possible values for satellite_name: ERS1, ERS2, ENVISAT, METOP1, METOP2, METOP3, CRYOSAT, ADM, GOCE, SMOS, TERRASAR, EARTHCARE, SWARM A, SWARM B, SWARM_C, SENTINEL_1A, SENTINEL 1B, SENTINEL 2, SENTINEL 3, GENERIC.
- Important: gen swath does not allow user defined atmosphere models, so the refraction model in the input SDF must be NO REF or STD REF.





Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6

214

Page:

Example:

-dir ./gen_swath





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 215

7.20 xv_gen_swath_no_file

7.20.1 Overview

The xv_gen_swath_no_file function generates for the different instrument modes the corresponding instrument swath template data.

The aim of this function is to provide another interface for the function **xv_gen_swath** in which the swath data is returned in a swath structure instead to be save to a file.

7.20.2 Calling interface

The calling interface of the **xv_gen_swath_no_file** CFI function is the following (input parameters are <u>underlined</u>):

```
#include <explorer visibility.h>
      xo orbit id orbit id = {NULL};
      xp atmos id atmos id = {NULL};
      long requested orbit,
           version number;
      xd sdf file *sdf;
      xd stf file *stf;
      char *file class,*fh system;
      long status, ierr[XV ERR VECTOR MAX LENGTH];
      status = xv gen swath no file (&orbit id, &atmos id,
                                      &requested orbit,
                                      &sdf, &stf,
                                      file class, &version number,
                                      fh system, ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen swath no file run (&run id,
                                           &requested orbit,
                                          &sdf, &stf,
                                          file class, &version number,
                                          fh system, ierr);
}
```





Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 216

7.20.3 Input parameters

The xv_gen_swath_no_file CFI function has the following input parameters:

Table 64: Input parameters of xv_gen_swath_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
atmos_id	xp_atmos_id*		Structure that contains the atmosphere initialisation. This parameters is needed only if the swath definition file requires atmosphere initialisation. This happens when the refraction model in the SDF is USER_REF or PRED_REF.	-	-
requested_orbit	long*	-	Orbit for which the instrument swath template file will be calculated.	absolute orbit number	> 0
sdf	xd_sdf_file	-	Swath definition file structure data. This structure is defined in [DAT_SUM] and can be got by reading a swath definition file with the CFI function xd_read_sdf.	-	-
file_class	char*	-	File class for output swath data	-	-
version_number	long*	-	Version number of output swath data	-	>= 1
fh_system	char*	-	System field of the output swath file fixed header data	-	-

7.20.4 Output parameters

The output parameters of the xv_gen_swath_no_file CFI function are:

Table 65: Output parameters of xv_gen_swath_no_file function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
stf	xd_stf_f ile	_	Swath Template structure defined in [DAT_SUM]	-	-
ierr[XV_ERR_VECTOR_ MAX_LENGTH]	long	all	Status vector	-	-





EE-MA-DMS-GS-0006 24/05/19 3.7.6 217

7.20.5 Warnings and errors

The error and warning messages and codes for xv_gen_swath_no_file are the same than for xv_gen_swath (see table 62).

The error messages/codes can be returned by the CFI function xv_get_msg/xv_get_code after translating the returned status vector into the equivalent list of error messages/codes. The function identifier to be used in that functions is XV_GEN_SWATH_ID (from table 1).

7.20.6 Runtime performances

The following runtime performance has been measured.

Table 66: Runtime performances of xv_gen_swath_no_file function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
2330	1203	4080	360





Code: EE-MA-DMS-GS-0006
Date: 24/05/19
Issue: 3.7.6
Page: 218

7.21 xv_gen_scf

7.21.1 Overview

The **xv_gen_scf** function generates a Swath Control file. This file contains a list of visibility segments together with some features linked to the segment that are used for the visualisation of the segment in the ESOV tool.

In order to generate the file, the same xo_orbit_id variable that was used for the generation of the visibility segments has to be provided. Moreover, this xo_orbit_id has to be implemented with one of the following functions:

- xo_orbit_init_def
- xo_orbit_init_file with an orbit scenario file (or an orbit event file used as an orbit scenario)

7.21.2 Calling interface

The calling interface of the xv gen scf CFI function is the following (input parameters are underlined):

```
#include <explorer visibility.h>
      xo orbit id orbit id = {NULL};
      char instrument[XD MAX STR];
      long version number;
      char *file class, *fh system;
      char dir name [XD MAX STR], scf filename [XD MAX STR];
      long status, ierr[XV NUM ERR GEN SCF];
      long number segments;
      long *bgn orbit, *bgn second, *bgn microsec;
      long *end orbit, *end second, *end microsec;
      xd scf appear * appearance;
      status = xv gen_scf (&orbit id, instrument, &number segments,
                            bgn orbit, bgn second, bgn microsec,
                            end orbit, end second, end microsec,
                            appearance,
                            dir name, scf filename,
                            file class, &version number, fh system,
                            ierr);
      /* Or, using the run id */
      long run id;
      status = xv gen scf run (&run id, instrument, &number segments,
                                bgn orbit, bgn second, bgn microsec,
                                end orbit, end second, end microsec,
                                appearance,
```





 Code:
 EE-MA-DMS-GS-0006

 Date:
 24/05/19

 Issue:
 3.7.6

 Page:
 219

dir name, scf filename,
file class, &version number, fh system,
ierr);

}

7.21.3 Input parameters

The xv_gen_scf CFI function has the following input parameters:

Table 67: Input parameters of xv_gen_scf function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
orbit_id	xo_orbit_id*	-	Structure that contains the orbit data.	-	-
instrument	char*	-	Instrument name	-	-
number_segments	long	-	Number of input segments	-	
bgn_orbit	long*	-	Array of absolute orbit numbers for the beggining of the segments	-	> 0
bgn_second	long*	-	Array of seconds elapsed since ANX for the beggining of the segments	-	>=0
bgn_microsec	long*	-	Array of microseconds within a second for the beggining of the segments	-	>=0
end_orbit	long*	-	Array of absolute orbit numbers for the end of the segments	-	> 0
end_second	long*	-	Array of seconds elapsed since ANX for the end of the segments	-	>=0
end_microsec	long*	-	Array of microseconds within a second for the end of the segments	-	>=0
appearance	xd_scf_appe ar	-	Array with the structures containing the appearance for every segment (see [DAT_SUM])	-	-
dir_name	char*	-	Directory where the resulting STF is written (if empty (i.e. ""), the current directory is used)	-	-
scf_filename	char*	-	Name for output swath file. If empty (i.e. ""), the software will generate the name according to file name specification presented in [FORMATS], in this case the generated name is returned in this variable	-	-





Code: EE-MA-DMS-GS-0006 Date: 24/05/19 Issue: Page:

3.7.6

220

Table 67: Input parameters of xv_gen_scf function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
file_class	char*	-	File class for output file	-	-
version_number	long*	-	Version number of output file	-	>= 0
fh_system	char*		System field of the output file fixed header	-	-

7.21.4 Output parameters

The output parameters of the xv_gen_scf CFI function are:

Table 68: Output parameters of xv_gen_scf function

C name	C type	Array Element	Description (Reference)	Unit (Format)	Allowed Range
scf_filename	char*	-	Name for output SCF. This is only an output parameter when it is empty (i.e. ""; see description of this parameter in table 67)	-	-
ierr[XV_NUM_ERR_GEN _SCF]	long	all	Status vector	-	-





EE-MA-DMS-GS-0006 Code: Date: 24/05/19 Issue: Page:

3.7.6

221

7.21.5 Warnings and errors

Next table lists the possible error messages that can be returned by the xv gen_scf CFI function after translating the returned status vector into the equivalent list of error messages by calling the function of the EXPLORER_VISIBILITY software library xv_get_msg (see [GEN_SUM]).

This table also indicates the type of message returned, i.e. either a warning (WARN) or an error (ERR), the cause of such a message and the impact on the performed calculation, mainly on the results vector.

The table is completed by the error code and value. These error codes can be obtained translating the status vector returned by the xv_gen_scf CFI function by calling the function of the EXPLORER VISIBILITY software library **xv get code** (see [GEN SUM]).

Table 69: Error messages of xv_gen_scf function

Error type	Error message	Cause and impact	Error code	Error No
ERR	No segments to write	Computation not performed	XV_CFI_GENSCF_NO_SE GMENTS_ERR	0
ERR	The orbit has not been initialised	Computation not performed	XV_CFI_GENSCF_ORBIT_I NIT_ERR	1
ERR	Wrong orbit initialisation mode	Computation not performed	XV_CFI_GENSCF_ORBIT_I NIT_MODE_ERR	2
ERR	Could not get the creation date	Computation not performed	XV_CFI_GENSCF_CURRE NT_TIME_ERR	3
ERR	Could not get orbit number for the orbit = %ld	Computation not performed	XV_CFI_GENSCF_ORBIT_ TO_TIME_CONVERSION_E RR	4
ERR	Error transforming time for- mats	Computation not performed	XV_CFI_GENSCF_TIME_C ONVERSION_ERR	5
ERR	Could not create the filename	Computation not performed	XV_CFI_GENSCF_CREATE _FILENAME_ERR	6
ERR	Could not get orbital information for orbit %ld	Computation not performed	XV_CFI_GENSCF_GET_O RBIT_INFO_ERR	7
ERR	Wrong input file name. The file cannot be created	Computation not performed	XV_CFI_GENSCF_WRONG _FILENAME_ERR	8
ERR	Could not write the swath control file to disk	Computation not performed	XV_CFI_GENSCF_WRITE_ ERR	9
WARN	Could not find the input directory \"%s\". The current directory will be used instead	Computation performed	XV_CFI_GENSCF_NO_DIR _WARN	10





EE-MA-DMS-GS-0006 24/05/19 3.7.6 222

7.21.6 Runtime performances

The following runtime performance has been measured for the generation of a SCF with 27 visibility segments.

Table 70: Runtime performances of xv_gen_scf function

Solaris 32-bit.	Solaris 64 bit.	Linux 32-bit.	Linux 64-bit.
[ms]	[ms]	[ms]	[ms]
64	36	12	8





Code: EE-MA
Date:
Issue:
Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 223

8 LIBRARY PRECAUTIONS

The following precautions shall be taken into account when using EXPLORER_VISIBILITY software library:

• When a message like

EXPLORER_VISIBILITY >>> ERROR in xv_function: Internal computation error # n or

EXPLORER_VISIBILITY >>> WARNING in xv_function: Internal computation warning # n appears, run the program in *verbose* mode for a complete description of warnings and errors, and call for maintenance if necessary.





Code: EE-MA-Date: Issue: Page:

EE-MA-DMS-GS-0006 24/05/19 3.7.6 224

9 KNOWN PROBLEMS

The following precautions shall be taken into account when using the CFI software libraries:

Table 71: Known problems

CFI library	Problem	Work around solution
Fortran	No fortran version of the library exits	-
xv_gps_vis_time	Functions not available yet	-