

ZONE OVERPASS TOOL - FILE TRANSFER DOCUMENT

1. INTRODUCTION

This is the File Transfer Document for the ZoneOverPass executable program that calculates the entry and exit time when a given instrument swath passes over a zone or set of zones.

1.1 Change History

| Issue | Change Description |
|-------|---|
| 1.3 | First Issue |
| 1.3.1 | Update <i>mission_configuration_files</i> folder to v1.2 |
| 1.4 | Update <i>mission_configuration_files</i> folder to v1.3 ZoneOverPass generates HTML output files Corrected path to ORBIT SDF for Aeolus |
| 1.4.1 | Update <i>mission_configuration_files</i> folder to v1.4 |
| 2.0 | Distinguish between Ground Site (zone with num_points=1) and Zone in output files For Ground Site, calculate distance to ground track Swath filename in configuration file User-defined Swath identifier in configuration file Update <i>mission_configuration_files</i> folder to v1.5 |
| 2.0.1 | Update <i>mission_configuration_files</i> folder to v1.6 |
| 2.1 | Add support for TLE files Add support for non pre-defined missions (using satellite configuration file) |
| 2.1.1 | Update <i>mission_configuration_files</i> folder to v1.10 |
| 2.2 | Draw circle of given radius around ground sites in KML output Add balloon in KML for point-zone Add relative orbit number if orbit file input is Orbit Scenario File (ORB SCT type) Update <i>mission_configuration_files</i> folder to v1.12 |
| 2.3 | Add cycle number to output when ORBSCT file type Add GENERIC_MEO Add parameter to input configuration file to set the duration when using TLE file (before 15 days was used as default) Update <i>mission_configuration_files</i> folder to v1.17 |
| 2.3.1 | Disable verbose command to log warning messages in zone calculation function Calculate distance to mid-swath instead of distance to ground-track Enlarge width of HTML report in CSS stylesheet |

1.2 Distribution List

| Project/Unit | Name | Project/Unit | Name | Project/Unit | Name |
|--------------|------|--------------|------|--------------|------|
| | | | | | |

1.3 Reference Documents

[RD 01] Earth Observation Mission Software File Format Specification
 Ref. PE-ID-ESA-GS-584-1.1 - Issue 1.1- 21/03/17

[RD 02] OGC® KML Standard
Ref. OGC 12-007r2 - Version: 2.3.0 - Date: 2015-08-04

2. ARCHIVE CONTENT

Separate archive files are available, to support execution in Linux, Mac OS X and Windows platforms.

2.1 Linux 64-bit

The following archive file has been delivered (compressed with the zip utility):
`ZoneOverPass_LINUX64_v2_3_1_date_07_JUL_2020.zip`

The archive has the following MD5 checksum:
`3d91e7a3ba3004c0bc9f23bf79ff10ce`

The archive contains the following files:

```
EXAMPLE_ZONEDBFILE.EOF  
input_config_file_S2A_MSI.txt  
input_config_file_S2A_ORBIT.txt  
input_config_file_S3A_OLCI.txt  
mission_configuration_files/...  
overpass_table.css  
Readme.txt  
ZoneOverPass
```

2.2 Mac OS X 64-bit

The following archive file has been delivered (compressed with the zip utility):
`ZoneOverPass_MACIN64_v2_3_1_date_07_JUL_2020.zip`

The archive has the following MD5 checksum:
`336105c5090ed95ba122aa35ac275b44`

The archive contains the following files:

```
EXAMPLE_ZONEDBFILE.EOF  
input_config_file_S2A_MSI.txt  
input_config_file_S2A_ORBIT.txt  
input_config_file_S3A_OLCI  
mission_configuration_files/...  
overpass_table.css  
Readme.txt  
ZoneOverPass
```

2.3 Windows 32-bit

The following archive file has been delivered (compressed with the zip utility):
`ZoneOverPass_WINDOWS32_v2_3_1_date_07_JUL_2020.zip`

The archive has the following MD5 checksum:
`f37210733926a491c688de28672bc796`

The archive contains the following files:

```
EXAMPLE_ZONEDBFILE.EOF  
input_config_file_S2A_MSI.txt  
input_config_file_S2A_ORBIT.txt  
input_config_file_S3A_OLCI  
overpass_table.css  
pthreadVC2.dll  
mission_configuration_files\...  
Readme.txt  
ZoneOverPass.exe
```

3. ARCHIVE CONTENT DESCRIPTION

The files contained in the archives are described in table below:

| File | Description | |
|---------------------------------|---|---------------------------------------|
| EXAMPLE_ZONEDBFILE.EOF | Example Zone Database File | |
| input_config_file_S2A_MSI.txt | Example configuration file of SENTINEL2A with MSI swath, with example zone database file | |
| input_config_file_S2A_ORBIT.txt | Example configuration file of SENTINEL2A with ORBIT ground-track, with example zone database file | |
| input_config_file_S3A_OLCI.txt | Example configuration file of SENTINEL3A with OLCI swath, with example zone database file | |
| mission_configuration_files/... | Default input orbit files and swath files | |
| Readme.txt | Readme file with example commands and input/output file description | |
| overpass_table.css | CSS stylesheet file for HTML output | |
| For LINUX 64-bit | ZoneOverPass | Executable file for Linux |
| For MAC OS X 64-bit | ZoneOverPass | Executable file for Mac OS X |
| For WINDOWS 32-bit | ZoneOverPass.exe | Executable file for Windows |
| | pthreadVC2.dll | Auxiliary pthread library for Windows |

4. INSTALLATION

The archive can be expanded with Winzip / 7-zip (in MS Windows) or with the command unzip (in Linux/Mac OS).

5. USAGE

5.1 Executable program *ZoneOverPass*

For a requested UTC time interval, the executable program *ZoneOverPass* calculates the entry and exit times when a given instrument swath passes over a zone or set of zones. The program expects as input a configuration file setting the various input parameters, among them the mission name, orbit file, zone database file and instrument swath name.

The default orbit and swath characteristics are defined in the mission configuration files folder. It is possible to provide as orbit file other types of EOCFI-compatible OSV-based orbit files see ([RD 01]), e.g. Predicted Orbit File (ORBPRES file type) or Restituted Orbit Files (ORBRES file type).

The program generates a set of output files with the overpass tables per zone (in .CSV, .KML format and .HTML format).

5.1.1 Command line input parameters description

The command line parameters of the executable routine are the following (provided in the order in which they have to be supplied):

| INPUT PARAMETERS | Definition | Value |
|--------------------------|---|-------------------|
| Input Configuration File | Filename (it may include the path to the file) | Given by the user |
| UTC Start Time | UTC start time of the time interval CCSDS-A ASCII format with seconds (YYYY-MM-DDTHH:mm:ss) | Given by the user |
| UTC Stop Time | UTC stop time of the time interval CCSDS-A ASCII format with seconds | Given by the user |

5.1.2 Input configuration file format description

The contents of the input configuration file are detailed below:

| INPUT PARAMETERS | Definition | Value |
|------------------------|--|--|
| Satellite | Satellite identifier | AEOLUS CRYOSAT2 EARTHCARE FLEX METOPSG SEOSAT SENTINEL1A SENTINEL1B SENTINEL2A SENTINEL3A SENTINEL3B SENTINEL5P SENTINEL6 SMOS GENERIC (see Section 5.2) Mission Name String (see Section 5.2) GENERIC_MEO |
| Orbit Filename | Orbit Filename Default: Orbit Scenario Filename in mission_configuration_files folder | Given by the user |
| Instrument Swath | Instrument Swath Filename Default: Swath Definition Files in mission_configuration_files folder | Given by the user |
| Zone Database Filename | File with list of zones, in EO CFI / Esov NG Zone Database format | Given by the user |
| Swath Colour | Swath Color (aabbggrr, aa=alpha, bb=blue, gg=green rr=red, with ranges 00 to ff) | Given by the user |
| TLE number of days | Number of days to propagate after TLE record time (e.g to propagate for one month into the future, set to 30.0). If orbit file type other than TLE, this parameters is not used | Given by the user |

5.1.3 Output file format description

The executable program *ZoneOverPass* produces two output files per zone in Zone Database file:

- Comma Separated Value (.CSV)
- Google Earth KML file (.KML)
- Web browser HTML file (.HTML)

The output file names are automatically generated using the satellite identifier, the zone name, the swath name and the start and stop UTC times.

5.1.3.1 CSV Files

5.1.3.1.1 If ORBSCT is given as input orbit file

The CSV output file contains one row per each entry/exit visibility time segment, format of the CSV output file:

- Row 1-7: Header containing execution input information
- From Row 8:
 - Column 1: UTC Time Start in calendar format (CCSDS format “yyyy-mm-ddThh:mm:ss”)
 - Column 2: Absolute Orbit Start
 - Column 3: Relative Orbit Start
 - Column 4: Start Seconds since Ascending Node Crossing (ANX)
 - Column 5: UTC Time Stop in calendar format (CCSDS format “yyyy-mm-ddThh:mm:ss”)
 - Column 6: Absolute Orbit Stop
 - Column 7: Relative Orbit Stop
 - Column 8: Stop Seconds since Ascending Node Crossing (ANX)
 - Column 9: Pass Duration (seconds)
 - Column 10 (optional, if Ground Site): Distance from site to mid-swath [km] is the geodetic distance between the two points. The mid-swath point corresponds to the mid-point of the swath file at the time half-way between entry and exit times of the ground site circle
 - Column 11 (10): Ascending or Descending Pass (ASC/DESC)
 - Column 12 (11): Zone/Ground Site Name
 - Column 13 (12): Instrument Swath Name
- Last Row: End of file (EOF)

5.1.3.1.2 If input orbit file other than ORBSCT

The CSV output file contains one row per each entry/exit visibility time segment, format of the CSV output file:

- Row 1-7: Header containing execution input information
- From Row 8:
 - Column 1: UTC Time Start in calendar format (CCSDS format “yyyy-mm-ddThh:mm:ss”)
 - Column 2: Absolute Orbit Start
 - Column 3: Start Seconds since Ascending Node Crossing (ANX)
 - Column 4: UTC Time Stop in calendar format (CCSDS format “yyyy-mm-ddThh:mm:ss”)
 - Column 5: Absolute Orbit Stop
 - Column 6: Stop Seconds since Ascending Node Crossing (ANX)
 - Column 7: Pass Duration (seconds)
 - Column 8 (optional, if Ground Site): Distance from site to mid-swath [km] is the geodetic distance between the two points. The mid-swath point corresponds to the mid-point of the swath file at the time half-way between entry and exit times of the ground site circle
 - Column 8 (9): Ascending or Descending Pass (ASC/DESC)
 - Column 9 (10): Zone/Ground Site Name
 - Column 10 (11): Instrument Swath Name
- Last Row: End of file (EOF)

The CSV files can be opened with dedicated spreadsheet software (e.g. Excel, LibreOffice) or any text editor.

5.1.3.2 KML Files

The KML output file contains the same information as the CSV but presented graphically. The format of the provided KML files is defined in KML Version 2.3 standard (see [RD 02]).

The KML files can be opened with Google Earth v7 or higher.

5.1.3.3 HTML Files

The HTML output file contains the same information as the CSV but presented in a tabular format, ready to be displayed in a web browser. A CSS stylesheet (*overpass_table.css*) is provided as part of the package to apply a given style to the HTML elements. The HTML output file requires the CSS stylesheet to be located in the same folder.

The HTML files can be opened with any web browser (e.g. Firefox). Once opened in a web browser, it is possible to export the HTML report to PDF.

5.1.4 Example

5.1.4.1 Running the executable

The executable program can be called in the following way:

- From Mac OSX / Linux Terminal window

```
./ZoneOverPass input_config_file_S2A_MSI.txt 2016-06-06T00:00:00 2016-06-08T00:00:00
```

- From Windows command prompt window

```
ZoneOverPass.exe input_config_file_S2A_MSI.txt 2016-06-06T00:00:00 2016-06-08T00:00:00
```

The executable program shows the following messages:

Execution of program ZoneOverPass v2.3

Input data set by the user:

Satellite: SENTINEL2A

Orbit File:

./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.EOF

Swath File: ./mission_configuration_files/SENTINEL2A/SDF/SDF_MSI.S2

Swath ID: MSI

Zone File: EXAMPLE_ZONEDBFILE.EOF

Start Time: 2016-06-06T00:00:00

Stop Time: 2016-06-08T00:00:00

Start Time: 6001.000000000000

Stop Time: 6003.000000000000

Start Orbit: 4989

Stop Orbit: 5018

Output Filename KML:

S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML

Output Filename CSV:

S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV

Output Filename HTML:

S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML

Output Filename KML:

S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML

Output Filename CSV:

S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV

Output Filename HTML:

S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML

Output Filename KML: S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML

Output Filename CSV: S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV

Output Filename HTML: S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML

Output Filename KML: S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML

Output Filename CSV: S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV

Output Filename HTML:

S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML

Output files created successfully

5.1.4.2 Input File

Contents of the input configuration file used as example (input_config_file_S2A_MSI.txt):

```
SENTINEL2A
./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.
EOF
./mission_configuration_files/SENTINEL2A/SDF/SDF_MSI.S2
EXAMPLE_ZONEDBFILE.EOF
MSI
500000ff
```

5.1.4.3 Output Files

5.1.4.3.1 CSV Files

Several CSV output files are created (on per zone in zone database file):

```
S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV
S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV
S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV
S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV
```

Example ZONE output file

[S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV:](#)

| | A | B | C | D | E | F | G | H | I | J | K |
|----|-------------------------|---|---------|------------|---------------------|---------|------------|------------|----------|--------|-------|
| 1 | FILENAME | S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV | | | | | | | | | |
| 2 | CREATION_DATE | 2018-06-12T15:24:36 | | | | | | | | | |
| 3 | EXECUTABLE_NAME_VERSION | ZoneOverPass_v2.0 | | | | | | | | | |
| 4 | MISSION | SENTINEL2A | | | | | | | | | |
| 5 | ORBIT_FILE | ./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.EOF | | | | | | | | | |
| 6 | ZONE | AFRICA | | | | | | | | | |
| 7 | VALIDITY_START | 2016-06-06T00:00:00 | | | | | | | | | |
| 8 | VALIDITY_STOP | 2016-06-08T00:00:00 | | | | | | | | | |
| 9 | PASS | UTC_TIME_START | ABS_ORB | ANX_TIME | UTC_TIME_STOP | ABS_ORE | ANX_TIME | DURATION | ASCENDIN | ZONE | SWATH |
| 10 | | 1 2016-06-06T08:04:5 | 4994 | 2709.51278 | 2016-06-06T08:19:39 | 4994 | 3590.39923 | 880.886454 | DESC | AFRICA | MSI |
| 11 | | 2 2016-06-06T09:42:0 | 4995 | 2494.59228 | 2016-06-06T09:51:21 | 4995 | 3050.44436 | 555.852081 | DESC | AFRICA | MSI |
| 12 | | 3 2016-06-06T11:21:3 | 4996 | 2419.69083 | 2016-06-06T11:29:09 | 4996 | 2876.39784 | 456.707006 | DESC | AFRICA | MSI |
| 13 | | 4 2016-06-06T19:06:4 | 5001 | 119.981559 | 2016-06-06T19:07:48 | 5001 | 185.651548 | 65.669989 | ASC | AFRICA | MSI |
| 14 | | 5 2016-06-06T20:37:2 | 5001 | 5564.15809 | 2016-06-06T20:54:06 | 5002 | 521.888342 | 999.688426 | ASC | AFRICA | MSI |
| 15 | | 6 2016-06-06T22:27:4 | 5003 | 96.122194 | 2016-06-06T22:35:48 | 5003 | 581.624151 | 485.501957 | ASC | AFRICA | MSI |
| 16 | | 7 2016-06-07T07:36:5 | 5008 | 2836.6197 | 2016-06-07T07:40:21 | 5008 | 3045.03545 | 208.415743 | DESC | AFRICA | MSI |
| 17 | | 8 2016-06-07T07:42:3 | 5008 | 3178.8175 | 2016-06-07T07:44:52 | 5008 | 3315.29066 | 136.473158 | DESC | AFRICA | MSI |
| 18 | | 9 2016-06-07T09:11:4 | 5009 | 2484.27609 | 2016-06-07T09:26:31 | 5009 | 3372.79748 | 888.521392 | DESC | AFRICA | MSI |
| 19 | | 10 2016-06-07T10:50:5 | 5010 | 2395.34603 | 2016-06-07T11:00:03 | 5010 | 2942.8409 | 547.494878 | DESC | AFRICA | MSI |
| 20 | | 11 2016-06-07T20:10:1 | 5015 | 5742.04492 | 2016-06-07T20:24:09 | 5016 | 536.574156 | 836.48741 | ASC | AFRICA | MSI |
| 21 | | 12 2016-06-07T21:47:2 | 5016 | 5530.87337 | 2016-06-07T21:51:43 | 5016 | 5791.33325 | 260.459878 | ASC | AFRICA | MSI |
| 22 | | 13 2016-06-07T21:55:2 | 5016 | 6010.1818 | 2016-06-07T21:56:03 | 5017 | 8.881835 | 40.658204 | ASC | AFRICA | MSI |
| 23 | | 14 2016-06-07T21:57:1 | 5017 | 76.513713 | 2016-06-07T22:05:57 | 5017 | 602.952671 | 526.438958 | ASC | AFRICA | MSI |
| 24 | EOF | | | | | | | | | | |

Example of GROUND_SITE output file

[S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV:](#)

| | A | B | C | D | E | F | G | H | I | J | K | L |
|----|-------------------------|---|---------|------------|---------------------|---------|------------|----------|------------|----------|----------------|-------|
| 1 | FILENAME | S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.CSV | | | | | | | | | | |
| 2 | CREATION_DATE | 2018-06-12T15:24:36 | | | | | | | | | | |
| 3 | EXECUTABLE_NAME_VERSION | ZoneOverPass_v2.0 | | | | | | | | | | |
| 4 | MISSION | SENTINEL2A | | | | | | | | | | |
| 5 | ORBIT_FILE | ./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.EOF | | | | | | | | | | |
| 6 | GROUND_SITE | EXAMPLE_CIRCLE | | | | | | | | | | |
| 7 | GROUND_SITE_RADIUS[km] | 5 | | | | | | | | | | |
| 8 | VALIDITY_START | 2016-06-06T00:00:00 | | | | | | | | | | |
| 9 | VALIDITY_STOP | 2016-06-08T00:00:00 | | | | | | | | | | |
| 10 | PASS | UTC_TIME_START | ABS_ORB | ANX_TIME | UTC_TIME_STOP | ABS_ORE | ANX_TIME | DURATION | DISTANC | ASCENDIN | GROUND_SITE | SWATH |
| 11 | | 1 2016-06-07T23:47:12 | 5018 | 636.203281 | 2016-06-07T23:47:14 | 5018 | 637.693558 | 1.490277 | -37.481989 | ASC | EXAMPLE_CIRCLE | MSI |
| 12 | EOF | | | | | | | | | | | |

5.1.4.3.2 KML Files


Several KML output files are created (on per zone in zone database file):

S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML
S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML
S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML
S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML


After loading the files with Google Earth, the overpass data can be found in the “Places” window, under “Temporary Places”.

Example of ZONE output file

S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.KML:

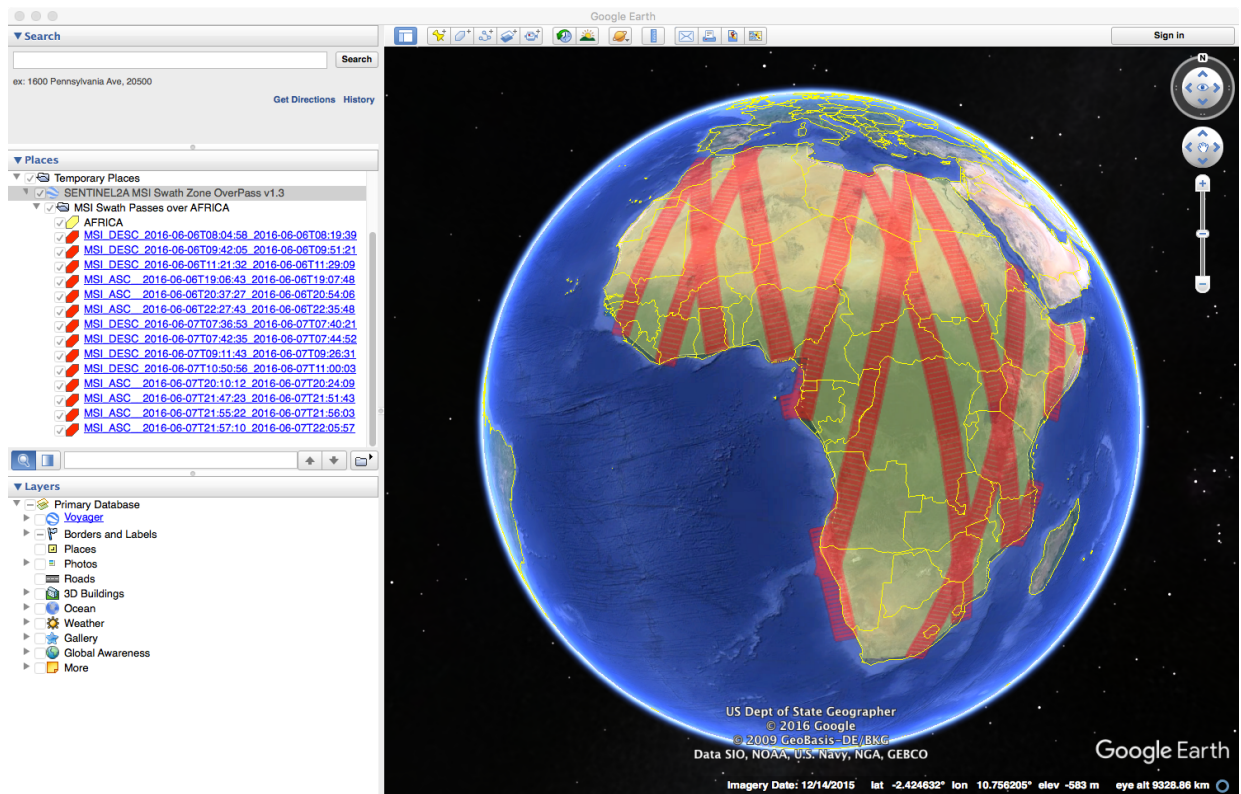

When moving the mouse over the swaths, the lines are highlighted (increase in thickness and lighter in colour). Then by clicking on top of the track, a balloon showing additional information is displayed, namely the absolute and relative orbit number and the longitude and UTC time of the ascending node crossing of the selected orbit.

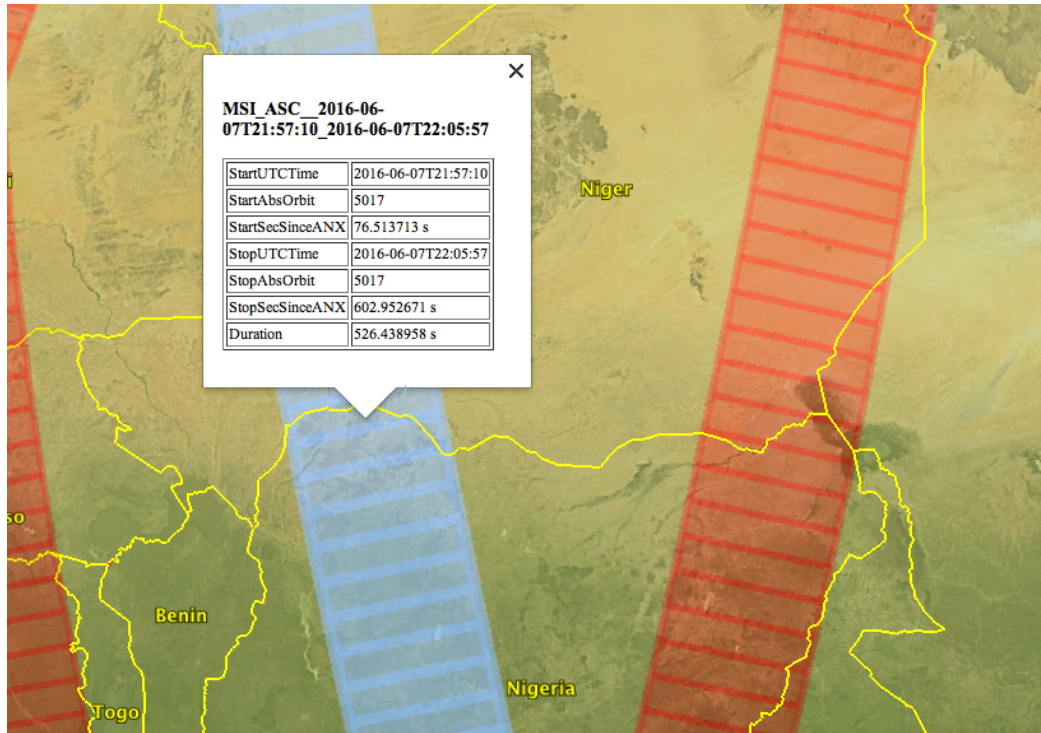

5.1.4.3.3 HTML Files

Several HTML output files are created (on per zone in zone database file):

S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML
 S2A_EXAMPLE_POINT_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML
 S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML
 S2A_PACIFIC_AREA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML

By double-clicking on the HTML file, it opens with the default browser, applying the style from CSS stylesheet.

Example of ZONE output file

[S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML](#):

ZONE OVERPASS TABLE HTML REPORT

Creation Date: 2018-06-12T12:13:59

| | |
|------------------------------------|---|
| Filename | S2A_AFRICA_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML |
| Executable Name and Version | ZoneOverPass_v2.0 |
| Mission | SENTINEL2A |
| Orbit File | ./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.EOF |
| Zone | AFRICA |
| Validity Start | 2016-06-06T00:00:00 |
| Validity Stop | 2016-06-08T00:00:00 |

Zone Overpass Table

| Pass | UTC Time Start | Abs Orbit Start | ANX Time Start[s] | UTC Time Stop | Abs Orbit Stop | ANX Time Stop[s] | Duration[s] | Ascending / Descending | Zone | Swath |
|------|---------------------|-----------------|-------------------|---------------------|----------------|------------------|-------------|------------------------|--------|-------|
| 1 | 2016-06-06T08:04:58 | 4994 | 2709.512780 | 2016-06-06T08:19:39 | 4994 | 3590.399234 | 880.886454 | DESC | AFRICA | MSI |
| 2 | 2016-06-06T09:42:05 | 4995 | 2494.592276 | 2016-06-06T09:51:21 | 4995 | 3050.444357 | 555.852081 | DESC | AFRICA | MSI |
| 3 | 2016-06-06T11:21:32 | 4996 | 2419.690834 | 2016-06-06T11:29:09 | 4996 | 2876.397840 | 456.707006 | DESC | AFRICA | MSI |

Example of GROUND_SITE output file
[S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML](#):

GROUND SITE OVERPASS TABLE HTML REPORT

Creation Date: 2018-06-12T12:13:59

| | |
|------------------------------------|---|
| Filename | S2A_EXAMPLE_CIRCLE_MSI_VISIBILITY_SEGMENTS_20160606_000000_20160608_000000_0001.HTML |
| Executable Name and Version | ZoneOverPass_v2.0 |
| Mission | SENTINEL2A |
| Orbit File | ./mission_configuration_files/SENTINEL2A/OSF/S2A_OPER_MPL_ORBSCT_20150625T073255_99999999T999999_0006.EOF |
| Ground Site | EXAMPLE_CIRCLE |
| Ground Site Radius | 5.000000 km |
| Validity Start | 2016-06-06T00:00:00 |
| Validity Stop | 2016-06-08T00:00:00 |

Ground Site Overpass Table

| Pass | UTC Time Start | Abs Orbit Start | ANX Time Start[s] | UTC Time Stop | Abs Orbit Stop | ANX Time Stop[s] | Duration[s] | Distance to Ground-Track[km] | Ascending / Descending | Ground Site | Swath |
|------|---------------------|-----------------|-------------------|---------------------|----------------|------------------|-------------|------------------------------|------------------------|----------------|-------|
| 1 | 2016-06-07T23:47:12 | 5018 | 636.203281 | 2016-06-07T23:47:14 | 5018 | 637.693558 | 1.490277 | -37.481989 | ASC | EXAMPLE_CIRCLE | MSI |

5.2 User-defined Mission Configuration

It is possible to use the *ZoneOverPass* tool with user-defined missions.

5.2.1 Input Configuration Files

A dedicated input configuration file (see Section 5.1.2) needs to be created to set the satellite identifier, the path of the orbit file and the path to the instrument swath file, among other inputs.

5.2.2 Satellite Identifier

The satellite identifier *GENERIC* can be used for a user-defined satellite. This identifier assumes certain values for the internal orbit parameters, among them the mean frozen eccentricity which is set to a default value (0.001165). This assumption introduces about 100 meters of error in altitude respect to the orbit that it would be obtained by applying the frozen eccentricity value that would be applicable to the user-defined orbit. For certain applications this approximation is good enough.

For more accurate orbit settings, it is possible to set the internal orbit parameters through a Satellite Configuration File (see [RD 01]). The expected file name of the Satellite Configuration File is *sat_default_conf_file.xml*. In this case, it is possible to set the satellite identifier to a string, which needs to match the mission name given to the user-defined mission folder.

5.2.3 User-defined Mission File Folder Organisation

The user-defined folder must be located at the same level of the *ZoneOverPass* executable tool. As mentioned in Section 5.2.1, the name of the folder should match the string *GENERIC* or the string set in the input configuration file, depending on the option selected.

5.2.4 Orbit Files

The path to the orbit file is specified in the input configuration file (see Section 5.1.2). The supported Orbit File types are *ORB SCT*, *ORB PRE*, *ORB RES* and *ORB TLE* (see [RD 01]) for file format specification.

In the particular case of a TLE file, the format of the TLE should be as follows (example for *SENTINEL-1A*):

```
SENTINEL-1A
1 39634U 14016A 18203.57882331 -.00000001 00000-0 94119-5 0 9999
2 39634 98.1824 210.5045 0001348 77.6271 282.5085 14.59197755229086
```

For user-defined missions, the TLE parameters need to be set through the Satellite Configuration File [RD 01]. This means that user-defined missions having TLE as orbit file source cannot use the *GENERIC* identifier (so a Satellite Configuration File needs to be provided).

An intermediate *ORBP RE* file is created when using TLE files. This is done to improve the performance for TLE propagation beyond 1 day time span.

5.2.5 Instrument Swath Definition Files


The path to the instrument swath file is specified in the input configuration file (see Section 5.1.2). See [RD 01] for file format specification.

5.2.6 Example


For example, user-defined Mission File Folder *TERRASARX* in combination with TLE orbit files.

Folder name: *TERRASARX*

Input Configuration file example: *input_config_file_TERRASARX_STRIPMAP.txt*

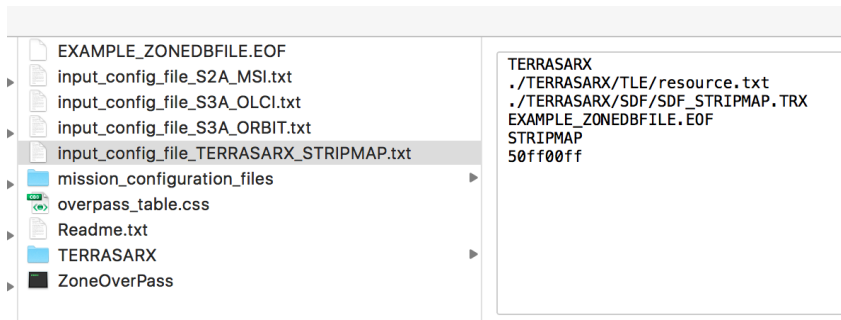

with mission folder contents:

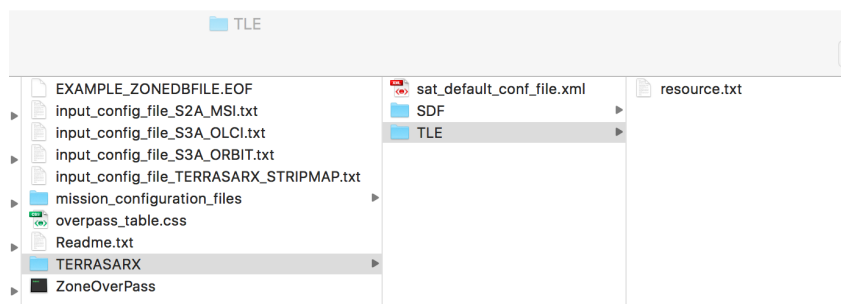

and satellite configuration file *sat_default_config.xml*:

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <Earth_Explorer_File
3   xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
4   xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_SATCFG_0201.XSD"
5   schemaVersion="2.1" xmlns="http://eop-cfi.esa.int/CFI">
6   <Earth_Explorer_Header
7     <Fixed_Header
8       <File_Name>TRX_TEST_INT_SATCFG_000000007000000_999999997999999_0001</File_Name>
9       <File_Description>Satellite Configuration</File_Description>
10      <Notes></Notes>
11      <Mission>TERRASAR-X</Mission>
12      <File_Class>TEST</File_Class>
13      <File_Type>INT_SATCFG</File_Type>
14      <Validity_Period
15        <Validity_Start>UTC=0000-00-00T00:00:00</Validity_Start>
16        <Validity_Stop>UTC=9999-99-99T99:99:99</Validity_Stop>
17      </Validity_Period>
18      <File_Version>0001</File_Version>
19      <Source>
20        <System>EOCFI</System>
21        <Creator>ESTEC</Creator>
22        <Creator_Version>1</Creator_Version>
23        <Creation_Date>UTC=2017-06-01T12:00:00</Creation_Date>
24      </Source>
25    </Fixed_Header>
26    <Variable_Header></Variable_Header>
27  </Earth_Explorer_Header>
28  <Data_Block type="xml">
29    <Satellite_Name>TERRASAR-X</Satellite_Name>
30    <NORAD_Data
31      <Satellite_Number>31699</Satellite_Number>
32      <NORAD_Sat_Name>TERRASAR-X</NORAD_Sat_Name>
33      <Int_Designator>07026A</Int_Designator>
34    </NORAD_Data>
35    <Lib_Init
36      <Low_Tolerances>
37        <Min_Semi_Major_Axis>6845000.0</Min_Semi_Major_Axis>
38        <Max_Semi_Major_Axis>6920000.0</Max_Semi_Major_Axis>
39        <Min_Inclination>96.7</Min_Inclination>
40        <Max_Inclination>98.4</Max_Inclination>
41        <Min_Eccentricity>0.0</Min_Eccentricity>
42        <Max_Eccentricity>0.5</Max_Eccentricity>
43      </Low_Tolerances>
44      <Tight_Tolerances>
45        <Min_Semi_Major_Axis>6870000.0</Min_Semi_Major_Axis>
46        <Max_Semi_Major_Axis>6895000.0</Max_Semi_Major_Axis>
47        <Min_Inclination>97.1</Min_Inclination>
48        <Max_Inclination>98.1</Max_Inclination>
49        <Min_Eccentricity>0.0</Min_Eccentricity>
50        <Max_Eccentricity>0.007</Max_Eccentricity>
51      </Tight_Tolerances>
52    </Lib_Init>
53    <Orbit_Init
54      <Min_Semi_Major_Axis>6882000.0</Min_Semi_Major_Axis>
55      <Nom_Semi_Major_Axis>6883513.869846</Nom_Semi_Major_Axis>
56      <Max_Semi_Major_Axis>6885000.0</Max_Semi_Major_Axis>
57      <Min_Inclination>97.4</Min_Inclination>
58      <Nom_Inclination>97.445997</Nom_Inclination>
59      <Max_Inclination>97.8</Max_Inclination>
60      <Nom_Eccentricity>0.001245</Nom_Eccentricity>
61      <Nom_Arg_Perigee>90.0</Nom_Arg_Perigee>
62    </Orbit_Init>
63  </Data_Block>
64 </Earth_Explorer_File>
  
```



Ref.: EOCFI-FTD-039
Issue: 2.3.1
Date: 07/07/2020
Page: 13 / 13

6. TECHNICAL DETAILS AND ASSUMPTIONS

6.1 Earth Observation CFI Software Version

The executable has been created using EO CFI SW libraries v4.14.