



estec

European Space
Research
and Technology Centre
Keplerlaan 1
2201 AZ Noordwijk
The Netherlands
T +31 (0)71 565 6565
F +31 (0)71 565 6040
www.esa.int

DOCUMENT

ESA generic E2E simulator Interface Control Document

Prepared by	EOP-PE
Reference	PE-ID-ESA-GS-464
Issue	1
Revision	5
Date of Issue	07-04-2026
Status	Final
Document Type	ICD
Distribution	all



APPROVAL

Title ESA generic E2E simulator Interface Control Document	
Issue 1	Revision 5
Author DME and ESA openSF team	Date 07-04-2026
Approved by	Date 07-04-2026
Michele Zundo	

CHANGE LOG

Reason for change	Issue	Revision	Date
First Issue	1	0	12-05-2015
Added Time Based scenario Orchestration	1	1	20-08-2015
General clean-up and removal of obsolete feature in line with openSF 2016	1	2	13-04-2016
Updates of Time orchestration file format to update obsolete examples and correct discrepancy	1	2.1	15-08-2016
Added definition of elementType and editorials	1	2.2	15-10-2016
Corrected typos in type range definition and ref. doc update	1	2.3	21-08-2017
Updates addressing issues found during development of openSF 3.7.2	1	2.4	30-05-2018
Use a coherent syntax for modes definition between Timeline scenario and Local Configuration file, clarification on parameters' format and on path usage	1	2.5	10-07-2019
Improve basic concepts definition, and update specification of environment variables	1	3	02-09-2020
Update the CLI specification	1	4	24-06-2021
Clarify the Log specification and support for 0-length string parameters	1	4.1	01-12-2021
Corrected Time format in example	1	4.2	06-03-2023
Added IF dynamic behaviour section; removed legacy notes	1	5	07-04-2026

CHANGE RECORD

Issue 1	Revision 0		
Reason for change	Date	Pages	Paragraph(s)
First Issue	12-05-2015	all	All



Issue 1		Revision 1	
Reason for change	Date	Pages	Paragraph(s)
Added Time Based scenario Orchestration	20-08-2015	22-26	§3.5

Issue 1		Revision 2	
Reason for change	Date	Pages	Paragraph(s)
General cleanup of document structure	13-04-2016		all
Added definition of matrix and array parameter types	13-04-2016		Section 2
Removal of legacy syntax for conf file (old openSF)	13-04-2016		Section 2
Consolidation of guidelines and example in section 4	13-04-2016		Section 3

Issue 1		Revision 2.1	
Reason for change	Date	Pages	Paragraph(s)
Updated version of reference/applicable documents	15-08-2016	Section 1.6, 1.7	all
Clarified naming convention	15-08-2016	Section 2.2.3	all
Removed obsolete attributes	15-08-2016	Section 2.2.6.1	all
Corrected XML examples	15-08-2016	Page 19, 21,	all
Harmonised naming Tag and Parameters' and removed redundant parameters	15-08-2016	Section 2.3.2, 2.3.3	all

Issue 1		Revision 2.2	
Reason for change	Date	Pages	Paragraph(s)
Added definition of elementType	15-10-2016	19	2.2.6.2
Editorials (upper case/lower case)	15-10-2016	19	2.2.6.2

Issue 1		Revision 2.3	
Reason for change	Date	Pages	Paragraph(s)
Updated reference documents	21-08-2017	9	1.6
Corrected typos in INT/FLOAT range definition	21-08-2017	19	2.2.6.2

Issue 1		Revision 2.4	
Reason for change	Date	Pages	Paragraph(s)
Corrected timestamp format according to CCSDS	30-05-2018	17	2.2.4



Defined type for TIME parameter compatible with CCSDS ASCII	30-05-2018	19	2.2.6.2
Clarified description of structured and simple types	30-05-2018	19-20	2.2.6.2
Removed schema spec	30-05-2018	22	2.2.6.2
Corrected typo in examples from DOUBLE to FLOAT	30-05-2018	many	

Issue 1		Revision 2.5	
Reason for change	Date	Pages	Paragraph(s)
Clarified usage of path and parameter format	10-07-2019		2.1.2, 2.2.6.2
Added enclosing <ModuleExecutionModes> tag to local configuration file syntax	10-07-2019		2.3.2
Clarify text regarding Local Configuration file wrt modes	10-07-2019		2.3.2
Remove redundant <ModuleExecutionModes> from Timeline file	10-07-2019		2.3.2

Issue 1		Revision 3.0	
Reason for change	Date	Pages	Paragraph(s)
Clarified the definition of simulation, execution and orchestration framework/infrastructure	02-09-2020		1.1, 1.4, 2
Updated specification of simulation environment variables E2E_HOME and E2E_EXECUTION_HOME	02-09-2020		2.1.1, 2.1.2

Issue 1		Revision 4.0	
Reason for change	Date	Pages	Paragraph(s)
Update CLI specification to support optional configuration, input and output files	24-06-2021		2.1.2

Issue 1		Revision 4.1	
Reason for change	Date	Pages	Paragraph(s)
Clarify that log messages are to be sent to the OS process standard output	01-12-2021		2.2.4
Improve log message format description (Remove the version field)			2.2.4
Clarify support for empty Strings			2.2.6



Issue 1		Revision 4.2	
Reason for change	Date	Pages	Paragraph(s)
Corrected Time format in example	06-03-2023		2.3.2

Issue 1		Revision 5	
Reason for change	Date	Pages	Paragraph(s)
Added description of the dynamic behaviour of interface	30-03-2026		2.4
Updated reference documents and standards	02-04-2026		1.6, 1.7
Removed legacy environment variables	02-04-2026		2.1.1
Removed legacy CLI	02-04-2026		2.1.2
Remove legacy XML syntax	02-04-2026		2.2.6
New figure 2-3 and removal of legacy notes	02-04-2026		2.3



Table of contents:

1 Introduction 7

1.1 Purpose 7

1.2 Scope 8

1.3 Acronyms and Abbreviations 8

1.4 Definitions 9

1.5 Applicable Documents 10

1.6 Reference Documents 10

1.7 Standards 10

2 Interface Definition of E2E modules 11

2.1 Module Execution 12

2.1.1 Environment variables 12

2.1.2 Command line arguments 14

2.2 Module Interface 15

2.2.1 Input/Output Files 15

2.2.2 Auxiliary Files 15

2.2.3 Module interface file naming conventions 16

2.2.4 Logging 16

2.2.5 Error handling 18

2.2.6 XML configuration files 18

2.3 Designing E2E modules for Time Based orchestration 23

2.3.1 Concepts 23

2.3.2 Timeline Configuration 25

2.3.3 Module Configuration 27

2.4 Dynamic behavior 30

2.4.1 Module configuration 30

2.4.2 Module invocation 30

2.4.3 Execution context 31

2.4.4 Progress and status reporting 31

2.4.5 Module execution sequencing logic 32

3 Guidelines for development and integration of E2E simulators 33

3.1 Coding guidelines and potential pitfalls 33

3.2 E2E simulator development walkthrough 33

3.3 Example Use Cases (time-driven) 36

1 INTRODUCTION

1.1 Purpose

An E2E Performance Simulator consists of a set of software modules simulating the space segment, its data output and the subsequent ground retrieval (level 1 and Level 2). The execution of these software modules needs to be orchestrated including in particular invocation and provision of input data. The definition of a set of standardised conventions and requirements, which the modules have to adhere to, allows then the use of a common *orchestrating framework*.

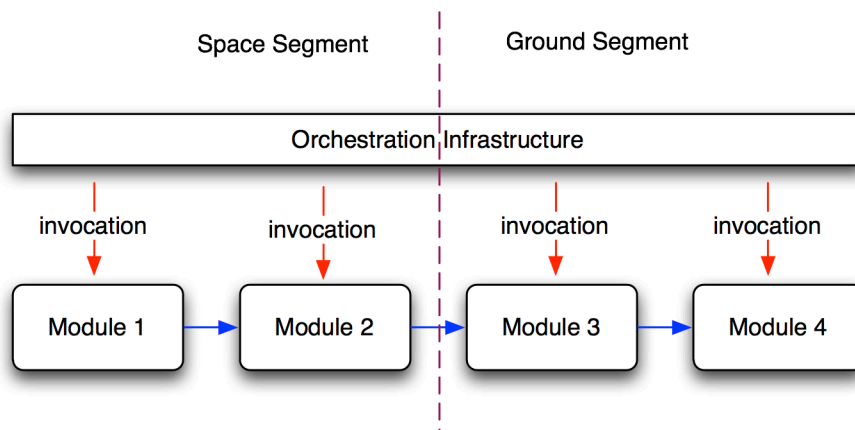


Figure 1-1: E2E Performance Simulator

These general conventions have been built based on the experience in E2E development for a number of different Earth Observation missions as well as from the experience gathered in the development and evolution of the current standard ESA E2E *orchestrating framework* OpenSF [OPENSF].

This document describes a common generic interface for software modules, which allows their integration into the ESA E2E Performance Simulator *orchestrating infrastructure*. These software modules may consist of but are not limited to scene generators, instrument or platform simulators and processors or analysis tools.

This interface has been designed to be lightweight and can be easily added to existing modules and it is compatible with many of the existing E2E Performance Simulator developed during Phase 0/A in Earth Observation as well with the *orchestrating framework* currently used within ESA [OPENSF].

This document also describes best practices to be followed during the design and implementation of software modules participating in an E2E Performance Simulator, and the way modules are used and operated within an *orchestrating framework* (e.g. OpenSF).

While each developer can independently implement the module interface described in this document, to facilitate the development ESA provides a set of reference libraries [OSFI] that implement the interface according to this document.



While ICD is generic, it notes where relevant the aspects originating by the use of modules within the [OPENSF], e.g. when some feature is not yet supported in [OPENSF] or when some construct is allowed for compatibility.

1.2 Scope

This document is divided in the following sections:

- Section 1 (this one) provides a glimpse on the document contents and purposes.
- Section 2 establishes the relations of this document with other documents and standards.
- Section 3 details the orchestrating framework interfaces and gives some development guidelines.

Potential readers of this document include scientists/engineers and modellers interested in integrating their development into ESA E2E Simulator *orchestrating framework*.

1.3 Acronyms and Abbreviations

The acronyms and abbreviations used in this document are the following ones:

Table 1-1: Acronyms and abbreviations

Acronym	Description
AD	Applicable Document
API	Application Programming Interface
COTS	Commercial Off-The-Shelf
CWD	Current Working Directory
E2E	End-to-End Simulator
ESA	European Space Agency
GUI	Graphical User Interface
HMI	Human machine Interface
HW	Hardware
I/F	Interface
I/O	Input/Output
ICD	Interface Control Document
RD	Reference Document
TBC	To Be Confirmed
TBD	To Be Defined

1.4 Definitions

The definitions of the specific terms used in this document are the following ones:

Table 1-2: Relevant definitions table

Definition	Meaning
Module	<p>An <i>executable</i> entity that can take part in a simulation. A module can be understood, broadly speaking, also as an “algorithm”. Basically, it contains the recipe to produce products function of inputs. A module contains also several rules to define the input, output and associated formats. Furthermore, its behaviour is controlled by two configuration files. Overall, the architecture of a module consists of:</p> <ul style="list-style-type: none"> ➤ The source code and its binary compiled counterpart ➤ A global configuration file with parameters common to several modules ➤ A local configuration file with module specific parameters ➤ An input file that characterizes its inputs ➤ An output file that characterizes its outputs <p>Modules are not considered part of the framework.</p>
Simulation	<p>A definition of one or more modules that can be executed in a sequential <i>logical</i> order to produce observable results.</p> <p>In practice, a simulation provides the configuration required by the orchestrating framework to control and achieve a well ordered simulation execution with reproduceable results. This configuration consists of, at least, the module plus configuration and input/output files.</p>
Execution	<p>An instance of a (simulation) obtained by running the configured list of Modules with a particular set of configuration and input. Also, the content of the folder storing all the configuration, input and output generated by executing the Simulation.</p>
Orchestrating Infrastructure	<p>A <i>logical</i> set of fundamental facilities and systems required to support the definition and control of all elements of an E2E Performance Simulator.</p>
Orchestrating Framework	<p>A <i>concrete</i> software framework designed to support and control the simulation definition and execution. The implementation of this framework includes the GUI, domain and database capabilities that enable to perform all the functionality of the simulator.</p>
Configuration File	<p>An XML file that contains all the parameters necessary to execute a module. A configuration file instance must comply with the corresponding XML schema defined at module creation time.</p>
Parameter	<p>A constant whose value characterizes a given particularity of a module. Parameters are user-configurable, they are fixed before launching a module and, for practical reasons, and not all of them shall be accessible from the HMI.</p>
Batch mode	<p>The capability of the simulator to perform consecutive runs without continuous interactions with the user. Batch mode checks the agreement or not between the output of a given module and the input by the next one in the sequence of the simulation. Several modes of executions can be performed:</p> <ul style="list-style-type: none"> ➤ Iteratively, executing one or more simulations ➤ Iteratively, executing the same simulation several times depending on the parameters configuration ➤ Same as above but by executing a batch script.



1.5 Applicable Documents

The following table specifies the applicable documents that were compiled during the project development.

Table 1-3: Applicable Documents

Reference	Code	Title

1.6 Reference Documents

The following table specifies the reference documents that, while not binding, provide additional information.

Table 1-4: Reference documents

Reference	Code	Title	Issue
[OPENSF]	openSF-DMS-SUM-001	OpenSF User Manual Document	4.1
[OSFI]	openSF-DMS-OSFI-DM-013	OpenSF Integration Libraries Developers Manual	1.20
[CFI_FS]	PE-ID-ESA-GS-584-1.1	EO Mission SW File Format Specification	1.9
[EO-CFI]	http://eop-cfi.esa.int/index.php/mission-cfi-software/eocfi-software	Earth Observation Mission SW CFI	4.30

1.7 Standards

The following table specifies the standards used in this ICD.

Table 1-5: Standard

Reference	Code	Title	Issue
[BNF]	(see also en.wikipedia.org/wiki/Backus-Naur_form)	Algol-60 Reference Manual	5, 1979
[XML]	https://www.w3.org/TR/xml11/	Extensible Markup Language (XML) 1.1	Second Edition, Sep 29 2006
[XSD]	http://www.w3.org/TR/xmlschema-2/	XML Schema Definition Language	Oct 28 2004
[T_CCSDS]	CCSDS 301.0-B-4	CCSDS Blue Book, Time Code Formats	B-4, Nov 2010
[EO-FFS]	PE-TN-ESA-GS-0001	Earth Observation File Format Standard	3.0.2

2 INTERFACE DEFINITION OF E2E MODULES

An E2E Simulator requires a series of software modules to be executed in order with the output of some models used as input to others. To implement these operations an E2E *orchestrating framework* in charge of invoking the software modules and passing them the appropriate inputs is needed.

This section defines the generic E2E Simulator Interface by describing how to integrate a module (e.g. simulators, processors, tools) into a compliant E2E *orchestrating framework* and providing detailed harmonised requirements in 3 areas:

- Data I/O interface: read input files and write output files,
- Logging and Error Handling interface: produce common log/error messaging, and
- XML Configuration interface: how to use the XML files configuration interface.

A module is defined as an entity represented by a single executable program or script. These executables represent the smallest component within a simulation chain, and can perform a given scientific algorithm, instrument modelling, data processing or any desired part of the processing chain to be simulated.

In order to integrate modules into an orchestrating framework, developers shall use an interface convention as follows:

- A common calling format from the command line (shell, cmd), as per section 2.1.2.
- Logging messages format for user information and error handling described in sections 2.2.4 and 2.2.5.
- XML configuration files for user-configurable parameters described in section 2.2.6.

Below these lines Figure 2-1 shows the diagram of the module interfaces.

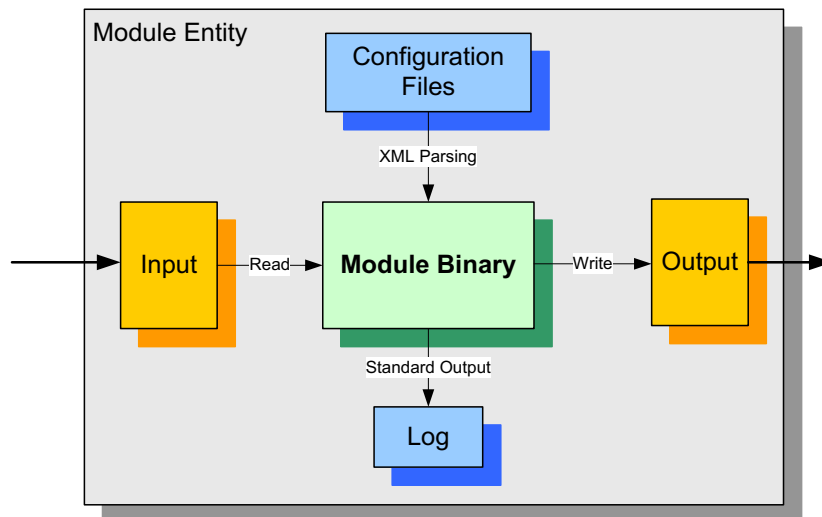


Figure 2-1: Module Entity Interfaces

A compliant module has to adhere to the following:

- **Environment variables** – modules can make use of environment variables passed from the platform to the execution environment.
- **Command line arguments** – module executables must accept a defined list of arguments.
- **Logging** – module output messages must comply with a given format.
- **Error handling** – successful executions must return a zero code to the operating system.
- **Configuration files** – modules can accept a specific XML format file if they want users to access and control their parameter values.

For a better understanding of modules logic, Figure 2-2 shows the flow diagram that a module shall nominally follow. The module execution flow can also be as complex as module developer wants provided that the interface compatibility is ensured on the item mentioned above.

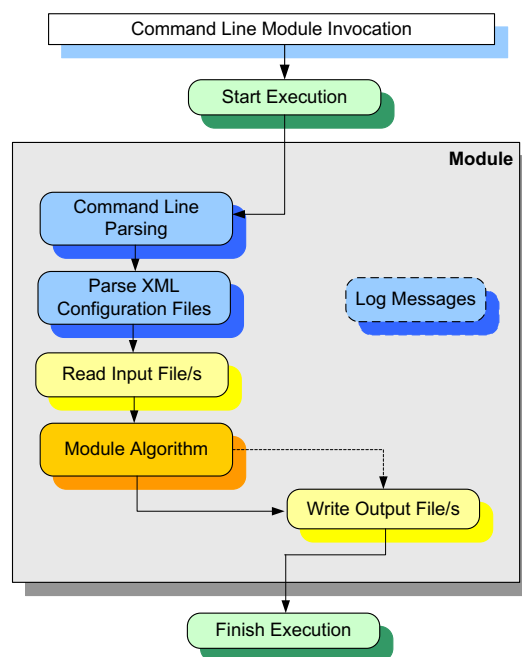


Figure 2-2: Normal Module Execution Flow Diagram

2.1 Module Execution

2.1.1 Environment variables

Users can define, through the *orchestrating framework* configuration, a collection of environment variables that are available in the simulation execution environment, and thus can be used by the modules.

However, the definition of the following environment variables is reserved to the *orchestrating framework*: *E2E_HOME* and *E2E_EXECUTION_HOME*. These environment variable shall be automatically set by the *orchestrating framework* in the simulation execution environment.



Modules are not obliged to use or depend of either *E2E_HOME* or *E2E_EXECUTION_HOME* environment variables.

E2E_HOME

The *E2E_HOME* environment variable defines the location of the E2E Simulator components (i.e. the folder containing the modules, input and configuration files that compose the E2E Simulator).

The modules can assume the *E2E_HOME* environment variable is defined and use it accordingly – e.g. as a base location to access immutable reference data.


E2E_EXECUTION_HOME

The *E2E_EXECUTION_HOME* environment variable points to the location of the execution folder of a simulation and is dynamically defined by the orchestrating framework.

The orchestration framework uses the *execution folder* as the working directory for the invocation of the simulation modules.

To independently control and configure each simulation and its results, the *orchestrating framework* creates for each simulation execution a separate *execution folder*, where the configuration and input files are provisioned and assign its path to the *E2E_EXECUTION_HOME* environmental variable.

The execution folder location can therefore be referred by a module through the *E2E_EXECUTION_HOME* environment variable (e.g. to point to a common log folder inside the *execution folder*).

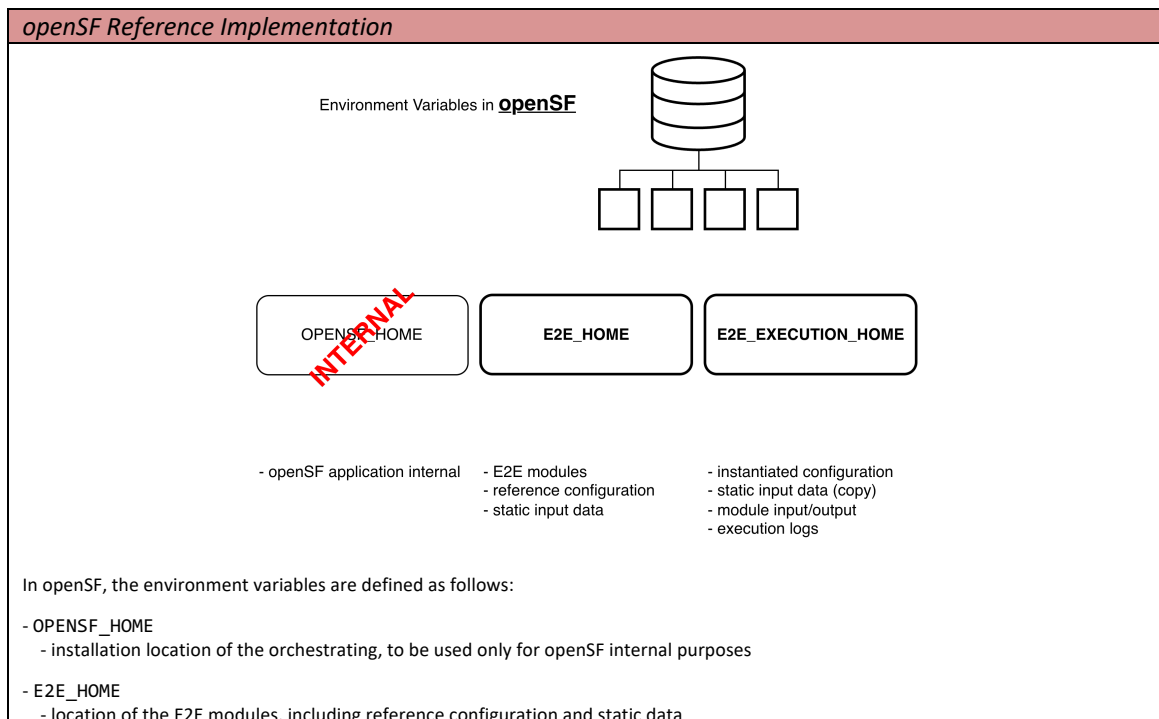



- E2E_EXECUTION_HOME
 - location created by the orchestrating framework, and provisioned with all configuration and data required to execute the module
 - also where the module creates the outputs and execution logs

2.1.2 Command line arguments

The convention for invoking a module is via its command line arguments. The general format of the calling command is a list of tokens grouped as:

- One (optional) Global configuration file
- One (optional) Local configuration file
- Zero or more Input files
- Zero or more Output files

Command line shall adhere to the following format (described here in Extended Backus-Naur form [BNF]):

```
<command_line> ::= <executable_path> (<whitespaces> <file_option>)* <EOL>
<executable_path> ::= <file_path>
<file_option> ::=
  ((--global|-g) <file_path> | (--local|-l) <file_path> | (--input|-i) <file_path> | (--output|-o) <file_path>)*
<file_path> ::= (<alphanumeric> | / | \)+ # any valid file system path to file or folder
```

Examples of command line are:

```
> executable --global cfg_global.xml --local cfg_local.xml --input in_file --output out_file
> /path/to/executable --global cfg_global.xml --input in_file_1 --output out_file_1 --input in_file_2 --output out_file_2 -
-local cfg_local.xml
```

The first argument is the name of the simulation module executable (binary or executable script).

The simulation module executable is followed on the command line by a variable number of file options, considering the following types of files:

- **--global** (or -g), global configuration file
- **--local** (or -l), module local configuration file
- **--input** (or -i), input file
- **--output** (or -o), output file

Each of the options presented above can appear in the command line zero, one or multiple times.

In case the global configuration file or module local configuration file options appear multiple times only the last value specified is considered. The configuration files are XML format files that shall be provided with a related schema. The syntax of a configuration file is specified in section 2.2.6.

All values provided for input file(s) or output file(s) are collected and made available to the module in the order they are listed in the command line, thus allowing the modules to rely on the order of the arguments.



Files declared in the command line arguments will be managed by an orchestrating framework as taking part of the simulation chain and to be used by other modules and therefore stored in the dedicated *execution folder* during the simulation execution.

The configuration, input and output file paths can be either a full or relative path. The module shall expand relative file paths as relative to current working directory. The orchestration framework shall build the CLI parameters paths either using absolute paths or paths relative to the current working of the module¹. Notice that, as mentioned in section 2.1.1, the orchestration framework defines the *E2E_EXECUTION_HOME* environment variable, and ensures that it is used as working directory.

2.2 Module Interface

2.2.1 Input/Output Files

There are no constraints imposed on modules for reading input files or writing output files. Modules have the freedom to specify as input/output either a directory or a set of one or more files. In case a directory name is used, it is responsibility of each module to select the relevant/correct inputs from the directory. A compliant orchestration infrastructure will automatically trigger a module execution when all the input files are detected as present and the generating process has completed successfully.

2.2.2 Auxiliary Files

A compliant E2E orchestrating framework makes use of one separate directory per each simulation execution where it will copy the required input files not generated by the modules (e.g. input for the first module or initial data). This copy includes directories and their content whenever the input is specified as such. To avoid disk space overuse the developer can define large input files as “auxiliary files”.

An “auxiliary file” is therefore a data file that is used as input to the simulation/processing chain but that will not be duplicated and stored in the simulation execution folder e.g. of candidates are a very large orbit files, Databases, LUTs or reference data files which do not change (e.g. physical constants). The “auxiliary files” are consequently not declared in the command line as inputs but passed to the module as a parameter within the configuration file described in section 2.2.6) and therefore not processed/visible by the orchestrating framework².

NB Declaring input data as auxiliary files should be carefully assessed as it makes the data set within the execution directory incomplete and does not ensure that re-execution will be identical, as external auxiliary data could have been changed and reduce the robustness of the E2E simulation chain as the existence of auxiliary files is not ensured by the orchestrating framework

¹ A compliant framework, namely OpenSF, checks the availability of the configuration and input files, as specified by user in the GUI, by expanding paths relative to *\$E2E_HOME*; during simulation execution, the simulation framework uses the expanded absolute paths relative to *\$E2E_EXECUTION_HOME* to invoke the modules.

² When data is passed to a module as auxiliary file specifying a path in configuration files, this ICD does not require a method/syntax to allow the orchestrating infrastructure to check their existence at time a module is started.



2.2.3 Module interface file naming conventions

In order to:

- a) facilitate the integration activities into a processing chain of several modules developed separately using coherent naming
- b) allow the orchestration infrastructure to identify interfaces and automatically detect input/output data availability

each module is (logically) identified by a user defined *ModuleID* and shall use the naming conventions described here below.

- Global Configuration files shall be named `Global_Configuration.xml`;
- Local Configuration files shall be named with each (user defined) module identifier *ModuleID* followed by suffix “_Local_Configuration.xml” (e.g. `Geo_Local_Configuration.xml`);
- Timeline file shall be named with string “Timeline_” followed by a user defined variable part, e.g. `Timeline_Commissioning_20150712.xml`

Input/Output Simplified convention:

- Input directories or files shall be named with the module identifier followed by suffix “_Input” (e.g. `Iono_Input`);
- Output directories or files shall be named with the module identifier followed by suffix “_Output” (e.g. `Scene_Output`).

Input/Output Advanced convention:³

This convention supports the use and generation by modules of input/output files with filename having a fixed part and a variable part (e.g. the timestamp or sensing time). Its use is envisaged to support the generation/ingestion of realistically named data products.

- Names for Input/Output directories or files shall be identified by a fixed string and a variable part (regular expression).

2.2.4 Logging

An E2E orchestrating framework enables logging services by capturing the log messages issued by each simulation module.

Each simulation module shall output the log messages to the standard output of the OS process (i.e. `stdout` in C and C++ applications, default unit number 6 in FORTRAN applications, `System.out` for Java applications), so that it can be collected by the orchestrating framework.

Each log message is composed of a single text line, formatted as described here below in Backus-Naur Form [BNF]:

```
<message> ::= (<progress> | <log>) <EOL>
<progress> ::= "Progress" <whitespace> <delimiter> <whitespace> <progress_body>
```

³Responsibility to generate and use the filenames according to the advanced convention resides with the module developers .



```

<delimiter> ::= "|"
<progress_body> ::= <integer> " of " <integer>
<log> ::= <type> <whitespaces> <delimiter> <whitespaces> <text>
<type> ::= "Error" | "Warning" | "Info" | "Debug"
<whitespace> ::= " "
<whitespaces> ::= <whitespace>+
<text> ::= any sequence of alphanumerical, white space or punctuation characters, excluding control characters (e.g. "\n")

```

This format defines five different types of messages:

- **Information.** This is an informative message raised by the module describing a harmless event. Module execution should continue with no interruptions.
- **Warning.** The module has detected a non-fatal error or anomalous condition in data or during the processing that may cause a fatal error or affect the outputs in format or content. The execution should continue with no interruption.
- **Error.** A major error has happened in the module execution, the module has detected it and has time to “graciously” close the execution or handle it in a module-specific way.
- **Debug.** Detailed information of the module execution given to the user. Information is intended to lead the user (or module developer) to support fixing a problem. This is a harmless event so module execution should continue with no interruptions.
Modules shall present debug messages only if the environment variables named “DEBUG_MODE” is defined and set as “On” in the module execution context.
- **Progress.** Numerical information on the amount of module execution performed.

Examples of log messages provided by an executable are:

```

Info | Method "m" started | 3.2.10
Warning | Method "m" applied an approximation to this calculation
Error | Method "m" could not converge to a solution
Debug | Method "m" obtaining error = 0.001
Progress | 5 of 25

```

It is important to recall that it is the responsibility of the developer to decide when a condition shall be flagged as a *Warning* instead of an *Error*, or when and where a *Debug* message is relevant. Therefore, it is not ensured that all “*Warning*” messages shown in the orchestrating framework have the same severity and consequences, i.e. they are qualitatively the same among the different modules.

All those pieces of information composing a message must be joined together by the module that has to write the complete message as string of characters formatted according to this ICD. The version component of the message is optional and represents the version of the logging library used to issue the message.

If the message does not fulfil this requirement it will not be considered as information to be stored, thus, when closing a simulation execution, it will be lost.

The time-stamping of each message with actual computer time is the responsibility of the logging infrastructure implementing this ICD; any other time information relative to the domain of the processing module (e.g. sensing time associated with a certain data causing the message or scenario simulation time) has to be added as part of



the message. Any such time representation is recommended to abide to the ASCII format as described in section 2.5 of [T_CCSDS] with millisecond decimal part and without the optional Z terminator ‘YYYY-MM-DDThh:mm:ss.nnn’, e.g. 2015-06-04T12:53:48.021

2.2.5 Error handling

An orchestrating framework implementing this ICD will interrupt the execution of a simulation once a module returns a non-zero code. This is used to detect module crashes and can be adopted by module developers as another way to stop the simulation execution in case of errors. There is a basic difference between the return codes and the *Error* string message:

- When a non-zero code is detected, it means that an error condition has happened and that the module has been unable to detect it, handle it or is intentionally returning a non-zero code to signal to the E2E orchestration simulator that the whole simulation execution has to be aborted.
- When a string message of category “Error” is returned, it means that the module has found a non-nominal situation according to the flow and tests coded by the module developer. Thus, after an *Error* message, all the subsequent actions will proceed with what the module handling strategy foresees with no intervention by the E2E orchestration framework. While one option is to stop the module it can also take corrective actions so that the module proceeds with further processing. These possibilities are fixed by the developer at the time of coding it.

2.2.6 XML configuration files

The behaviour of a given module can be controlled using the two XML configuration files as previously described. This section describes the rules and conventions that such configuration files have to follow in addition to standard [XML] rules, e.g. the preamble `<?xml version="1.0" encoding="UTF-8"?>`.

Note that, the choice has been made to limit the parameter representation in the configuration files to a fix set of types in order to reduce complications.

The configuration files shall contain the following xml elements:

Element “<group_name>”

This type of element constitutes an informative name related to the scope of the elements it encloses. In addition to the mandatory cases listed below, the string *group_name* can be any user defined text.

An element of type <group_name> can contain nested groups that can in turn enclose parameters. When a <group_name> tag encloses a set of parameters, it is used by the orchestrating infrastructure as a label to identify them.

A mandatory <group_name> tag identifying the configuration logical file name shall be used in each file as listed below. This element constitutes the root xml element and encloses the whole file and it is a string identifying the configuration file logical name. For a module called “*ModuleID*” the following logical names shall be used for the each of the 3 configuration files identified in this ICD:

- `<Global_Configuration version="XX.YY.ZZ">`, (for Global Configuration File)
- `<ModuleID_Local_Configuration version="XX.YY.ZZ">` (for Local Configuration Files)
- `<Timeline_UserDefinedString version="XX.YY.ZZ">` (for Timeline Files as described in section 2.3.2)

NB Even if the configuration filenames violate the file naming requirements described in section 2.2.3, the Configuration File Logical name shall be as specified above

Element <parameter>

Sequence of one or more tag with fixed string “parameter”. This element can define the following attributes:

- **name.** This is the parameter identifier. Names cannot contain spaces;
- **description.** Short definition or meaning for the parameter;
- **type.** The data type of the parameter. Possible values are system-independent type of values, only intended for formatting validations. The data types supported by configuration files are the following:

Simple types

- **STRING.** A string composed of alphanumeric, punctuation or whitespace characters (but excluding control characters e.g. “\n”) with length ranging from 0 to 255
- **INTEGER.** Integer number (no decimal part) between -231 and 231-1
- **FLOAT;**⁴ Decimal number as per IEEE 754 between 5.0×10^{-324} and 1.7×10^{308} (positive or negative)
- **BOOLEAN.** TRUE or FALSE.
- **TIME** A string according to CCSDS ASCII time format with millisecond or microsecond precision e.g. 2020-11-21T13:45:12.123 or 2020-11-21T13:45:12.123456
- **FILE.** Path to a file in the local file system (either absolute or implicitly relative to *E2E_HOME* environment variable).
- **FOLDER.** Path to a folder in the local file system (either absolute or implicitly relative to *E2E_HOME* environment variable).

Structured types

- **ARRAY.** A generic array of elements (up to 3 dimensions), where each dimension may have distinct sizes.
- **MATRIX.** A special case of ARRAY of two dimensions in which all rows (sub-elements) have the same size⁵.

elementType

- used in complex types to specify the type of the actual data. Its value can be any of the simple types described above. Note that heterogeneous arrays (with data elements having different *elementType* values, like a row of INTEGERS and a row of STRINGS) are not supported
- **units.** Physical units of measurements if applicable. This attribute is optional;
- **min.** Numerical minimum value for the parameter. Only applicable for FLOAT and INTEGER types.

⁴ The Java types “int” and “double” fix the range of values in INTEGER and FLOAT parameters

⁵ The dims for a MATRIX variable are specified as "columns rows", instead of having dims="rows" in the outer element and dims="columns" in each row



- **max.** Numerical maximum value for the parameter. Only applicable for FLOAT and INTEGER types.
- **dims.** Size of the dimensions. For example: “5” defines a [5x1] vector of five elements (arranged in a row); and “4 3” is a matrix of [4x3] elements.
By convention, to describe a two dimensional type the first dimension refers to columns and the second to rows. In case of a tree dimensional type, the dimension referring to layers becomes the last, as in [column x row x layer].

For scalar variables, the “dims” attribute can be omitted.

To support structured parameters and matrices (or more generically arrays of elements) the following syntax is prescribed.

1. to represent a vector, arranged in a row (with dimension [5x1])

```
<MyModule_Local_Configuration version="01.03.00">
  <parameters>

    <parameter name="myV" description="example 1" type="ARRAY" elementType="INTEGER" dims="5">
      1 2 3 4 5
    </parameter>

  </parameters>
</MyModule_Local_Configuration>
```

2. to represent a matrix (with dimension [4x3]) (see *attribute note*)⁸

```
<MyModule_Local_Configuration version="01.03.00">
  <parameters>

    <parameter name="MyMatrix" description="example 2a" type="MATRIX" dims="4 3">
      <parameter name="v1" type="ARRAY" elementType="INTEGER">1 2 3 4</parameter>
      <parameter name="v2" type="ARRAY" elementType="INTEGER">5 6 7 8</parameter>
      <parameter name="v3" type="ARRAY" elementType="INTEGER">9 10 11 12</parameter>
    </parameter>

  </parameters>
</MyModule_Local_Configuration>
```

3. to represent a two-dimensional generic array (considering the variable number of columns, the enclosing dimension is [6x4])

```
<MyModule_Local_Configuration version="01.03.00">
  <parameters>

    <parameter name="spectrum" description="example 3a" type="ARRAY" dims="4">
      <parameter name="v1" type="ARRAY" elementType="INTEGER" dims="3">1 2 3</parameter>
      <parameter name="v2" type="ARRAY" elementType="INTEGER" dims="6">4 5 6 7 8 9</parameter>
      <parameter name="v3" type="ARRAY" elementType="INTEGER" dims="5">10 11 12 13 14</parameter>
      <parameter name="v4" type="ARRAY" elementType="INTEGER" dims="1">15</parameter>
    </parameter>

  </parameters>
```

⁸ Considering the current implementation openSF/OSFI for structured elements, the **name** and **description** attributes can only be used to access the outermost <parameter> element. When associated to inner elements these attribute cannot be accessed with the existing openSF/OSFI API and are ignored.



```

</parameters>
</MyModule_Local_Configuration>

```

4. to represent a three-dimensional generic array (considering the variable number of columns, the enclosing dimension is [5x4x2])

```

<MyModule_Local_Configuration version="01.03.00">
  <parameters>
    <parameter name="OuterArray" description="example 3b" type="ARRAY" dims="2">
      <parameter name="innerArray1" type="ARRAY" dims="4">
        <parameter name="v1a" type="ARRAY" elementType="INTEGER" dims="1">1</parameter>
        <parameter name="v2b" type="ARRAY" elementType="INTEGER" dims="3">2 3 4</parameter>
        <parameter name="v3c" type="ARRAY" elementType="INTEGER" dims="2">5 6</parameter>
        <parameter name="v3d" type="ARRAY" elementType="INTEGER" dims="1">7</parameter>
      </parameter>
    <parameter name="innerArray2" type="ARRAY" dims="3">
      <parameter name="v1e" type="ARRAY" elementType="INTEGER" dims="2">1 2</parameter>
      <parameter name="v2f" type="ARRAY" elementType="INTEGER" dims="5">3 4 5 6 7</parameter>
      <parameter name="v3g" type="ARRAY" elementType="INTEGER" dims="2">8 9</parameter>
    </parameter>
  </parameters>
</MyModule_Local_Configuration>

```

For vector/matrix types the values consists of blank-separated list of values by rows. To fully describe a parameter of a structured type, the attribute `elementType` is used to define the element type. Attribute `elementType` may have, as value, all currently supported parameter simple types.

Strings stored in structured layout parameters (i.e. MATRIX, ARRAY) must enclose each element in single quotes. For example, `'a string' 'second string' 'last string'` represents a 3 element string vector. With this approach, a MATRIX or ARRAY of strings can be handled with generality as it is possible to manage strings that include whitespace or commas.

For example, in case of an ARRAY with three strings, i.e. 1 row with 3 columns, these are possible options:

- Value set to `'PMT' 'PMT' 'PMT'` **OK**
 - Interpreted as 3 values
- Value set to `'PMT' '' 'PMT'` **OK**
 - Interpreted as 3 values; where the 2nd element is a 0-length string
- Value set to `'PMT' 'PMT' ''` **OK**
 - Interpreted as 3 values; where the last element is a 0-length string
- Value set to `P T P T P T` **Invalid.**
 - Impossible to take 6 values in an ARRAY of size 3

Parameters of type FILE/FOLDER can include also environment variables explicitly, by enclosing their name in curly braces e.g. `#{E2E_HOME}/var/tai-utc.data`. A FILE/FOLDER parameter value expressed as a relative path is implicitly considered as being prefixed by `#{E2E_HOME}/`.

A compliant orchestrating framework or associated functions automatically resolve FILE/FOLDER parameters, by substituting explicit or implicit environment variables and resolving the path to an absolute path. When retrieving



these type of parameters from the configuration file, a simulation module will therefore always access an absolute path.

Validation Schemas

An XSD schema can be used by the module to validate the module configuration files.

The freedom allowed in the use of group names in XML configuration files makes impossible the creation of a unique XSD schema file valid to all of them. Note that module developers are able to create as many groups as they desire and there are no restrictions in the number of nesting levels.

Adoption of Earth Observation File Format

The use of the Earth Observation File Format [EO-FFS] is oriented to ground segment software in a near-operational environment. This format is not used for the XML configuration files defined in this interface but its use is recommended as a standard, harmonised format for the input/output files and data used by each module. This is strongly recommended, in particular, for the elements that simulate the ground processing (e.g. Level 1/Level 2 Processor Prototypes).

Note that if any of the software modules makes used of Earth Observation Mission SW CFI libraries [EO-CFI] e.g. to support orbital propagation, visibility calculations and read/write of XML files, then these files are fully compliant with the [EO-FFS].



2.3 Designing E2E modules for Time Based orchestration

This section prescribes how to define the standard configuration interface of each module in order to allow invocation in a time based fashion from any complaint orchestrating framework.

In a real operational satellite system, the behaviour and stimuli presented to the satellite are a function of time and a dynamic function of the operational control by the ground or on-board. Depending on instrument mode, attitude, position different stimuli are available and different on-board functions active (e.g. different observation modes, calibration, downlink, attitude determination, etc). Being able to flexibly drive the modules of an E2E simulation from the infrastructure as if flying the actual mission allows an efficient execution of the simulation, the assessment of mission performance in representative operational scenario, a quick way for test data generation and in general gives the freedom to explore different operational concepts in an automated way and not restricted to feeding static test stimuli to the simulation modules and avoiding the need to hardcode dynamic behaviour inside static data.

The Time based scenario execution implements the notion of time driven execution of a simulation whereby each simulation module is invoked in a sequence of time segment. An example is shown in Figure 2-3.

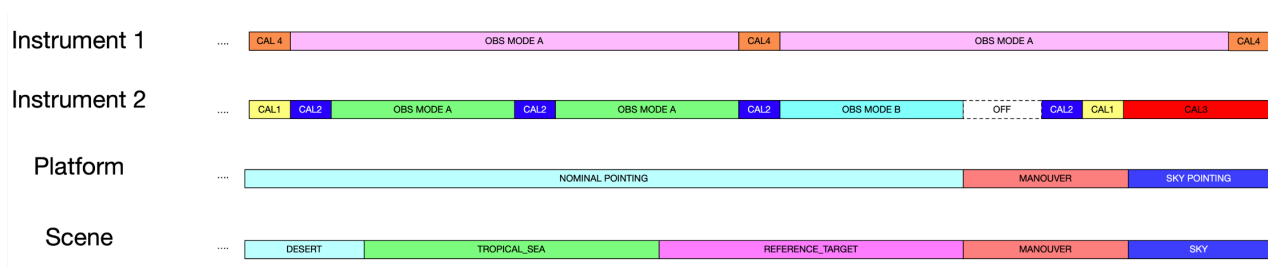


Figure 2-3: Example of time evolution

The interface described in this ICD (a) keeps the approach for invoking a module (as per section 2.1.2); (b) naturally extends existing configuration files (defined in section 2.2.6) to include additional time related parameters.

This section introduces the concepts and the definition in term of the interfaces also with regards to the reference [OPENSF] orchestrating infrastructure that implements this ICD.

2.3.1 Concepts

E2E chain execution categories

To guide the time driven execution each module in an E2E chain are classified in one of two execution categories: *Simulation* and *Processing*. A module of the “*Simulation*” category can be run either in *time-driven* execution or in *data-driven* execution, while a module of the “*Processing*” category is instead run only in data-driven execution.

Time-driven vs. Data-driven execution

Each overall E2E chain/simulation execution may be performed either in time-driven or data-driven execution. When *in time-driven* execution the modules categorised as “*Simulation*” shall be executed in *time-driven* fashion (iterating in time) while in *data-driven* execution the same modules are executed in data-driven configuration



(driven by data availability), on the other hand the modules categorised as “Processing” are always executed in data-driven configuration regardless of the overall simulation execution strategy therefore only for “Simulation”-type modules can time-driven configuration be applied.

Module-execution modes

Each module may have several associated module-execution modes as identified by its developer. Each module-execution mode is defined by a given set of parameters affecting the functions of that module, as example a parameter could be used to set the module to perform calibration simulation instead of measurements. For a given module with several available modes there may be parameters which are mode-independent (so applicable to all modes) and parameters, which are mode-specific. Nominally a mode is defined by a specific assignment of values to their corresponding mode parameters and these shall be passed by the orchestrating infrastructure to the module, it is however possible to manually override via the infrastructure these pre-defined values in a given execution although this is transparent to the module.

Timeline Segment

A timeline is composed by a time-ordered sequence of non-overlapping time segments, each defined by:

- a. a start time;
- b. one among: duration, number of steps and step size or end time;
- c. a list of module-execution modes (one per each module of the E2E chain);
- d. a status (active/inactive);
- e. an (optional) set of overridden module execution mode parameters.

Simulation execution

In time-driven mode the orchestration framework invokes, for each timeline segment, the (simulation) modules in the order defined by the setup, each time passing as input the parameters of the selected mode defined by the timeline segment being executed. The process is repeated until the end of the timeline.

The time driven related parameters are passed to the modules thru the global configuration file grouped in an xml tag. The mode specific parameters are passed to each module thru the local configuration file grouped in an xml tag with the mode name. If the mode specific parameters were overridden in the timeline definitions this shall be signalled with an xml attribute in the mode group tag.

The orchestrating framework shall manage a single working directory for a simulation execution in time-driven execution (labelled with the execution timestamp). Within this working directory there shall be a separate working folder for each timeline segment (labelled with the simulation timestamp). A simulation execution in data-driven execution shall use a single working folder were the several executions of each given module shall access their inputs and outputs.

2.3.2 Timeline Configuration

The Timeline configuration is implemented via a file containing the information defining the time-driven execution of a simulation in a self-contained manner, i.e., containing all required parameterisation that allows the orchestrating infrastructure to execute and replicate a given time based simulation.

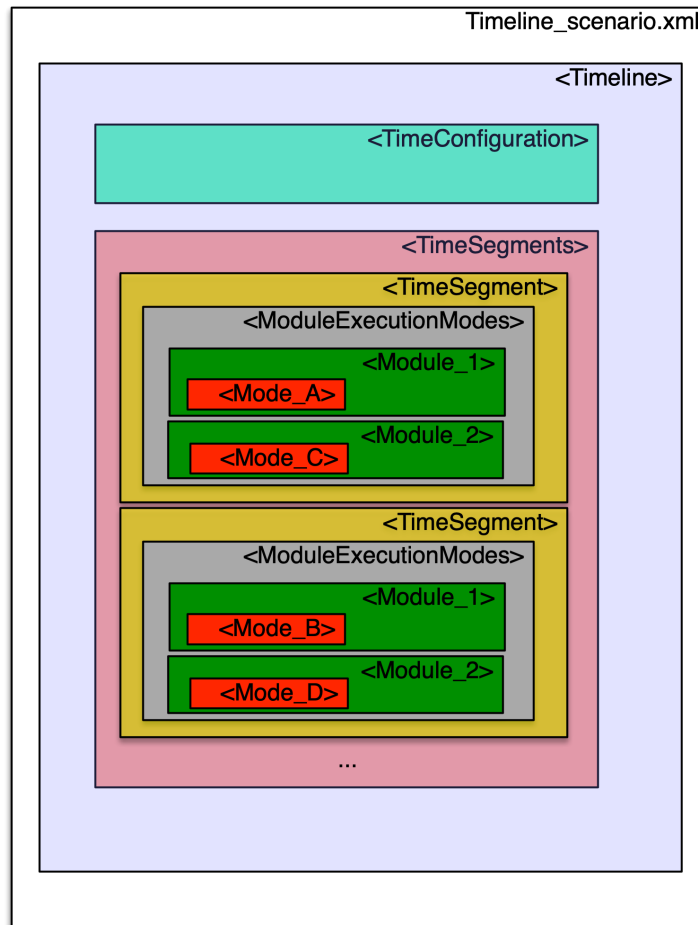


Figure 2-4 - E2E simulation with processing modules and simulation modules driven in time

The timeline configuration file is an XML file compliant with the configuration files format and with the logical structure shown in 2.2.6

This file is not needed/present if the simulation is not time driven.

The Timeline configuration file contains the following set of data:

- a. the generic time parameters;



- b. the list of time segments;

These 3 elements are described here below:

- A. The generic time parameters are the following:
- **InitialEpoch**. A Time indicated the start time of the entire time driven execution;
 - **DefaultTimeSegmentDuration**. An Integer with the default duration (in seconds) to apply when adding a new time segment to the timeline.
- B. A time segment is defined by the following parameters:
- **TimeSegmentStartTime**. A Time indicating the start time of the time segment;
 - **TimeSegmentDuration**. An Integer indicating the duration of the time segment (in seconds);
 - **Active**. An Boolean indicating whether the time segment is to be executed;
 - A set of **module execution modes**, identifying the mode in which each module shall execute during that time segment. It may optionally include a set of parameters re-defining module execution mode parameters used when the user intends to manually override the default values for a module execution mode.
Each **module execution mode** is defined by the set of specific parameters grouped in an xml tag with the mode name.

The root element of the timeline configuration files shall be <Timeline>.

An example of a timeline configuration file is here below:

timeline_scenario.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<Timeline version="00.15.33">
  <TimeConfiguration>
    <parameter name="InitialEpoch" description="Time Driven Execution Start Time"
      type="TIME">2015-01-01T00:00:00.000</parameter>
  </TimeConfiguration>
  <TimeSegments>
    <TimeSegment>
      <parameter name="TimeSegmentStartTime" description="Time Segment Start Time"
        type="TIME">2015-01-01T00:00:00.000</parameter>
      <parameter name="TimeSegmentDuration" description="Time Segment Duration"
        type="INTEGER" units="second">300</parameter>
      <parameter name="Active" description="Time Segment Status" type="BOOLEAN">TRUE</parameter>
      <ModuleExecutionModes>
        <GeometryModule>
          <Nominal></Nominal>
        </GeometryModule>
        <SceneGenerator>
          <Nominal status="override">
            <parameter name="toa_factor" type="FLOAT">1</parameter>
            <parameter name="pol_factor" type="FLOAT">0.02</parameter>
          </Nominal>
        </SceneGenerator>
      </ModuleExecutionModes>
    </TimeSegment>
    <TimeSegment>
      <parameter name="TimeSegmentStartTime" description="Time Segment Start Time"
```

```

        type="TIME">2015-01-01T00:00:00.000</parameter>
<parameter name="TimeSegmentDuration" description="Time Segment Duration"
    type="INTEGER" units="second">10</parameter>
<parameter name="Active" description="Time Segment Status" type="BOOLEAN">FALSE</parameter>
<ModuleExecutionModes>
    <GeometryModule>
        <Manoeuvre></Manoeuvre>
    </GeometryModule>
    <SceneGenerator>
        <Nominal></Nominal>
    </SceneGenerator>
</ModuleExecutionModes>
</TimeSegment>
</TimeSegments>
</Timeline>

```

2.3.3 Module Configuration

The parameters related to the time driven execution mode are passed to the modules thru the configuration file(s) grouped in the xml tag <TimeExecution>.

Global Configuration File

The fixed set of global time driven related parameters included in the global configuration file are the following:

- **InitialEpoch.** A Time indicated the start time of the entire time driven execution scenario.

global.xml

```

<?xml version="1.0" encoding="UTF-8"?>
<Global_Configuration version="01.00.00">
    <TimeConfiguration>
        <parameter name="InitialEpoch" description="Time Driven Execution Start Time"
            type="TIME">2015-01-01T00:00:00.000</parameter>
    </TimeConfiguration>
</Global_Configuration>

```

Note that if time-driven execution is not implemented or supported by modules the corresponding time-related entries in the Global Configuration file might not be present.

Local Configuration File

The fixed set of parameters related to the module-specific time driven execution and that are included in each local configuration file are the following:

- **ModuleExecutionMode.** A String representing the module execution mode.
- **TimeSegmentStartTime.** A Time indicating the start time of the specific timeline execution step for the given module.



- **TimeSegmentDuration.** The seconds that define the duration of the time step to be executed by the module.

The mode specific parameters are passed to the module thru the existing local configuration file grouped in an xml tag with the mode name. If the module specific parameters were overridden in the timeline definitions this shall be signalled with an xml attribute in the mode group tag.

localA.xml

```

<?xml version="1.0" encoding="UTF-8"?>
<ModuleA_Local_Configuration version="04.15.33">
  <TimeConfiguration>
    <parameter name="ModuleExecutionMode" description="Module Execution Mode"
      type="STRING">Maintenance</parameter>
    <parameter name="TimeSegmentStartTime" description="Time Driven Execution Start Time"
      type="TIME">2015-01-01T00:00:00.000</parameter>
    <parameter name="TimeSegmentDuration" description="Execution Length"
      type="INTEGER" units="second">300</parameter>
  </TimeConfiguration>
  <parameter name="Lambda" description="Central Wavelength"
    type="FLOAT" units="nm">500.3</parameter>
  <parameter name="ErrorThreshold" description="Threshold of the output RMS error"
    type="FLOAT" units="Km">1.0</parameter>
  <ModuleExecutionModes>
    <Off>
      <parameter name="calibration" description="text" type="BOOLEAN">TRUE</parameter>
    </Off>
    <Maintenance status="override">
      <parameter name="angle" description="text" type="FLOAT">0.5</parameter>
    </Maintenance>
  </ModuleExecutionModes>
</ModuleA_Local_Configuration>

```

Note that if time-driven execution is not implemented or the module is modeless, the corresponding time-related entries in the Local Configuration file will be not present.



2.4 Dynamic behavior

This section defines the expected dynamic behaviour of an orchestration framework implementing this ICD. Compliant E2E modules shall be compatible with this behaviour.

This section does not introduce additional requirements; rather it clarifies in a consolidated and structured way the interactions between the orchestration framework and the modules when implementing the ICD provisions defined textually in the preceding sections.

2.4.1 Module configuration

- a) Module configuration shall be performed exclusively via the global and local configuration files defined in Section 2.2.6.
- b) These configuration files shall be provided to the module through the command-line interface arguments as specified in Section 2.2.1.
- c) The module shall not rely on any alternative configuration mechanisms (e.g. environment variables).
- d) The module shall be responsible for:
 - parsing the configuration files;
 - extracting the relevant parameters (e.g. using [OSFI] or equivalent mechanisms).
- e) For time-based execution, the orchestration framework shall provide the timing parameters via the configuration files, in accordance with Section 2.3.3.
- f) Modules supporting multiple execution modes shall determine the active mode exclusively through these configuration inputs.

2.4.2 Module invocation

- a) The orchestration framework shall invoke modules via their command-line interface, in accordance with the interface specification defined in Section 2.1.2.
- b) At the time of invocation, a module may assume that:
 - all declared input files and directories exist (Section 2.2.1).
- c) The module shall be responsible for:
 - validating the correctness and consistency of all inputs;
 - handling erroneous or inconsistent inputs.
- d) The module shall:
 - return exit code 0 upon nominal completion;



- return a non-zero exit code in case of an unrecoverable error.
- e) In case of a non-zero return code, the orchestration framework shall detect the error condition and abort the simulation execution, in accordance with Section 2.2.5

2.4.3 Execution context

- a) A module shall not:
- make assumptions about the current working directory;
 - attempt to modify the current working directory.
- b) A module may access static resources via the following environment variables (Section 2.1.1):
- E2E_HOME
 - E2E_EXECUTION_HOME
- c) Implicit dependencies on such environment variables shall be avoided and all dependencies only explicitly defined via configuration files.
- d) A module shall assume that E2E_EXECUTION_HOME is unique per execution and consequently, a module is not required to implement mechanisms (e.g. timestamp-based naming) to avoid overwriting outputs from previous executions.

2.4.4 Progress and status reporting

- a) A module shall report via the logging mechanism defined in Section 2.2.4
- progress information;
 - events;
 - recoverable errors
- b) A module shall report unrecoverable errors:
- via the same logging mechanism defined in Section 2.2.4;
 - result in a non-zero exit code.
- c) Modules should implement recovery only for errors that are representative of operational scenarios. All other error conditions should result in immediate termination of execution:
- An example of a recoverable operational error is having a malformed input packet data, which a processor should ignore by skipping it, but the event should be logged;
 - An example of a non-recoverable error is a missing DEM tile folder, which prevents all further processing.



2.4.5 Module execution sequencing logic

- a) The orchestration framework shall ensure that modules are executed in the correct sequence.
- b) At the time of invocation, a module may assume that:
 - all upstream modules providing its inputs have completed successfully;
 - all required input data are available.
- c) For time-based execution, a module may additionally assume that:
 - its invocation is consistent with the active timeline segment;
 - preceding modules have been executed in the appropriate mode for that segment, as defined in Section 2.3.2.

3 GUIDELINES FOR DEVELOPMENT AND INTEGRATION OF E2E SIMULATORS

3.1 Coding guidelines and potential pitfalls

Developers should have in mind the following points when coding modules:

- Memory handling is responsibility of the module. This ICD does not require that a compliant orchestrating framework manages the memory assignments and destroys any data structure created by the module;
- A module can create child processes, but their management is responsibility of the parent module and not of the orchestrating framework;
- This ICD does not require that a compliant orchestrating framework detects when a module execution is “halted” or in an infinite loop unless a non-zero code is returned on exit. It is therefore recommended that logging information (see section 2.2.4) are issued around every two seconds to allows the orchestrating framework to update the progress bar informing, the user that there is no problem and to provide a more user friendly simulation environment.

3.2 E2E simulator development walkthrough

This section gives an example of the development process for a generic E2E simulation using modules compliant with this ICD.

The steps given in this section can be taken as guidelines for a correct integration of an E2E simulator. The simulation chain used along this section is depicted in Figure 3-1.

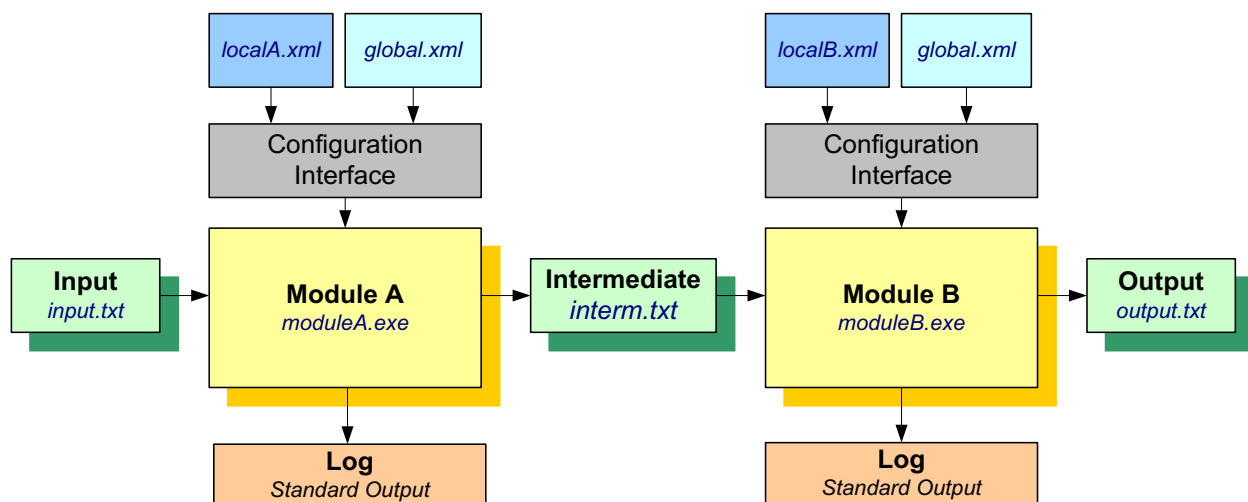


Figure 3-1: Fictitious Simulation Scenario

There are a series of steps that a developer has to address in order to accomplish a simulation goal and integrate all the system into a compliant orchestrating framework.

- a) **Identify the elements involved in the simulation scenario.** In this example are:
 - Two modules – Module A and B (yellow boxes).



- Three product files – Input, Intermediate and Output (green boxes).
 - Three XML configuration files – a global and two local files (blue boxes).
- b) **Provide a detailed description of the simulation logic.** The one depicted in the example is as follows:
- The input for the simulation chain is the file “input.txt”, it is also the input for Module A.
 - There are two modules, one after the other, in the simulation (Module A and Module B). These modules execute a set of algorithms and are callable by command line invocation.
 - Module A generates an output file (“interm.txt”) that Module B accepts as input.
 - The output of the simulation chain is the file generated “output.txt” and is considered as the result product in the chain.
 - Module A and Module B have a configuration interface requiring two files, one local (“localA.xml” and “localB.xml”) and one global that is common to both modules (“global.xml”). These configuration files contain the simulation parameters that govern the internal functionality of modules. The ones relevant for all modules in the simulation shall be identified and assigned to global configuration file.
 - Identify which input data files are considered input files and which ones (if any) can be passed to the modules as path within the Local Configuration file noting the disadvantages mentioned in section 2.2.2
 - The log messages system provides information about the current state of the modules during a simulation run.
- c) **Develop the modules following the architecture defined in the design phase.** The development process for the example shall be:
- Build the configuration files with the simulation parameters. Simplified example configuration files are shown here below.

global.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<Global_Configuration version="01.03.07">

  <parameter name="Nbands" description="Number of Bands" type="INTEGER">11</parameter>
  <parameter name="MissionID" description="Mission Identifier" type="STRING">Sentinel3</parameter>

</Global_Configuration>
```

localA.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<ModuleA_Local_Configuration version="04.15.33">

  <parameter name="ErrorThreshold" description="Threshold of the output RMS error"
    type="FLOAT" units="Km">1.0</parameter>

</ModuleA_Local_Configuration>
```

localB.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<ModuleB_Local_Configuration version="6.15.00">

  <parameter name="Lambda" description="Central Wavelength"
    type="FLOAT" units="nm">500.3</parameter>
```

```
</ModuleB_Local_Configuration>
```

- Implement the modules input/output interfaces. This step involves the reading of input files and configuration files (XML parsing), write the output files and the implementation of the command line calling interface as well as fetching the auxiliary files defined within the Local Configuration file..
- Implement the module logic, the algorithm.
- Perform Unit testing for the modules.

Once the development of the tasks above is completed, the test of manually running the simulation chain is possible the following commands:

```
> moduleA.exe global.xml,localA.xml input.txt interm.txt  
> moduleB.exe global.xml,localB.xml interm.txt output.txt
```

- d) **Define the simulation scenario within the orchestrating framework.**
- e) **Verify the integration within the orchestrating framework by executing the simulation using the framework.**

3.3 Example Use Cases (time-driven)

Use Case 1: E2E simulation including both simulation modules and processing modules, when the simulation modules are driven in time-based synchronisation

From a conceptual point of view the expected behaviour of an execution in such scenario corresponds to what is depicted in Figure 3-2.

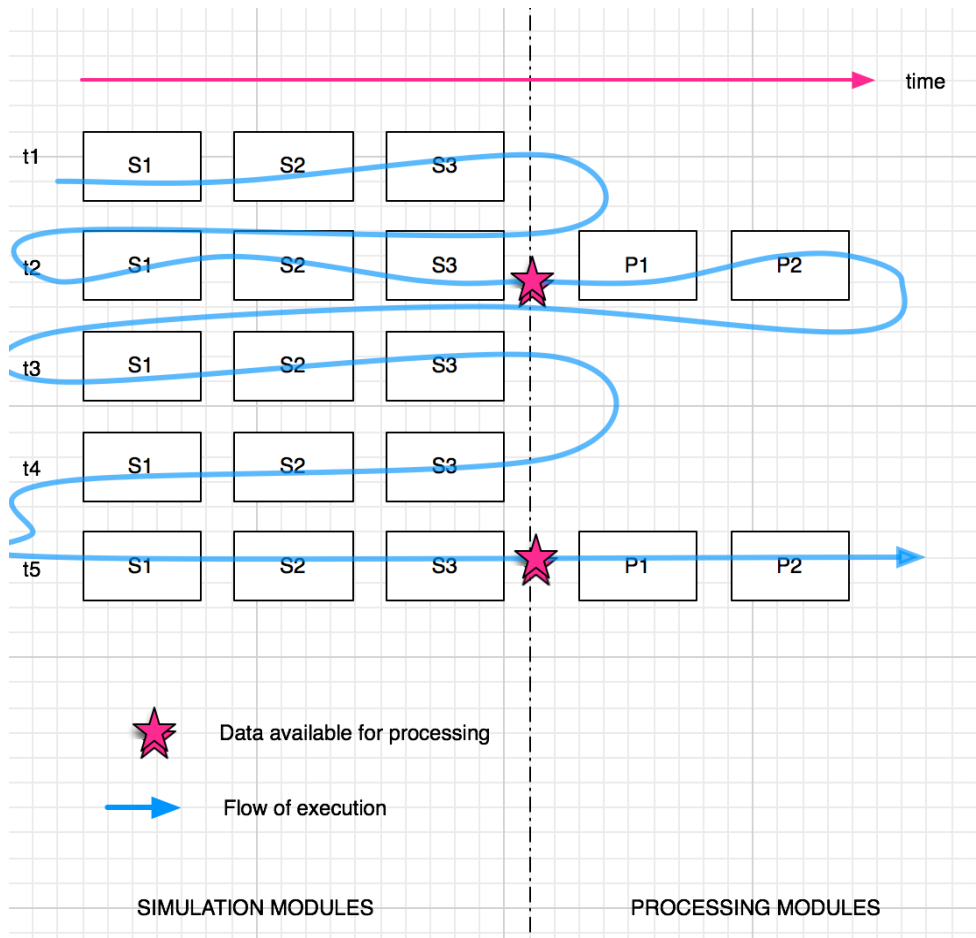


Figure 3-2 - E2E simulation with processing modules and simulation modules driven in time

Note that it is outside the orchestrating framework’s orchestration scope to understand the events of "Data available for processing" (the "stars" in the figure above). These events depend on the processing chain definition as well as on the actual outputs of each module or even the particular implementation of the modules. Therefore the emulation of this flow can be performed in the following alternative ways:

- a) always execute the entire processing chain (S1 -> P2) at each time moment, but P1+P2 shall only do "meaningful" computation if S3 has produced the consolidated outputs (identifiable by P1 through a given mask);
- b) Execute the simulation in two separate steps:

- i. execute the time-driven execution, where the Simulation Module’s part of the chain is executed, with one independent execution for each time moment;
- ii. after concluding the above execution, trigger the data-driven execution, where the Processing Modules part of the chain are executed, configured to have as input the output of the previous time-driven execution;

Either way the underlying idea is that the responsibility for the "handover" between Simulation modules and Processing modules is either on the modules implementation or the operator, not on the orchestrating framework.

Use case 2: Multi-Instrument E2E simulation including both simulation modules (in time-driven execution) and processing modules, with different timelines for each instrument

In the example of Figure 3-3 consider that INSTR1 is in Nominal mode for 2 hours while INSTR2 changes every 10 second between CAL and NOM_A, NOM_B, NOM_C modes.

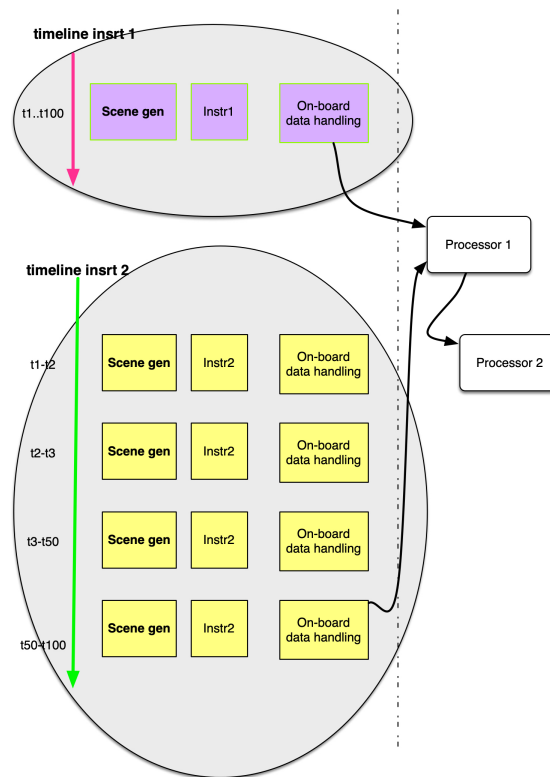


Figure 3-3 - Multi-Instrument E2E simulation with different timelines for each instrument

The shown E2E chain shall be achieved by having three separate simulations (one for Instr1, one for Instr2 and one for the "Processing" modules) executed separately and in sequence by the operator.

NB: this is independent of having or not the time-driven orchestration: a "static" version of the multi-instrument scenario depicted also requires separate simulation executions.